# **Exhaust Cleaner for Vacuum**

# Series AMV



Captures 99.5% of greasy fumes exhausted from the vacuum pump.

Creates a comfortable work-ing environment without greasy fumes.

• Captures and separates 99.5% of even low-flow and highly concentrated greasy fumes.

Using the AMV series, greasy fumes cannot be visibly recognized in the exhaust from the vacuum pump. (When greasy fumes are 1,000 mg/m<sup>3</sup> at the IN side, it will be 5 mg/m<sup>3</sup> or less at the OUT side.)

 Exhaust ducts from a vacuum pump is not necessary.



How to Order						
AMV 15 - 20						
Exhaust cleaner for vacuum			<ul> <li>Port size</li> </ul>			
				10	R1	
				14	R1 1/2	
				20	R2	
Standard size (Applicable vacuum pump)				30	80 (3B) JIS 10K FF flange	
Symbol Max. exhaust speed (L/min)			40	100 (4B) JIS 10K FF flange		
	3y1100					
	-	360				
	6	650				
	15	1,500				

### Specifications

37

75

160

3,700

7.500


16,000

Oil mist removal	99.5% or more		
Filtration	0.3 μm (Trapping efficiency: 95%)		
Maximum operating temperature	80°C		

#### Model

Model	lodel Connection R		Applicable vacuum pump Max. exhaust speed (L/min)	Oil accumulation amount (L)	Weight (kg)
AMV3-10	1	360	360	0.3	1.6
AMV6-14	1 1/2	650	650	0.5	3.0
AMV15-20	2	1,500	1,500	1.0	5.9
AMV37-20	2	3,700	3,700	1.0	10
AMV75-30	80 (3B) JIS 10K FF flange	7,500	7,500	10	43
AMV160-40	100 (4B) JIS 10K FF flange	16,000	16,000	10	59

# **Construction Principle/Parts List**

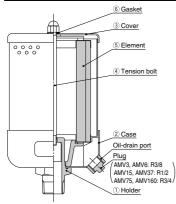

Oil mist contained in the exhaust air is captured when it is dispersed on the element surface or inside due to inertial collision or Brownian motion.

Captured oil mist is aggregated and becomes droplets, and it is carried to the coarse urethane foam on the element surface. It is then separated after being pulled into the case by gravity.

#### Principle Parts

No	Description	Material		
1	Holder	Aluminum alloy		
2	Case	Carbon steel		
3	Cover	Carbon steel		
4	Tension bolt	Carbon steel		


#### Spare Parts

	Description	Material	Part no.						
No			AMV3	AMV6		AMV37 AMV160 *2			
5	Element	_	AMV-EL3	AMV-EL6	AMV-EL15	AMV-EL37			
6	Gasket	Fiber	AMV-SA002		AMV-SA003				

\*1 Order 4 pcs. of the AMV-EL15 for the model AMV75. When gaskets are required, order 4 pcs. of the AMV-SA003.

\*2 Order 4 pcs. of the AMV-EL37 for the model AMV160. When gaskets are required, order 4 pcs. of the AMV-SA003.

## **Flow Characteristics**

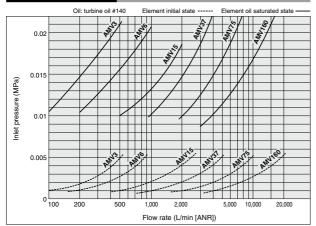

### **Caution on Handling**

# Caution

- 1. Install with the port down in a vertical position.
- 2. Tighten the product at the hexagonal part of the port.
- 3. Operate at a flow rate and ambient temperature that is within the specifications.
- 4. Exhaust the collected oil before letting it reach the element.
- 5. Replace the element once a year or before the pressure drops to 0.07 MPa.

