

Circulating Fluid Temperature Controller

Thermo-chiller Inverter Type

HRSH Series



Outstanding energy saving due to
with the triple inverter!



Compressor

Fan

Pump

Triple inverter



DC inverter compressor




DC inverter fan
(For the air-cooled type)

*2



Inverter pump

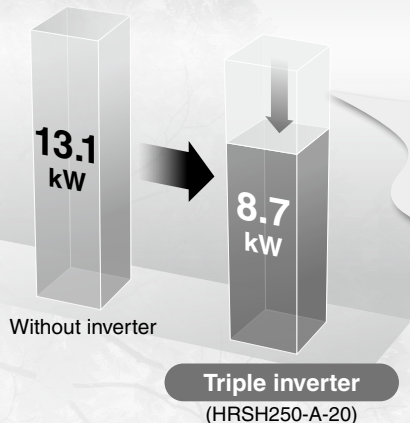

Power consumption
reduced by
34%^{*1}
(Energy saving)



Cooling capacity 10 kW, 15 kW, 20 kW, 25 kW, 28 kW



Temperature stability $\pm 0.1^{\circ}\text{C}$
(When a load is stable)



Compact, Space saving



Outdoor installation,
Splashproof type (IPX4)^{*3}



Low-noise design ^{Operating noise} **Max. 68 dB**
(Except HRSH300-A)



Ambient temperature -20 to 45°C
(For the air-cooled type)



Maintenance-free pump

A mechanical sealless **immersion pump** is used.
No need to replace the seal → Reduced maintenance labor

Compatible with
power supplies in
Europe, Asia, Oceania, and North,
Central, and South America

- 3-phase 200 VAC
- 3-phase 400 VAC

*1 Under the conditions shown on page 311

*2 For the water-cooled type, a water-regulating valve is used for the facility water flow control instead of a fan.

*3 For unexpected natural phenomena, such as stormy weather exceeding the IPX4 level, make sure to take additional protective measures.




Triple inverter

The inverter respectively controls the number of motor rotations of the compressor, fan and pump depending on the load from the user's equipment.

Power consumption reduced by 34%*
 compared with a thermo-chiller without the inverter

With the inverter, it is possible to operate with the same performance even with the power supply of 50 Hz.



(The water-cooled type is not equipped with a fan.)

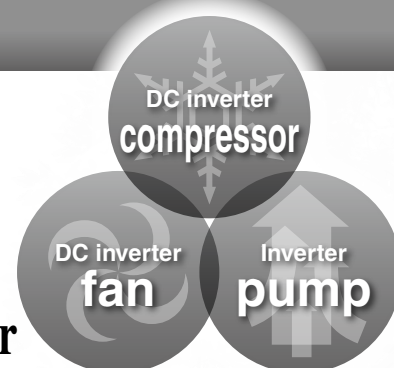

*1 For HRSH250-A-20

Conditions

- Outdoor air temperature: 32°C • Circulating fluid temperature setting: 20°C • Heat load in the user's equipment: 25 kW • Power supply: 200 V 60 Hz
- Circulating fluid flow rate: 60 L/min at 0.5 MPa to the user's equipment • External piping: The shortest distance assumed to the user's equipment
- Values shown in the graph for a thermo-chiller without inverter are found by calculation based on an assumption that a thermo-chiller is operated with a general refrigerant circuit that controls the compressor by turning the power ON/OFF, and with a bypass to the circulating fluid circuit.

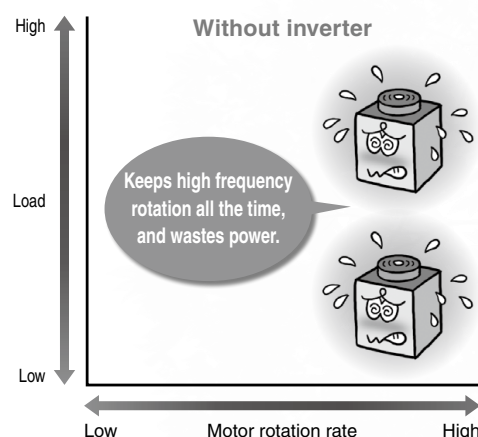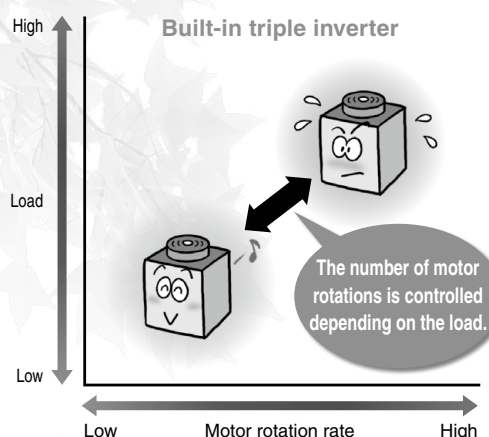

Variations Cooling capacities ranging from 10 kW to 25 kW

Air-cooled refrigeration



Water-cooled refrigeration



| Model | HRSH100-A | HRSH150-A | HRSH200-A |
|------------------|---|-----------|-----------|
| Cooling capacity | 10.5 kW | 15.7 kW | 20.5 kW |
| Power supply | 3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz) | | |
| | 3-phase 380 to 415 VAC (50/60 Hz) 3-phase 460 to 480 VAC (60 Hz) | | |
| Set temp. range | 5 to 35°C | | |
| Temp. stability | ±0.1°C | | |

| Model | HRSH250-A | HRSH300-A |
|------------------|--|-----------|
| Cooling capacity | 25 kW | 28 kW |
| Power supply | 3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz) | |
| | 3-phase 380 to 415 VAC (50/60 Hz), 3-phase 460 to 480 VAC (60 Hz) | |
| Set temp. range | 5 to 35°C | |
| Temp. stability | ±0.1°C | |

| Model | HRSH100-W | HRSH150-W | HRSH200-W | HRSH250-W |
|------------------|---|-----------|-----------|-----------|
| Cooling capacity | 11.5 kW | 15.7 kW | 20.6 kW | 24 kW |
| Power supply | 3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz) | | | |
| | 3-phase 380 to 415 VAC (50/60 Hz) 3-phase 460 to 480 VAC (60 Hz) | | | |
| Set temp. range | 5 to 35°C | | | |
| Temp. stability | ±0.1°C | | | |

Options

▶ Page 330


- With caster adjuster-foot
- With earth leakage breaker (400 V type is equipped as standard.)
- With earth leakage breaker with handle (400 V type is equipped as standard.)
- With fluid fill port
- Compliant with CE/UKCA, UL standards
- SI unit only

Optional accessories

▶ Page 334

- Piping conversion fitting
- Caster adjuster-foot kit
- Electric conductivity control set
- Bypass piping set
- Snow protection hood (Air-cooled only)
- Particle filter set
- Wired remote controller

Circuit diagram

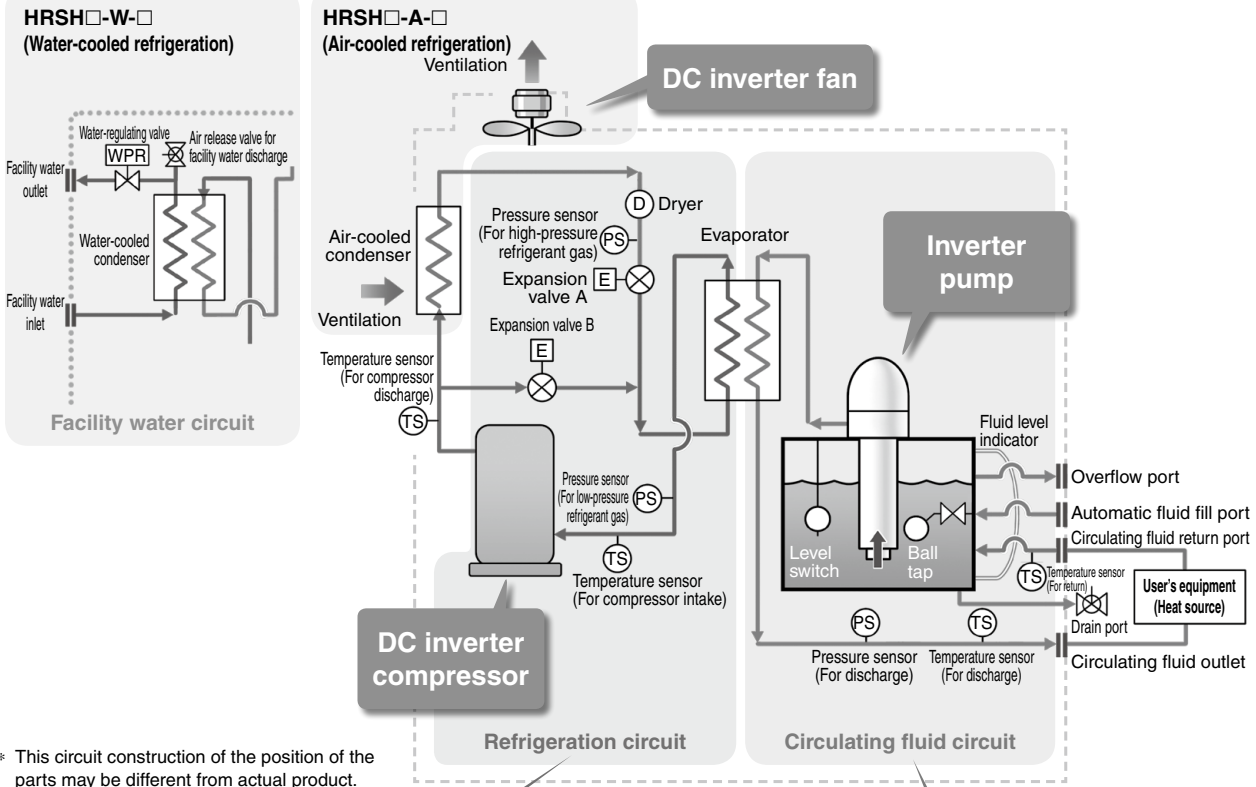

Refrigeration circuit

- The DC inverter compressor compresses the refrigerant gas and discharges high-temperature, high-pressure refrigerant gas.
- In the case of air-cooled refrigeration, the high-temperature, high-pressure refrigerant gas is cooled down by DC inverter fan ventilation in the air-cooled condenser, where it is then liquefied. In the case of water-cooled refrigeration, the refrigerant gas is cooled by the facility water in the facility water circuit in the water-cooled condenser, where it is then liquefied.
- The liquefied high-pressure refrigerant gas expands and its temperature lowers when it passes through expansion valve A, where it vaporizes after receiving heat from the circulating fluid in the evaporator.
- The vaporized refrigerant gas is sucked into the DC inverter compressor and compressed again.
- When heating the circulating fluid, the high-pressure, high-temperature refrigerant gas is bypassed into the evaporator by expansion valve B to heat the circulating fluid.

POINT

The combination of inverter control of the compressor and fan (facility water flow control by a water-regulating valve is used in water-cooled refrigeration), and the precise control of expansion valves A and B realizes energy saving operation without waste and high temperature stability.

Circulating fluid circuit

- After the circulating fluid discharged from the inverter pump is heated or cooled by the user's equipment, it returns to the tank.
- The circulating fluid is sent to the evaporator by the inverter pump, and is controlled to remain at a set temperature by the refrigeration circuit. It will then be discharged to the user's equipment side again by the thermo-chiller.

POINT

Adjusting the discharge pressure by pump inverter control eliminates wasteful discharge of the circulating fluid and realizes energy saving operation.

POINT


Since the refrigeration circuit is controlled by the signals from 2 temperature sensors (for return and discharge), precise temperature control of the circulating fluid can be achieved. Therefore, there is no need for a tank with a large capacity to absorb the circulating fluid temperature difference, as high temperature stability can be achieved even with a small-size tank. This also contributes to space saving.

Circulating fluid pressure adjustable



Discharge pressure of the circulating fluid can be set with the operation panel. The inverter pump automatically controls the discharge pressure to the set pressure without adjusting the bypass piping under various piping conditions. Power consumption can be reduced by this control. (Operation to the set pump operating frequency is also possible.)

Automatically controls the discharge pressure to be stable.

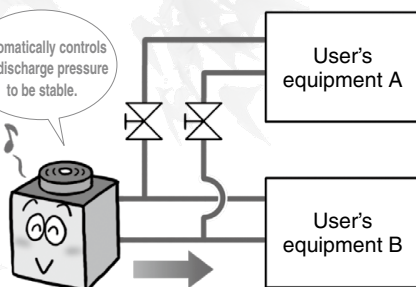


Operation display panel
(Circulating fluid discharge pressure setup screen)

When the product is used with the flow path switched for maintenance, the pressure adjusting function controls the discharge pressure to be stable. (Secure the specified minimum flow for each branch circuit.)



Temperature stability $\pm 0.1^{\circ}\text{C}$ (When a load is stable)

By controlling the DC inverter compressor, DC inverter fan, and electronic expansion valve simultaneously, it maintains the good temperature stability when the heat load fluctuates.

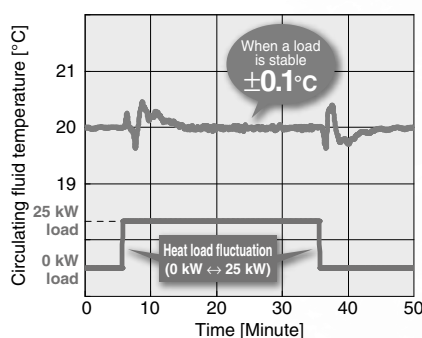


* For HRSH250-A-20

- Outdoor air temperature: 32°C
- Circulating fluid temperature setting: 20°C
- Heat load in the user's equipment: 25 kW
- Power supply: 200 V 60 Hz
- Circulating fluid flow: 125 L/min at 0.5 MPa
- External piping: Bypass piping + Heat load

Applicable to an ambient temperature of -20°C . (For the air-cooled type)


The product can be installed outdoors even in cold climates, etc.

* Before using the product, refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 342).

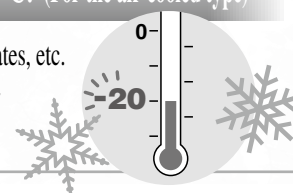


Circulating fluid can be heated without a heater.

As the heating method uses discharged heat, a heater is unnecessary.

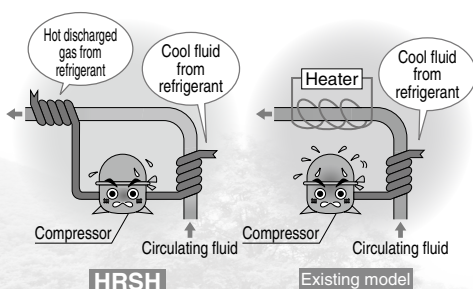


* This is just an example diagram.

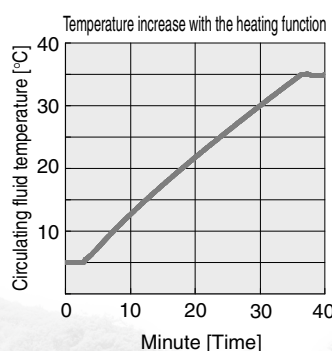

* For HRSH250-A-20


- Ambient temperature: 5°C
- Power supply: 200 V 60 Hz
- Circulating fluid flow: 125 L/min at 0.5 MPa
- External piping: Bypass piping

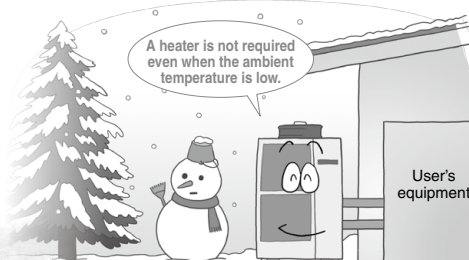

Reduced maintenance hours for the pump

A mechanical sealless immersion pump is used.

As the pump has no external leakage of the circulating fluid, a periodic check of the pump leakage and replacement of the mechanical seal are not necessary. There is no need to exhaust the circulating fluid when removing the pump.

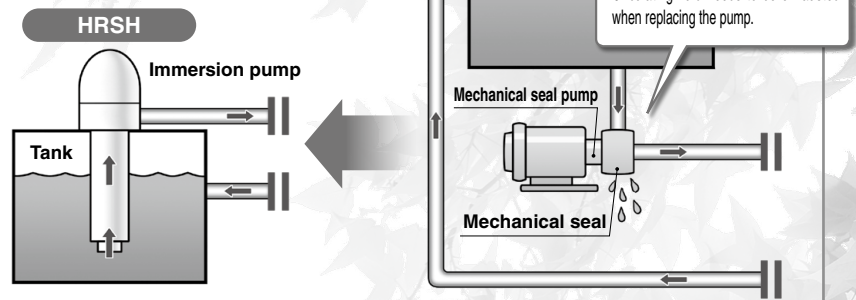

Compact and lightweight 280 kg (For HRSH250-A-20)



Compact tank 60 L (HRSH250-A)

Temperature followability control reduced the tank capacity required as a buffer.

Aluminum air-cooled condenser

High heat transfer efficiency, lightweight


The integrated tank and pump saves space.

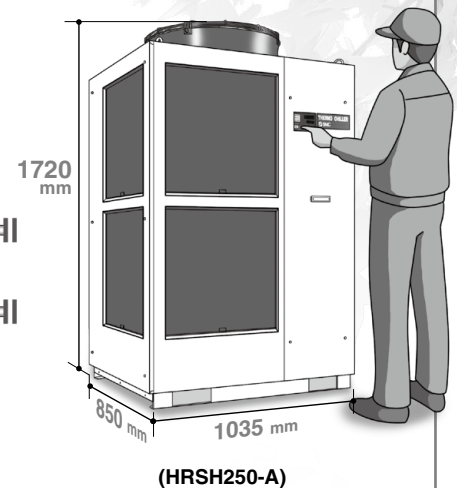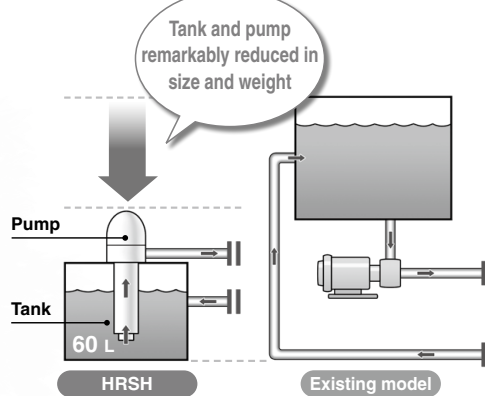

| | Model | Height [mm] | Width [mm] | Depth [mm] | Weight [kg] |
|----------------------------|-------------------|-------------|------------|------------|-------------|
| Air-cooled refrigeration | HRSH100-A | 1420 | 954 | 715 | 180 |
| | HRSH150/200-A | 1420 | 954 | 715 | 215 |
| | HRSH250/300-A | 1720 | 1035 | 850 | 280 |
| Water-cooled refrigeration | HRSH100-W | 1235 | 687 | 715 | 150 |
| | HRSH150/200/250-W | 1235 | 687 | 715 | 180 |

With caster adjuster-foot (Option)

p. 334

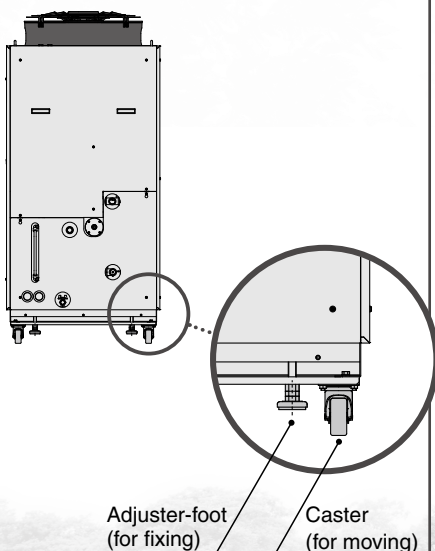


Electric conductivity control set

(With DI filter + Solenoid valve kit for control) p. 335

The electric conductivity of the circulating fluid can be set with the controller monitor arbitrarily.


Set control range:
5.0 to 45.0 μ S/cm

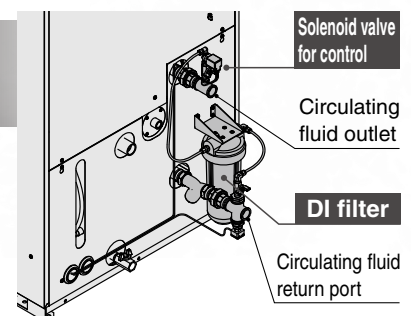

Particle filter set p. 337

Removes foreign matter in the circulating fluid

Effective in preventing foreign matter from entering the user's equipment and chiller

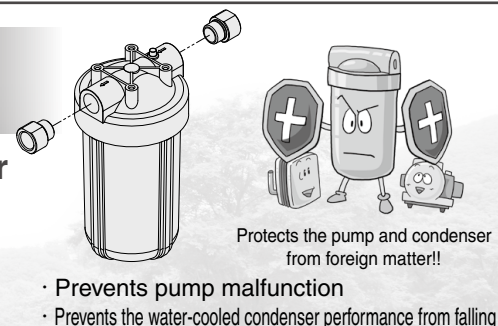

IPX4

IP (International Protection) is the industrial standard for “Degrees of protection provided by outer defensive enclosures of electric equipment (IP Code)” according to IEC 60529 and JIS C 0920.

IPX4: No harmful influence by water splash is acceptable from every direction.

Can be installed outdoors



Globally compatible power supplies


(Europe, Asia, Oceania, Central and South America)

Transformer unnecessary



Power supply Applicable to 200 to 230 VAC, 380 to 415 VAC, or 460 to 480 VAC

Transformers are unnecessary even when used overseas.

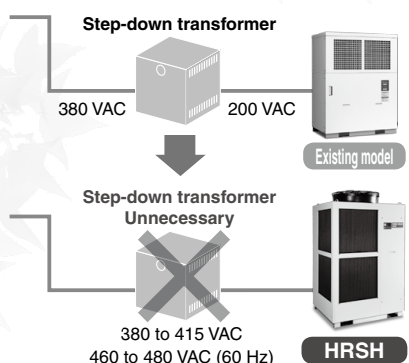

Wired remote controller

(Optional accessory on page 338)

Operable from a distance



Improved maintenance performance

Fluid fill port for the circulating fluid is available. (Option) p. 331

Fluid fill port is equipped in the upper part of the tank in addition to the automatic fluid fill port for a tap water piping connection.


Front side access

All the electrical components can be checked from the front side for the easier maintenance work.

Alarm code list

Alarm code list stickers (English 1 pc./Japanese 1 pc.) are included. This can be put under the operation panel for reference.

(Alarm ▶ Page 328)

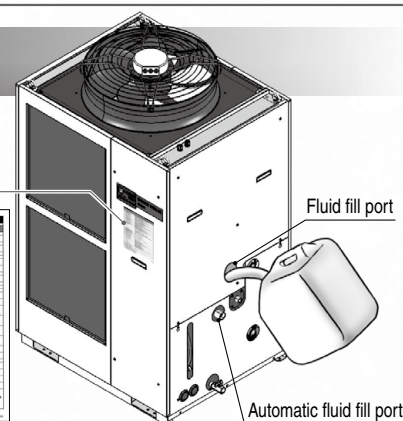


Operation display panel Easy maintenance with the check display

Alarm codes can be used for the notification of upcoming recommended maintenance.

The codes notify you when it's time to check the pump and fan motor. Helpful for facility maintenance


Ex. AL01 “Low level in tank”

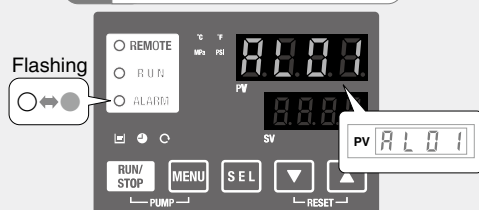

Check display

The internal temperature, pressure, and operating time of the product are displayed.

Ex. drv. “Accumulated operating time”

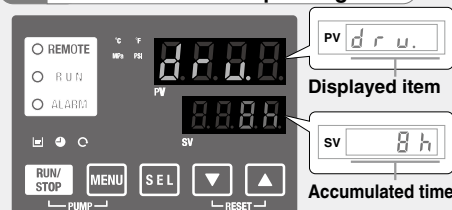

| Displayed item | |
|----------------|--|
| Temperature | Circulating fluid outlet temperature |
| | Circulating fluid return temperature |
| | Compressor gas temperature |
| Flow rate | Circulating fluid flow rate*1 |
| | Circulating fluid outlet pressure |
| Pressure | Compressor gas discharge pressure |
| | Compressor gas return pressure |
| | Accumulated operating time |
| Operating time | Accumulated operating time of pump |
| | Accumulated operating time of fan*2 |
| | Accumulated operating time of compressor |
| | Accumulated operation time of dustproof filter*2 |



*1 This is not measurement value. Use it for reference. *2 These are displayed only for air-cooled refrigeration.

Convenient functions Details ▶ Page 328

Timer function, Anti-freezing function, Power failure auto-restart function, Warming-up function, Key-lock function, etc.

Power supply (24 VDC) available

Power can be supplied from the terminal block on the rear side to external switches, etc.

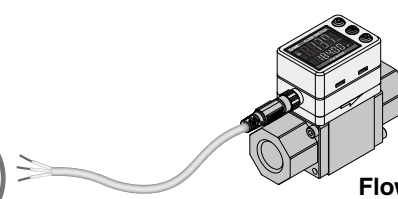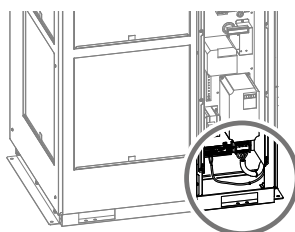

Flow switch


Refer to the Web Catalog for details.

Communication function

Serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) are equipped as standard. This allows for communication with the user's equipment and system construction, depending on the application. A 24 VDC output can be also provided and is available for use with flow switches (SMC's PF3W, etc.).


Ex. 1 Remote signal I/O through serial communication

Remote operation is enabled (to start and stop operation) through serial communication.

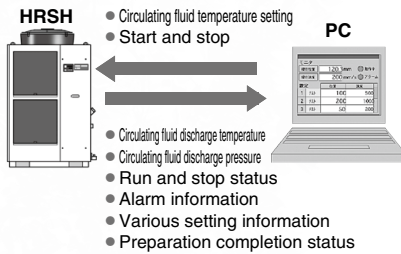


Ex. 2 Remote operation signal input

One of the contact inputs is used for remote operation and the other is used to monitor the flow of a flow switch. This is where their alarm outputs are taken in.

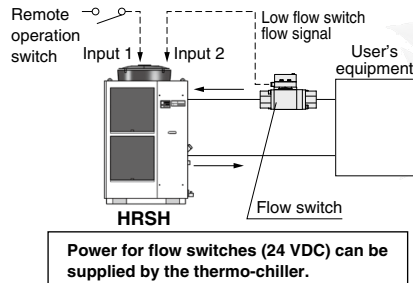

Ex. 3 Alarm and operation status (start, stop, etc.) signal output

The alarm and status generated in the product are assigned to 3 output signals based on their contents, which can then be output.

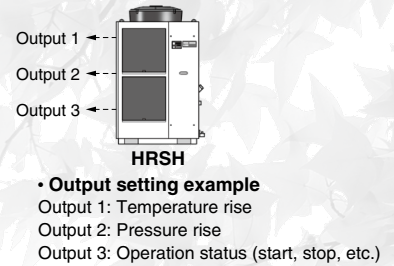

CONTENTS

HRSH Series **Inverter Type**



Thermo-chiller HRSH Series

How to Order/Specifications

| | |
|--|----------|
| Air-cooled 200 V | Page 319 |
| Water-cooled 200 V | Page 320 |
| Air-cooled 400 V | Page 321 |
| Water-cooled 400 V | Page 322 |
| Cooling Capacity | Page 323 |
| Pump Capacity | Page 324 |
| Dimensions | Page 325 |
| Recommended External Piping Flow | Page 327 |
| Cable Specifications | Page 327 |
| Operation Display Panel | Page 328 |
| List of Function | Page 328 |
| Alarm | Page 328 |
| Communication Functions | Page 329 |

● Options

| | |
|--|----------|
| With Caster Adjuster-foot | Page 330 |
| With Earth Leakage Breaker | Page 330 |
| With Earth Leakage Breaker with Handle | Page 331 |
| With Fluid Fill Port | Page 331 |
| Applicable to Deionized Water Piping | Page 332 |
| Compliant with CE/UKCA, UL Standards | Page 332 |
| High-Pressure Pump Mounted | Page 333 |
| SI Unit Only | Page 333 |

● Optional Accessories

| | |
|---|----------|
| ① Piping Conversion Fitting | Page 334 |
| ② Caster Adjuster-foot Kit | Page 334 |
| ③ Electric Conductivity Control Set | Page 335 |
| ④ Bypass Piping Set | Page 335 |
| ⑤ Snow Protection Hood | Page 336 |
| ⑥ Particle Filter Set | Page 337 |
| ⑦ Wired Remote Controller | Page 338 |

● Cooling Capacity Calculation

| | |
|--|----------|
| Required Cooling Capacity Calculation | Page 339 |
| Precautions on Cooling Capacity Calculation ... | Page 340 |
| Circulating Fluid Typical Physical Property Values ... | Page 340 |

| | |
|------------------------------------|----------|
| Specific Product Precautions | Page 341 |
|------------------------------------|----------|

Thermo-chiller Inverter Type

Air-cooled 200 V Type

HRSH Series

How to Order

HRSH 250 - A - 20 -

Cooling method

A Air-cooled refrigeration

Pipe thread type

| | |
|-----|--------------------------------------|
| Nil | Rc |
| F | G (with Rc-G conversion fitting) |
| N | NPT (with Rc-NPT conversion fitting) |

Cooling capacity

| | |
|-----|---------|
| 100 | 10.5 kW |
| 150 | 15.7 kW |
| 200 | 20.5 kW |
| 250 | 25 kW |
| 300 | 28 kW |

Power supply

| | |
|----|--------------------------------|
| 20 | 3-phase 200 VAC (50 Hz) |
| | 3-phase 200 to 230 VAC (60 Hz) |

Option

| | | | |
|-----|--|-----|--------------------------------------|
| Nil | None | K*1 | With fluid fill port |
| A | With caster adjuster-foot | M | Applicable to DI water piping |
| B | With earth leakage breaker | S*2 | Compliant with CE/UKCA, UL Standards |
| B1 | With earth leakage breaker with handle | W | SI unit only |

• When multiple options are combined, indicate symbols in alphabetical order.

*1 This is a manual fluid fill port that is different from the automatic fluid fill port. Fluid can be supplied manually into the tank without removing the side panel.

(Fluid can be supplied manually for models without option K if the side panel is removed.)
*2 Combination with option B or option B1 is not necessary. The earth leakage breaker with a handle (-B1) is provided as standard.



Specifications

| Model | | | HRSH100-A□-20-□ | HRSH150-A□-20-□ | HRSH200-A□-20-□ | HRSH250-A□-20-□ | HRSH300-A□-20-□ | |
|-----------------------------------|---|-------------------------------|--|-----------------|-----------------|-----------------|-----------------|-------------|
| Cooling method | | | Air-cooled refrigeration | | | | | |
| Refrigerant | | | R410A (HFC) | | | | | |
| Refrigerant charge | | kg | 1.27 | 2.1 | 2.1 | 2.8 | 2.8 | |
| Control method | | | PID control | | | | | |
| Ambient temperature/Altitude*1, 9 | | | Temperature: -20 to 45, Altitude: less than 3000 m | | | | | |
| Circulating fluid system | Circulating fluid*1, 2 | | Tap water, 15 to 40% Ethylene glycol aqueous solution, Deionized water | | | | | |
| | Set temperature range*1 | | 5 to 35 | | | | | |
| | Cooling capacity*3, 9 | | kW | 10.5 | 15.7 | 20.5 | 25 | 28 |
| | Heating capacity*4 | | kW | 2.5 | 3 | 5.5 | 7.5 | |
| | Temperature stability*5 | | °C | ±0.1 | | | | |
| | Pump capacity | Rated flow (Outlet) | L/min | 45 (0.43 MPa) | 45 (0.45 MPa) | | 125 (0.5 MPa) | |
| | | Maximum flow rate | L/min | 120 | 130 | | 180 | |
| | | Maximum pump head | m | 50 | | 80 | | |
| | Settable pressure range*6 | | MPa | 0.1 to 0.5 | | 0.1 to 0.8 | | |
| | Minimum operating flow rate*7 | | L/min | 20 | 25 | | 40 | |
| | Tank capacity | | L | 25 | 42 | | 60 | |
| | Circulating fluid outlet, circulating fluid return port | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | | | |
| | Tank drain port | | Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4) | | | | | |
| | Automatic fluid fill system (Standard) | Supply side pressure range | MPa | 0.2 to 0.5 | | | | |
| | | Supply side fluid temperature | °C | 5 to 35 | | | | |
| | | Automatic fluid fill port | Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2) | | | | | |
| | Overflow port | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | | | |
| Fluid contact material | | Metal | Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze | | | | | |
| | | Resin | PTFE, PU, FKM, EPDM, PVC, NBR, POM, PE, NR | | | | | |
| Electrical system | Power supply | | 3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz) Allowable voltage range ±10% (No continuous voltage fluctuation) | | | | | |
| | Applicable earth*8 leakage breaker | Rated current | A | 30 | 40 | 50 | | |
| | | Sensitivity of leak current | mA | 30 | | | | |
| | Rated operating current*5 | | A | 14 | 17 | 25 | 34 | 36 |
| | Rated power consumption*5 | | kW (kVA) | 4.5 (4.9) | 5.8 (6) | 8.4 (8.7) | 10.4 (11.6) | 11.1 (12.2) |
| | Noise level (Front 1 m/Height 1 m)*5 | | dB (A) | 68 | | | | |
| Waterproof specification | | | IPX4 | | | | | |
| Accessories | | | Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)*10 | | | | | |
| Weight (drv state) | | kg | Approx. 180 | Approx. 215 | | Approx. 280 | | |

*1 When the ambient temperature or circulating fluid temperature is 10°C or below, refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 342).

*2 Use fluid in condition below as the circulating fluid.

Tap water: please refer to "Specific Product Precautions".

15 to 40% ethylene glycol aqueous solution: Diluted with clean water, without any additives such as antiseptics. (Refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 342) for the concentration of the ethylene glycol aqueous solution.)

Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)

*3 ① Ambient temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 200 VAC

*4 ① Ambient temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 200 VAC

*5 ① Ambient temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 200 VAC, ⑦ Piping length: Shortest

*6 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.

*7 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.

*8 To be prepared by the user. A specified earth leakage breaker is installed for option B [With earth leakage breaker], B1 [With earth leakage breaker with handle] and S [Compliant with CE/UKCA, UL Standards].

*9 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 341) Item 13 "For altitudes of 1000 m or higher."

*10 The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.

Thermo-chiller Inverter Type

Water-cooled 200 V Type

HRSH Series



How to Order

HRSH 250 - W - 20 -

Cooling capacity

| | |
|-----|---------|
| 100 | 11.5 kW |
| 150 | 15.7 kW |
| 200 | 20.6 kW |
| 250 | 24 kW |

Cooling method

| | |
|---|----------------------------|
| W | Water-cooled refrigeration |
|---|----------------------------|

Pipe thread type

| | |
|-----|--------------------------------------|
| Nil | Rc |
| F | G (with Rc-G conversion fitting) |
| N | NPT (with Rc-NPT conversion fitting) |

Power supply

| | |
|----|---|
| 20 | 3-phase 200 VAC (50 Hz) 3-phase 200 to 230 VAC (60 Hz) |
|----|---|

Option

| | | | |
|-----|--|-----|--------------------------------------|
| Nil | None | M | Applicable to DI water piping |
| A | With caster adjuster-foot | S*2 | Compliant with CE/UKCA, UL Standards |
| B | With earth leakage breaker | T | High-pressure pump mounted |
| B1 | With earth leakage breaker with handle | W | SI unit only |
| K*1 | With fluid fill port | | |

- When multiple options are combined, indicate symbols in alphabetical order.
- *1 This is a manual fluid fill port that is different from the automatic fluid fill port. Fluid can be supplied manually into the tank without removing the side panel. (Fluid can be supplied manually for models without option K if the side panel is removed.)
- *2 Combination with option B or option B1 is not necessary. The earth leakage breaker with a handle (-B1) is provided as standard.

Specifications

| Model | | | HRSH100-W□-20-□ | HRSH150-W□-20-□ | HRSH200-W□-20-□ | HRSH250-W□-20-□ | |
|--------------------------------------|---|-------------------------------|--|--|-----------------|-----------------|-----------|
| Cooling method | | | Water-cooled refrigeration | | | | |
| Refrigerant | | | R410A (HFC) | | | | |
| Refrigerant charge | | kg | 1.45 | 1.95 | 1.95 | 1.95 | |
| Control method | | | PID control | | | | |
| Ambient temperature/Altitude*1, 9 | | | Temperature: 2 to 45, Altitude: less than 3000 m | | | | |
| Circulating fluid system | Circulating fluid*2 | | Tap water, 15% Ethylene glycol aqueous solution, Deionized water | | | | |
| | Set temperature range*1 | | 5 to 35 | | | | |
| | Cooling capacity*3, 9 | kW | 11.5 | 15.7 | 20.6 | 24 | |
| | Heating capacity*4 | kW | 2.5 | 3.5 | 4.0 | 7.2 | |
| | Temperature stability*5 | | ±0.1 | | | | |
| | Pump capacity | Rated flow (Outlet) | L/min | 45 (0.43 MPa) | 45 (0.45 MPa) | | |
| | | Maximum flow rate | L/min | 120 | 130 | | |
| | | Maximum pump head | m | 50 | | | |
| | Settable pressure range*6 | | 0.1 to 0.5 | | | | |
| | Minimum operating flow rate*7 | L/min | 20 | 25 | | | |
| | Tank capacity | L | 25 | 42 | | | |
| | Circulating fluid outlet, circulating fluid return port | | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | |
| | Tank drain port | | | Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4) | | | |
| | Automatic fluid fill system (Standard) | Supply side pressure range | MPa | 0.2 to 0.5 | | | |
| | | Supply side fluid temperature | °C | 5 to 35 | | | |
| | Automatic fluid fill port | | | Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2) | | | |
| Overflow port | | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | | |
| Fluid contact material | | Metal | Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass | | | | |
| | | Resin | PTFE, PU, FKM, EPDM, PVC, NBR, POM, PE, NR | | | | |
| Facility water system | Supply side pressure range | | 0.3 to 0.5 | | | | |
| | Supply side temperature range | | 5 to 40 | | | | |
| | Required flow*11 | L/min | 25 | 30 | 50 | 55 | |
| | Facility water pressure differential | | 0.3 or more | | | | |
| | Facility water inlet/outlet | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | | |
| Fluid contact material | | Metal | Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass | | | | |
| | | Resin | PTFE, EPDM, NBR | | | | |
| Electrical system | Power supply | | 3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz), Allowable voltage range ±10% (No continuous voltage fluctuation) | | | | |
| | Applicable earth*8 leakage breaker | Rated current | A | 30 | 40 | 50 | |
| | | Sensitivity of leak current | mA | 30 | | | |
| | Rated operating current*5 | | A | 14 | 17 | 21 | |
| | Rated power consumption*5 | | kW (kVA) | 4.2 (4.7) | 5.3 (5.8) | 6.6 (7.0) | 8.0 (8.4) |
| Noise level (Front 1 m/Height 1 m)*5 | | dB (A) | 61 | 60 | | 61 | |
| Waterproof specification | | | IPX4 | | | | |
| Accessories | | | Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)*10 | | | | |
| Weight (dry state) | | kg | Approx. 150 | | Approx. 180 | | |

- *1 Use a 15% ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10°C or less.
- *2 Use fluid in condition below as the circulating fluid.
Tap water: please refer to "Specific Product Precautions".
15% ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics. Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ-cm or lower)
- *3 ① Facility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 200 VAC
- *4 ① Facility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 200 VAC
- *5 ① Facility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 200 VAC, ⑦ Piping length: Shortest
- *6 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
- *7 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.
- *8 To be prepared by the user. A specified earth leakage breaker is installed for option B [With earth leakage breaker], B1 [With earth leakage breaker with handle] and S [Compliant with CE/UKCA, UL Standards].
- *9 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 341) Item 13 "For altitudes of 1000 m or higher."
- *10 The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.
- *11 The actual facility water flow rate will vary depending on the operating conditions.

Thermo-chiller Inverter Type

Air-cooled 400 V Type

HRSH Series



How to Order

HRSH 250 - A - 40 -

Cooling capacity

| | |
|-----|---------|
| 100 | 10.5 kW |
| 150 | 15.7 kW |
| 200 | 20.5 kW |
| 250 | 25 kW |
| 300 | 28 kW |

Cooling method

| | |
|---|--------------------------|
| A | Air-cooled refrigeration |
|---|--------------------------|

Pipe thread type

| | |
|-----|--------------------------------------|
| Nil | Rc |
| F | G (with Rc-G conversion fitting) |
| N | NPT (with Rc-NPT conversion fitting) |

Power supply

| | |
|----|---|
| 40 | 3-phase 380 to 415 VAC (50/60 Hz) 3-phase 460 to 480 VAC (60 Hz) |
|----|---|

Option

| | |
|-------|-------------------------------|
| Nil*1 | None |
| A | With caster adjuster-foot |
| K*2 | With fluid fill port |
| M | Applicable to DI water piping |
| W | SI unit only |

*1 400 V type is provided with an earth leakage breaker with handle (-B1) as standard.

*2 This is a manual fluid fill port that is different from the automatic fluid fill port. Fluid can be supplied manually into the tank without removing the side panel. (Fluid can be supplied manually for models without option K if the side panel is removed.)

Specifications

| Model | | | HRSH100-A□-40-□ | HRSH150-A□-40-□ | HRSH200-A□-40-□ | HRSH250-A□-40-□ | HRSH300-A□-40-□ | |
|--------------------------------------|---|--|---|--|-----------------|-----------------|-----------------|---------------|
| Cooling method | | | Air-cooled refrigeration | | | | | |
| Refrigerant | | | R410A (HFC) | | | | | |
| Refrigerant charge | | kg | 1.27 | 2.1 | 2.1 | 2.8 | 2.8 | |
| Control method | | | PID control | | | | | |
| Ambient temperature/Altitude*1, 8 | | | °C Temperature: -20 to 45, Altitude: less than 3000 m | | | | | |
| Circulating fluid system | Circulating fluid*1, 2 | | Tap water, 15 to 40% Ethylene glycol aqueous solution, Deionized water | | | | | |
| | Set temperature range*1 | | °C 5 to 35 | | | | | |
| | Cooling capacity*3, 8 | | kW | 10.5 | 15.7 | 20.5 | 25 | 28 |
| | Heating capacity*4 | | kW | 2.5 | 3 | 5.5 | 7.5 | |
| | Temperature stability*5 | | °C | ±0.1 | | | | |
| | Pump capacity | Rated flow (Outlet) | L/min | 45 (0.43 MPa) | | 45 (0.45 MPa) | | 125 (0.5 MPa) |
| | | Maximum flow rate | L/min | 120 | | 130 | | 180 |
| | | Maximum pump head | m | 50 | | 80 | | |
| | Settable pressure range*6 | | MPa | 0.1 to 0.5 | | 0.1 to 0.8 | | |
| | Minimum operating flow rate*7 | | L/min | 20 | 25 | | 40 | |
| | Tank capacity | | L | 25 | 42 | | 60 | |
| | Circulating fluid outlet, circulating fluid return port | | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | | |
| | Tank drain port | | | Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4) | | | | |
| | Automatic fluid fill system (Standard) | Supply side pressure range | | MPa | | 0.2 to 0.5 | | |
| Supply side fluid temperature | | °C | | 5 to 35 | | | | |
| Automatic fluid fill port | | Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2) | | | | | | |
| Overflow port | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | | | | |
| Fluid contact material | | Metal Resin | Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze PTFE, PU, FKM, EPDM, PVC, NBR, POM, PE, NR | | | | | |
| Electrical system | Power supply | | 3-phase 380 to 415 VAC (50/60 Hz) Allowable voltage range ±10% (No continuous voltage fluctuation) 3-phase 460 to 480 VAC (60 Hz) Allowable voltage range +4%, -10% (Max. voltage less than 500 V and no continuous voltage fluctuation) | | | | | |
| | Earth leakage breaker (Standard) | Rated current | A | 20 | 30 | | | |
| | | Sensitivity of leak current | mA | 30 | | | | |
| | Rated operating current*5 | | A | 7.4 | 9.3 | 12.8 | 16 | 18 |
| | Rated power consumption*5 | | kW (kVA) | 4.6 (5.1) | 5.8 (6.4) | 8.2 (8.9) | 10.1 (11.1) | 10.8 (12.3) |
| Noise level (Front 1 m/Height 1 m)*5 | | | dB (A) 68 | | | | | 71 |
| Waterproof specification | | | IPX4 | | | | | |
| Accessories | | | Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)*9 | | | | | |
| Weight (drv state) | | | kg | Approx. 180 | Approx. 215 | Approx. 280 | | |

*1 When the ambient temperature or circulating fluid temperature is 10°C or below, refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 342).

*2 Use fluid in condition below as the circulating fluid.

Tap water: please refer to "Specific Product Precautions".

15 to 40% ethylene glycol aqueous solution: Diluted with clean water, without any additives such as antiseptics. (Refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 342) for the concentration of the ethylene glycol aqueous solution.)

Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)

*3 ① Ambient temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 400 VAC

*4 ① Ambient temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC

*5 ① Ambient temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC, ⑦ Piping length: Shortest

*6 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.

*7 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.

*8 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 341) Item 13 "For altitudes of 1000 m or higher."

*9 The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.

Thermo-chiller Inverter Type

Water-cooled 400 V Type

HRSH Series



How to Order

| | | | |
|-------------------------|---------|--|--|
| HRSH 250 - W - 40 - | | | |
| Cooling capacity | | Cooling method | |
| 100 | 11.5 kW | W Water-cooled refrigeration | |
| 150 | 15.7 kW | | |
| 200 | 20.6 kW | | |
| 250 | 24 kW | | |
| | | Pipe thread type | |
| | | Nil Rc F G (with Rc-G conversion fitting) N NPT (with Rc-NPT conversion fitting) | |
| | | | |
| | | | |
| | | | |
| | | Power supply | |
| | | 40 3-phase 380 to 415 VAC (50/60 Hz) 3-phase 460 to 480 VAC (60 Hz) | |
| | | | |

- *1 400 V type is provided with an earth leakage breaker with handle (-B1) as standard.
*2 This is a manual fluid fill port that is different from the automatic fluid fill port. Fluid can be supplied manually into the tank without removing the side panel. (Fluid can be supplied manually for models without option K if the side panel is removed.)

Specifications


| Model | | | HRSH100-W□-40-□ | HRSH150-W□-40-□ | HRSH200-W□-40-□ | HRSH250-W□-40-□ | |
|--------------------------------------|---|--|---|--|-----------------|-----------------|------|
| Cooling method | | | Water-cooled refrigeration | | | | |
| Refrigerant | | | R410A (HFC) | | | | |
| Refrigerant charge | | kg | 1.45 | 1.95 | 1.95 | 1.95 | |
| Control method | | | PID control | | | | |
| Ambient temperature/Altitude*1, 8 | | | °C Temperature: 2 to 45, Altitude: less than 3000 m | | | | |
| Circulating fluid system | Circulating fluid*2 | | Tap water, 15% Ethylene glycol aqueous solution, Deionized water | | | | |
| | Set temperature range*1 | | °C 5 to 35 | | | | |
| | Cooling capacity*3, 8 | kW | 11.5 | 15.7 | 20.6 | 24 | |
| | Heating capacity*4 | kW | 2.5 | 3.5 | 4.0 | 7.2 | |
| | Temperature stability*5 | | °C ±0.1 | | | | |
| | Pump capacity | Rated flow (Outlet) | L/min | 45 (0.43 MPa) | | 45 (0.45 MPa) | |
| | | Maximum flow rate | L/min | 120 | | 130 | |
| | | Maximum pump head | m | 50 | | | |
| | Settable pressure range*6 | | MPa 0.1 to 0.5 | | | | |
| | Minimum operating flow rate*7 | L/min | 20 | 25 | | | |
| | Tank capacity | L | 25 | 42 | | | |
| | Circulating fluid outlet, circulating fluid return port | | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | |
| | Tank drain port | | | Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4) | | | |
| | Automatic fluid fill system (Standard) | Supply side pressure range | MPa | 0.2 to 0.5 | | | |
| | | Supply side fluid temperature | °C | 5 to 35 | | | |
| Automatic fluid fill port | | Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2) | | | | | |
| (Standard) Overflow port | | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | | |
| Fluid contact material | | Metal | Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze | | | | |
| | | Resin | PTFE, PU, FKM, EPDM, PVC, NBR, POM, PE, NR | | | | |
| Facility water system | Temperature range | | °C 5 to 40 | | | | |
| | Pressure range | | MPa 0.3 to 0.5 | | | | |
| | Required flow*10 | | L/min | 25 | 30 | 50 | 55 |
| | Facility water pressure differential | | MPa | 0.3 or more | | | |
| | Facility water inlet/outlet | | | Rc1 (Symbol F: G1, Symbol N: NPT1) | | | |
| Fluid contact material | | Metal | Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass | | | | |
| | | Resin | PTFE, NBR, EPDM | | | | |
| Electrical system | Power supply | | 3-phase 380 to 415 VAC (50/60 Hz) Allowable voltage range ±10% (No continuous voltage fluctuation) 3-phase 460 to 480 VAC (60 Hz) Allowable voltage range +4%, -10% (Max. voltage less than 500 V and no continuous voltage fluctuation) | | | | |
| | Applicable earth leakage breaker (Standard) | Rated current | A | 20 | 30 | | |
| | | Sensitivity of leak current | mA | 30 | | | |
| | | Rated operating current*5 | A | 7.3 | 8.8 | 10.6 | 12.8 |
| | Rated power consumption*5 | kW (kVA) | 4.4 (5.0) | 5.3 (6.1) | 6.6 (7.4) | 8.2 (8.9) | |
| Noise level (Front 1 m/Height 1 m)*5 | | dB (A) | 61 | 60 | | | |
| Waterproof specification | | | IPX4 | | | | |
| Accessories | | | Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)*9 | | | | |
| Weight (drv state) | | kg | Approx. 150 | | Approx. 180 | | |

- *1 Use a 15% ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10°C or less.
*2 Use fluid in condition below as the circulating fluid.
Tap water: please refer to "Specific Product Precautions".
15% ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.
Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)
*3 ① Facility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 400 VAC
*4 ① Facility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC
*5 ① Facility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC, ⑦ Piping length: Shortest
*6 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
*7 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.
*8 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 341) Item 13 "For altitudes of 1000 m or higher."
*9 The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.
*10 The actual facility water flow rate will vary depending on the operating conditions.


Cooling Capacity

* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 341) Item 13 "For altitudes of 1000 m or higher."


HRSH100-A□-20/40-□

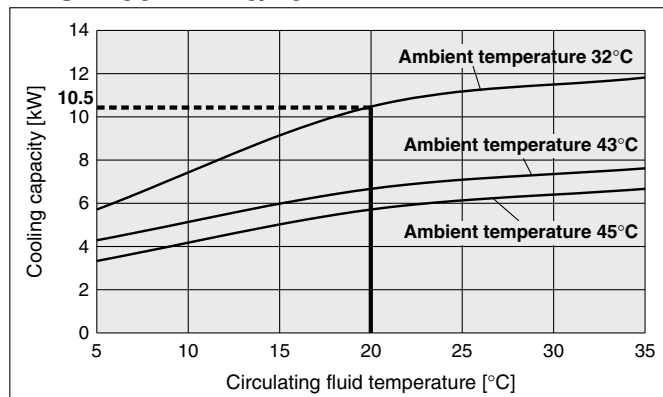


HRSH100-W□-20/40-□

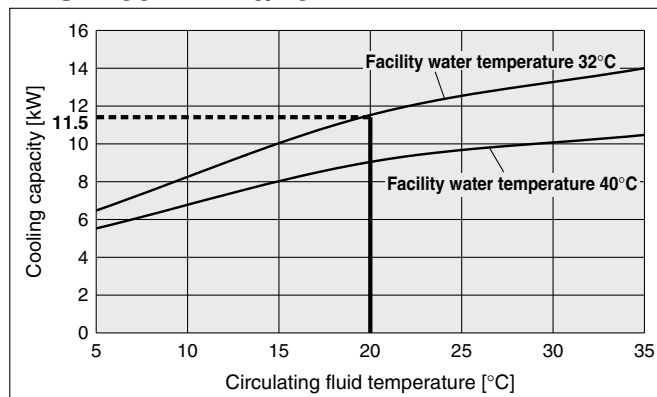


HRSH150-A□-20/40-□

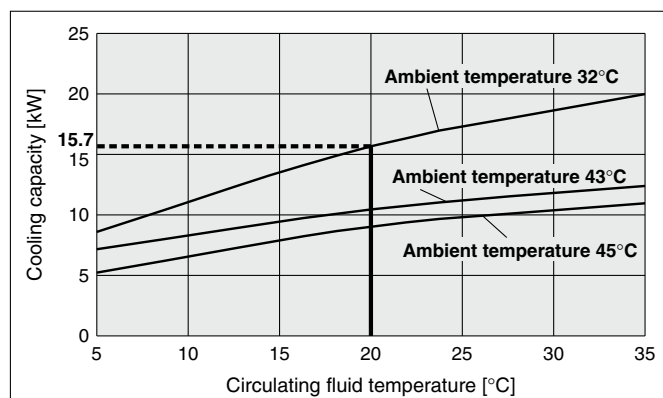


HRSH150-W□-20/40-□

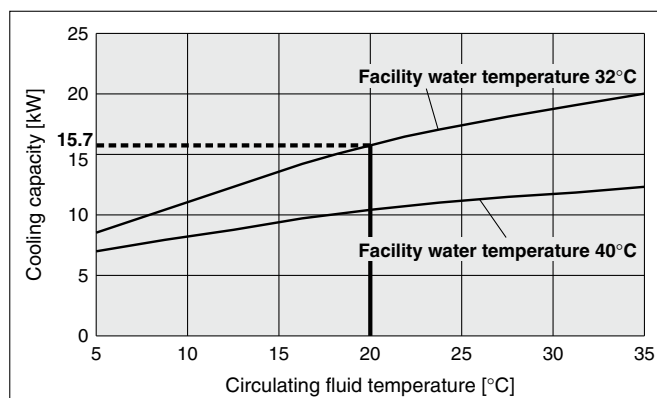


HRSH200-A□-20/40-□

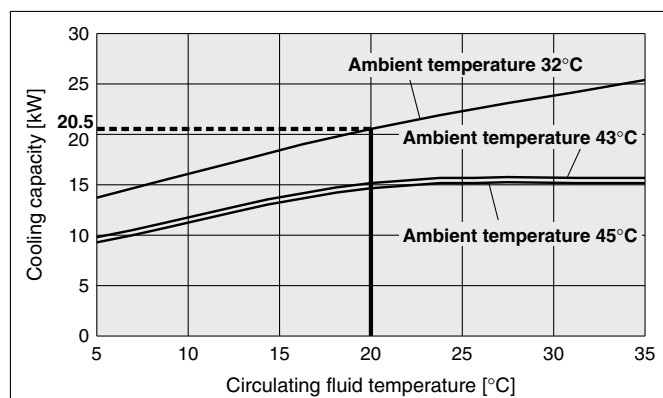


HRSH200-W□-20/40-□

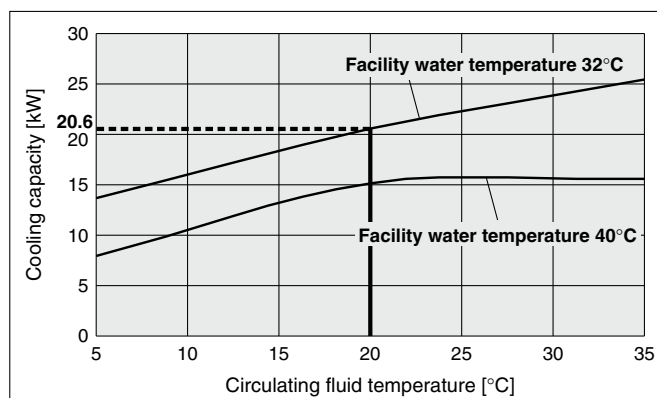

HRSH250-A□-20/40-□

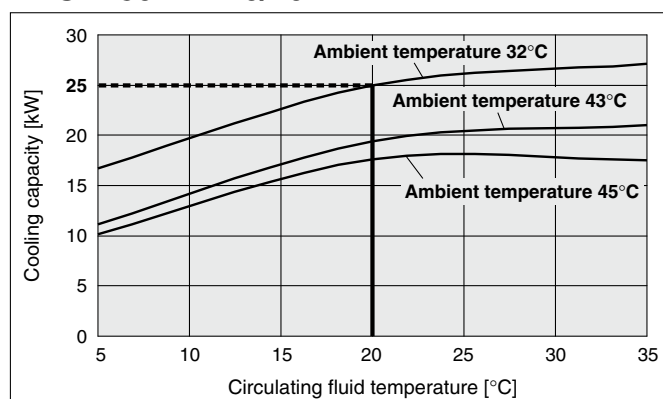


HRSH250-W□-20/40-□

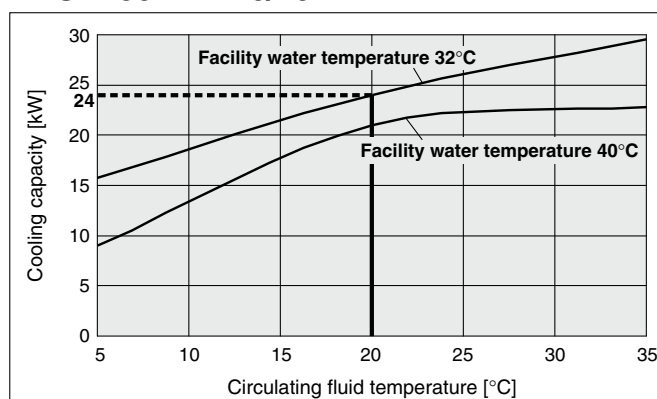

Cooling Capacity

* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 341) Item 13 "For altitudes of 1000 m or higher."


HRSH300-A□-20/40-□

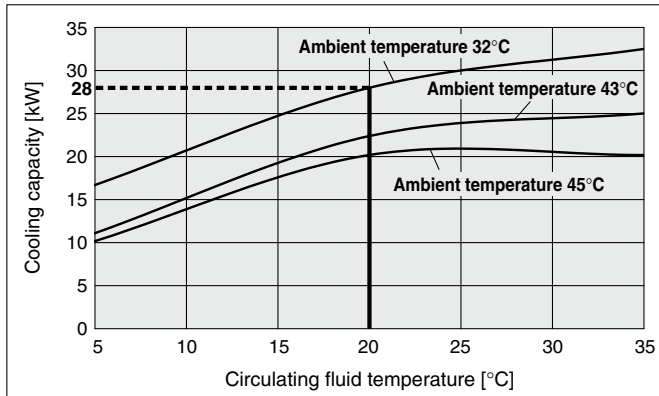

Pump Capacity


HRSH100-A□-20/40-□

HRSH100-W□-20/40-□

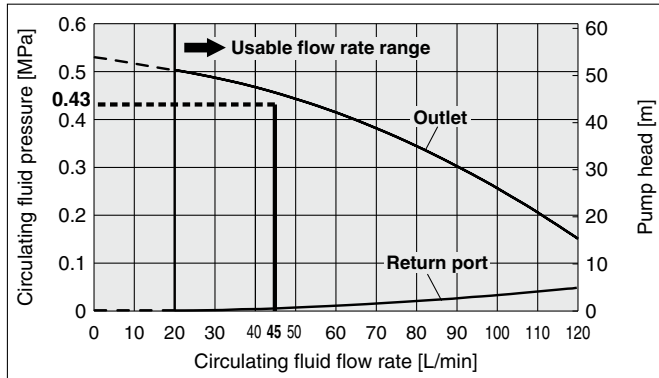


HRSH150/200-A□-20/40-□

HRSH150/200/250-W□-20/40-□

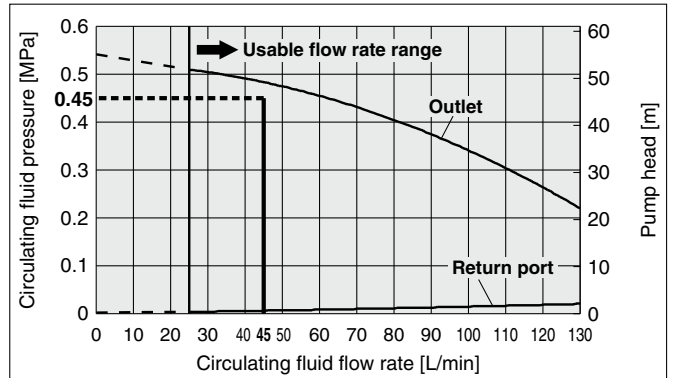


HRSH250/300-A□-20/40-□

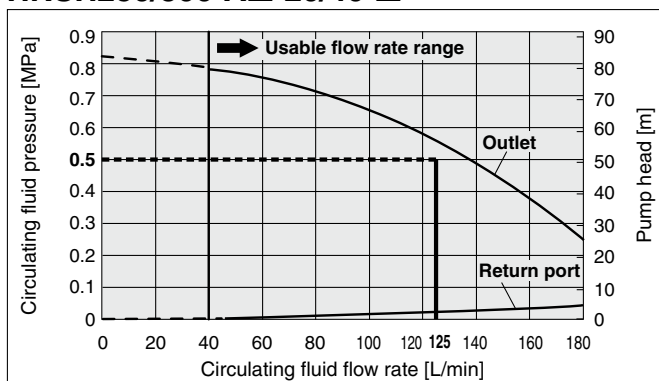

Dimensions


HRSH100/150/200-A-20 (Air-cooled 200 V type)

HRSH100/150/200-A-40 (Air-cooled 400 V type)

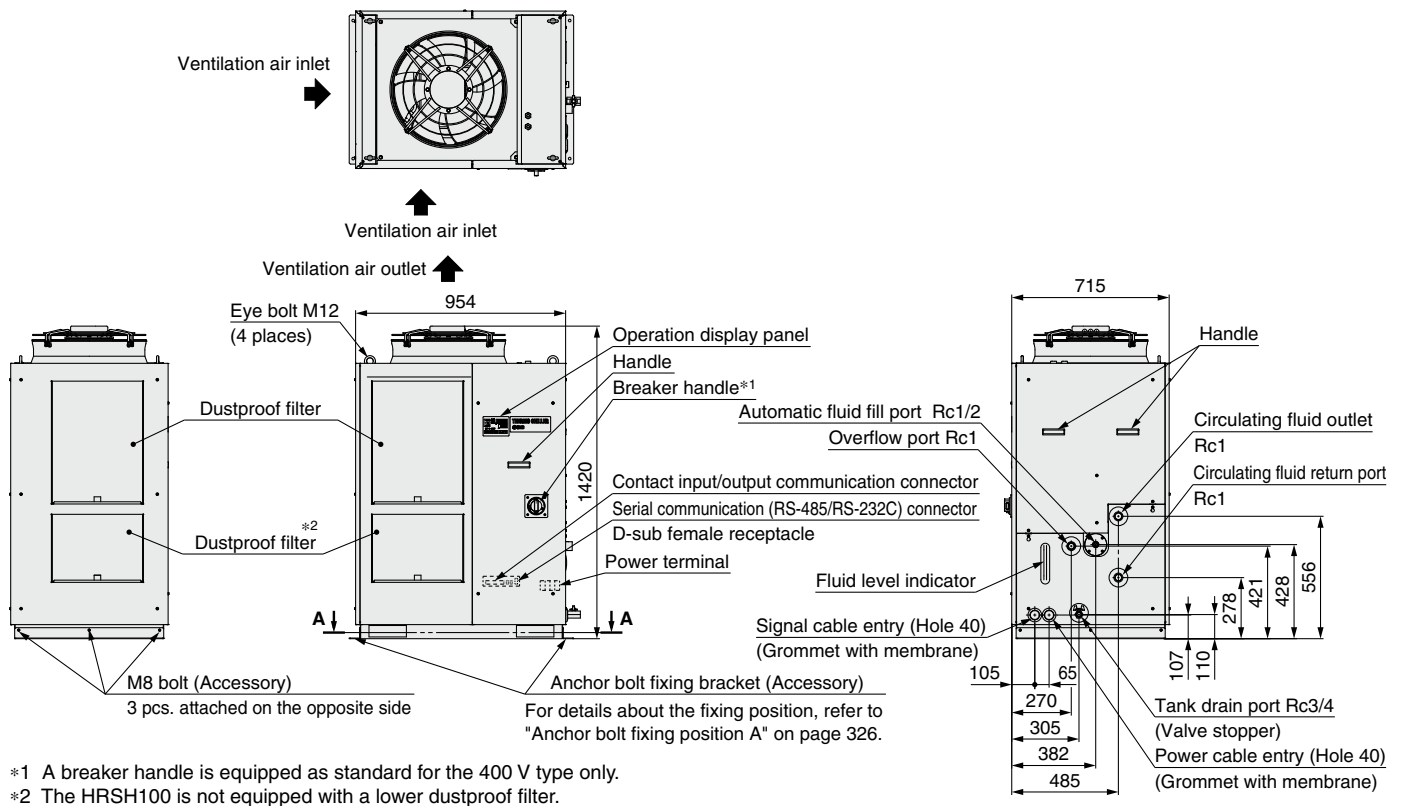

HRSH250/300-A-20 (Air-cooled 200 V type)

HRSH250/300-A-40 (Air-cooled 400 V type)

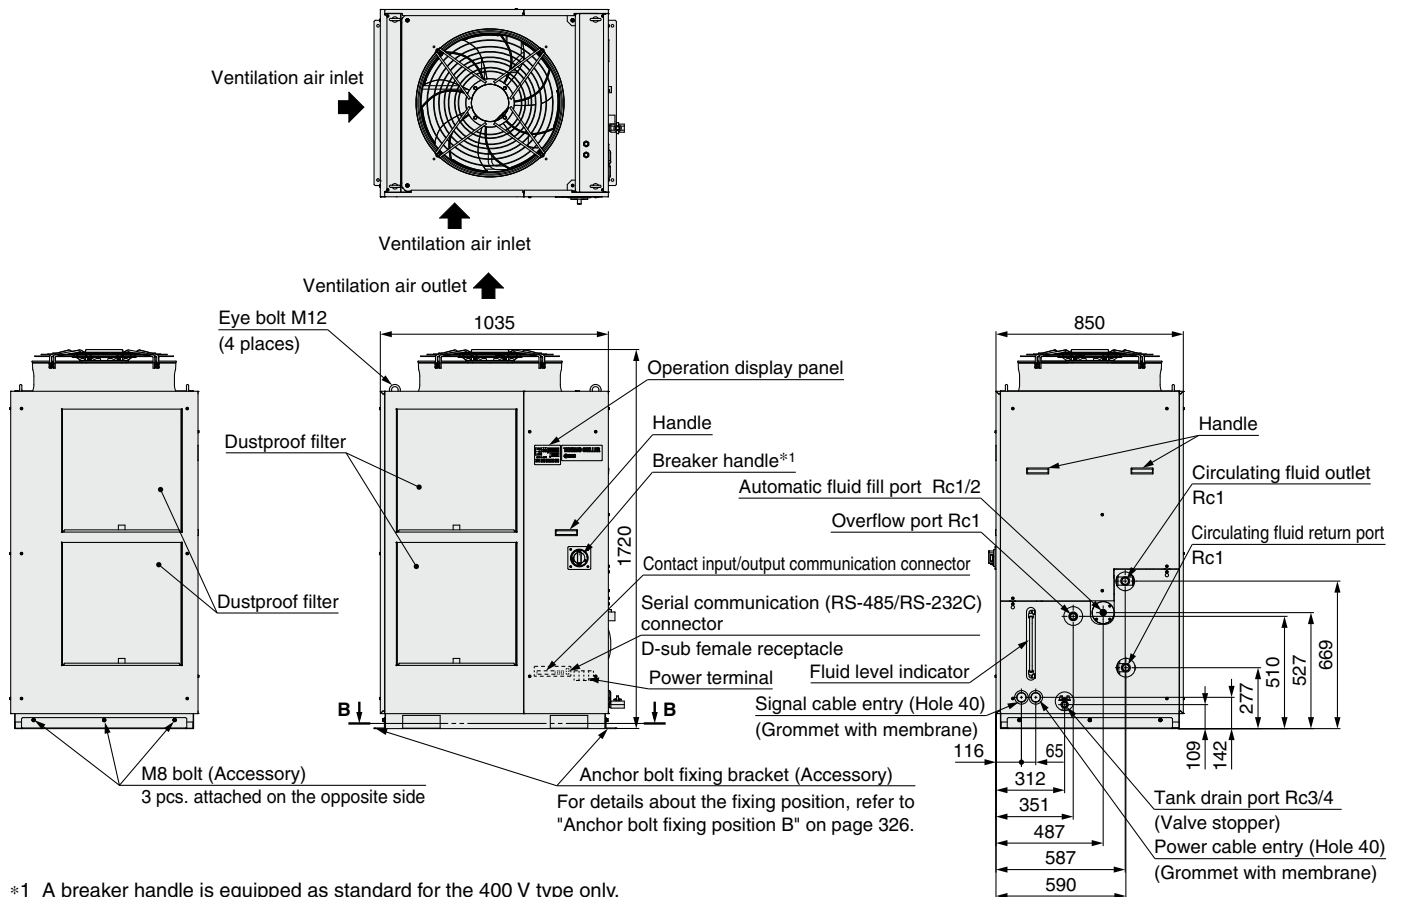


***1** A breaker handle is equipped as standard for the 400 V type only.

Dimensions


HRSH100/150/200/250-W-20 (Water-cooled 200 V type)

HRSH100/150/200/250-W-40 (Water-cooled 400 V type)

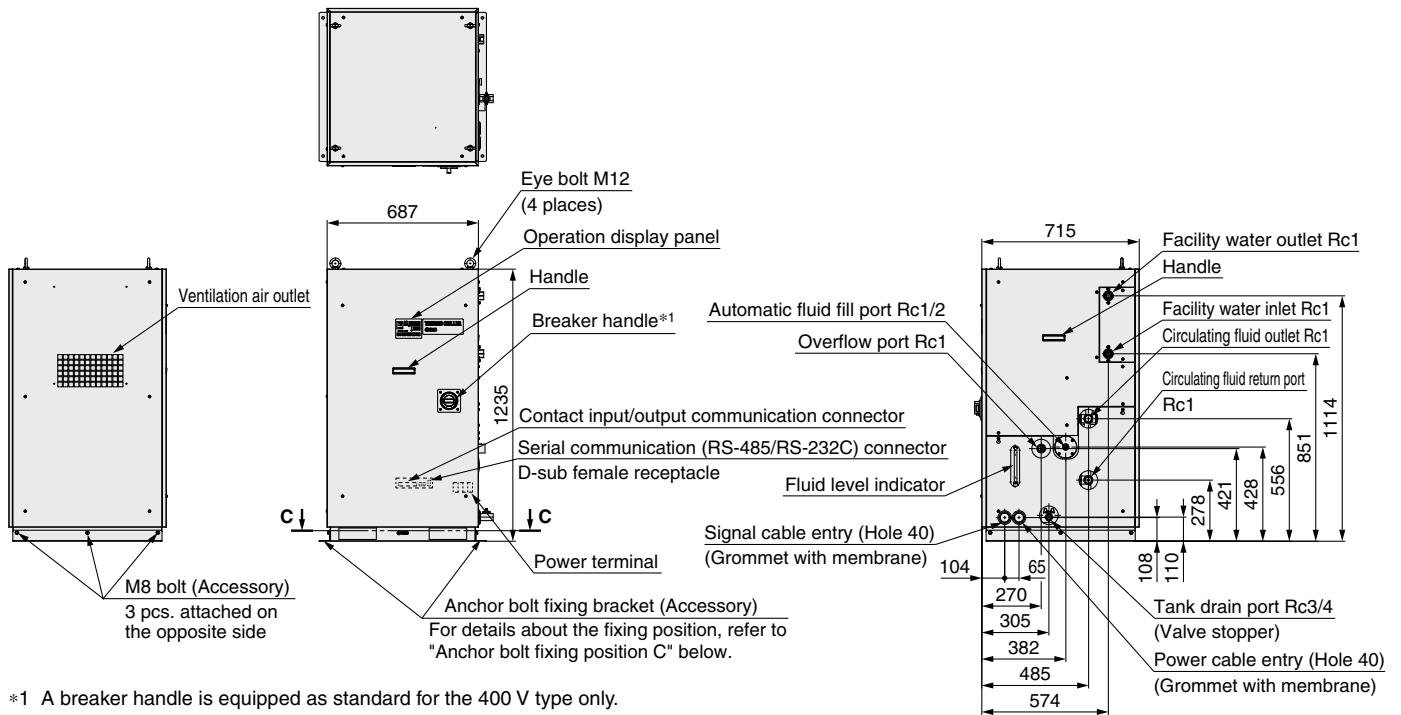


*1 A breaker handle is equipped as standard for the 400 V type only.

Anchor bolt fixing position A

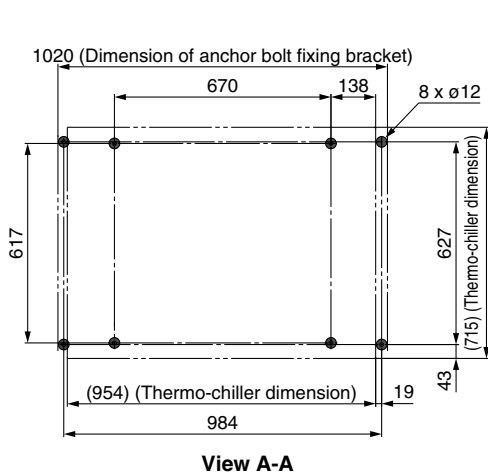


View A-A

Anchor bolt fixing position B

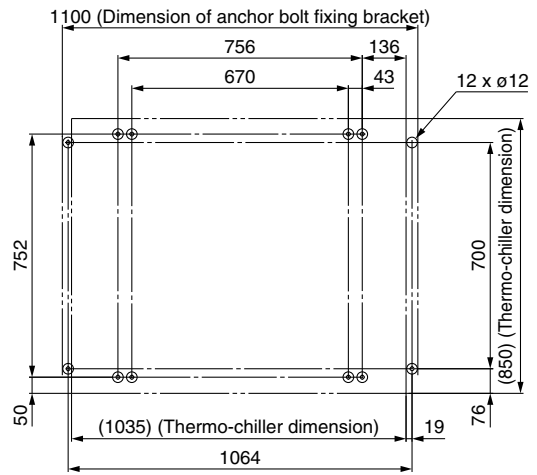


View B-B

Anchor bolt fixing position C

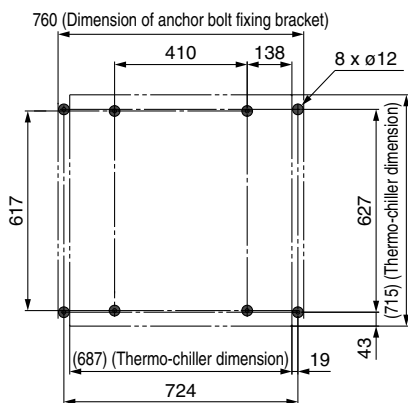


View C-C

Accessory: Y-strainer mounting view

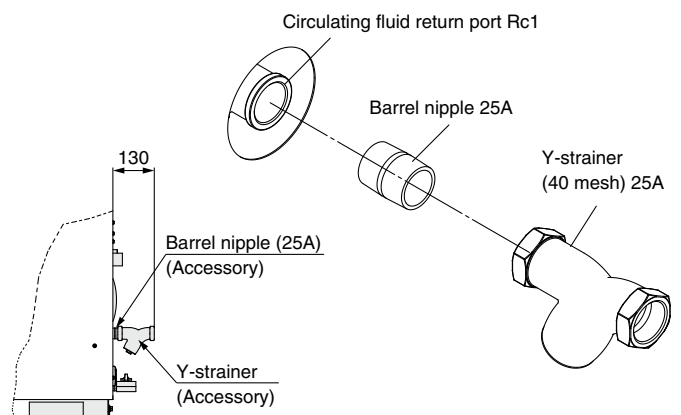

Recommended External Piping Flow

External piping circuit is recommended as shown below.

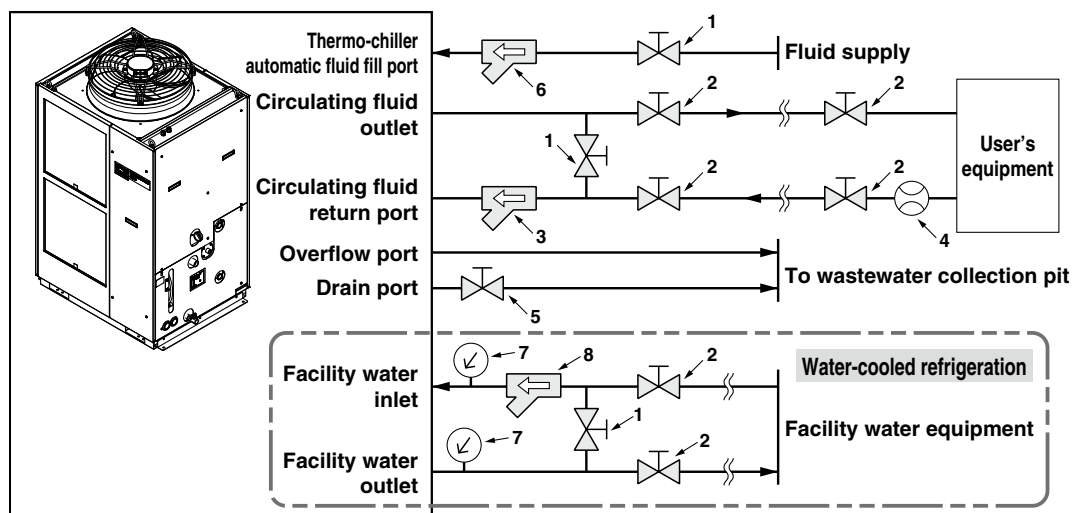

* Ensure that the overflow port is connected to the wastewater collection pit in order to avoid damage to the tank of the thermo-chiller.

| No. | Description | Size | Recommended part no. | Note |
|-----|--------------------------------|--------------------------|---------------------------------------|---|
| 1 | Valve | Rc1/2 | — | — |
| 2 | Valve | Rc1 | — | — |
| 3 | Y-strainer Filter | Rc1 #40 Rc1 20 μm | Accessory HRS-PF005*2 | Install either the strainer or filter. If foreign matter with a size of 20 μm or more are likely to enter, install the particle filter. For the recommended filter, refer to the optional accessory HRS-PF005 (page 337). |
| 4 | Flow meter | — | — | Prepare a flow meter with an appropriate flow range. |
| 5 | Valve (Part of thermo-chiller) | Rc3/4 | — | — |
| 6 | Y-strainer Filter | Rc1/2 #40 Rc1/2 20 μm | — | Install either the strainer or filter. If foreign matter with a size of 20 μm or more are likely to enter, select and prepare a particle filter. |
| 7 | Pressure gauge | 0 to 1.0 MPa | — | — |
| 8 | Y-strainer Filter | Rc1 #40 Rc1 20 μm | HRS-S0212 Refer to the table below | Install either the strainer or filter. If foreign matter with a size of 20 μm or more are likely to enter, install the particle filter. For the recommended filter, refer to the table below (*1). |

*1 Recommended filters for facility water inlet

| Applicable model | Recommended filter |
|------------------|-----------------------|
| HRSH100/150 | FQ1012N-10-T020-B-X61 |
| HRSH200/250 | FGESA-10-T020A-G2 |

*2 The filter shown above cannot be directly connected to the thermo-chiller. Install it in the user's piping system.


Cable Specifications

Power supply and signal cable should be prepared by user.

Power Cable Specifications

| Applicable model | Rated value for thermo-chiller | | | Power cable examples | |
|---|---|----------------------------------|----------------------------|---|--|
| | Power supply | Applicable breaker rated current | Terminal block thread size | Cable size | Crimped terminal on the thermo-chiller side |
| HRSH100-□□-20 HRSH150-□□-20 | 3-phase 200 VAC (50 Hz) 3-phase 200 to 230 VAC (60 Hz) | 30 A | M5 | 4 cores x 5.5 mm ² (4 cores x AWG10) (Including grounding cable) | R5.5-5 |
| HRSH100-W□-20-T HRSH150-W□-20-T HRSH200-□□-20 HRSH200-W□-20-T | | 40 A | | 4 cores x 8 mm ² (4 cores x AWG8) (Including grounding cable) | R8-5 |
| HRSH250-□□-20 HRSH250-W□-20-T HRSH300-A□-20 | | 50 A | | 4 cores x 8 mm ² (4 cores x AWG8) (Including grounding cable) | R8-5 |
| HRSH100-□□-40 HRSH100-W□-40-T HRSH150-□□-40 HRSH150-W□-40-T HRSH200-□□-40 HRSH200-W□-40-T HRSH250-□□-40 HRSH250-W□-40-T HRSH300-A□-40 | | 20 A | | 3 x 5.5 mm ² (3 x AWG10) (Power supply) 1 x 14 mm ² (1 x AWG6) (Grounding cable) | R5.5-5 (Power supply) R14-5 (Grounding cable) |

* An example of the cable specifications is when two kinds of vinyl insulated wires with a continuous allowable operating temperature of 70°C at 600 V, are used at an ambient temperature of 30°C. Select the proper size of cable according to an actual condition.

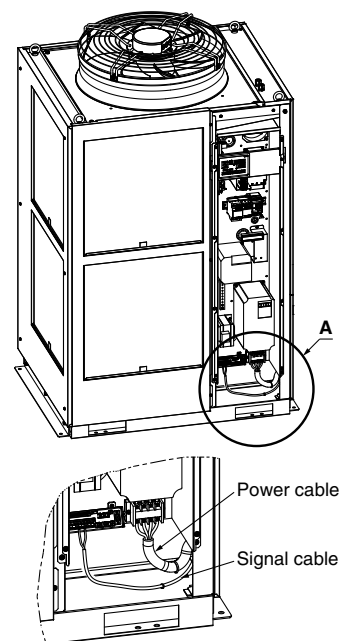


Partially enlarged view A

Signal Cable Specifications

| Terminal specifications | | Cable specifications |
|-------------------------------|-------------------------------------|--|
| Terminal block screw diameter | Recommended crimped terminal | 0.75 mm ² (AWG18) Shielded cable |
| M3 | Y-shape crimped terminal 1.25Y-3 | |

Operation Display Panel

The basic operation of this unit is controlled through the operation display panel on the front of the product.

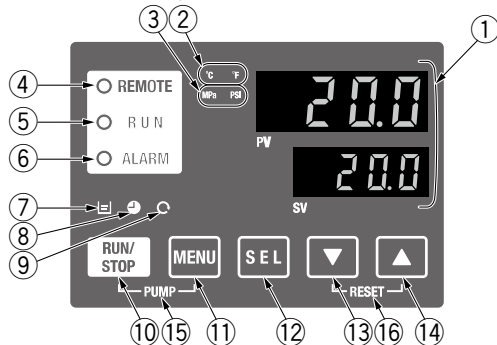

| No. | Description | Function |
|-----|--|--|
| ① | Digital display (7-segment, 4 digits) | PV Displays the circulating fluid current discharge temperature and pressure and alarm codes and other menu items (codes). SV Displays the circulating fluid discharge temperature and the set values of other menus. |
| ② | [°C] [°F] lamp | Equipped with a unit conversion function. Displays the unit of displayed temperature (default setting: °C). |
| ③ | [MPa] [PSI] lamp | Equipped with a unit conversion function. Displays the unit of displayed pressure (default setting: MPa). |
| ④ | [REMOTE] lamp | Enables remote operation (start and stop) by communication. Lights up during remote operation. |
| ⑤ | [RUN] lamp | Lights up when the product is started, and goes off when it is stopped. Flashes during stand-by for stop or anti-freezing function, or independent operation of the pump. |
| ⑥ | [ALARM] lamp | Flashes with buzzer when alarm occurs. |
| ⑦ | [L] lamp | Lights up when the surface of the fluid level indicator falls below the L level. |
| ⑧ | [●] lamp | Equipped with a timer for start and stop. Lights up when this function is operated. |
| ⑨ | [C] lamp | Equipped with a power failure auto-restart function, which restarts the product automatically after stopped due to a power failure. Lights up when this function is operated. |
| ⑩ | [RUN/STOP] key | Makes the product start or stop. |
| ⑪ | [MENU] key | Shifts the main menu (display screen of circulating fluid discharge temperature and pressure) and other menus (for monitoring and entry of set values). |
| ⑫ | [SEL] key | Changes the item in menu and enters the set value. |
| ⑬ | [▼] key | Decreases the set value. |
| ⑭ | [▲] key | Increases the set value. |
| ⑮ | [PUMP] key | Press the [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air). |
| ⑯ | [RESET] key | Press the [▼] and [▲] keys simultaneously. The alarm buzzer is stopped and the [ALARM] lamp is reset. |

List of Function

| No. | Function | Outline |
|-----|---|--|
| 1 | Main display | Displays the current and set temperature of the circulating fluid, discharge pressure of the circulating fluid. Changes the circulating fluid set temperature. |
| 2 | Alarm display menu | Indicates alarm number when an alarm occurs. |
| 3 | Inspection monitor menu | Product temperature, pressure and accumulated operating time can be checked as daily inspection. Use these for daily inspection. |
| 4 | Key-lock | Keys can be locked so that set values cannot be changed by operator error. |
| 5 | Timer for operation start/stop | Timer is used to set the operation start/stop. |
| 6 | Signal for the completion of preparation | A signal is output when the circulating fluid temperature reaches the set temperature, when using contact input/output and serial communication. |
| 7 | Offset function | Use this function when there is a temperature offset between the discharge temperature of the thermo-chiller and user's equipment. |
| 8 | Reset after power failure | Start operation automatically after the power supply is turned on. |
| 9 | Key click sound setting | Operation panel key sound can be set on/off. |
| 10 | Changing temp. unit | Temperature unit can be changed. Centigrade (°C) ↔ Fahrenheit (°F) |
| 11 | Changing pressure unit | Pressure unit can be changed. MPa ↔ PSI |
| 12 | Data reset | Functions can be reset to the default settings (settings when shipped from the factory). |
| 13 | Accumulation time reset | Reset function when the pump, the fan or the compressor is replaced. Reset the accumulated time here. |
| 14 | Pump operation mode set | The fluid supply mode of the pump can be changed Pressure control mode ↔ Frequency set mode |
| 15 | Anti-freezing function | Circulating fluid is protected from freezing during winter or at night. Set beforehand if there is a risk of freezing. |
| 16 | Warming-up function | When circulating fluid temperature rising time at starting needs shortening during winter or at night, set beforehand. |
| 17 | Anti-snow coverage function | If there will be a possibility of the snow coverage due to the change of the installation environment (season, weather), set beforehand. |
| 18 | Alarm buzzer sound setting | Alarm sound can be set to on/off. |
| 19 | Alarm customizing | Operation during alarm condition and threshold values can be changed depending on the alarm type. |
| 20 | Communication | This function is used for contact input/output or serial communication. |

Alarm

This unit has 42 types of alarms as standard, and displays each of them by its alarm code on the PV screen with the [ALARM] lamp ([LOW LEVEL] lamp) lit up on the operation display panel. The alarm can be read out through communication.

| Code | Alarm message |
|------|--|
| AL01 | Low level in tank |
| AL02 | High circulating fluid discharge temp. |
| AL03 | Circulating fluid discharge temp. rise |
| AL04 | Circulating fluid discharge temp. drop |
| AL05 | High circulating fluid return temp. |
| AL08 | Circulating fluid discharge pressure rise |
| AL09 | Circulating fluid discharge pressure drop |
| AL10 | High compressor intake temp. |
| AL11 | Low compressor intake temp. |
| AL12 | Low super heat temp. |
| AL13 | High compressor discharge pressure |
| AL15 | Refrigeration circuit pressure (high pressure side) drop |
| AL16 | Refrigeration circuit pressure (low pressure side) rise |
| AL17 | Refrigeration circuit pressure (low pressure side) drop |
| AL18 | Compressor running failure |

| Code | Alarm message |
|------|---|
| AL19 | Communication error |
| AL20 | Memory error |
| AL21 | DC line fuse cut |
| AL22 | Circulating fluid discharge temp. sensor failure |
| AL23 | Circulating fluid return temp. sensor failure |
| AL24 | Compressor intake temp. sensor failure |
| AL25 | Circulating fluid discharge pressure sensor failure |
| AL26 | Compressor discharge pressure sensor failure |
| AL27 | Compressor intake pressure sensor failure |
| AL28 | Pump maintenance |
| AL29 | Fan maintenance*1 |
| AL30 | Compressor maintenance |
| AL31 | Contact input 1 signal detection |
| AL32 | Contact input 2 signal detection |
| AL37 | Compressor discharge temp. sensor failure |

| Code | Alarm message |
|------|---------------------------------|
| AL38 | Compressor discharge temp. rise |
| AL39 | Internal unit fan stoppage |
| AL40 | Dustproof filter maintenance*1 |
| AL41 | Power stoppage |
| AL42 | Compressor waiting |
| AL43 | Fan breaker trip*1 |
| AL44 | Fan inverter error*1 |
| AL45 | Compressor breaker trip*2 |
| AL46 | Compressor inverter error |
| AL47 | Pump breaker trip*2 |
| AL48 | Pump inverter error |
| AL49 | Air exhaust fan stoppage*3 |

*1 Does not occur on the product of water-cooled refrigeration type.

*2 Does not occur on the product of power supply specification '20'.

*3 Does not occur on the product of air-cooled refrigeration type.

* For details, read the Operation Manual.

For details, refer to the Operation Manual. Please download it via our website, <https://www.smcworld.com>

HRSH Series Options

* Options have to be selected when ordering the thermo-chiller.
It is not possible to add them after purchasing the unit.

A Option symbol With Caster Adjuster-foot


HRSH□-□□-□-**A**

● With caster adjuster-foot

Unfixed casters and adjuster feet stops are mounted.

| Applicable model | Dimension [mm] | | | Additional weight*1 [kg] |
|-----------------------------|----------------|-----|------|--------------------------|
| | A | B | C | |
| HRSH250/300-A□-□□-A | 916 | 536 | 1838 | Approx. 24 |
| HRSH100/150/200-A□-□□-A | 830 | 401 | 1538 | Approx. 18 |
| HRSH100/150/200/250-W□-□□-A | 570 | | 1353 | |

*1 Refers to the amount of increase from the standard weight

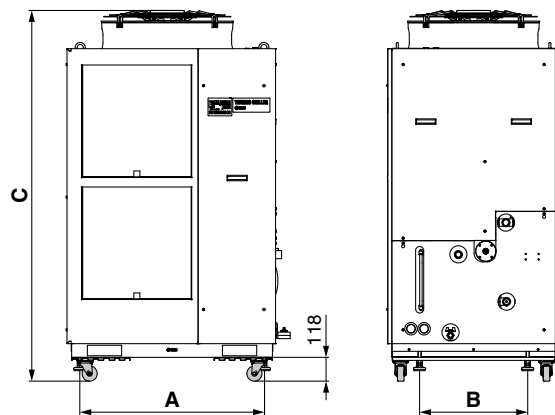

B Option symbol With Earth Leakage Breaker

HRSH□-□□-20-**B**

● With earth leakage breaker

A leakage breaker is built in to automatically stop the supply power when it has short-circuit, over current or electrical leakage. (It is not necessary to select this option since an earth leakage breaker is installed for the models with power supply specification '-40' as standard equipment.)


| Applicable model | Rated current [A] | Sensitivity of leak current [mA] | Short circuit display method |
|------------------|-------------------|----------------------------------|------------------------------|
| HRSH100-□□-20-B | 30 | 30 | Mechanical button |
| HRSH150-□□-20-B | | | |
| HRSH200-□□-20-B | 40 | | |
| HRSH250-□□-20-B | 50 | | |
| HRSH300-□□-20-B | | | |

* 400 V type is equipped as standard.

(Refer to the specifications on pages 321, 322 and the dimensions on pages 325, 326 for details.)

* Cannot be selected together with option B1.

* Cannot be selected together with option S.

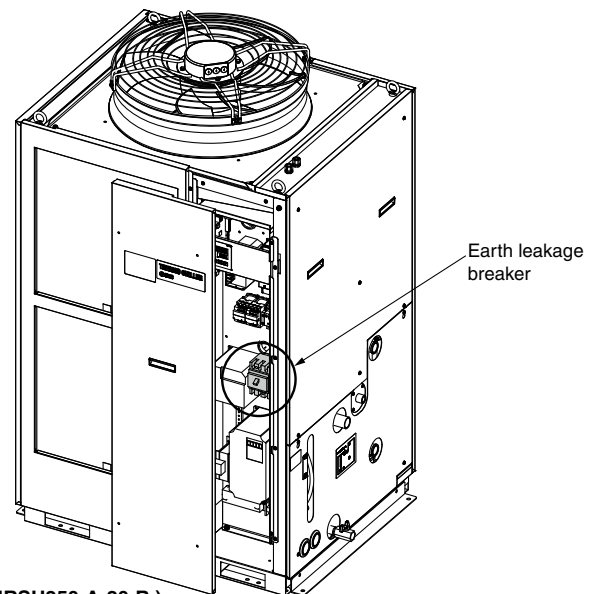

(The figure shows the HRSH250-A-20-B.)

HRSH Series

B1


Option symbol

With Earth Leakage Breaker with Handle



HRSH□-□□-20-B1

● With earth leakage breaker with handle

A breaker operation handle that can be operated without removing the front panel for the electrical unit is mounted. Breaker capacity, sensitivity of leak current, and operating characteristics of the breaker are the same as option B. (It is not necessary to select this option since an earth leakage breaker with a handle is installed for the models with power supply specification ‘-40’ as standard equipment.)

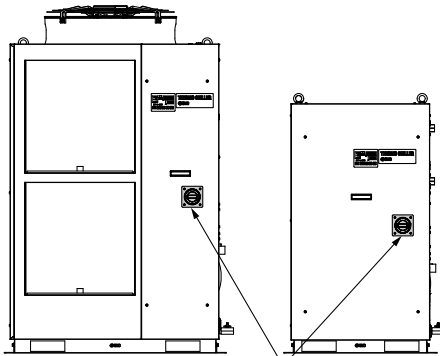

Breaker handle

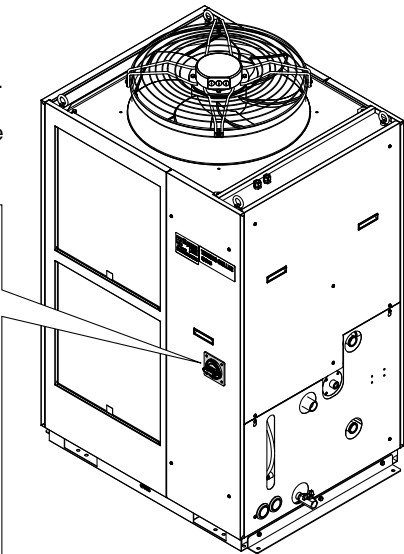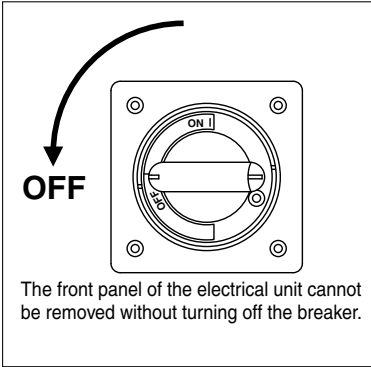

- * 400 V type is equipped as standard.
- * Cannot be selected together with option B.
- * Cannot be selected together with option S.

K

Option symbol



With Fluid Fill Port

HRSH□-□□-□-K



● With fluid fill port

When the automatic fluid fill in port is not used, water can be supplied manually without removing the panel.

| Applicable model | Dimension [mm] | |
|------------------|----------------|-----|
| | A | B |
| HRSH100-□□-□-K | 271 | 609 |
| HRSH150-□□-□-K | | |
| HRSH200-□□-□-K | | |
| HRSH250-W□-□-K | | |
| HRSH250-A□-□-K | 372 | 708 |
| HRSH300-A□-□-K | | |

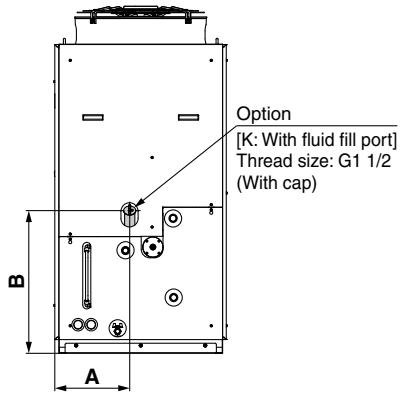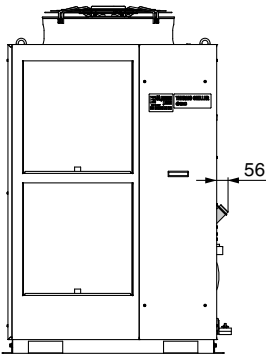

Option
[K: With fluid fill port]
Thread size: G1 1/2
(With cap)

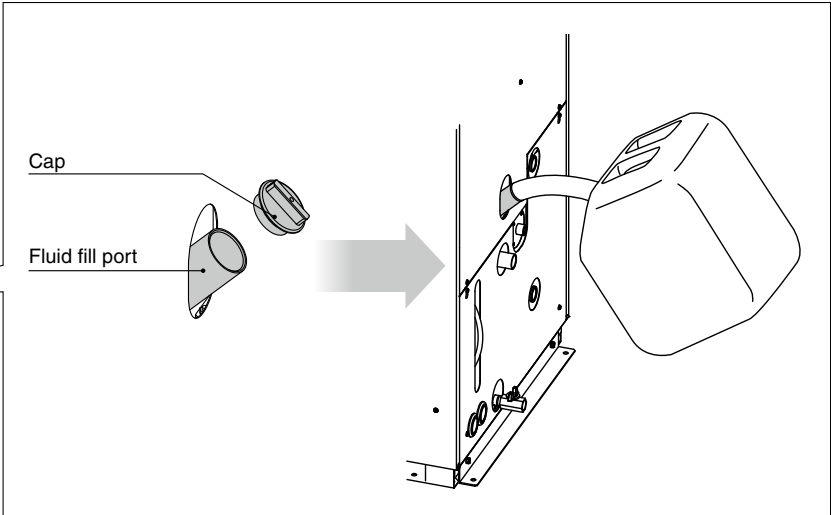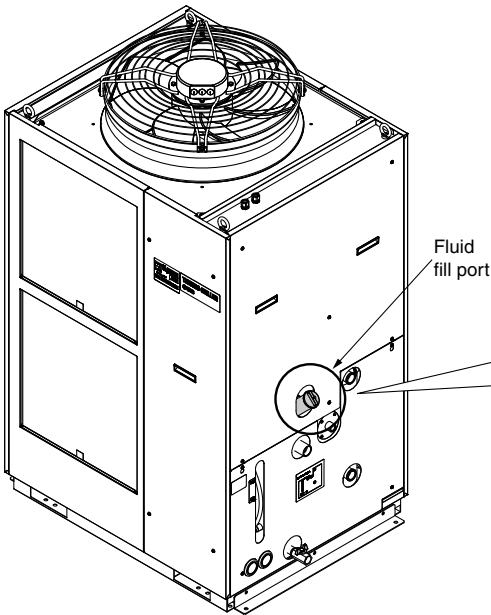

(The figure shows the HRSH250-A-20-K.)

M Option symbol**Applicable to DI Water Piping****HRSH□-□□-□-**M****● **Applicable to DI water piping**

Contact material of the circulating fluid circuit is made from non-copper materials.

| | |
|--|--|
| Applicable model | HRSH□-□□-□-M |
| Contact material for circulating fluid | Stainless steel (including heat exchanger brazing), PTFE, PU, FKM, EPDM, PVC, NBR, POM |

* No change in external dimensions

S Option symbol**Compliant with CE/UKCA, UL Standards****HRSH□-□□-20-**S****● **Compliant with CE/UKCA, UL Standards**

Products compliant with CE/UKCA, UL Standards.
The following standards are applicable.


| Applicable standard | |
|---------------------|--|
| CE/UKCA marking | Refer to the "Declaration of Conformity" on the SMC website. |
| UL standard | E112803 (UL61010-1) |

When selecting this option,

- An earth leakage breaker with a breaker handle is equipped. (The breaker are the same as those for option B1.)
- A caution label is added.
- The CE/UKCA, UL certification mark is added to the model number label.

* **Cannot be selected for 400 V type.*** **Cannot be selected together with option B.*** **Cannot be selected together with option B1.**

- * For the operation in accordance with the UL Standard, the product should be used in an environment at a pollution degree of 2 or less. Prepare a power supply of overvoltage category II or less.

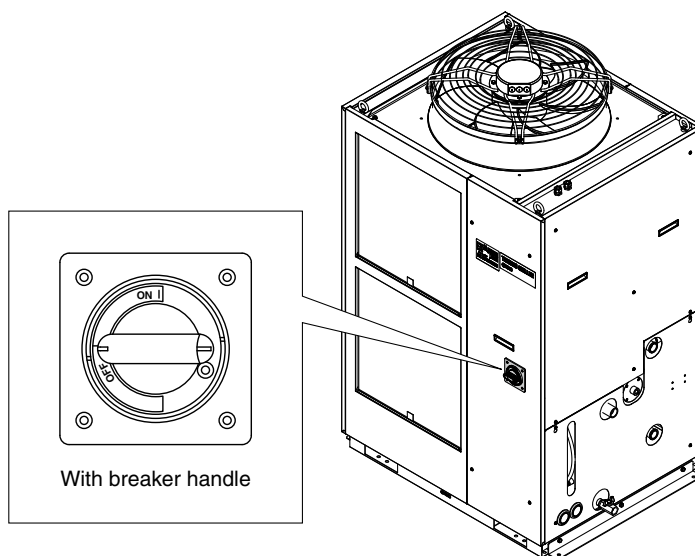

HRSH Series

T Option symbol

High-Pressure Pump Mounted

HRSH□-W□-□-T

● High-pressure pump mounted

Possible to choose a high-pressure pump in accordance with user's piping resistance.

* Cannot be selected for air-cooled type

| Model | | | | HRSH100-W□-20-T | HRSH150-W□-20-T | HRSH200-W□-20-T | HRSH250-W□-20-T |
|--------------------------|----------------------------------|-----------------------------|----------|-----------------|-----------------|-----------------|-----------------|
| Circulating fluid system | Pump capacity | Rated flow (Outlet)*1, 2 | L/min | 125 (0.50 MPa) | | | |
| | | Max. flow rate | L/min | 180 | | | |
| | | Max. pump head | m | 80 | | | |
| | | Settable pressure range | MPa | 0.1 to 0.8 | | | |
| | | Min. operating flow rate | L/min | 40 | | | |
| | | Tank capacity | L | 42 | | | |
| Electrical system | Applicable earth leakage breaker | Rated current | A | 40 | | | 50 |
| | | Sensitivity of leak current | mA | 30 | | | |
| | Rated operating current | | A | 26 | 30 | 34 | |
| | Rated power consumption | | kW (kVA) | 6.6 (9.0) | 8.2 (10.4) | 8.9 (11.8) | |
| | Weight (dry state) | | kg | Approx. 202 | | | |



*1 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C

*2 The required min. flow rate for maintaining the cooling capacity or temperature stability

| Model | | | | HRSH100-W□-40-T | HRSH150-W□-40-T | HRSH200-W□-40-T | HRSH250-W□-40-T |
|--------------------------|----------------------------------|-----------------------------|----------|-----------------|-----------------|-----------------|-----------------|
| Circulating fluid system | Pump capacity | Rated flow (Outlet)*1, 2 | L/min | 125 (0.50 MPa) | | | |
| | | Max. flow rate | L/min | 180 | | | |
| | | Max. pump head | m | 80 | | | |
| | | Settable pressure range | MPa | 0.1 to 0.8 | | | |
| | | Min. operating flow rate | L/min | 40 | | | |
| | | Tank capacity | L | 42 | | | |
| Electrical system | Applicable earth leakage breaker | Rated current | A | 30 | | | |
| | | Sensitivity of leak current | mA | 30 | | | |
| | Rated operating current | | A | 11.8 | 13.2 | 15.2 | 19.2 |
| | Rated power consumption | | kW (kVA) | 6.5 (8.2) | 7.5 (9.1) | 9.0 (10.5) | 11.9 (13.3) |
| | Weight (dry state) | | kg | Approx. 202 | | | |

*1 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C

*2 The required min. flow rate for maintaining the cooling capacity or temperature stability

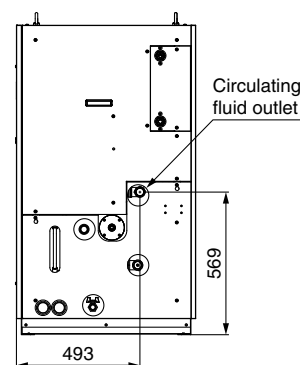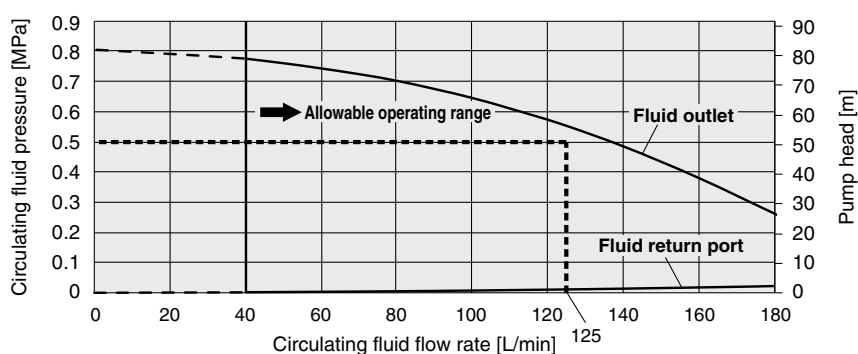

W Option symbol

SI Unit Only

HRSH□-□□-20-W

● SI unit only

The circulating fluid temperature and pressure are displayed in SI units [MPa/°C] only.

If this option is not selected, a product with a unit selection function will be provided by default.

* No change in external dimensions

HRSH Series

Optional Accessories


① Piping Conversion Fitting

This is a fitting to change the port from Rc to G or NPT.


- Circulating fluid outlet, Circulating fluid return port, Overflow port Rc1 → NPT1 or G1
- Drain port Rc3/4 → NPT3/4 or G3/4
- Automatic fluid fill port Rc1/2 → NPT1/2 or G1/2
- Facility water inlet, Facility water outlet Rc1 → NPT1 or G1 (for HRS-EP015 or HRS-EP016)

(It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.)

| Part no. | Contents | Applicable model |
|------------------|-----------------------------------|------------------|
| HRS-EP013 | NPT thread conversion fitting set | HRSH□-A-□ |
| HRS-EP014 | G thread conversion fitting set | |
| HRS-EP015 | NPT thread conversion fitting set | HRSH□-W-□ |
| HRS-EP016 | G thread conversion fitting set | |

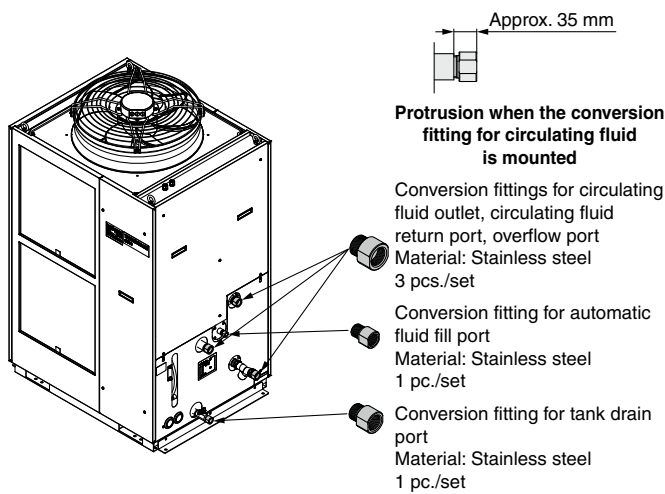

HRS-EP013, HRS-EP014

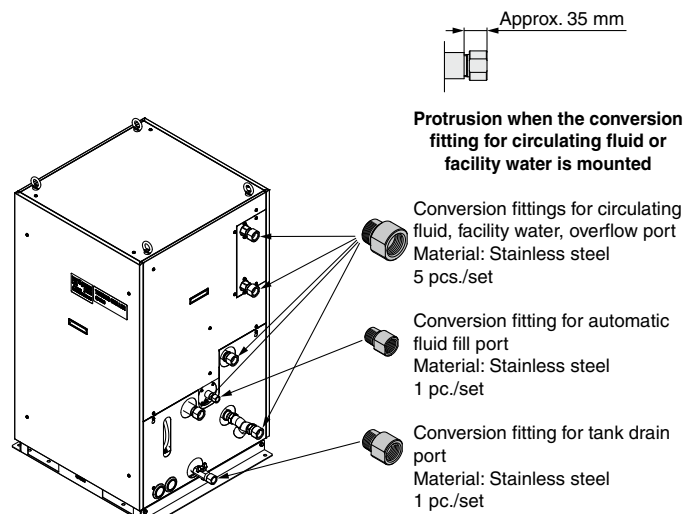

HRS-EP015, HRS-EP016

② Caster Adjuster-foot Kit

This is a set of unfixed casters and adjuster feet stop.

When installed by user, it is necessary to lift the thermo-chiller by a forklift or sling work.

Carefully read the procedure manual included with this kit before performing the installation.

| Part no. | Applicable model | Dimension [mm] | | Weight [kg] |
|------------------|--|----------------|-----|-------------|
| | | A | B | |
| HRS-KS001 | HRSH250-A-□ HRSH300-A-□ | 916 | 536 | Approx. 24 |
| HRS-KS002 | HRSH100-A-□ HRSH150-A-□ HRSH200-A-□ | 830 | 401 | Approx. 18 |
| | HRSH100-W-□ HRSH150-W-□ HRSH200-W-□ HRSH250-W-□ | 570 | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

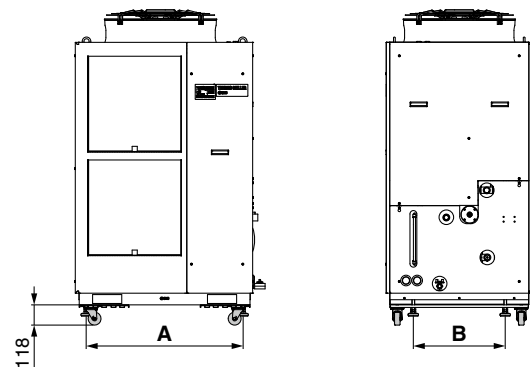


Fig. 1 Mounting view

Parts List

| Description |
|---------------------------------------|
| Procedure manual |
| Caster adjuster-foot bracket (2 pcs.) |
| Fixing bolt (M8) (8 pcs.) |

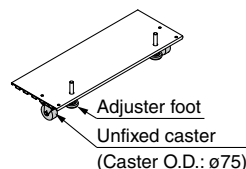


Fig. 2 Caster adjuster-foot bracket (2 pcs.)

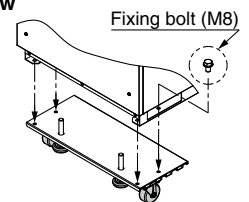





Fig. 3 Fixing bolt (8 pcs.)

③ Electric Conductivity Control Set

The set indicates and controls the electric conductivity of the circulating fluid. Refer to the Operation Manual for details.

| Part no. | Applicable model |
|------------------|---------------------|
| HRS-DI006 | HRSH100-□□-□ |
| | HRSH150-□□-□ |
| | HRSH200-□□-□ |
| | HRSH250-□□-□ |
| | HRSH300-□□-□ |

| | |
|--|------------------------------|
| Measurement range of electric conductivity | 2.0 to 48.0 $\mu\text{S/cm}$ |
| Set range of electric conductivity target | 5.0 to 45.0 $\mu\text{S/cm}$ |
| Set range of electric conductivity hysteresis | 2.0 to 10.0 $\mu\text{S/cm}$ |
| Operating temperature range (Circulating fluid temperature) | 5 to 60°C |
| Power consumption | 400 mA or less |
| Installation environment | Indoor |

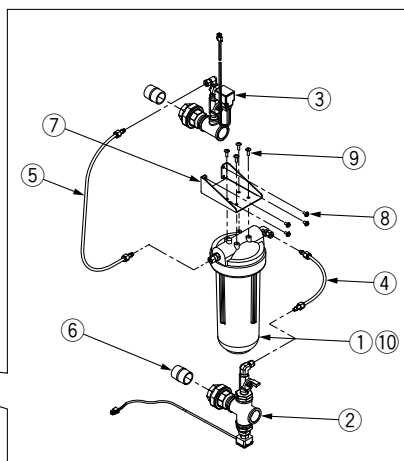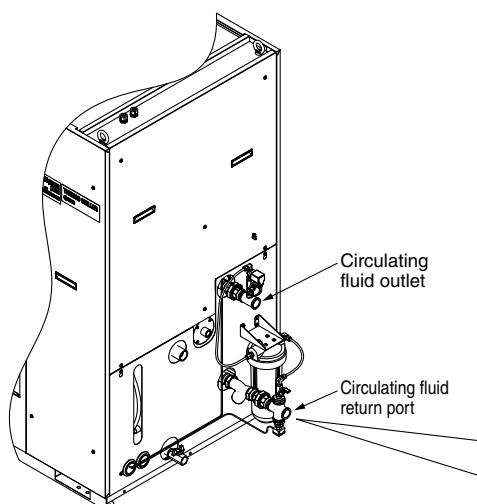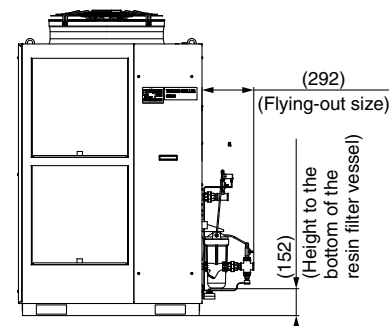

Parts List

| No. | Description | Fluid contact material | Qty. |
|-----|--|------------------------|------|
| ① | DI filter vessel | PC, PP | 1 |
| ② | DI sensor assembly | Stainless steel, PPS | 1 |
| ③ | DI control piping assembly | Stainless steel, EPDM | 1 |
| ④ | DI filter outlet tube | PFA, POM | 1 |
| ⑤ | DI filter inlet tube | PFA, POM | 1 |
| ⑥ | Nipple (Size: 1 inch) | Stainless steel | 2 |
| ⑦ | Mounting bracket | — | 1 |
| ⑧ | Mounting screw (M5 screw) | — | 4 |
| ⑨ | Tapping screw (M5 screw) | — | 4 |
| ⑩ | DI filter cartridge (Part no.: HRS-DF001)*1 | PP, PE | 1 |

*1 The product should be replaced when it can no longer preserve the electrical conductivity set value.

④ Bypass Piping Set

When the circulating fluid goes below the minimum operating flow rate (as shown below), cooling capacity will be reduced and the temperature stability will be badly affected. Use the bypass piping set to ensure a circulating fluid flow rate of the minimum operating flow rate or more.


Bypass Piping Set

| Part no. | Applicable model | Minimum operating flow rate [L/min] |
|------------------|--|-------------------------------------|
| HRS-BP005 | HRSH100-□□-□ | 20 |
| | HRSH150-□□-□ | 25 |
| | HRSH200-□□-□ | |
| | HRSH250-W□-□ | |
| | HRSH250-A□-□ HRSH300-A□-□ | 40 |

Bypass Piping Set (Stainless Steel)

| Part no. | Applicable model | Minimum operating flow rate [L/min] |
|------------------|--|-------------------------------------|
| HRS-BP011 | HRSH100-□□-□ | 20 |
| | HRSH150-□□-□ | 25 |
| | HRSH200-□□-□ | |
| | HRSH250-W□-□ | |
| | HRSH250-A□-□ HRSH300-A□-□ | 40 |

* When selecting option "M," the HRS-BP011 is recommended.

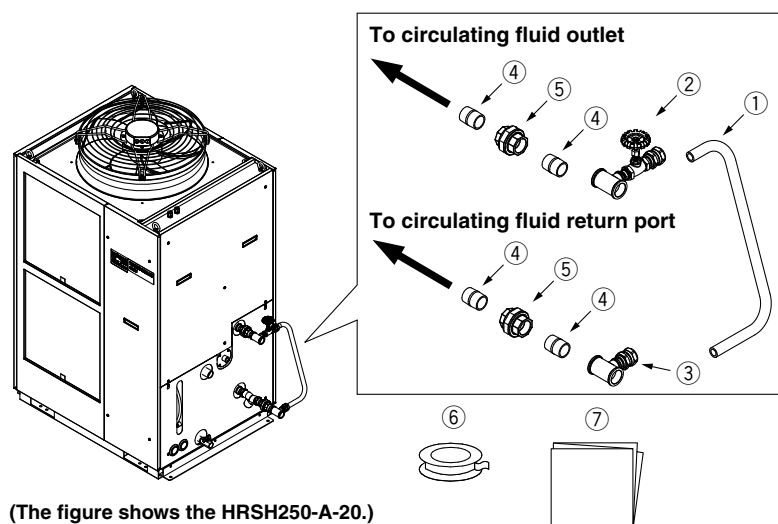


(The figure shows the HRSH250-A-20.)

Parts List

| No. | Description | Fluid contact material | | Qty. |
|-----|--|-----------------------------------|-----------------|-----------------------|
| | | HRS-BP005 | HRS-BP011 | |
| ① | Hose (I.D.: 15 mm) | PVC | PVC | 1 (Approx. 700 mm) |
| ② | Outlet piping assembly (With globe valve) | Stainless steel, Brass, Bronze | Stainless steel | 1 |
| ③ | Return piping assembly | Stainless steel, Brass | Stainless steel | 1 |
| ④ | Nipple (Size: 1 inch) | Stainless steel | Stainless steel | 4 |
| ⑤ | Union (Size: 1 inch) | Stainless steel | Stainless steel | 2 |
| ⑥ | Sealant tape | PTFE | PTFE | 1 |
| ⑦ | Operation Manual | — | — | 1 |


⑤ **Snow Protection Hood**

Stainless steel snow protection hood for air-cooled chiller.
According to the mounting direction of the snow protection hood, the ventilation from the fan can be selected from four directions, front, rear, left and right.

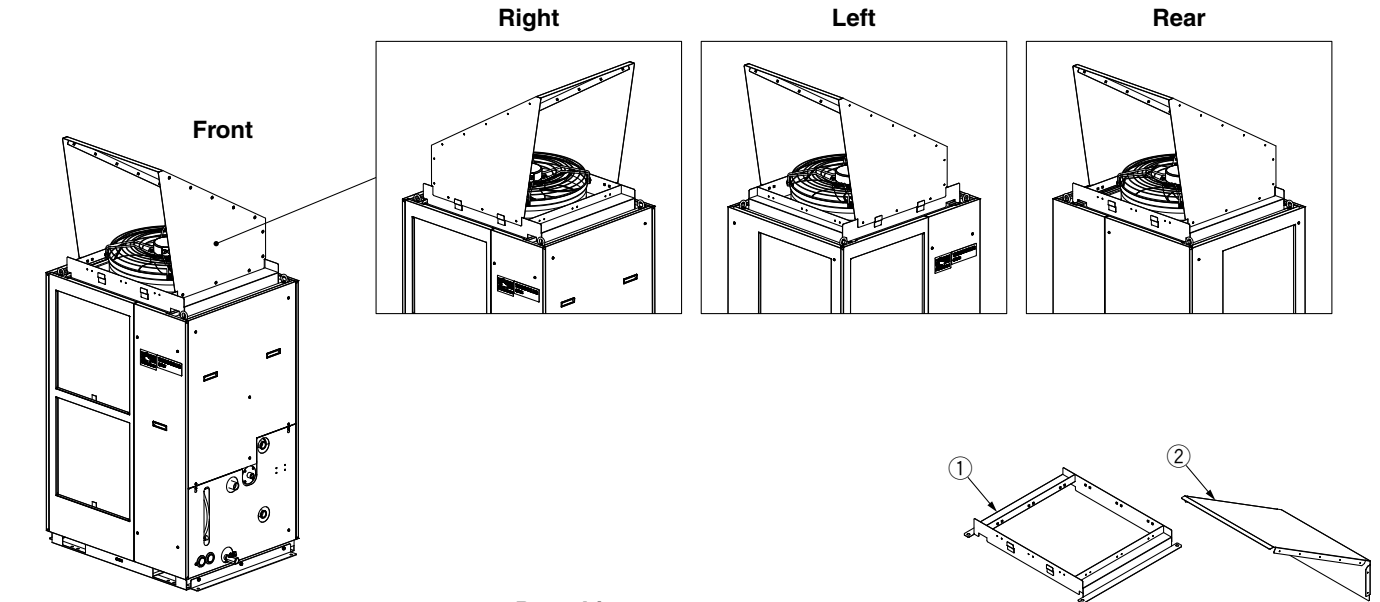


| Part no. | Applicable model | Weight [kg] |
|-----------|------------------|-------------|
| HRS-BK003 | HRSH250-A□-□ | 22 |
| | HRSH300-A□-□ | |
| HRS-BK004 | HRSH100-A□-□ | 18 |
| | HRSH150-A□-□ | |
| | HRSH200-A□-□ | |

| No. | Description | Qty. |
|-----|---------------------------|------|
| ① | Snow protection hood base | 1 |
| ② | Snow protection hood A | 1 |
| ③ | Snow protection hood B | 2 |
| ④ | Assembly/Mounting screw | 20 |

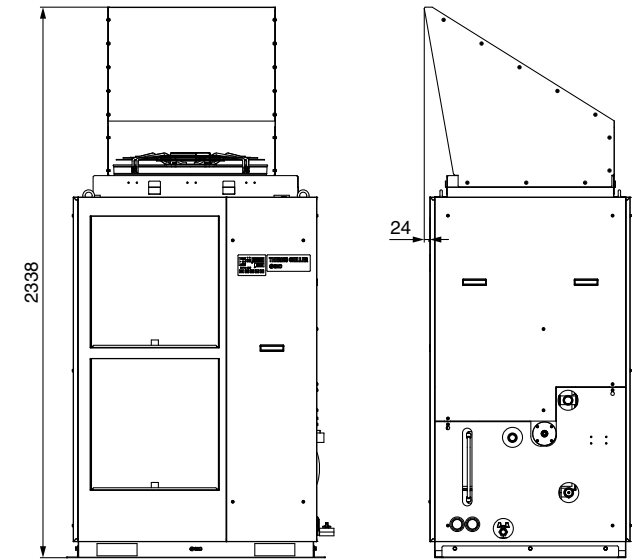

Mounting condition for HRS-BK003

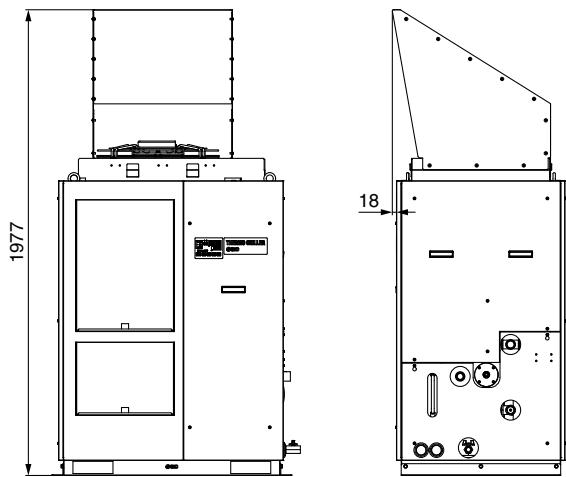

Mounting condition for HRS-BK004

* This hood does not completely prevent snow from entering the inside of the chiller.

⑥ Particle Filter Set

Removes foreign matter in the circulating fluid. This set cannot be directly connected to the thermo-chiller. Install it in the user's piping system. Refer to the Operation Manual for details.

Particle Filter Set

HRS-PF005-**H**

● Accessory

| Symbol | Accessory |
|--------|-------------|
| Nil | None |
| H | With handle |

| | |
|-----------------------------|-----------|
| Fluid | Tap water |
| Max. operating pressure | 0.65 MPa |
| Operating temperature range | 5 to 35°C |
| Nominal filtration accuracy | 5 μm |
| Installation environment | Indoors |

Parts List


| No. | Description | Material | Qty. | Note |
|-----|-----------------|-----------------|------|---------------------------|
| ① | Body | PC, PP | 1 | — |
| ② | Element*1 | PP | 1 | — |
| ③ | Extension piece | Stainless steel | 2 | Conversion from NPT to Rc |
| ④ | Handle | — | 1 | When -H is selected |
| ⑤ | Sealant tape | PTFE | 1 | — |

*1 The product should be replaced when the pressure drop reaches 0.1 MPa.

Replacement Element

HRS-PF006

The product should be replaced when the pressure drop reaches 0.1 MPa.

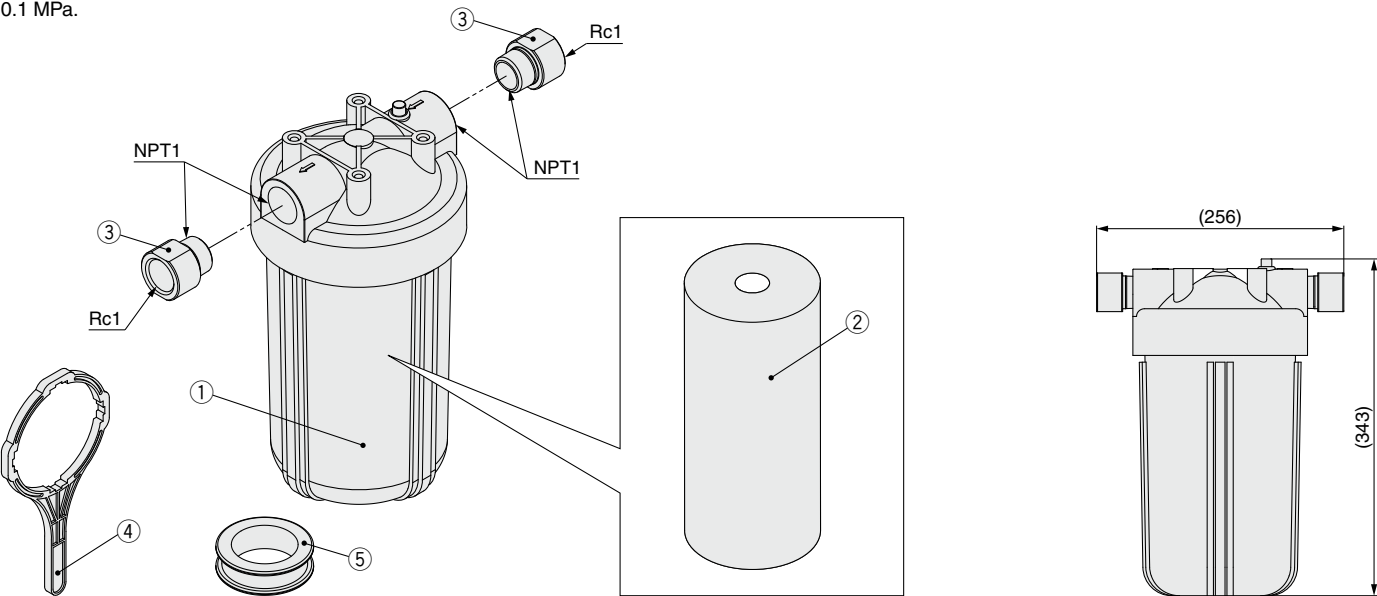

⑦ **Wired Remote Controller**


When the wired remote controller is connected to the thermo-chiller, the operation start/stop setting or the set temperature can be changed from a place apart from the thermo-chiller. For details, refer to the Operation Manual.

Wired Remote Controller

HRS-CV004-1

● **Accessories**

| Symbol | Accessories |
|--------|----------------------------|
| Nil | None |
| 1 | With cable (Approx. 20 m) |
| 2 | With cable (Approx. 50 m) |
| 3 | With cable (Approx. 100 m) |

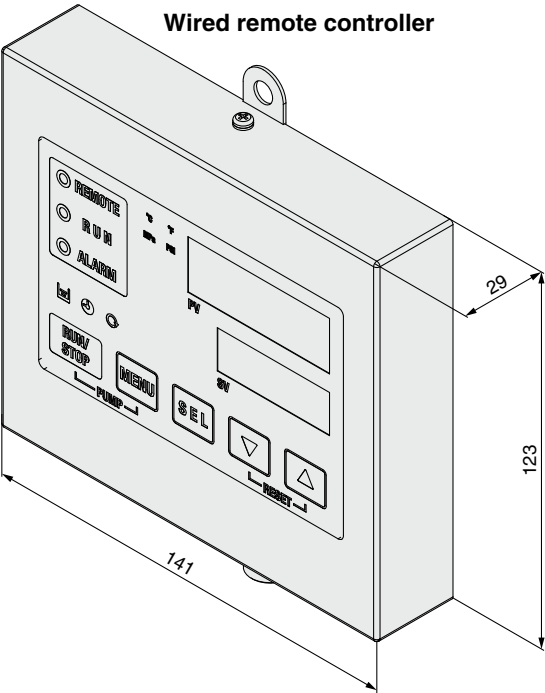


Displayed items

| |
|---|
| Circulating fluid discharge temperature |
| Circulating fluid discharge set temperature |
| Circulating fluid discharge pressure |
| Circulating fluid electric conductivity*1 |
| Circulating fluid flow rate |
| Alarm code*2 |

- *1 Only when the electric conductivity control set is used.
- *2 Only when an alarm occurs. The alarm cannot be reset with the remote controller. Be sure to reset the alarm with the thermo-chiller main unit.

Operable items

| |
|---------------------------------------|
| Operation start/stop |
| Circulating fluid temperature setting |
| Alarm sound stop |
| Key-lock |
| Key operation sound ON/OFF |
| Digital display brightness adjustment |
| Alarm sound ON/OFF |

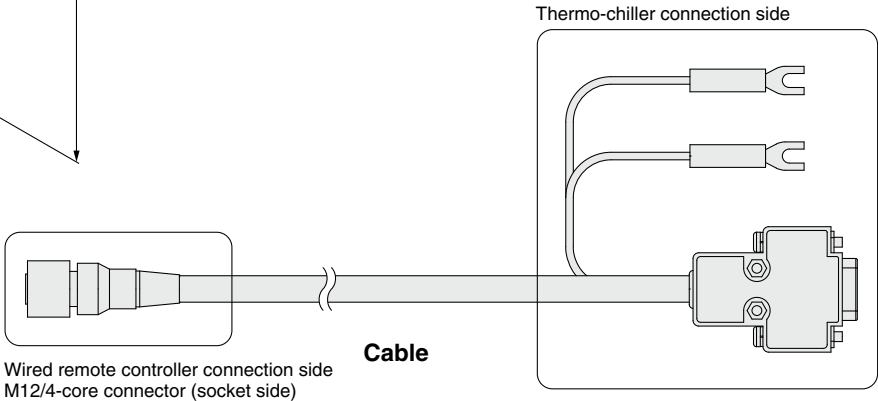

- * To use the wired remote controller, the thermo-chiller main unit setting is needed.
- * Use the wired remote controller indoors.
- * Pass the cable through the duct, etc. so that it is not exposed to rain water or direct sunlight.

Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.


The heat generation amount can be determined based on the power consumption or output of the heat generating area — i.e. the area requiring cooling — within the user's equipment.*1

① Derive the heat generation amount from the power consumption.

Power consumption **P**: 20 [kW]

$$Q = P = 20 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20%, $20 \text{ [kW]} \times 1.2 = 24 \text{ [kW]}$

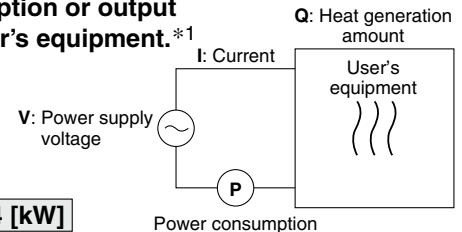

② Derive the heat generation amount from the power supply output.

Power supply output **VI**: 20 [kVA]

$$Q = P = V \times I \times \text{Power factor}$$

In this example, using a power factor of 0.85:

$$= 20 \text{ [kVA]} \times 0.85 = 17 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20%,

$$17 \text{ [kW]} \times 1.2 = 20.4 \text{ [kW]}$$

③ Derive the heat generation amount from the output.

Output (shaft power, etc.) **W**: 13 [kW]

$$Q = P = \frac{W}{\text{Efficiency}}$$

In this example, using an efficiency of 0.7:

$$= \frac{13}{0.7} = 18.6 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20%,

$$18.6 \text{ [kW]} \times 1.2 = 22.3 \text{ [kW]}$$

*1 The examples above calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment **Q** : Unknown [W] (J/s)
 Circulating fluid : Tap water*1
 Circulating fluid mass flow rate **qm** : $(= \rho \times qv \div 60)$ [kg/s]
 Circulating fluid density ρ : 1 [kg/L]
 Circulating fluid (volume) flow rate **qv** : 70 [L/min]
 Circulating fluid specific heat **C** : 4.186×10^3 [J/(kg·K)]
 Circulating fluid outlet temperature **T1** : 293 [K] (20 [°C])
 Circulating fluid return temperature **T2** : 297 [K] (24 [°C])
 Circulating fluid temperature difference ΔT : 4 [K] ($= T_2 - T_1$)
 Conversion factor: minutes to seconds (SI units) : 60 [s/min]


$$Q = qm \times C \times (T_2 - T_1)$$

$$= \frac{\rho \times qv \times C \times \Delta T}{60} = \frac{1 \times 70 \times 4.186 \times 10^3 \times 4.0}{60}$$

$$= 19535 \text{ [J/s]} \approx 19535 \text{ [W]} = 19.5 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20%,

$$19.5 \text{ [kW]} \times 1.2 = 23.4 \text{ [kW]}$$

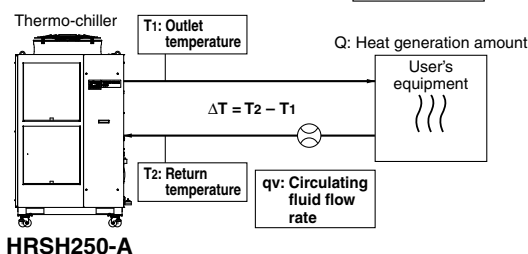

Example of conventional units (Reference)

Heat generation amount by user's equipment **Q** : Unknown [cal/h] → [W]
 Circulating fluid : Tap water*1
 Circulating fluid weight flow rate **qm** : $(= \rho \times qv \times 60)$ [kgf/h]
 Circulating fluid weight volume ratio γ : 1 [kgf/L]
 Circulating fluid (volume) flow rate **qv** : 70 [L/min]
 Circulating fluid specific heat **C** : 1.0×10^3 [cal/(kgf·°C)]
 Circulating fluid outlet temperature **T1** : 20 [°C]
 Circulating fluid return temperature **T2** : 24 [°C]
 Circulating fluid temperature difference ΔT : 4 [°C] ($= T_2 - T_1$)
 Conversion factor: hours to minutes : 60 [min/h]
 Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{qm \times C \times (T_2 - T_1)}{860}$$

$$= \frac{\gamma \times qv \times 60 \times C \times \Delta T}{860}$$

$$= \frac{1 \times 70 \times 60 \times 1.0 \times 10^3 \times 4.0}{860}$$

$$= \frac{16800000 \text{ [cal/h]}}{860}$$

$$\approx 19534 \text{ [W]} = 19.5 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20%,

$$19.5 \text{ [kW]} \times 1.2 = 23.4 \text{ [kW]}$$

Required Cooling Capacity Calculation**Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.**

Heat quantity by cooled substance (per unit time) **Q** : Unknown [W] ([J/s])
 Cooled substance : Water
 Cooled substance mass **m** : (= $\rho \times V$) [kg]
 Cooled substance density ρ : 1 [kg/L]
 Cooled substance total volume **V** : 300 [L]
 Cooled substance specific heat **C** : 4.186×10^3 [J/(kg·K)]
 Cooled substance temperature when cooling begins **T₀** : 305 [K] (32 [°C])
 Cooled substance temperature after t hour **T_t** : 293 [K] (20 [°C])
 Cooling temperature difference ΔT : 12 [K] (= $T_0 - T_t$)
 Cooling time Δt : 900 [s] (= 15 [min])


* Refer to the following for the typical physical property values by circulating fluid.

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t} = \frac{\rho \times V \times C \times \Delta T}{\Delta t}$$

$$= \frac{1 \times 300 \times 4.186 \times 10^3 \times 12}{900} = 16744 \text{ [J/s]} \approx 16.7 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20%,

$$16.7 \text{ [kW]} \times 1.2 = 20 \text{ [kW]}$$

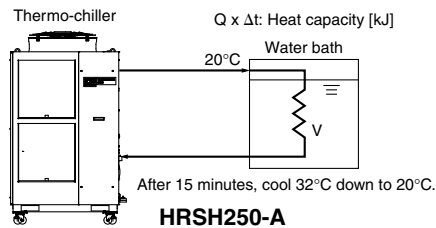**Example of conventional units (Reference)**

Heat quantity by cooled substance (per unit time) **Q** : Unknown [cal/h] → [W]
 Cooled substance : Water
 Cooled substance weight **m** : (= $\rho \times V$) [kgf]
 Cooled substance weight volume ratio γ : 1 [kgf/L]
 Cooled substance total volume **V** : 300 [L]
 Cooled substance specific heat **C** : 1.0×10^3 [cal/(kgf·°C)]
 Cooled substance temperature when cooling begins **T₀** : 32 [°C]
 Cooled substance temperature after t hour **T_t** : 20 [°C]
 Cooling temperature difference ΔT : 12 [°C] (= $T_0 - T_t$)
 Cooling time Δt : 15 [min]
 Conversion factor: hours to minutes : 60 [min/h]
 Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t \times 860} = \frac{\gamma \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 300 \times 60 \times 1.0 \times 10^3 \times 12}{15 \times 860}$$

$$\approx 16744 \text{ [W]} = 16.7 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20%,

$$16.7 \text{ [kW]} \times 1.2 = 20 \text{ [kW]}$$

* This is the calculated value by changing the fluid temperature only. Thus, it varies substantially depending on the water bath or piping shape.

Precautions on Cooling Capacity Calculation**1. Heating capacity**

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity**<Circulating fluid flow rate>**

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves.

Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values**1. This catalog uses the following values for density and specific heat in calculating the required cooling capacity.**

Density ρ : 1 [kg/L] (or, using conventional units, weight volume ratio $\gamma = 1$ [kgf/L])

Specific heat **C**: 4.19×10^3 [J/(kg·K)] (or, using conventional units, 1×10^3 [cal/(kgf·°C)])

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference.**Water**

| Physical property value Temperature | Density ρ [kg/L] | Specific heat C [J/(kg·K)] | Conventional units | |
|--|--------------------------|-------------------------------|--------------------------------------|--------------------------------|
| | | | Weight volume ratio γ [kgf/L] | Specific heat C [cal/(kgf·°C)] |
| 5°C | 1.00 | 4.2×10^3 | 1.00 | 1×10^3 |
| 10°C | 1.00 | 4.19×10^3 | 1.00 | 1×10^3 |
| 15°C | 1.00 | 4.19×10^3 | 1.00 | 1×10^3 |
| 20°C | 1.00 | 4.18×10^3 | 1.00 | 1×10^3 |
| 25°C | 1.00 | 4.18×10^3 | 1.00 | 1×10^3 |
| 30°C | 1.00 | 4.18×10^3 | 1.00 | 1×10^3 |
| 35°C | 0.99 | 4.18×10^3 | 0.99 | 1×10^3 |
| 40°C | 0.99 | 4.18×10^3 | 0.99 | 1×10^3 |

15% Ethylene Glycol Aqueous Solution

| Physical property value Temperature | Density ρ [kg/L] | Specific heat C [J/(kg·K)] | Conventional units | |
|--|--------------------------|-------------------------------|--------------------------------------|--------------------------------|
| | | | Weight volume ratio γ [kgf/L] | Specific heat C [cal/(kgf·°C)] |
| 5°C | 1.02 | 3.91×10^3 | 1.02 | 0.93×10^3 |
| 10°C | 1.02 | 3.91×10^3 | 1.02 | 0.93×10^3 |
| 15°C | 1.02 | 3.91×10^3 | 1.02 | 0.93×10^3 |
| 20°C | 1.01 | 3.91×10^3 | 1.01 | 0.93×10^3 |
| 25°C | 1.01 | 3.91×10^3 | 1.01 | 0.93×10^3 |
| 30°C | 1.01 | 3.91×10^3 | 1.01 | 0.94×10^3 |
| 35°C | 1.01 | 3.91×10^3 | 1.01 | 0.94×10^3 |
| 40°C | 1.01 | 3.92×10^3 | 1.01 | 0.94×10^3 |

* Shown above are reference values.



HRSH Series

Specific Product Precautions 1

Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: <https://www.smcworld.com>

Design

Warning

1. This catalog shows the specifications of a single unit.

- 1) Check the specifications of the single unit (contents of this catalog) and thoroughly consider the adaptability between the user's system and this unit.
- 2) Although a protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating conditions. Also, the user is requested to carry out a safety design for the whole system.

2. When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks and to carry back the entire flow volume of circulating fluid that is released.

3. Use non-corrosive material for circulating fluid and facility water contact parts.

Using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid and facility water circuits. Provide protection against corrosion when you use the product.

4. The facility water outlet temperature (water-cooled type) may increase up to around 60°C.

When selecting the facility water pipings, consider the suitability for temperature.

Selection

Warning

Model selection

When selecting a thermo-chiller model, the amount of heat generation from the user's equipment must be known. Obtain this value, referring to "Cooling Capacity Calculation" on pages 339 and 340 before selecting a model.

Handling

Warning

Thoroughly read the operation manual.

Read the operation manual completely before operation, and keep the manual where it can be referred to as necessary.

Operating Environment/Storage Environment

Warning

1. Do not use in the following environment as it will lead to a breakdown.

- 1) In locations where water vapor, salt water, and oil may splash on the product.
- 2) In locations where there are dust and particles.
- 3) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present. (This product is not explosion proof.)

Operating Environment/Storage Environment

Warning

- 4) In locations where the ambient temperature exceeds the limits as mentioned below.

During transportation/storage: -15°C to 50°C (But as long as water or circulating fluid are not left inside the pipings)

During operation: Air cooling type: -20 to 45°C

Water cooling type: 2 to 45°C

* When the ambient temperature or circulating fluid temperature is 10°C or below, use the circulating fluid specified in "Operation at low ambient temperature or low circulating fluid temperature".

- 5) In locations where condensation may occur.
- 6) In locations which receive direct sunlight or radiated heat.
- 7) In locations where there is a heat source nearby and the ventilation is poor.
- 8) In locations where temperature substantially changes.
- 9) In locations where strong magnetic noise occurs.
(In locations where strong electric fields, strong magnetic fields and surge voltage occur.)
- 10) In locations where static electricity occurs, or conditions which make the product discharge static electricity.
- 11) In locations where high frequency occurs.
- 12) In locations where damage is likely to occur due to lightning.
- 13) In locations at an altitude of 3000 m or higher (Except during storage and transportation)

* For altitudes of 1000 m or higher

Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at an altitude of 1000 m or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below.

Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

| Altitude [m] | ① Upper limit of ambient temperature [°C] | ② Cooling capacity coefficient |
|------------------|---|--------------------------------|
| Less than 1000 m | 45 | 1.00 |
| Less than 1500 m | 42 | 0.85 |
| Less than 2000 m | 38 | 0.80 |
| Less than 2500 m | 35 | 0.75 |
| Less than 3000 m | 32 | 0.70 |

If heat from the product cannot be sufficiently radiated due to a rise in the ambient temperature, a lack of ventilation, high elevation, etc., the refrigerant circuit pressure on the high pressure side will rise. As a result, the compressor will overload, affecting product performance and life, so be sure to check the value of the refrigerant circuit pressure on the high pressure side. Refer to the operation manual for details on how to check the value of the refrigerant circuit pressure on the high pressure side.

- 14) In locations where strong impacts or vibrations occur.
- 15) In locations where a massive force strong enough to deform the product is applied or a weight from a heavy object is applied.
- 16) In locations where there is not sufficient space for maintenance.
- 17) In locations where liquid that exceeds the conditions required for the degrees of protection IPX4 may splash on the product.
- 18) Insects or plants may enter the unit.

2. The product is not designed for clean room usage. It generates particles internally.



HRSH Series Specific Product Precautions 2

Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

Operating Environment/Storage Environment

3. The product is not dust-proof.

If used in an environment with dust, it may accumulate inside the product and cause not only a malfunction but also a fire hazard.

Operation at Low Ambient Temperature or Low Circulating Fluid Temperature

⚠ Caution

1. Circulating fluid

In order to avoid freezing of the circulating fluid, use aqueous solution of ethylene glycol.

| Ambient temperature [°C] | Recommended circulating fluids |
|--------------------------|--|
| 10 to 45 | Tap water, ethylene glycol aqueous solution 15 (wt)% |
| -5 to 10 | Ethylene glycol aqueous solution 15 (wt)% |
| -20 to -5 | Ethylene glycol aqueous solution 40 (wt)% |

| Circulating fluid temperature [°C] | Recommended circulating fluids |
|------------------------------------|--|
| 10 to 35 | Tap water, ethylene glycol aqueous solution 15 (wt)% |
| 5 to 10 | Ethylene glycol aqueous solution 15 (wt)% |

- * Concentration has to be 40 (wt)% or less. If the concentration is higher than 40 (wt)%, pump could be overloaded and Thermo-chiller makes alarm.
- * When 40% ethylene glycol aqueous solution is used, cooling capacity decreases by 20%.

2. And following instructions must be executed. If following instructions are not executed, not only Thermo-chiller alarm will be generated, but also damage of the product can result.

- Power has to be supplied to the Thermo-chiller all the time.
- Turn on anti-freezing function (set parameter: SE.10) all the time.
- When the power supply to the Thermo-chiller is stopped for a long period of time, discharge all the circulating fluid in the Thermo-chiller and user's device and piping. When the Thermo-chiller is refilled with the circulating fluid, supply the fluid at normal temperature.

Operation at High Ambient Temperature

⚠ Caution

Check the value of the refrigerant circuit pressure on the high pressure side.

If heat from the product cannot be sufficiently radiated due to a rise in the ambient temperature, a lack of ventilation, high elevation, etc., the refrigerant circuit pressure on the high pressure side will rise. As a result, the compressor will overload, affecting product performance and life.


Refer to the operation manual for details on how to check the value of the refrigerant circuit pressure on the high pressure side.

Transportation/Carriage/Movement

⚠ Warning

1. This product will require an acceptance with the product not unloaded from the truck, and the user will need to unload the product by himself. Prepare a forklift.

The product will be delivered in the packaging shown below.

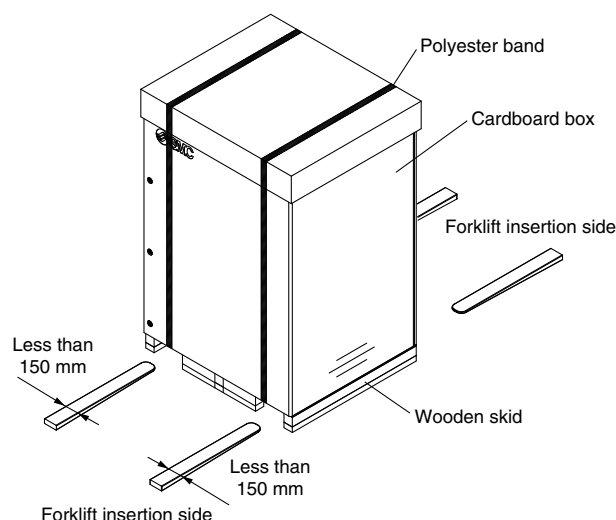

<When packaged>

| Model | Weight [kg] | Dimensions [mm] |
|--------------|-------------|---------------------------------------|
| HRSH100-A□-□ | 221 | Height 1585 x Width 1185 x Depth 955 |
| HRSH150-A□-□ | 256 | |
| HRSH200-A□-□ | | |
| HRSH250-A□-□ | 330 | Height 1895 x Width 1230 x Depth 1040 |
| HRSH100-W□-□ | 185 | |
| HRSH150-W□-□ | 215 | |
| HRSH200-W□-□ | | Height 1710 x Width 1185 x Depth 955 |
| HRSH250-W□-□ | 275 | |
| HRSH100-A□-A | 240 | |
| HRSH150-A□-A | 355 | Height 2020 x Width 1230 x Depth 1040 |
| HRSH200-A□-A | 204 | |
| HRSH250-A□-A | 234 | |
| HRSH100-W□-A | | Height 1610 x Width 925 x Depth 955 |
| HRSH150-W□-A | | |
| HRSH200-W□-A | | |
| HRSH250-W□-A | | |

2. Transporting with forklift

- 1) A licensed driver should drive the forklift.
- 2) The proper place to insert the tines of the forklift differs depending on the model of cooler. Check the insert position, and be sure to drive the fork in far enough for it to come out the other side.
- 3) Be careful not to bump the fork to the cover panel or piping ports.



HRSH Series

Specific Product Precautions 3


Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

Transportation/Carriage/Movement

Warning

3. Hanging transportation

- 1) Crane manipulation and slinging work should be done by an eligible person.
- 2) Do not grip the piping on the right side or the handles of the panel.
- 3) When hanging by the eye bolts, be sure to use a 4-point hanging method. For the hanging angle, use caution regarding the position of the center of gravity and hold it within 60°.

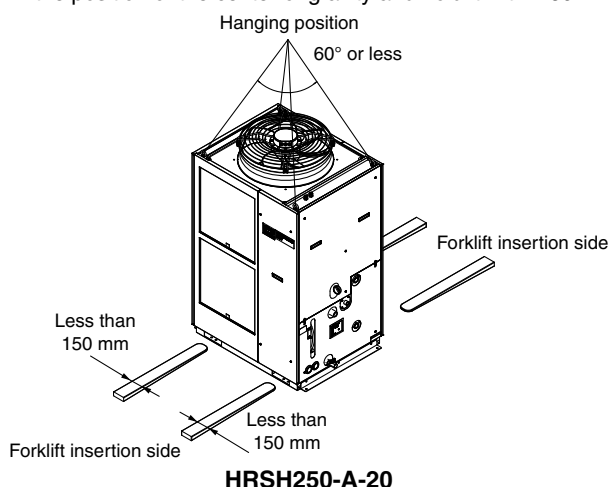

HRSH250-A-20

(When using option A/With caster adjuster-foot and optional accessories/Caster adjuster-foot kit HRS-KS001 or KS002)

4. Transporting with casters

- 1) This product is heavy and should be moved by at least two people.
- 2) Do not grip the piping port on the right side or the handles of the panel.
- 3) When transporting using a forklift, be sure not to let it hit the casters or adjusters, and drive the fork all the way through until it comes out the other side.
- 4) Do not get across steps with casters.

Caution

If this product is to be transported after delivery, please use the original packaging the product was delivered in. If other packaging is to be used, carefully package the product so as to prevent the product from incurring any damage during transport.

Mounting/Installation

Warning

Do not place heavy objects on top of this product, or step on it.

The external panel can be deformed and danger can result.

Caution

1. Install on a rigid floor which can withstand this product's weight.
2. Secure with bolts, anchor bolts, etc.


Mounting/Installation

Caution

3. Refer to the operation manual for this product, and secure an installation space that is necessary for the maintenance and ventilation.

<Air-cooled refrigeration>

1. The air-cooled type product exhausts heat using the fan that is mounted to the product. If the product is operated with insufficient ventilation, ambient temperature may exceed 45°C, and this will affect the performance and life of the product. To prevent this ensure that suitable ventilation is available (see below).
2. For installation indoors, ventilation ports and a ventilation fan should be equipped as needed.

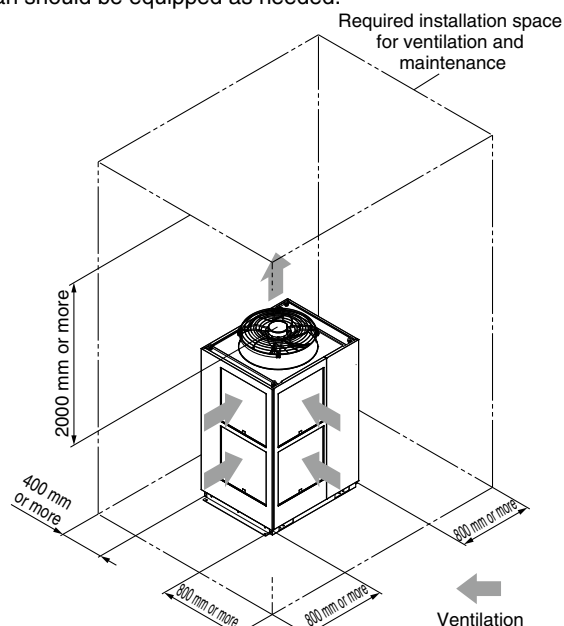

HRSH250-A

3. If it is impossible to exhaust heat from the installation area indoors, or when the installation area is conditioned, provide a duct for heat exhaustion to the air outlet port of this product for ventilation. Do not mount the inlet of the duct (flange) directly to the air vent of the product, and keep a space larger than the diameter of the duct. Additionally, consider the resistance of the duct when making the air vent port for the duct.

<Heat radiation amount/Required ventilation rate>

| Model | Heat radiation amount [kW] | Required ventilation rate [m³/min] | |
|--------------|----------------------------|---|---|
| | | Differential temp. of 3°C between inside and outside of installation area | Differential temp. of 6°C between inside and outside of installation area |
| HRSH100-A□-□ | Approx. 18 | 305 | 155 |
| HRSH150-A□-□ | Approx. 29 | 490 | 245 |
| HRSH200-A□-□ | Approx. 35 | 590 | 295 |
| HRSH250-A□-□ | Approx. 44 | 730 | 365 |
| HRSH300-A□-□ | Approx. 45 | 760 | 380 |

4. If heat from the product cannot be sufficiently radiated due to a rise in the ambient temperature, a lack of ventilation, high elevation, etc., the refrigerant circuit pressure on the high pressure side will rise. As a result, the compressor will overload, affecting product performance and life, so be sure to check the value of the refrigerant circuit pressure on the high pressure side. Refer to the operation manual for details on how to check the value of the refrigerant circuit pressure on the high pressure side.



HRSH Series Specific Product Precautions 4


Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

Mounting/Installation

⚠ Caution

<Water-cooled refrigeration>

When installing the product, keep the space for maintenance as shown below.

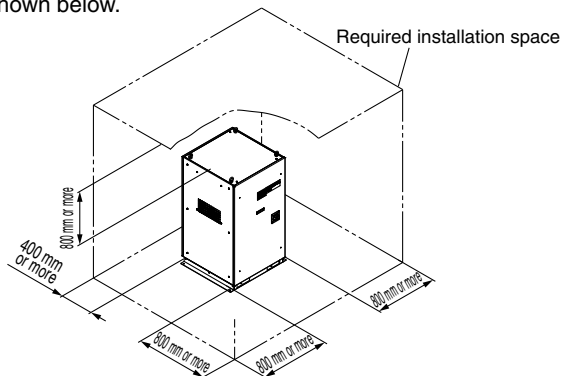

- When using the product at a low ambient temperature (10°C or less), refer to “Operation at low ambient temperature or low circulating fluid temperature” (page 342).

Piping

⚠ Caution

- The circulating fluid and facility water piping should be prepared by the customer with consideration of the operating pressure, temperature, and circulating fluid/facility compatibility.

If the operating performance is not sufficient, the pipings may burst during operation. Also, the use of corrosive materials such as aluminum or iron for fluid contact parts, such as piping, may not only lead to clogging or leakage in the circulating fluid and facility water circuits but also refrigerant leakage and other unexpected problems. Provide protection against corrosion when you use the product.

- Select the piping port size which can exceed the rated flow.
For the rated flow, refer to the pump capacity table.
- When tightening at the drain port of this product, use a pipe wrench to clamp the connection ports.
- Supply water pressure to the automatic fluid fill port of this product should be 0.2 to 0.5 MPa.
This product has a built-in ball (float) tap. If you attach it to the faucet of a sink, etc. it will automatically supply water to the rated fluid level of the tank (halfway between HIGH and LOW.) If the water supply pressure is too high, the pipes may burst during use. Proceed with caution.
- Ensure that piping is connected to the overflow port so that the circulating fluid can be exhausted to the drainage pit when the fluid level in the tank increases.
- For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
- This product series are constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

- The facility water flow rate is adjusted automatically according to the operating conditions.
In addition, the facility water return temperature is 60°C at maximum.

Electrical Wiring


⚠ Warning

Grounding should never be connected to a water line, gas line or lightning rod.

⚠ Caution

- Power supply and communication cables should be prepared by user.
- Provide a stable power supply which is not affected by surge or distortion.


If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 μ sec., it may result in malfunction.

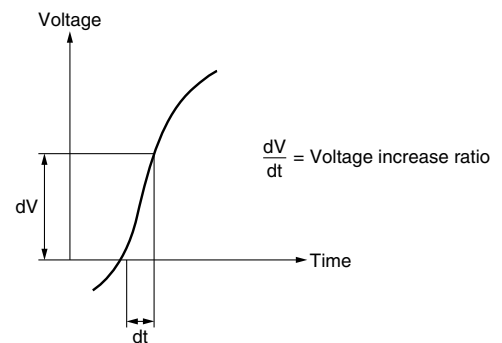

<For 400 V type and option B [With earth leakage breaker]>

- This product is installed with a breaker with the following operating characteristics.

For the user's equipment (inlet side), use a breaker whose operating time is equal to or longer than the breaker of this product. If a breaker with shorter operating time is connected, the user's equipment could be cut off due to the inrush current of the motor of this product.

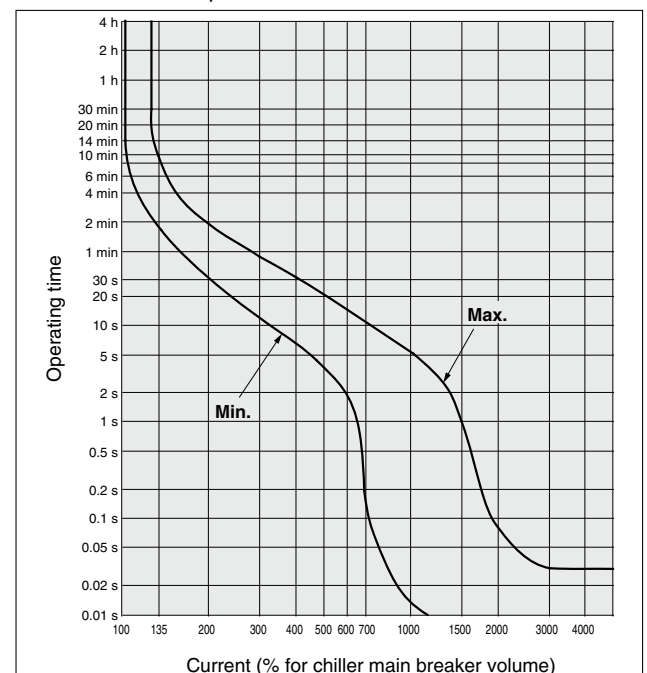



HRSH Series

Specific Product Precautions 5

Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: <https://www.smcworld.com>

Circulating Fluid

⚠ Caution

1. Avoid oil or other foreign matter entering the circulating fluid.
2. When water is used as a circulating fluid, SMC recommends the water quality shown in the following table as reference.
 - Including water used for dilution of ethylene glycol aqueous solutions.
 - In most areas, tap water can be used. However, if the tap water in the area is hard, there is a possibility of failure or performance decline due to limescale build-up. To soften the water and avoid problems, consider using water hardness filters.

Tap Water (as a Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association
JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

| | Item | Unit | Standard value | Influence | |
|----------------|--|---------|-------------------------|-----------|------------------|
| | | | | Corrosion | Scale generation |
| Standard item | pH (at 25°C) | — | 6.0 to 8.0 | ○ | ○ |
| | Electric conductivity (25°C) | [μS/cm] | 100*1 to 300*1 | ○ | ○ |
| | Chloride ion (Cl ⁻) | [mg/L] | 50 or less | ○ | |
| | Sulfuric acid ion (SO ₄ ²⁻) | [mg/L] | 50 or less | ○ | |
| | Acid consumption amount (at pH4.8) | [mg/L] | 50 or less | | ○ |
| | Total hardness | [mg/L] | 70 or less | | ○ |
| | Calcium hardness (CaCO ₃) | [mg/L] | 50 or less | | ○ |
| | Ionic state silica (SiO ₂) | [mg/L] | 30 or less | | ○ |
| | Iron (Fe) | [mg/L] | 0.3 or less | ○ | ○ |
| Reference item | Copper (Cu) | [mg/L] | 0.1 or less | ○ | |
| | Sulfide ion (S ₂ ⁻) | [mg/L] | Should not be detected. | ○ | |
| | Ammonium ion (NH ₄ ⁺) | [mg/L] | 0.1 or less | ○ | |
| | Residual chlorine (Cl) | [mg/L] | 0.3 or less | ○ | |
| | Free carbon (CO ₂) | [mg/L] | 4.0 or less | ○ | |

*1 In the case of [MΩ·cm], it will be 0.003 to 0.01.

- : Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.
4. Refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 342) for the concentration of the ethylene glycol aqueous solution.
5. When deionized water is used, the electric conductivity should be 1 μS/cm or higher (Electric resistivity: 1 MΩ·cm or lower).

Facility Water Supply

⚠ Warning

<Water-cooled refrigeration>

1. The water-cooled refrigeration type thermo-chiller radiates heat to the facility water.
Prepare the facility water system that satisfies the heat radiation and the facility water specifications below.

■ Required facility water system

<Heat radiation amount/Facility water specifications>

| Model | Heat radiation [kW] | Facility water specifications |
|--------------|---------------------|--|
| HRSH100-W□-□ | Approx. 20 | Refer to "Facility water system" in the specifications on pages 320 and 322. |
| HRSH150-W□-□ | Approx. 27 | |
| HRSH200-W□-□ | Approx. 34 | |
| HRSH250-W□-□ | Approx. 40 | |

Facility Water Supply

⚠ Warning

2. When using tap water as facility water, SMC recommends the water quality shown in the following table as reference.
 - In most areas, tap water can be used. However, if the tap water in the area is hard, there is a possibility of failure or performance decline due to limescale build-up. To soften the water and avoid problems, consider using water hardness filters.

Tap Water (as Facility Water) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association
JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

| | Item | Unit | Standard value | Influence | |
|----------------|--|---------|-------------------------|-----------|------------------|
| | | | | Corrosion | Scale generation |
| Standard item | pH (at 25°C) | — | 6.5 to 8.2 | ○ | ○ |
| | Electric conductivity (25°C) | [μS/cm] | 100*1 to 800*1 | ○ | ○ |
| | Chloride ion (Cl ⁻) | [mg/L] | 200 or less | ○ | |
| | Sulfuric acid ion (SO ₄ ²⁻) | [mg/L] | 200 or less | ○ | |
| | Acid consumption amount (at pH4.8) | [mg/L] | 100 or less | | ○ |
| | Total hardness | [mg/L] | 200 or less | | ○ |
| | Calcium hardness (CaCO ₃) | [mg/L] | 150 or less | | ○ |
| Reference item | Ionic state silica (SiO ₂) | [mg/L] | 50 or less | | ○ |
| | Iron (Fe) | [mg/L] | 1.0 or less | ○ | ○ |
| | Copper (Cu) | [mg/L] | 0.3 or less | ○ | |
| | Sulfide ion (S ₂ ⁻) | [mg/L] | Should not be detected. | ○ | |
| | Ammonium ion (NH ₄ ⁺) | [mg/L] | 1.0 or less | ○ | |
| | Residual chlorine (Cl) | [mg/L] | 0.3 or less | ○ | |
| | Free carbon (CO ₂) | [mg/L] | 4.0 or less | ○ | |

*1 In the case of [MΩ·cm], it will be 0.001 to 0.01.

- : Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

3. Set the supply pressure between 0.3 to 0.5 MPa. Ensure a pressure difference at the facility water inlet/outlet of 0.3 MPa or more.

If the supply pressure is high, it will cause water leakage. If the supply pressure and pressure difference at the facility water inlet/outlet is low, it will cause an insufficient flow rate of the facility water, and poor temperature control.

Operation

⚠ Warning

1. Confirmation before operation

- 1) The fluid level of a tank should be within the specified range of "HIGH" and "LOW".
When exceeding the specified level, the circulating fluid will overflow.
- 2) Remove the air.
Conduct a trial operation, looking at the fluid level.
Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed.
Pump can be operated independently.

2. Confirmation during operation

- Check the circulating fluid temperature.
The operating temperature range of the circulating fluid is between 5 and 35°C.
When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

3. Emergency stop method

- When an abnormality is confirmed, stop the machine immediately. After the machine has stopped, make sure to turn off the breaker of the user's equipment (on the upstream side).



HRSH Series

Specific Product Precautions 6

Be sure to read this before handling the products. For safety instructions and temperature control equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

Operation Restart Time/Operation and Suspension Frequency

⚠ Caution

1. Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.
2. Operation and suspension frequency should not exceed 10 times per day. Frequently switching between operation and suspension may result in the malfunction of the refrigeration circuit.

Protection Circuit

⚠ Caution

If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.

- Power supply voltage is not within the rated voltage range of $\pm 10\%$.
- In case the water level inside the tank is reduced abnormally.
- Circulating fluid temperature is too high.
- Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
- Ambient temperature is over 45°C .
- Ventilation hole is clogged with dust or dirt.

Maintenance

⚠ Caution

<Periodical inspection every one month>

Clean the ventilation hole.

If the dustproof filter of water-cooled type product becomes clogged with dust or debris, a decline in cooling performance can result. In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

<Periodical inspection every three months>

Inspect the circulating fluid.

1. When using tap water or deionized water
 - Replacement of circulating fluidFailure to replace the circulating fluid can lead to the development of bacteria or algae. Replace it regularly depending on your usage conditions.
 2. When using ethylene glycol aqueous solution
- Use a concentration meter to confirm that the concentration does not exceed 15%.
Dilute or add as needed to adjust the concentration.

<Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid and facility water freezing when the product is stopped, release the circulating fluid and facility water in advance.

Maintenance

⚠ Caution

<Periodical inspection during the summer season>

Check the value of the refrigerant circuit pressure on the high pressure side.

If heat from the product cannot be sufficiently radiated due to a rise in the ambient temperature, a lack of ventilation, high elevation, etc., the refrigerant circuit pressure on the high pressure side will rise. As a result, the compressor will overload, affecting product performance and life.

Refer to the operation manual for details on how to check the value of the refrigerant circuit pressure on the high pressure side.

■ Refrigerant with GWP reference

| Refrigerant | Global Warming Potential (GWP) | | |
|-------------|---|---|---|
| | Regulation (EU) 2024/573, AIM Act 40 CFR Part 84 | Fluorocarbon Emissions Control Act (Japan) GWP value labeled on products | GWP value to be used for reporting the calculated amount of leakage |
| R134a | 1,430 | 1,430 | 1,300 |
| R404A | 3,922 | 3,920 | 3,940 |
| R407C | 1,774 | 1,770 | 1,620 |
| R410A | 2,088 | 2,090 | 1,920 |
| R448A | 1,386 | 1,390 | 1,270 |
| R454C | 146 | 145 | 146 |

* This product is hermetically sealed and contains fluorinated greenhouse gases (HFC). When this product is sold on the market in the EU after January 1, 2017, it needs to be compliant with the quota system of the F-Gas Regulation in the EU.

* See specification table for refrigerant used in the product.