

Dual Rod Cylinder *CXSJ/CXS Series* Ø6, Ø10, Ø15, Ø20, Ø25, Ø32

Dual rod cylinder with guide function suitable for pick & place applications.

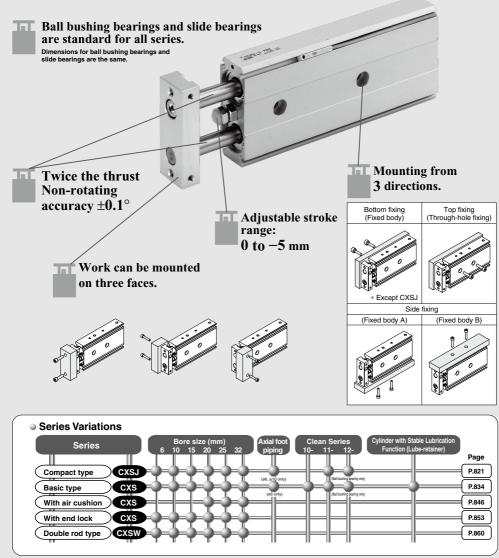



Compact Type CXSJ Series

Auto switch can be installed from 3 directions. Reverse



Symmetric mounting

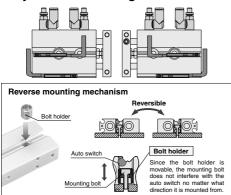

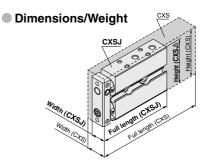


Bore size	Series		Dime	nsions (mm)	Note) Weight
(mm)	Series	Width	Height	Full length	(kg)
~6	CXSJ□6	13.4	32	42 + Stroke	0.057
ø6	CXS□6	16	37	58.5 + Stroke	0.095
ø10	CXSJ□10	15	42	56 + Stroke	0.114
010	CXS□10	17	46	72 + Stroke	0.170
~15	CXSJD15	19	54	70 + Stroke	0.219
ø15	CXS□15	20	58	79 + Stroke	0.280
~ 00	CXSJ□20	24	62	84 + Stroke	0.371
ø20	CXS□20	25	64	94 + Stroke	0.440
- 05	CXSJ□25	29	73	87 + Stroke	0.544
ø25	CXS□25	30	80	96 + Stroke	0.660
~ 00	CXSJ□32	37	94	100.5 + Stroke	1.078
ø32	CXS□32	38	98	112 + Stroke	1.230

Note) Slide bearing, 20 mm strokes


 Allowable kinetic energy, allowable load, and nonrotating accuracy are equivalent to those of CXS basic type.

Axial piping available (ø6, ø10)




With air cushion CXS Series: Ø20, Ø25, Ø32

Air cushion only minimally adds to full length dimension, compared with the standard type cylinder.

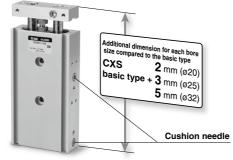


1 Improved allowable kinetic energy: Two to three times that of the standard type 2 Improved noise reduction:

Reduction of more than 6 dB is possible

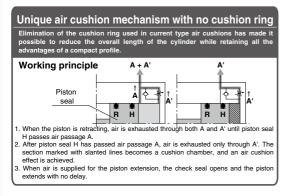



@SMC

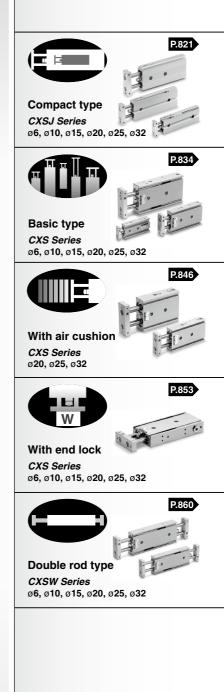


CXSJ Series Model Selection

Caution Theoretical output must be confirmed separately, referring to the table on page 822.

Model Selection

Vertical Mounting

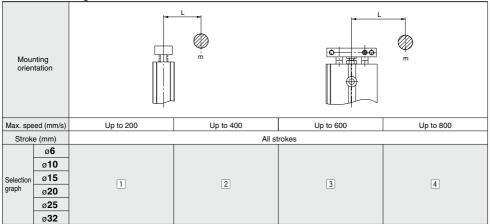

Horizontal Mounting

	unting ntation						m * Refer	to the caution	n notes below	 I.	
Strok	e (mm)	Up t	o 10	Up t	o 30	Up t	o 50	Up t	o 75	Up to	o 100
Max. spe	eed (mm/s)	Up to 400	Over 400	Up to 400	Over 400	Up to 400	Over 400	Up to 400 Over 400		Up to 400	Over 400
	ø 6	ч,	5	6		7					
	ø 10										
Selection	ø15							1	4	1	F
graph	ø 20	8	9	10	11	12	13		4		5
	ø 25										
	ø 32										

* The maximum speeds for ø6 to ø32 are: ø6, 10: up to 800 mm/s; ø15, 20: up to 700 mm/s; ø25, 32: up to 600 mm/s

ACaution

If the cylinder is horizontally mounted and the plate end does not reach the load's center of gravity, use the formula below to calculate the imaginary stroke L' that includes the distance between the load's center of gravity and the plate end. Select the graph that corresponds to the imaginary stroke L'.

Imaginary stroke L' = (Stroke) + k + L


k: Distance between the center and end of the plate						
2.75 mm						
4 mm						
5 mm						
6 mm						
0 mm						
8 mm						

(Example)

When using CXSJM6-10 and L = 15 mm: Imaginary stroke L' = 10 + 2.75 + 15 = 27.75 Therefore, the graph used for your model selection should be the one for CXSJM6-30 [5].

② When using CXSJL25-50 and L = 10 mm: Imaginary stroke L' = 50 + 6 + 15 = 71

Therefore, the graph used for your model selection should be the one for CXSJL25-75 [4].





20 30 40 50 CXSJM CXSJL

∘ø32

⊐ø**25** ø20

ø15

ø**10**

ø6

CXSJM CXSJL

ø**20**

ø15

ø**10**

ø6


100

40 50

20 30 100

.....




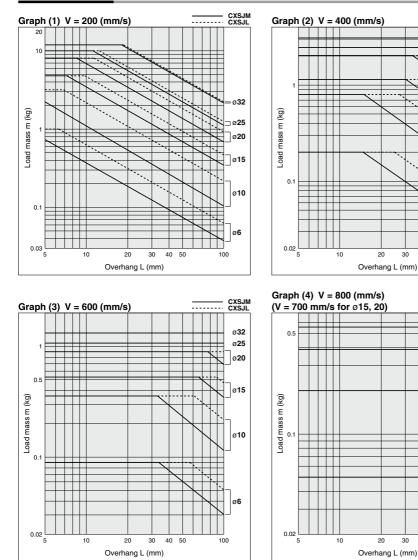


Note) V = 700 mm/s for ø15, ø20.


CXSJ Series

Horizontal Mounting

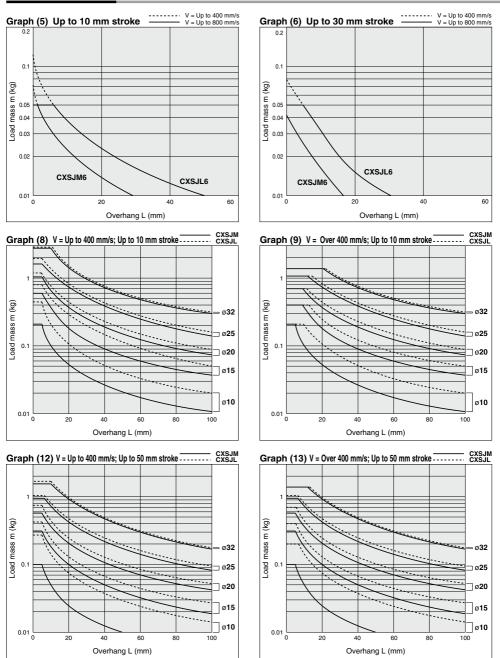



Model Selection CXSJ Series

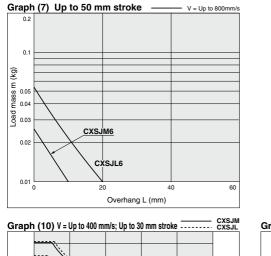


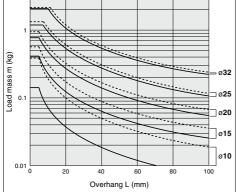




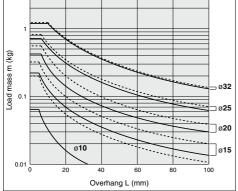

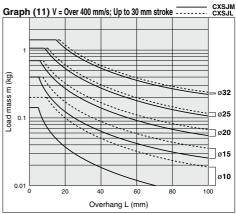



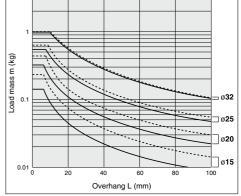

CXS Series Model Selection/Basic Type


Caution Confirmation of theoretical output is required separately. Refer to "Theoretical Output" on page 835.

Basic Type: CXS

Vertical Mounting

Mou orier	nting ntation			m m			m
Max. spe	eed (mm/s)	Up to 100	Up to 200	Up to 300	Up to 400	Up to 600	Up to 700 (Up to 800)
Stroke	(mm)			All st	rokes		
	ø 6	(1)		(2)			
	ø10						
Selection	ø15						
graph	ø 20		(3)		(4)	(5)	(6)
	ø 25						
	ø 32						

Horizontal Mounting

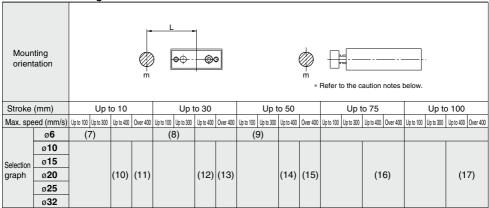

* The maximum speeds for ø10 to ø32 are: ø10: up to 800 mm/s; ø15, 20: up to 700 mm/s; ø25, 32: Up to 600 mm/s

ACaution

If the cylinder is horizontally mounted and the plate end does not reach the load's center of gravity, use the formula below to calculate the imaginary stroke L' that includes the distance between the load's center of gravity and the plate end. Select the graph that corresponds to the imaginary stroke L'.

Imaginary stroke L' = (Stroke) + k + L


ļ	k: Distance	between	the center	and	end	of the plate	

ø 6	2.75 mm
ø 10	4 mm
ø 15	5 mm
ø 20	6
ø 25	6 mm
ø 32	8 mm

(Example)


When using CXSM6-10 and L = 15 mm: Imaginary stroke L' = 10 + 2.75 + 15 = 27.75

Therefore, the graph used for your model selection should be the one for CXSM6-30.




SMC

Vertical Mounting

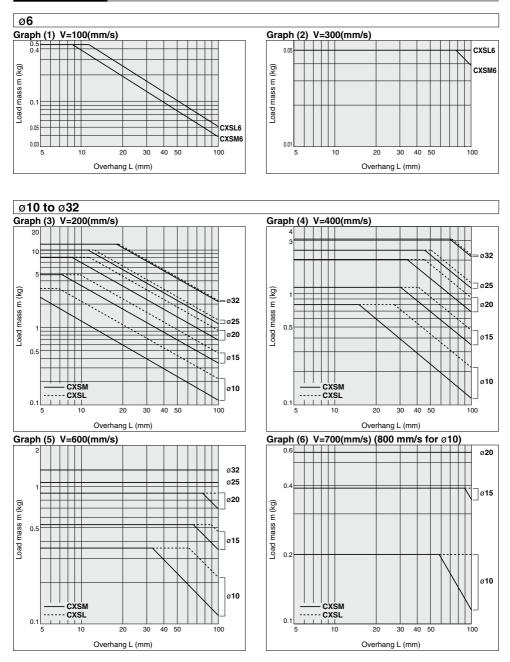



CXS Series


Horizontal Mounting

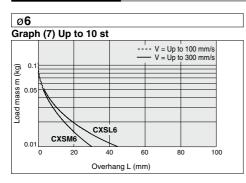


Graph (8) Up to 30 st

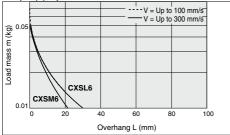

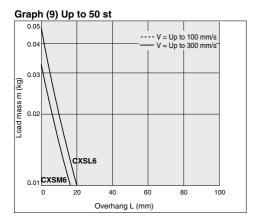


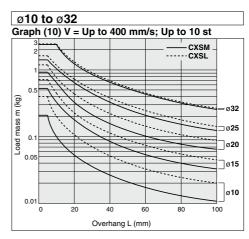

Graph (11) V = Over 400 mm/s; Up to 10 st

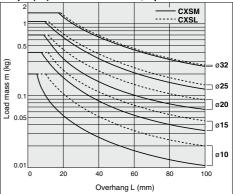


Graph (12) V = Up to 400 mm/s; Up to 30 st

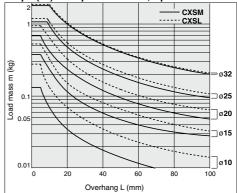

SMC


Horizontal Mounting

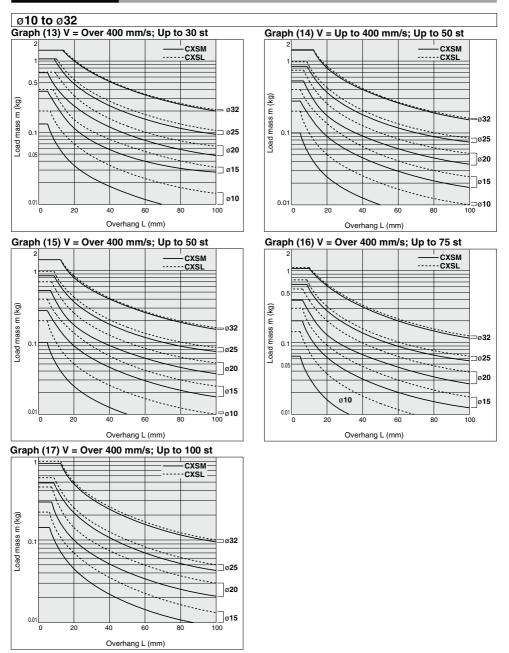


CXS Series Model Selection/With Air Cushion

Caution Confirmation of theoretical output is required separately. Refer to "Theoretical Output Table" on page 847.

With Air Cushion: CXS

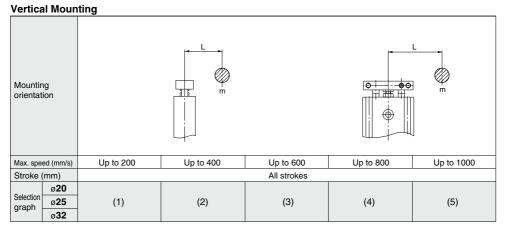

Horizontal Mounting

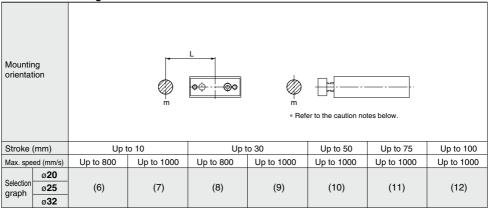

A Caution

If the cylinder is horizontally mounted and the plate end does not reach the load's center of gravity, use the formula below to calculate the imaginary stroke L' that includes the distance between the load's center of gravity and the plate end. Select the graph that corresponds to the imaginary stroke L'.

Imaginary stroke L' = (Stroke) + k + L

k: Distance between the center and the end of the plate


ø 20	6 mm
ø 25	
ø 32	8 mm

(Example)

When using CXSM20-10 and L = 10 mm:


Imaginary stroke L' = 10 + 6 + 10 = 26


Therefore, the graph used for your model selection should be the one for CXSM20-30.








Vertical Mounting

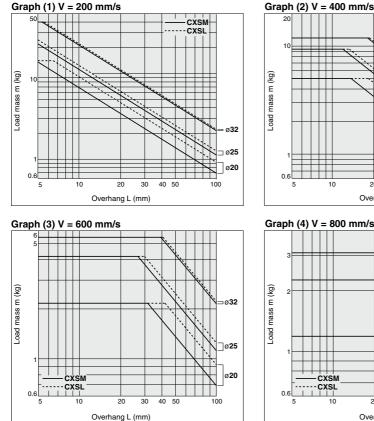



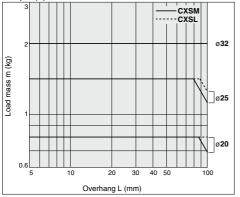


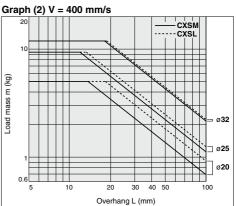

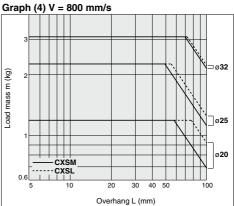



CXS Series


Horizontal Mounting

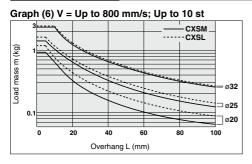





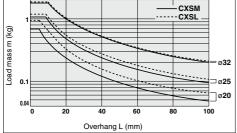

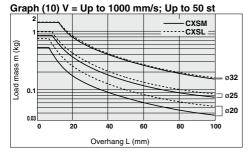




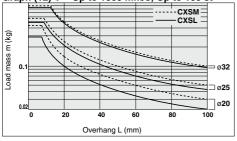


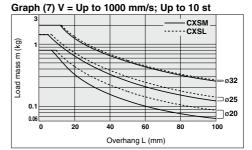



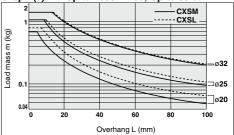


Graph (11) V = Up to 1000 mm/s; Up to 75 st

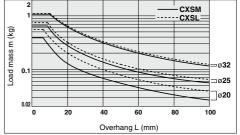



Dual Rod Cylinder/Compact Type CXSJ Series ø6, ø10, ø15, ø20, ø25, ø32

How to Order

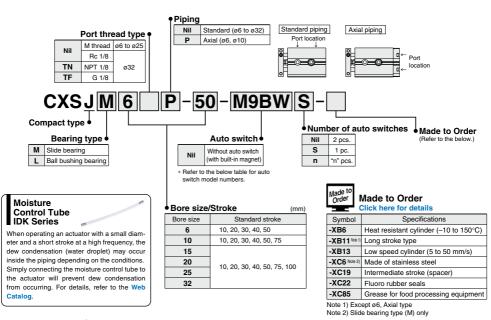

Applicable Auto Switches/Refer to pages 1289 to 1383 for detailed auto switch specifications.

				Wiring		Load vol	tage	Auto swit	ah madal	Lead wi	re len	igth (m)*															
Туре	Special function	Electrical entrv	Indicator light	(output)		DC	AC	Auto Swit	crimodei	0.5	1	3	5	Pre-wired connector	Applica	Applicable load												
		,				DC	70	Perpendicular	In-line	(Nil)	(M)	(L)	(Z)															
				3-wire (NPN)		5 V, 12 V		M9NV	M9N	•	•	٠	0	0	IC circuit													
c,	-			3-wire (PNP)		5 0, 12 0	v, 12 v	M9PV	M9P	•	•	٠	0	0														
switch				2-wire]	12 V 5 V, 12 V		M9BV	M9B	•	•	۲	0	0	—													
auto				3-wire (NPN)	5		5 V, 12 V	5 V 12 V	5 V 12 V	5 V 12 V	5 V 12 V	5 V 12 V	5 V 12 V	5 V 12 V	5 V 12 V	5 V 12 V	5V 12V	5 V 12 V		M9NWV	M9NW	•	•	٠	0	0	IC circuit	Relay.
	Diagnostic indication (2-color indicator)	Grommet	Yes	3-wire (PNP)	24 V			-	M9PWV	M9PW	•	•	٠	0	O	PLC												
stat				2-wire		12 V		M9BWV	M9BW	•	•	۲	0	0	—													
Solid state				3-wire (NPN)]	5 V, 12 V		M9NAV*1	M9NA*1	0	0	٠	0	0	IC circuit													
Sol	Water resistant (2-color indicator)			3-wire (PNP)		5 V, 12 V		M9PAV*1	M9PA *1	0	0	•	0	0														
	(,			2-wire		12 V		M9BAV*1	M9BA*1	0	0	۲	0	0	—													
itch			Yes	3-wire (NPN equiv.)		5 V	-	A96V	A96	•	•	۲	•	0	IC circuit	-												
Reed auto switch	—	Grommet	165	2-wire	24 V	12 V	100 V	A93V	A93	•	•	٠	•	O*2	-	Relay,												
auto			None	2-wire	24 V	5 V, 12 V	100 V or less	A90V	A90	•	•	٠	•	O*2	— Rel	PLC												

*1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance.

*2 The load voltage used is 24 VDC. * Lead wire length symbols

: 0.5 m ····· Nil	(Example) M9NW
1 m M	M9NWM
3 m L	M9NWL
5 m Z	M9NWZ

* Auto switches marked with "O" are produced upon receipt of order.

. Since there are applicable auto switches other than listed, refer to page 832 for details.

5 m Z . For details about switch with pre-wired connector, refer to pages 1358 and 1359.

* Auto switches are shipped together (not assembled).




CXSJ Series



Operating Conditions


Non-rotating Accuracy

Non-rotating accuracy θ° without a load should be less than or equal to the value provided in the table below as a guide. Housing



CXSJD6 to 32 **Deflection at the Plate End**

An approximate plate-end deflection X without a load is shown in the graph below.

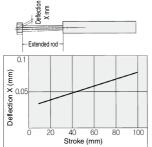

Maximum Load Mass


When the cylinder is mounted as shown in the diagrams below, the maximum load mass W should not exceed the values illustrated in the graph. схѕјм

20

30 40 50 60 70 80 90 100

<u>ຂ</u>2່ດ

Cylinder stroke (mm)

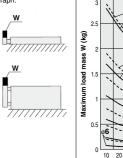

Specifications

Bore size (mm)	6	10	15	20	25	32			
Fluid	Air (Non-lube)								
Proof pressure		1.05 MPa							
Maximum operating pressure	0.7 MPa								
Minimum operating pressure	0.15 MPa 0.1 MPa 0.05 MPa								
Ambient and fluid temperature	-10 to 60°C (No freezing)								
Piston speed	30 to 80	00 mm/s	30 to 70	00 mm/s	30 to 60	00 mm/s			
Cushion		R	ubber bump	er on both	ends				
Stroke adjustable range		0 to –5 m	m compare	d to the sta	Indard strol	ke			
Port size	M3 x 0.5	0.5 M5 x 0.8 Rc (NPT, PF) 1/							
Allowable kinetic energy	0.016 J	0.064 J	0.095 J	0.17 J	0.27 J	0.32 J			

Standard Stroke

		(mm)
Model	Standard stroke	Long stroke (-XB11)
CXSJ⊟6	10, 20, 30, 40, 50	—
CXSJD10	10, 20, 30, 40, 50, 75	80 to 150
CXSJD15	10, 20, 30, 40, 50, 75, 100	110 to 150
CXSJ□20, 25, 32	10, 20, 30, 40, 50, 75, 100	110 to 200

Theoretical Output

											(N)
Bore size	Rod size	Operating	Piston area			Opera	ating pro	essure ((MPa)		
(mm)	(mm)	direction	(mm ²)	0.1	0.15	0.2	0.3	0.4	0.5	0.6	0.7
CXSJ⊟6	4	OUT	56		8.4	11.2	16.8	22.4	28.0	33.6	39.2
CX30_0	4	IN	31	_	4.6	6.2	9.3	12.4	15.5	18.6	21.7
CXSJ 10	6	OUT	157	15.7	_	31.4	47.1	62.8	78.5	94.2	110
CXSJLIU	D	IN	100	10.0	_	20.0	30.0	40.0	50.0	60.0	70.0
	8	OUT	353	35.3	_	70.6	106	141	177	212	247
CXSJD15	8	IN	252	25.2	_	50.4	75.6	101	126	151	176
CXSJ□20	10	OUT	628	62.8	—	126	188	251	314	377	440
CASJ_20	10	IN	471	47.1	_	94.2	141	188	236	283	330
CXSJ 25	12	OUT	982	98.2	_	196	295	393	491	589	687
CXSJL25	12	IN	756	75.6	_	151	227	302	378	454	529
CXSJ⊟32	10	OUT	1608	161	_	322	482	643	804	965	1126
	16	IN	1206	121	_	241	362	482	603	724	844

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)

V	N	e	İ	g	ľ	1	l

							(kg)	
Model	Standard stroke (mm)							
Model	10	20	30	40	50	75	100	
CXSJM6	0.047	0.057	0.067	0.077	0.087	—	_	
CXSJL6	0.048	0.058	0.068	0.078	0.088	_	_	
CXSJM10	0.099	0.114	0.129	0.144	0.159	0.198	_	
CXSJL10	0.106	0.121	0.136	0.151	0.166	0.205	_	
CXSJM15	0.198	0.219	0.240	0.261	0.282	0.335	0.387	
CXSJL15	0.218	0.239	0.260	0.281	0.302	0.355	0.407	
CXSJM20	0.345	0.371	0.397	0.423	0.449	0.514	0.579	
CXSJL20	0.375	0.401	0.427	0.453	0.479	0.544	0.609	
CXSJM25	0.506	0.544	0.582	0.620	0.658	0.753	0.848	
CXSJL25	0.516	0.554	0.592	0.630	0.668	0.763	0.858	
CXSJM32	1.022	1.078	1.134	1.190	1.246	1.386	1.526	
CXSJL32	1.032	1.088	1.144	1.200	1.256	1.396	1.536	

Note) For axial piping of CXSJD6P-D and CXSJD10P-D, please add the following weight. CXSJ = 6P-=: 0.009 kg, CXSJ = 10P-=: 0.014 kg

A 822




--CXSJL

a15


-ø10

Construction: Standard Piping

CXSJM (Slide bearing)

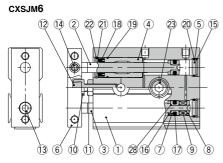

CXSJM10



Rod cover



(17)

(29)

(9) (8)

Piston rod B-side piston

Component Parts: Standard Piping

No.	Description	Material	Note
1	Housing	Aluminum alloy	Hard anodized
2	Piston rod A	Carbon steel Note)	Hard chromium electroplated
3	Piston rod B	Carbon steel Note)	Hard chromium electroplated
4	Rod cover	Aluminum bearing alloy	
5	Head cover	Aluminum alloy	Anodized
6	Plate	Aluminum alloy	Glossy, self-coloring hard anodized
7	Piston A	Aluminum alloy	Chromated
8	Piston B	Aluminum alloy	Chromated
9	Magnet	—	
10	Bumper bolt	Carbon steel	Nickel plated
11	Hexagon nut	Carbon steel	Zinc chromated
12	Bumper	Urethane	
13	Hexagon socket head cap screw	V Chromium steel Zinc chromat	
14	Hexagon socket head set screw	Chromium steel	Zinc chromated
15	Retaining ring	Special steel	Phosphate coated

Note) Stainless steel for CXSJM6.

Replacement Parts/Seal Kit


Model	Seal kit no.	Contents
CXSJM6	CXSJM6-PS	
CXSJL6	CXSJL6-PS	Set of nos. above (7), (8), and (2)
CXSJM10	CXSJM10-PS	Set of hos. above (0), (6), and (2)
CXSJL10	CXSJL10-PS	

* Seal kit includes (7), (8), and 20. Order the seal kit, based on each bore size.


* Since the seal kit does not include a grease pack, order it separately.

Grease pack part no.: GR-S-010 (10 g)

CXSJL (Ball bushing bearing) CXSJL6

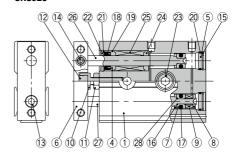

CXSJL10




No.	Description	Material	Note
16	Bumper B	Urethane	
17	Piston seal	NBR	
18	Rod seal	NBR	
19	O-ring	NBR	
20	O-ring	NBR	
21	Seal retainer	Stainless steel	
22	Retaining ring B	Special steel	Phosphate coated
23	Bolt holder	Stainless steel	
24	Bearing spacer	Aluminum bearing alloy	
25	Ball bushing	-	
26	Piston rod A	Special steel	Hard chromium electroplated
27	Piston rod B	Special steel	Hard chromium electroplated
28	O-ring	NBR	
29	Piston C	Stainless steel	
30	Bumper holder	Resin	


CXSJ Series


Construction: Standard Piping

CXSJM (Slide bearing)

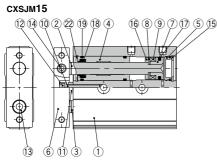

CXSJM20 to 32





Component Parts: Standard Piping


	omponent i arte: otandara i iping						
No.	Description	Material	Note				
1	Housing	Aluminum alloy	Hard anodized				
2	Piston rod A	Carbon steel	Hard chromium electroplated				
3	Piston rod B	Carbon steel	Hard chromium electroplated				
4	Rod cover	Aluminum bearing alloy					
5	Head cover	Special steel					
6	Plate	Aluminum alloy	Glossy, self-coloring hard anodized				
7	Piston A	Aluminum alloy	Chromated				
8	Piston B	Stainless steel					
9	Magnet	-					
10	Bumper bolt	Carbon steel	Nickel plated				
11	Hexagon nut	Carbon steel	Zinc chromated				
12	Bumper	Urethane					
13	Hexagon socket head cap screw	Chromium steel	Zinc chromated				
14	Hexagon socket head set screw	Chromium steel	Zinc chromated				
15	Retaining ring	Special steel	Phosphate coated				
-			•				

Replacement Parts/Seal Kit


Model	Seal kit no.	Contents
CXSJM15	CXSM15-PS	
CXSJM20	CXSM20-PS	
CXSJM25	CXSM25-PS	
CXSJM32	CXSM32-PS	Set of nos, above 17, 18, and 19
CXSJL15	CXSL15APS	Set of hos. above (0), (0), and (9)
CXSJL20	CXSL20APS	
CXSJL25	CXSL25APS	
CXSJL32	CXSL32APS	

Seal kit includes ⑦, ⑬, and ⑨. Order the seal kit, based on each bore size.
 Since the seal kit does not include a grease pack, order it separately.
 Grease pack part no.: GR-S-010 (10 g)

CXSJL (Ball bushing bearing) CXSJL15

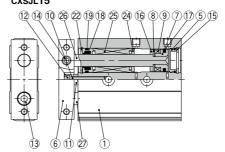

CXSJL20 to 32




Rod cover

Head cover

No.	Description	Material	Note
16	Bumper B	Urethane	
17	Piston seal	NBR	
18	Rod seal	NBR	
19	O-ring	NBR	
20	O-ring	NBR	
21	Seal retainer	Stainless steel	
22	Retaining ring B	Special steel	Phosphate coated
23	Bolt holder	Stainless steel	
24	Bearing spacer	Resin	
25	Ball bushing	—	
26	Piston rod A	Special steel	Hard chromium electroplated
27	Piston rod B	Special steel	Hard chromium electroplated
28	O-ring	NBR	
29	Piston C	Stainless steel	
30	Bumper holder	Resin	

Construction: Axial Piping

CXSJD6P, CXSJD10P

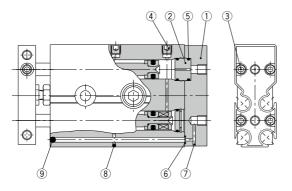

Component Parts: Axial Piping


	Note	Material	Description	No.
zed	Hard anodized	Aluminum alloy	Cover	1
d	Anodized	Aluminum alloy	Adapter	2
ated	Zinc chromated	Chromium steel	Hexagon socket head cap screw	3
ted	Nickel plated	Chromium steel	Hexagon socket head plug	4
		NBR	O-ring	5
		NBR	O-ring	6
ctroplated	Hard chromium electroplate	Special steel	Steel ball	7
ctroplated	Hard chromium electroplate	Special steel	Steel ball	8
ctroplated	Hard chromium electroplate	Special steel	Steel ball	9
	Hard chromium ele	Special steel	Steel ball	8

* Parts other than those listed above are the same as those of CXSJ basic type.

Clean Series

There are two types of cylinders, relieving type and vacuum type, available for a clean room environment. The relieving type specification with the double-seal construction of the rod section allows the cylinder to channel exhaust through the relief port directly to the outside of a clean room environment. The vacuum type specification allows for the application of a vacuum on the rod section while forced exhaust of air takes place through the vacuum port to the outside of a clean room environment.

How to Order

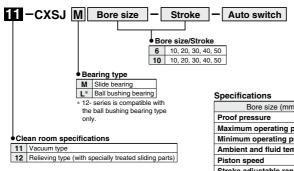


Bore size (mm)	6	10			
Proof pressure	1.05	MPa			
Maximum operating pressure	0.7 MPa				
Minimum operating pressure	0.15 MPa	0.1 MPa			
Ambient and fluid temperature	fluid temperature -10 to 60°C (No freezing)				
Piston speed	30 to 400 mm/s				
Stroke adjustable range	0 to -5 mm compared to the standard strol				
Bearing type	Slide bearing, Ball bushing bearing				

* Refer to the Web Catalog for dimensions.

CXSJ Series

Cylinder with Stable Lubrication Function (Lube-retainer)

How to Order





φ

-Ġ

¢

Cylinder with Stable Lubrication Function (Lube-retainer)

Specifications

Bore size [mm]	6	10	15	20	25	32
Min. operating pressure	0.2 MPa	0.15 MPa		0.1 MPa		
Piston speed	50 to 80	00 mm/s	50 to 70	00 mm/s 50 to 600 mm/s		00 mm/s

* Specifications other than the above are the same as the standard type.

Dimensions (Dimensions other than those shown below are the same as those of the standard model.)

CXSJD6, 10M

¢

÷

0

ŀc


R


ZZ + Stroke

SS + Stroke

z

CXSJ□15 to 32M



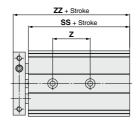


			[mm]
R	RR	SS	ZZ
25	13.5	36.5	46.5
33.5	17	49.5	61
44	—	63.5	76
51	—	73.5	90
52	—	76.5	93
66	—	90.5	110.5
	25 33.5 44 51 52	25 13.5 33.5 17 44 51 52	13.5 36.5 33.5 17 49.5 44 63.5 51 73.5 52 76.5

							[mm]	
Symbol				Z				
Model Stroke	10	20	30	40	50	75	100	
CXSJ□6M	19.5	29.5	39.5	49.5	59.5	—	—	
CXSJD10M	23	33	43	53	63	88	—	
CXSJD15M	3	1		41	51	61		
CXSJ 20M	3	6		46		6	6	
CXSJ□25M	3	7	47			6	7	
CXSJD32M	5	0		60		80		


For details, refer to the Web Catalog.

Dimensions: ø6 Standard Piping

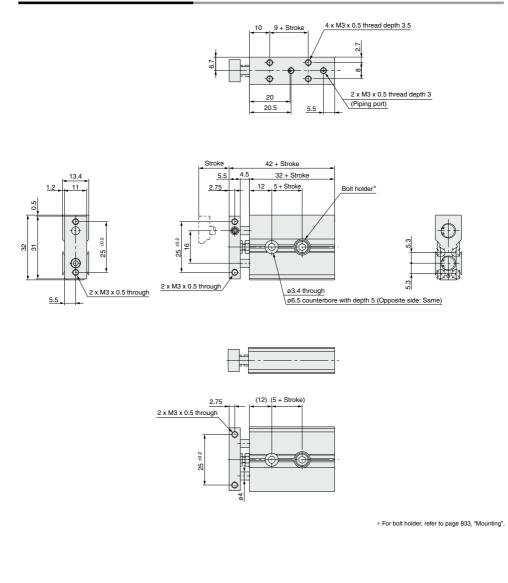

CXSJ Series


Dimensions: ø10 Standard Piping

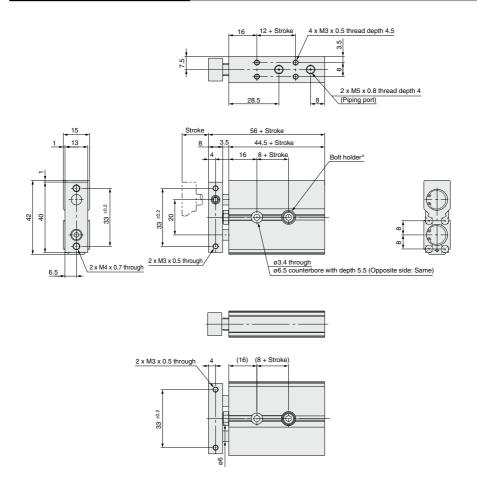

* For bolt holder, refer to page 833, "Mounting".


Dual Rod Cylinder Compact Type CXSJ Series

Dimensions: Ø6, Ø10 Axial Piping

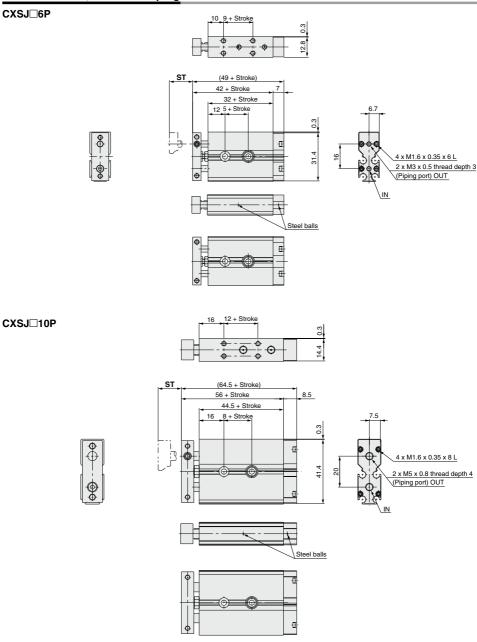

CXSJ Series

Dimensions: Ø15 to 32 Standard Piping

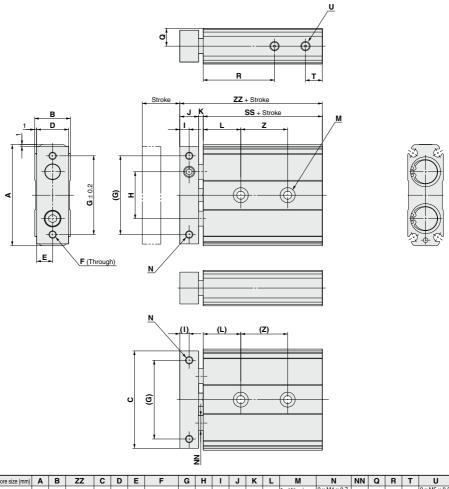


Bore size (mm)	Α	в	ZZ	C	D	E	F	G	н	1	J	ĸ	L	M	N	NN	Q	R	Т	U	SS
15	54	19	70	52	17	8.5	2 x M5 x 0.8	42	25	5	10	2.5			2 x M4 x 0.7 with thread depth 6	ø8	9.5	38	9	2 x M5 x 0.8 with thread depth 4	57.5
20	62	24	84	60	22	11	2 x M5 x 0.8	50	29	6	12	4.5		2 x 2 x ø9.5 counterbore	2 x M4 x 0.7 with thread depth 6	ø10	12	45	9	2 x M5 x 0.8 with thread depth 4	67.5
25	73	29	87	71	27	13.5	2 x M6 x 1.0	60	35	6	12	4.5		2 x ø6.5 through 2 x 2 x ø11 counterbore with depth 6.3	2 x M5 x 0.8 with thread depth 7.5	ø12	14.5	46	9	2 x M5 x 0.8 with thread depth 4	70.5
32	94	37	100.5	92	35	17.5	2 x M6 x 1.0	75	45	8	16	4	30	2 x 2 x ø11 counterbore	2 x M5 x 0.8 with thread depth 7.5	ø16	18.5	56	10	2 x Rc1/8 with thread depth 5	80.5

Symbol		Z		
Bore size (mm)	10, 20	30, 40, 50	75	100
15	25	35	45	55
20	30	40	60	60
25	30	40	60	60
32	40	50	70	70

CXSJ Series Auto Switch Mounting

Auto Switch Proper Mounting Position for Stroke End Detection



в

-Ġ

Ć

φ

С

Electrical entry direction:

Outward

operating hange (in										
Auto suiteb seadal	Bore size									
Auto switch model	6	10	15	20	25	32				
D-A9□, D-A9□V	5	6	6	7.5	8	9				
D-M9□, D-M9□V										
D-M9□A, D-M9□AV	2.5	3	3.5	4.5	4.5	5				
D-M9□W, D-M9□WV										

 The operating ranges are provided as guidelines including hystereses and are not guaranteed values (assuming approximately ±30% variations).
 They may vary significantly with ambient environments.

Auto Switch Proper Mounting Position

Bore size	Bore size D-A9, D-A9V						D-M9□(W), M9□AV				D-M9□(W)V			
(mm)	Α	В	С	D	Α	В	С	D	Α	в	С	D		
6	15.5	-	11 (13.5)	-8 (-5.5)	19.5	0.5	9.5	-9.5	19.5	0.5	11.5	-7.5		
10	25.5	-	21 (23.5)	-5.5 (-3)	29.5	3	19.5	-7	29.5	3	21.5	-5		
15	31.5	6	27 (29.5)	1.5 (4)	35.5	10	25.5	0	35.5	10	27.5	2		
20	39	9	34.5 (37)	4.5 (7)	43	13	33	3	43	13	35	5		
25	40	11	35.5 (38)	6.5 (9)	44	15	34	5	44	15	36	7		
32	49	11.5	44.5 (47)	7 (9.5)	53	15.5	43	5.5	53	15.5	45	7.5		

Bore size	D-M9⊟A							
(mm)	Α	В	С	D				
6	19.5	0.5	7.5	-11.5	1			
10	29.5	3	17.5	-9				
15	35.5	10	23.5	-2				
20	43	13	31	1	1			
25	44	15	32	3				
32	53	15.5	41	3.5	1			


Note 1) ø6, ø10: D-A90, A96, A93 Only outward electrical entry (D dimen-


sion) is available. Note 2) Minus value in D column (ø15, ø20, ø25, ø32) means that the auto switches are to be

mounted beyond the cylinder body edges. Note 3) When setting an auto switch, confirm the operation and adjust its mounting position.

Note 4) The values in () are for the D-A9 V.

Auto switch mounting dimensions





		(mm)
Sumbol	Bore	size
Symbol	6	10
A 1	1	1
B1	1	1
B 1	2	2
C1, D1	5.5	5.5
C2, C3, D2	4	4
C1, D1	8	8
C2, C3, D2	6	6
	B1 B1 C1, D1 C2, C3, D2 C1, D1	6 A1 1 B1 1 B1 2 C1, D1 5.5 C2, C3, D2 4 C1, D1 8

CXSJD15 to 32

CXSJD15 to 32

-¢


Ć


-ø

A

Electrical entry direction:

Inward





D-A9DV (Reed switch)
D-M9□V (Solid state switch)
D-M9⊟WV
D-M9□AV

				(mm)
Sumbol		Bore	size	
Symbol	15	20	25	32
A 1	1	1	1	1
A 1	2	2	2	2
C 1	5.5	5.5	5.5	5.5
C ₂	4.5	4.5	4.5	4.5
C ₃	1	-	-	-
	A1 A1 C1 C2	A1 1 A1 2 C1 5.5 C2 4.5	Symbol 15 20 A1 1 1 A1 2 2 C1 5.5 5.5 C2 4.5 4.5	15 20 25 A1 1 1 1 A1 2 2 2 C1 5.5 5.5 5.5 C2 4.5 4.5 4.5


D-A9 D-M9 D-M9 D-M9 D-M9

D

Operating Range

CXSJ Series

Auto Switch Mounting

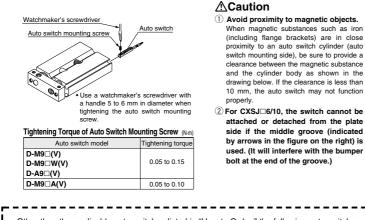



÷		
÷	* Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)) are also available. For details, refer to page 1308.	
-	Other than the applicable auto switches listed in "How to Order," the following auto switches can be mounted.	



CXSJ Series Specific Product Precautions

Be sure to read this before handling the products. Refer to page 8 for safety instructions and pages 9 to 18 for actuator and auto switch precautions.

Mounting

A Caution

1. Make sure that the surface on which the cylinder is to be mounted is flat (reference value for flatness: 0.05 or less).


Dual-rod cylinders can be mounted from 3 directions, however, make sure that the surface on which the cylinder is to be mounted is flat (reference value for flatness: 0.05 or less). Otherwise, the accuracy of the piston rod operation is not achieved, and malfunctioning can occur.

2. The piston rod must be retracted when mounting the cylinder.

Scratches or gouges in the piston rod may lead to damaged bearings and seals and cause malfunctions or air leakage.

3. CXSJ (ø6, ø10)

Adjust the bolt holder using a hexagon wrench 3 mm in width across flats so that it does not protrude from the cylinder surface (approx. 0.5 mm depth from the cylinder surface to the top of the holder). If the bolt holder is not properly adjusted, it can interfere with the switch rail, hindering the auto switch holder and mounting hole in the rod cover side varies depending on the bearing surface position for the mounting bolt. Refer to dimensions L1 and L2 provided below to select the appropriate mounting bolt length.

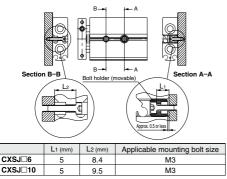

Be sure to mount the cylinder to the bolt holder. If it is operated without using the bolt holder, the bolt holder may drop.

Piping

A Caution

1. For axial piping, the side port of the standard cylinder is plugged. However, a plugged port can be switched according to the operating conditions. When changing the port position, use the removed plug or a new plug. If reusing the removed plug, apply sealant, etc., before reassembly. If using a new M5 plug, apply a thin layer of grease all the way around the male thread before use. In addition, clear any foreign matter adhered to the port the plug was removed from before piping. After reassembly, be sure to check for air leakage before operating the product.

Plug part no.: (ø6) MTS08-08-P6830 (ø10) CXS10-08-R8601 Stroke Adjustment

\land Caution

1. After adjusting the stroke, make sure to tighten the hexagon nut to prevent it from loosening.

Dual-rod cylinders have a bolt to adjust 0 to -5 mm strokes on the retracted end (IN).

Loosen the hexagon nut to adjust the stroke; however, make sure to tighten the hexagon nut after making an adjustment.

Never operate a cylinder with its bumper bolt removed. Also, do not attempt to tighten the bumper bolt without using a nut.

If the bumper bolt is removed, the piston hits the head cover causing damage to the cylinder. Therefore, do not use a cylinder without a bumper bolt.

Furthermore, if the bumper bolt is tightened without a nut, the piston seal is caught in the leveled part, damaging the seal.

3. A bumper at the end of the bumper bolt is replaceable.

In case of a missing bumper, or a bumper has a permanent settling, use the

t	Bore size (mm)	6, 10, 15	20, 25	32
for	Destar	CXS10-34A	CXS20-34A	CXS32-34A
	Part no.	28747	28751	
	Qtv.		1	

Disassembly and Maintenance

A Caution

right part

numbers

ordering.

1. Never use a cylinder with its plate removed.

When removing the hexagon socket head cap screw on the end plate, the piston rod must be secured to prevent from rotating. However, if the sliding parts of the piston rod are scratched and gouged, a malfunction may occur.

2. When disassembling and reassembling the cylinder, contact SMC or refer to the separate operation manual.

\land Warning

1. Take precautions when your hands are near the plate and housing.

When the cylinder is operated, take extra precautions to avoid getting your hands and fingers caught between the plate and housing, that can cause a bodily injury.

Operating Environment

A Caution

- Do not operate the cylinder in a pressurized environment. The pressurized air may flow inside the cylinder due to its construction.
- Do not use as a stopper. This may cause malfunction. When using as a stopper, select a stopper cylinder (RS series) or a compact guide cylinder (MGP series).

Speed Adjustment


A Caution

1. A sudden extension may occur with CXSJD6.

CXSJ has a low internal volume and sudden extension/erratic movement may occur particularly when it is used at low speed. This sudden extension can be mitigated by combining the use of meter-in and meter-out speed controllers.





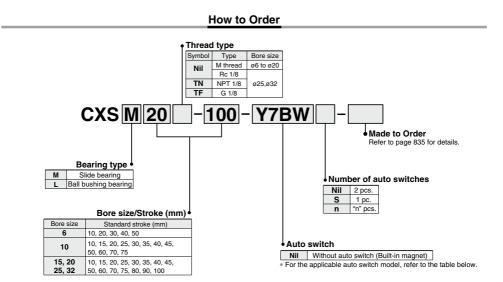

	Type Special function		light	Mining a	Load voltage		Auto switch model		Lead wire length (m) *						
Туре			dicator	Wiring (Output)		DC AC			0.5 3		5	Pre-wired connector			
		entry	India	(output)		00	AC	Perpendicular In-line		(Nil) (L) (Z		(Z)	CONTRECTO		
с				3-wire (NPN)		5 V. 12 V		Y69A	Y59A	•	•	0	0	IC	
switch	-			3-wire (PNP)		5 V, 12 V 12 V		Y7PV	Y7P	•	٠	0	0	circuit	
auto s				2-wire] _ [Y69B	Y59B	•	٠	0	0	—	
au	Discussed in the discussion		es	3-wire (NPN)	24 V			Y7NWV	Y7NW	•	•	0	0	IC	Relay,
state	Diagnostic indication (2-color indicator)		>	3-wire (PNP)		5 V, 12 V		Y7PWV	Y7PW	•	٠	0	0	circuit	PLC
Solid s				Quality		40.14	1	Y7BWV	Y7BW	•	٠	0	0		
	Water resistant (2-color indicator)			2-wire		12 V		—	Y7BA**	-	٠	0	0		
Reed auto switch		Grommet	/es	3-wire (NPN equivalent)	ent) — 5 V	_	Ι	Z76	•	•	-	-	IC circuit	_	
to Be		Gioinnei	·	Quuino	04.14 40.14		100 V	_	Z73	•	•	•	—	—	Relay,
ani			None	e 2-wire 24 V		12 V	100 V or less	—	Z80	•	٠	-	-	IC circuit	PLC

** Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance.

* Lead wire length symbols: 0.5 m Nil (Example) Y59A 3 m L (Example) Y59AL

```
5 m ······· Z (Example) Y59AL
```

· Since there are other applicable auto switches than listed, refer to page 843 for details.

For details about auto switches with pre-wired connector, refer to pages 1358 and 1359.

· Auto switches are shipped together (not assembled).



Symbol Rubber bumper

____(

Made to	Made to Order: Individual
Order	Specifications
	(For details, refer to page 844.)

(For details, relet to page 644.)

Symbol Specifications -X593 Without plate

Made to Order Specifications Click here for details

Symbol	Specifications
-XB6	Heat resistant cylinder (-10 to 150°C)
-XB9	Low speed cylinder (10 to 50 mm/s)
-XB11	Long stroke type
-XB13	Low speed cylinder (5 to 50 mm/s)
-XB19	High speed specification
-XC22	Fluororubber seals
-XC85	Grease for food processing equipment

Moisture Control Tube IDK Series

When operating an actuator with a small diameter and a short stroke at a high frequency, the dew condensation (water droplet) may occur inside the piping depending on the conditions. Simply connecting the moisture control tube to the actuator will prevent dew condensation from occurring. For details, refer to the Web Catalog.

Weight

Specifications

Bore size (mm)	6	10	15	20	25	32				
Fluid	Air (Non-lube)									
Proof pressure			1.05	MPa						
Maximum operating pressure			0.7	MPa						
Minimum operating pressure	0.15 MPa	0.1	MPa		0.05 MPa	1				
Ambient and fluid temperature	-10 to 60°C (No freezing)									
Piston speed	30 to 300 mm/s	30 to 800 mm/s	30 to 70	00 mm/s	30 to 60	0 mm/s				
Cushion			Rubber	bumper						
Stroke adjustable range	() to –5 mm	compared	to the star	ndard strok	e				
Port size	M5 x 0.8 Rc 1/8									
Bearing type	Slide bearing, Ball bushing bearing (Same dimensions for both)									
Allowable kinetic energy	0.0023 J	0.064 J	0.095 J	0.17 J	0.27 J	0.32 J				

Standard Stroke

		(mm)
Model	Standard stroke	Long stroke
CXS⊡6	10, 20, 30, 40, 50	60, 70, 75, 80, 90, 100
CXS□10	10, 15, 20, 25, 30, 35, 40, 45, 50, 60, 70, 75	80, 90, 100, 110, 120, 125, 150
CXSD15		110, 120, 125, 150
CXS□20	10, 15, 20, 25, 30, 35, 40, 45, 50,	
CXS 25	60, 70, 75, 80, 90, 100	110, 120, 125, 150, 175, 200
CXS 32		

* Refer to "Made to Order Specifications" for stroke which exceeds the standard stroke length. Non-standard strokes for a size ø6 cylinder are available as a special order.

Theoretical Output

											(N)			
Model	Rod size	Operating	Piston area	Operating pressure (MPa)										
wodei	(mm)	direction	(mm²)	0.1	0.15	0.2	0.3	0.4	0.5	0.6	0.7			
CXS⊡6		OUT	56	_	8.4	11.2	16.8	22.4	28.0	33.6	39.2			
	4	IN	31	—	4.6	6.2	9.3	12.4	15.5	18.6	21.7			
CXS 10		OUT	157	15.7	-	31.4	47.1	62.8	78.5	94.2	110			
	6	IN	100	10.0	-	20.0	30.0	40.0	50.0	60.0	70.0			
CXS⊟15	8	OUT	353	35.3	—	70.6	106	141	177	212	247			
	8	IN	252	25.2	-	50.4	75.6	101	126	151	176			
CXS⊟20		OUT	628	62.8	-	126	188	251	314	377	440			
CA3	10	IN	471	47.1	—	94.2	141	188	236	283	330			
CXS□25		OUT	982	98.2	-	196	295	393	491	589	687			
CA3_25	12	IN	756	75.6	-	151	227	302	378	454	529			
CXS 32	10	OUT	1608	161	—	322	482	643	804	965	1126			
073-32	16	IN	1206	121	—	241	362	482	603	724	844			


Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)

															(kg)	
Model		Standard stroke (mm)														
Moder	10	15	20	25	30	35	40	45	50	60	70	75	80	90	100	
CXSM 6	0.081	_	0.095	_	0.108	_	0.122	_	0.135	_	_	_	-	—	_	
CXSL 6	0.081	—	0.095	—	0.108	_	0.122	_	0.135	_	_	_	_	_	_	
CXSM10	0.15	0.16	0.17	0.18	0.19	0.20	0.21	0.22	0.23	0.25	0.27	0.28	_	_	_	
CXSL 10	0.15	0.16	0.17	0.18	0.19	0.20	0.21	0.22	0.23	0.25	0.27	0.28	_	_	_	
CXSM15	0.25	0.265	0.28	0.29	0.30	0.315	0.33	0.345	0.36	0.39	0.42	0.435	0.45	0.48	0.51	
CXSL 15	0.27	0.285	0.30	0.31	0.32	0.335	0.35	0.365	0.38	0.41	0.44	0.455	0.47	0.50	0.53	
CXSM20	0.40	0.42	0.44	0.46	0.48	0.495	0.51	0.53	0.55	0.585	0.62	0.64	0.66	0.70	0.74	
CXSL 20	0.43	0.445	0.46	0.48	0.50	0.515	0.53	0.55	0.57	0.605	0.64	0.66	0.68	0.715	0.75	
CXSM25	0.61	0.635	0.66	0.69	0.72	0.745	0.77	0.80	0.83	0.89	0.95	0.97	0.995	1.06	1.10	
CXSL25	0.62	0.645	0.67	0.70	0.73	0.755	0.78	0.81	0.84	0.895	0.955	0.98	1.005	1.065	1.11	
CXSM32	1.15	1.19	1.23	1.275	1.32	1.36	1.40	1.45	1.49	1.58	1.665	1.71	1.755	1.84	1.93	
CXSL 32	1.16	1.205	1.25	1.295	1.34	1.38	1.42	1.465	1.51	1.595	1.68	1.72	1.765	1.855	1.94	

Operating Conditions


Non-rotating Accuracy

Non-rotating accuracy θ° at the retracted end and without a load should be less than or equal to the value provided in the table below as a guide.

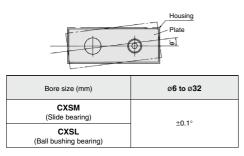


CXSD6 to 32 Deflection at the Plate End

An approximate plate-end deflection ${\sf X}$ without a load is shown in the graph below.

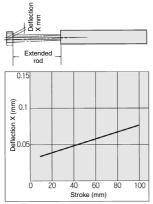

Maximum Load Mass

When the cylinder is mounted as shown in the diagrams below, the maximum load mass W should not exceed the values illustrated in the graph.

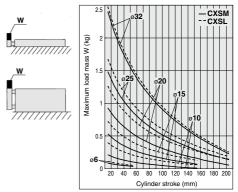


Dual Rod Cylinder Basic Type CXS Series

Clean Series

There are two types of cylinders, relieving type and vacuum type, available for a clean room environment. The relieving type specification with the double-seal construction of the rod section allows the cylinder to channel exhaust through the relief port directly to the outside of a clean room environment. The vacuum type specification allows for the application of a vacuum on the rod section while forced exhaust of air takes place through the vacuum port to the outside of a clean room environment.

How to Order



Series Applicable to Operating Environments that Do Not Accept Copper

Copper (Cu) and Zinc (Zn)-free-----25A- series

Copper and Fluorine-free-----20- series

* For details, refer to the Web Catalog.

Specifications

Bore size (mm)	6	10	15	20	25	32				
Proof pressure	1.05 MPa									
Maximum operating pressure			0.7	MPa						
Minimum operating pressure	0.15 MPa	0.1	MPa	0.05 MPa						
Ambient and fluid temperature		-10	to 60°C	(No free:	zing)					
Piston speed	30 to 400 mm/s									
Stroke adjustable range	0 to -5 mm compared to the standard stroke									
Bearing type Ball bushing bearing										

Refer to the Web Catalog for dimensions.

Cylinder with Stable Lubrication Function (Lube-retainer)

How to Order

Bore size M - Stroke CXS Bearing type Auto switch



Specifications


opecifications												
Bore size (mm)	6 10 15 20					32						
Action			Double	acting								
Minimum operating pressure	0.2 MPa	0.15	MPa		0.1 MPa							
Piston speed	50 to 300 mm/s	50 to 300 mm/s 50 to 800 mm/s 50 to 700 mm/s 50										
Cushion			Rubber	bumper								

* Specifications other than the above are the same as the standard model.

Cylinder with Stable Lubrication Function (Lube-retainer)


Dimensions (Dimensions other than those shown below are the same as the standard model.)

CXS□6





For details, refer to the Web Catalog.

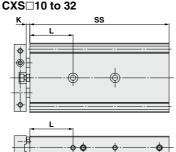

			(mm)
Model	к	L	R
CXS□10	4	25	35
CXS□15	3	36	44.5
CXS□20	6	36	50.5
CXS 25	6	36	52
CXS 32	4	40	66

(mm)


Symbol								SS							
Model Stroke	10	15	20	25	30	35	40	45	50	60	70	75	80	90	100
CXS□10	70	75	80	85	90	95	100	105	110	120	130	135	_	—	_
CXSD15	76	81	86	91	96	101	106	111	116	126	136	141	146	156	166
CXS□20	86	91	96	101	106	111	116	121	126	136	146	151	156	166	176
CXS□25	88	93	98	103	108	113	118	123	128	138	148	153	158	168	178
CXS□32	102	107	112	117	122	127	132	137	142	152	162	167	172	182	192

R


CXS Series

Construction: Slide Bearing

CXSM6

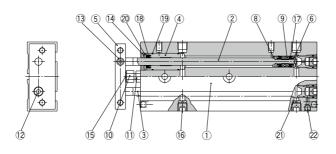

CXSM10 to 32

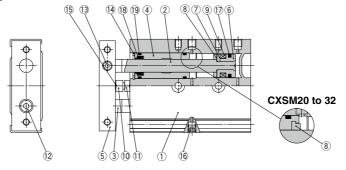

Component Parts

00	inponent i arta		
No.	Description	Material	Note
1	Housing	Aluminum alloy	Hard anodized
2	Piston rod A	Carbon steel (1)	Hard chrome plated
3	Piston rod B	Carbon steel (1)	Hard chrome plated
4	Rod cover	Aluminum bearing alloy	
5	Plate	Aluminum alloy	Anodized
6	Piston A	Aluminum alloy	Chromated
7	Piston B	Aluminum alloy	Chromated
8	Bumper	Urethane	
9	Magnet	—	
10	Bumper bolt	Carbon steel	Nickel plated
11	Hexagon nut	Carbon steel	Zinc chromated
12	Hexagon socket head cap screw	Chromium steel	Zinc chromated
13	Hexagon socket head set screw	Chromium steel	Zinc chromated
14	Retaining ring	Special steel	Phosphate coating

Note 1) Stainless steel for CXSM6.

Component Parts

~~	inponent i una		
No.	Description	Material	Note
15	Bumper	Urethane	
16	Plug	Chromium steel	Nickel plated
17	Piston seal	NBR	
18	Rod seal	NBR	
19	O-ring	NBR	
20	Seal retainer	Aluminum alloy	
21	Port spacer	Aluminum alloy	
22	Steel ball	Special steel	Hard chrome plated


Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
6	CXSM6-PS	
10	CXSM10APS	
15	CXSM15-PS	Set of nos. above
20	CXSM20-PS	17, 18 and 19
25	CXSM25-PS	
32	CXSM32-PS	


* Seal kit includes ⑦, ⑬ and ⑲. Order the seal kit, based on each bore size. * Since the seal kit does not include a grease pack, order it separately. Grease pack part no.: GR-S-010 (10 g)

Construction: Ball Bushing Bearing

CXSL6

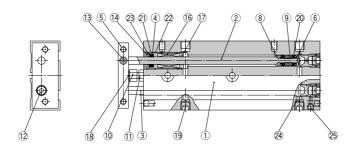

CXSL10 to 32

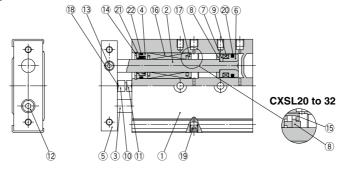

Component Parts: Standard Piping

	Note d anodized chrome plated
0 Distance and A Crossic stock Lloyd a	chrome plated
2 Piston rod A Special steel Hard of	
3 Piston rod B Special steel Hard of	chrome plated
4 Rod cover Aluminum bearing alloy	
5 Plate Aluminum alloy A	Anodized
6 Piston A Aluminum alloy Cl	hromated
7 Piston B Aluminum alloy Cl	hromated
8 Bumper Urethane	
9 Magnet —	
10 Bumper bolt Carbon steel Nic	kel plated
11 Hexagon nut Carbon steel Zinc	chromated
12 Hexagon socket head cap screw Chromium steel Zinc	chromated
13 Hexagon socket head set screw Chromium steel Zinc	chromated
14 Retaining ring Special steel Phose	phate coating
15 Bumper holder Synthetic resin	

Component Parts

No.	Description	Material	Note
16	Ball bushing	_	
17	Bearing spacer	Synthetic resin ⁽¹⁾	
18	Bumper	Urethane	
19	Plug	Chromium steel	Nickel plated
20	Piston seal	NBR	
21	Rod seal	NBR	
22	O-ring	NBR	
23	Seal retainer	Aluminum alloy	
24	Port spacer	Aluminum alloy	
25	Steel ball	Special steel	Hard chrome plated
Note	1) Aluminum bearing all	ov for CXSL6.	

Replacement Parts/Seal Kit


riepiuoeinent i u		
Bore size (mm)	Kit no.	Contents
6	CXSL6-PS	
10	CXSL10BPS	
15	CXSL15APS	Set of nos. above
20	CXSL20APS	20, 21 and 22
25	CXSL25APS	
32	CXSL32APS	

* Seal kit includes (2), (2) and (2). Order the seal kit, based on each bore size.

* Since the seal kit does not include a grease pack, order it separately. Grease pack part no.: GR-S-010 (10 g)


CXS Series

Dimensions: Ø6

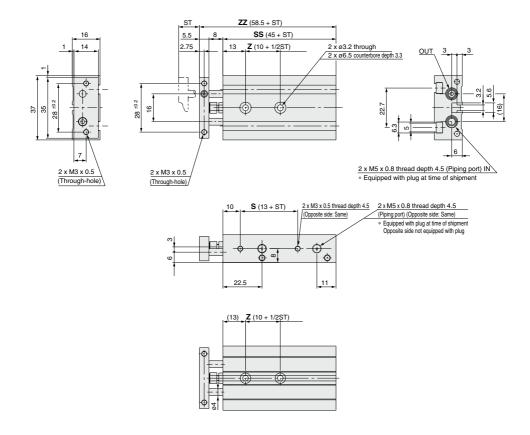

					(mm)
Model	Stroke	Z	S	SS	ZZ
CXS□6-10	10	15	23	55	68.5
CXSD6-20	20	20	33	65	78.5
CXS□6-30	30	25	43	75	88.5
CXSD6-40	40	30	53	85	98.5
CXS□6-50	50	35	63	95	108.5


Dimensions: ø10, ø15

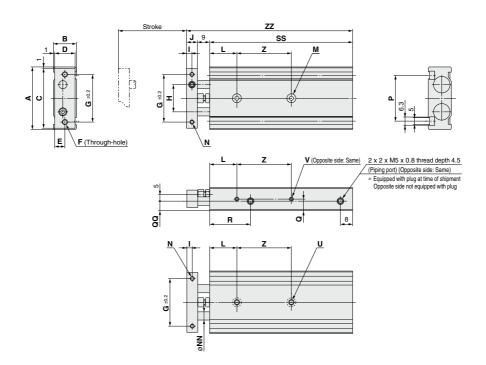

																				(mm)
Model	Α	В	С	D	Е	F	G	Н	Ι	J	L	M	N	NN	Р	Q	QQ	R	U	v
CXS□10	46	17	44	15	7.5	2 x M4 x 0.7	35	20	4	8	20	12 x a6 5 counter-	2 x M3 x 0.5 thread depth 5	ø6	33.6	8.5	7		2 x M4 x 0.7 thread depth 7	4 x M3 x 0.5 thread depth 4.5
CXS□15	58	20	56	18	9	2 x M5 x 0.8	45	25	5	10	30	12 x ø8 counter-	2 x M4 x 0.7 thread depth 6	ø8	48	10	10	38 5	2 x M5 x 0.8 thread depth 8	4 x M4 x 0.7 thread depth 5
Dimensi	ons	s b	v S	tro	ke															

Sinoke								ss										z										ΖZ							
Model	10	15	20	25	30	35	40	45	50	60	70	75	80	90	100	10, 15 20, 25	30, 35, 40, 45, 50	60, 70, 75	80	90, 100	10	15	20	25	30	35	40	45	50	60	70	75	80	90	100
CXS□10	65	70	75	80	85	90	95	100	105	115	125	130	-	-	-	30	40	50	-	-	82	87	92	97	102	107	112	117	122	132	142	147	-	-	-
CXSD15	70	75	80	85	90	95	100	105	110	120	130	135	140	150	160	25	35	45	45	55	89	94	99	104	109	114	119	124	129	139	149	154	159	169	179

Dimensions: ø20, ø25, ø32

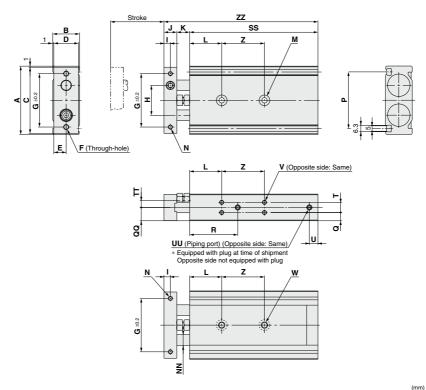

																<u>, ,</u>
Model	A	в	с	D	E	F	G	н	I	J	к	L	м	Ν	NN	Р
CXS□20	64	25	62	23	11.5	2 x M5 x 0.8	50	28	6	12	12	30	2 x ø5.5 through 2 x ø9.5 counterbore depth 5.3	2 x M4 x 0.7 thread depth 6	ø10	53
CXS□25	80	30	78	28	14	2 x M6 x 1.0	60	35	6	12	12			2 x M5 x 0.8 thread depth 7.5	ø12	64
CXS□32	98	38	96	36	18	2 x M6 x 1.0	75	44	8	16	14	30		2 x M5 x 0.8 thread depth 8	ø16	76


Model	Q	QQ	R	т	тт	U	UU	v	w
CXS□20	7.75	12.5	45	9.5	6.5	8	4 x M5 x 0.8	8 x M4 x 0.7	2 x M6 x 1.0
ONCELU						-	thread depth 4.5	thread depth 5.5	thread depth 10
CXS□25	8.5	15	46	13	9	9	4 x Rc 1/8	8 x M5 x 0.8	2 x M8 x 1.25
073025	0.0	10		10	ľ		thread depth 6.5	thread depth 7.5	thread depth 12
CXS 32	9	19	56	20	11.5	10	4 x Rc 1/8	8 x M5 x 0.8	2 x M8 x 1.25
073032	3	19	50	20	11.5	10	thread depth 6.5	thread depth 7.5	thread depth 12


Dimensions by Stroke

Symbol								SS									Z									ΖZ							
Siloke Model	10	15	20	25	30	35	40	45	50	60	70	75	80	90	100	10, 15, 20, 25	30, 35, 40, 45, 50	60, 70, 75, 80, 90, 100	10	15	20	25	30	35	40	45	50	60	70	75	80	90	100
CXS□20	80	85	90	95	100	105	110	115	120	130	140	145	150	160	170	30	40	60	104	109	114	119	124	129	134	139	144	154	164	169	174	184	194
CXS 25	82	87	92	97	102	107	112	117	122	132	142	147	152	162	172	30	40	60	106	111	116	121	126	131	136	141	146	156	166	171	176	186	196
CXS 32	92	97	102	107	112	117	122	127	132	142	152	157	162	172	182	40	50	70	122	127	132	137	142	147	152	157	162	172	182	187	192	202	212

CXS Series Auto Switch Mounting

Auto Switch Proper Mounting Position (Detection at Stroke End)






Bore size (mm)	А	в	D-Z7/Z8, D-Y5⊡, D		D-Y6⊟, D-Y7⊡V		D-Y7BA		
(((((((((((((((((((((((((((((((((((((((С	D	С	D	С	D	
6	15.5	4.5	11.5 (10)	0.5 (-1)	13	2	5.5	-5.5	
10	22.5	7.5	18.5 (17)	3.5 (2)	20	5	12.5	-2.5	
15	30.5	4.5	26.5 (25)	0.5 (-1)	28	2	20.5	-5.5	
20	38	7	34 (32.5)	3 (1.5)	36	4.5	28	-3	
25	38	9	34 (32.5)	5 (3.5)	36	6.5	28	-1	
32	48	9	44 (42.5)	5 (3.5)	46	6.5	38	-1	

Note 1) Negative figures in the table D indicate how much the load wires protrude from the cylinder body.

Note 2) (): Denotes the dimensions of D-Z73.

Note 3) Adjust the auto switch after confirming the operating conditions in the actual setting.

Dimensions for Mounting of Auto Switch



Operating Range

Auto availate availat	Bore size (mm)										
Auto switch model	6	10	15	20	25	32					
D-Z7□/Z80	9	7	9	9	9	11					
D-Y590, D-Y690 D-Y7P/Y7PV D-Y70W/Y70WV D-Y7BA	3	3	3.5	3.5	4	4.5					

 Since this is a guideline including hysteresis, not meant to be guaranteed.


(assuming approximately ±30% dispersion.)

There may be the case it will vary substantially depending on an ambient environment.

Auto Switch Mounting

When mounting and securing auto switches, they should be inserted into the cylinder's auto switch mounting rail from the direction shown in the drawing below.

After setting in the mounting position, use a flat head watchmaker's screwdriver to tighten the auto switch mounting screw that is included.



Auto switch mounting screw M2.5 x 4 L

(Included with auto switch)

Auto switch model Bore size (mm) D-Y59A/Y7P/Y59B 6 10 15 20 25 32 D-Y69A/Y7P/Y59B 0.7 0.7 0.2 0.7 0.2 D-Y7NW/Y7PW/Y7BW 0.7 0.2 0.7 0.2 D-Y7NW/Y7BA 0.7 0.2 0.7 0.2 D-Y7DA 1.2 0.7 0.7

▲Caution


A Dimension

1. Avoid proximity to magnetic objects

When magnetic substances such as iron (including flange brackets) are in close proximity to a cylinder body with an auto switch, be sure to provide a clearance between the magnetic substance and the cylinder body as shown in the drawing below. If the clearance is less than the values noted in the table below, the auto switch may not function properly.

Auto switch
'// //////////////////////////////////

Bore size	X (mm)
ø 6	0
ø10	0
ø15	10
ø 20	10
ø 25	0
ø 32	0



* Normally closed (NC = b contact), solid state auto switch (D-Y7G/Y7H type) are also available. For details, refer to page 1310.



0


CXS Series Made to Order: Individual Specifications

Please contact SMC for detailed dimensions, specifications and lead times.







This specification is for the cylinder without a plate. This cylinder is suitable for mounting your own plate. Please note that the rod end dimensions of this cylinder are different from those of the standard cylinder.








Section A-A





View C



Section B-B

																				(mm)
Model	а	b	С	d	е	f	g	h	i	j	k	Lı	m	n	0	р	q	r	S	t
CXSD 6	16 ^{±0.1}	ø4 +0.013 +0.001	M3 x 0.5	ø4	ø3.5	1	3	ø5.5	ø6 _0.2	2.75	2.8 +0.2	3.5 ^{+0.1}	0.5 +0.2	3.5 ^{-0.05}	M2.5 x 0.45		4.5	3.5	4.75	C0.5
CXS□10	20 ^{±0.1}	Ø6 +0.016 +0.001	M5 x 0.8	ø6	ø5.5	1.25	4.5	ø6.5	ø3.5_0.2	4	3.2 +0.2 0	5 ^{+0.1}	1 +0.2	5 -0.05 -0.15	M3 x 0.5		8	5	6.5	C0.5
CXSD15	25 ^{±0.1}	Ø8 +0.016 +0.001	M6 x 1.0	ø8	ø7.5	2	5	ø9.5	ø5.5 _{-0.2}	5	5.2 +0.3	6 +0.2	1.5+0.2	6 -0.05 -0.15	M5 x 0.8	3	8	7	8	C0.5
CXS□20	28 ^{±0.1}	Ø10 +0.016 +0.001	M8 x 1.25	ø10	ø9.5	2	7	ø11	ø6.6_0_2	6	6.2 ^{+0.3}	8 +0.2	2 +0.2	8 -0.05 -0.15	M6 x 1.0	3	10	8	9.5	C0.5
CXS□25	35 ^{±0.1}	ø12 +0.019 +0.001	M8 x 1.25	ø12	ø11.5	2	7	ø11	ø6.6_0_	6	6.2 +0.3 0	10 +0.2 0	2 +0.2	10 -0.05 -0.15	M6 x 1.0		12	8.5	9.5	C0.7
CXS□32	44 ^{±0.1}	Ø16 +0.019 +0.001	M10 x 1.5	ø16	ø15.5	3.5	8	ø14	ø9 _0.2	8	8.2 +0.4	13 +0.2	2 +0.2	13 -0.05	M8 x 1.25		12.5	11	13.5	C0.7

Note 1) Unless indicated otherwise, the dimensional tolerance conforms to the ordinary dimensional difference (matching) per JIS B 0405. Note 2) Piston rod A and B must be extended in order to install a plate. Apply presure (0.2 MPa or more) from the supply port of the extended end when installing a plate. To secure the plate to the rods, attacht if first to piston rod B, and then to piston rod A. Make sure to apply Loctite to the threaded portion.

After anchoring the plate, operate the cylinder to check for proper operation (e.g., the cylinder operates smoothly when moved by hand or at least operates properly at the minimum operating pressure)





CXS Series Specific Product Precautions

Be sure to read this before handling the products. Refer to page 8 for safety instructions and pages 9 to 18 for actuator and auto switch precautions.

Mounting

▲ Caution

1. Make sure that the surface on which the cylinder is to be mounted is flat (reference value for flatness: 0.05 or less).

Dual rod cylinders can be mounted from 3 directions, however, make sure that the surface on which the cylinder is to be mounted is flat (reference value for flatness: 0.05 or less). Otherwise, the accuracy of the piston rod operation is not achieved, and malfunctioning can occur.

2. Piston rod must be retracted when mounting the cylinder.

Scratches or gouges in the piston rod may lead to damaged bearings and seals and cause malfunctions or air leakage.

Piping

A Caution

1. Plug the appropriate supply port(s) according to the operating conditions.

Dual-rod cylinders have 2 supply ports for each operating direction (3 supply ports for ø6 only). Plug the appropriate supply port according to the operating conditions. When changing the port position, use the removed plug or a new plug. If reusing the removed plug, apply sealant, etc., before reassembly. If using a new M5 plug, apply a thin layer of grease all the way around the male thread before use. In addition, clear any foreign matter adhered to the port the plug was removed from before piping.

After reassembly, be sure to check for air leakage before operating the product.

Plug part no.: (ø6)CXS10-08-28747B

(ø10 to ø20)CXS20-08-28749A (ø25 to ø32)CYP025-08B29449A(Rc 1/8) CXS25-08-A3025B(NPT 1/8) CXS25-08-A3911A(G 1/8)

Stroke Adjustment

A Caution

1. After adjusting the stroke, make sure to tighten the hexagon nut to prevent it from loosening.

Dual rod cylinders have a bolt to adjust 0 to -5 mm strokes on the retracted end (IN).

Loosen the hexagon nut to adjust the stroke; however, make sure to tighten the hexagon nut after making an adjustment.

 Never operate a cylinder with its bumper bolt removed. Also, do not attempt to tighten the bumper bolt without using a nut.

If the bumper bolt is removed, the piston hits the head cover causing damage to the cylinder. Therefore, do not use a cylinder without a bumper bolt.

Furthermore, if the bumper bolt is tightened without a nut, the piston seal is caught in the leveled part, damaging the seal.

Stroke Adjustment

▲ Caution

 A bumper at the end of the bumper bolt is replaceable. In case a missing bumper, or a bumper has a permanent settling, use following part numbers for ordering.

Bore size (mm)	6, 10, 15	20, 25	32
Part no.	CXS10-34A 28747	CXS20-34A 28749	CXS32-34A 28751
Qty.		1	

Disassembly and Maintenance

▲ Caution

1. Never use a cylinder with its plate removed.

When removing the hexagon socket head cap screw on the end plate, the piston rod must be secured to prevent from rotating. However, if the sliding parts of the piston rod are scratched and gouged, a malfunction may occur. If the plate is not required for your application, use the cylinder that does not come with a plate, available through made-to-order (-X593) on page 844.

When disassembling and reassembling the cylinder, please contact SMC or refer to the separate operation manual.

\land Warning

1. Take precautions when your hands are near the plate and housing.

Take sufficient care to avoid getting your hands or fingers caught when the cylinder is operated.

Operating Environment

A Caution


- Do not operate the cylinder in a pressurized environment. The pressurized air may flow inside the cylinder due to its construction.
- 2. Do not use as a stopper. This may cause malfunction. When using as a stopper, select a stopper cylinder (RS series) or a compact guide cylinder (MGP series).

Speed Adjustment

A Caution

- 1. A sudden extension may occur with CXSD6.
 - CXS□6 has a low internal volume and sudden extension/erratic movement may occur particularly when it is used at low speed. This sudden extension can be mitigated by combining the use of meter-in and meter-out speed controllers.



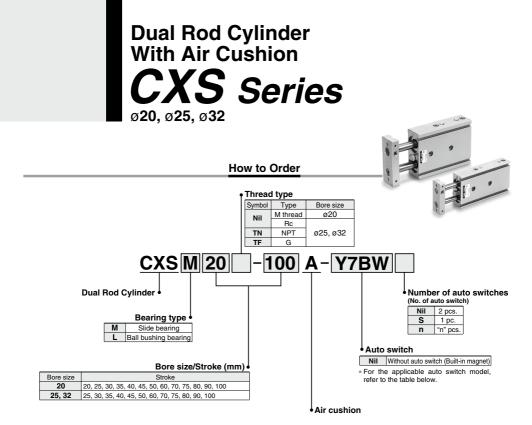

Applicable Auto Switches/Refer to pages 1289 to 1383 for further information on auto switches.

			light			Load volta	age			Lead wire len	gth (m) *	_			
Туре	Special function	Electrical entry	ator	Wiring (Output)		DC	AC	Auto swite	ch model	0.5	3	5	Pre-wired connector	Applic	able load	
		enuy	Indic	(Output)		DC	AC	Perpendicular	In-line	(Nil)	(L)	(Z)	CONTINECTOR			
5				3-wire (NPN)		5 V, 12 V		Y69A	Y59A	•	٠	0	0	IC		
switch	-			3-wire (PNP)	P) 5 V, 12 V 12 V		Y7PV	Y7P	•	٠	0	0	circuit			
auto s				2-wire		12 V		Y69B	Y59B	•	۲	0	0	—		
			Grommet	es	3-wire (NPN)	24 V	5 V 40 V	-	Y7NWV	Y7NW	•	•	0	0	IC	Relay,
state				≻	3-wire (PNP)		5 V, 12 V		Y7PWV	Y7PW	•	٠	0	0	circuit	PLC
Solid s						12 V		Y7BWV	Y7BW	•	۲	0	0			
S	Water resistant (2-color indicator)			2-wire				_	Y7BA**	_	٠	0	0			
eed switch		Crommet	'es	3-wire (NPN equivalent)	-	5 V	_	—	Z76	•	•	-	-	IC circuit	_	
Be	—	Grommet	1	0 united	04.14	12 V	100 V	—	Z73	•	۲	٠	_	—	Relay,	
auto			None	2-wire	2-wire 24 V		100 V or less	—	Z80	•	٠	-	_	IC circuit	PLC	

** Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. * Lead wire length symbols: 0.5 m Nil (Example) Y59A

* Solid state auto switches marked with "O" are produced upon receipt of order.

(Example) Y59AZ

. Since there are other applicable auto switches than listed, refer to page 843 for details.

. For details about auto switches with pre-wired connector, refer to pages 1358 and 1359.

· Auto switches are shipped together (not assembled).



When operating an actuator with a small diameter and a short stroke at a high frequency, the dew condensation (water droplet) may occur inside the piping depending on the conditions.

Simply connecting the moisture control tube to the actuator will prevent dew condensation from occurring. For details, refer to the Web Catalog.



³ m L (Example) Y59AL 5 m Z

Dual Rod Cylinder With Air Cushion CXS Series



A Precautions

Be sure to read this before handling the products.

Refer to page 8 for safety instructions and pages 9 to 18 for actuator and auto switch precautions.

Selection

∧ Caution

- Operate the cylinder until the stroke end. If the stroke is restricted by the external stopper and clamp workpiece, effective cushioning and noise reduction will not be achieved.
- Adjust the cushion needles to absorb the kinetic energy during the cushion stroke so that excessive kinitic energy does not remain when the piston reaches the stroke end.

If the piston reaches the stroke end with excessive kinetic energy remaining (more than the values given in table (1) below) due to an improper adjustment, excessive impact will occur, causing damage to machinery.

Table (1) Allowable Value at Piston Impact

Bore size (mm)	20	25	32
Piston speed (mm/s)	50 to 700	50 to 600	50 to 600
Kinetic energy (J)	0.17	0.27	0.32

Cushion Needle Adjustment

▲ Caution

1. Keep the adjusting range for the cushion needle between the fully closed position and the rotations shown below.

Bore size (mm)	20	25	32
Rotations	2.5 rotatio	ns or less	3 rotations or less

Use a 3 mm flat head watchmakers screwdriver to adjust the cushion needles to the fully closed position, as this will cause damage to the seals. The adjusting range for the cushion needles must be between the fully closed position and the open position ranges indicated in the table above. A retaining mechanism prevents the cushion needles from slipping out; however, they may spring out during operation if they are rotated beyond the ranges shown above.

Precautions for selection standard, mounting, piping, and operating environment are same as for the standard series.

Specifications

Bore size (mm)	20	25	32					
Fluid	Air (Non-lube)							
Proof pressure	1.05 MPa							
Maximum operating pressure	0.7 MPa							
Minimum operating pressure	0.1 MPa							
Ambient and fluid temperature	-10 to 60°C (No freezing)							
Piston speed		50 to 1000 mm/s						
Port size	M5 x 0.8	Rc 1/8 (NP1	NPT 1/8, G 1/8)					
Bearing type	Slide bearing, Ball bushing bearing (Same dimensions for both							
Cushion	Air cushion (Both ends)							

Cushion mechanism

Bore size (mm)	Effective cushion length (mm)	Absorbable kinetic energy (J)			
20	5.9	0.40			
25	5.7	0.75			
32	5.6	1.0			

* Maximum load mass is the same as the standard type.

Standard Stroke

		(mm)
Model	Standard stroke	
CXS□20	20, 25, 30, 35, 40, 45, 50, 60, 70, 75, 80, 90, 100	
CXS⊡25 CXS⊡32	25, 30, 35, 40, 45, 50, 60, 70, 75, 80, 90, 100	

Theoretical Output

										(N)
Model	Rod size	Operating	Piston area		Op	erating	pressu	re (MPa	a)	
Model	(mm)	direction	(mm ²)	0.1	0.2	0.3	0.4	0.5	0.6	0.7
CX8030	CXS□20 10	OUT	628	62.8	126	188	251	314	377	440
CA3L20		IN	471	47.1	94.2	141	188	236	283	330
CXS 25 12	12	OUT	982	98.2	196	295	393	491	589	687
073025	12	IN	756	75.6	151	227	302	378	454	529
CXS□32	16	OUT	1608	161	322	482	643	804	965	1126
	10	IN	1206	121	241	362	482	603	724	844

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)


Weight


													(kg)
Marial	Standard stroke (mm)												
Model	20	25	30	35	40	45	50	60	70	75	80	90	100
CXSM20-□A	0.50	0.52	0.54	0.56	0.58	0.60	0.62	0.66	0.70	0.715	0.735	0.755	0.815
CXSL20-□A	0.52	0.54	0.56	0.58	0.60	0.62	0.64	0.68	0.72	0.735	0.755	0.775	0.835
CXSM25-□A	—	0.78	0.80	0.82	0.84	0.86	0.88	0.92	0.96	0.98	1.00	1.04	1.08
CXSL25-□A	—	0.79	0.81	0.83	0.85	0.87	0.89	0.93	0.97	0.99	1.01	1.05	1.09
CXSM32-□A	—	1.48	1.53	1.575	1.62	1.67	1.72	1.82	1.92	1.96	2.06	2.14	2.20
CXSL32-□A	—	1.51	1.55	1.60	1.64	1.69	1.74	1.84	1.94	1.98	2.08	2.16	2.22




Construction

CXSM/With air cushion

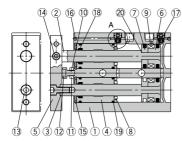



CXSL/With air cushion

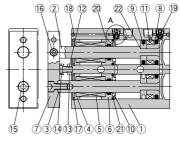



Close-up of A

Component Parts: CXSM

No.	Description	Material	Note
1	Housing	Aluminum alloy	Hard anodized
2	Piston rod A	Carbon steel	Hard chrome plated
3	Piston rod B	Carbon steel	Hard chrome plated
4	Rod cover	Aluminum bearing alloy	
5	Plate	Aluminum alloy	Anodized
6	Piston A	Aluminum alloy	Chromated
7	Piston B	Aluminum alloy	Chromated
8	Bumper B	Urethane	
9	Magnet	—	
10	Bumper bolt	Carbon steel	Nickel plated
11	Hexagon nut	Carbon steel	Zinc chromated
12	Bumper	Urethane	
13	Hexagon socket head cap screw	Chromium steel	Zinc chromated
14	Hexagon socket head set screw	Chromium steel	Zinc chromated
15	Retaining ring	Special steel	Phosphate coated
16	Steel ball	Special steel	Nickel plated
17	Piston seal	NBR	
18	Rod seal	NBR	
19	O-ring	NBR	
20	O-ring	NBR	
21	Cushion needle	Stainless steel	
22	Check seal retainer	Copper alloy	
23	Check seal	NBR	
24	Needle gasket	NBR	
25	Check gasket	NBR	

Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents				
20	CXS□20A-PS	OVOM CH HALL Q Q and Q				
25	CXS□25A-PS	CXSM: Set of nos. (7), (8) and (9) CXSL: Set of nos. (9, 20) and (2)				
32	CXS□32A-PS	CASE. Set of flos. (3, @ and g)				


Component Parts: CXSL

No.	Description	Material	Note
1	Housing	Aluminum alloy	Hard anodized
2	Piston rod A	Special steel	Hard chrome plated
3	Piston rod B	Special steel	Hard chrome plated
4	Bearing spacer	Aluminum alloy	
5	Ball bushing	—	
6	Bumper holder	Aluminum alloy	
7	Plate	Aluminum alloy	Anodized
8	Piston A	Aluminum alloy	Chromated
9	Piston B	Aluminum alloy	Chromated
10	Bumper B	Urethane	
11	Magnet	—	
12	Bumper bolt	Carbon steel	Nickel plated
13	Hexagon nut	Carbon steel	Zinc chromated
14	Bumper	Urethane	
15	Hexagon socket head cap screw	Chromium steel	Zinc chromated
16	Hexagon socket head set screw	Chromium steel	Zinc chromated
17	Retaining ring	Special steel	Phosphate coated
18	Steel ball	Special steel	Nickel plated
19	Piston seal	NBR	
20	Rod seal	NBR	
21	O-ring	NBR	
22	O-ring	NBR	
23	Cushion needle	Stainless steel	
24	Check seal retainer	Copper alloy	
25	Check seal	NBR	
26	Needle gasket	NBR	
27	Check gasket	NBR	
+ Cool	kit includes (7) (8 and (9) O	rdor the seal kit, ha	and on each here size

* Seal kit includes (1), (1) and (1). Order the seal kit, based on each bore size.

 Since the seal kit does not include a grease pack, order it separately. Grease pack part no.: GR-S-010 (10 g)


Dimensions: ø20

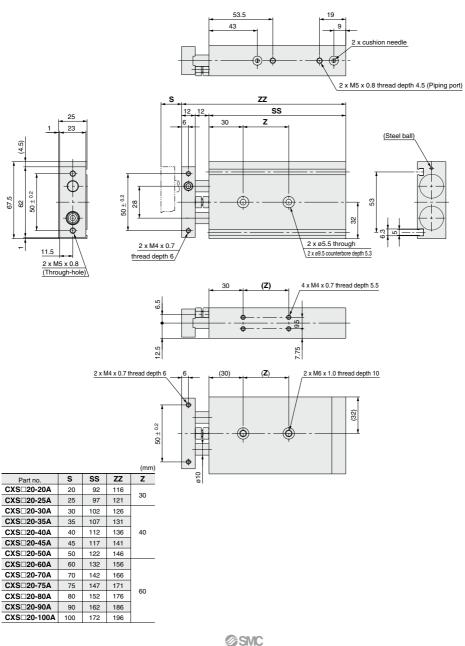

CXS Series

Dimensions: ø25


81.5

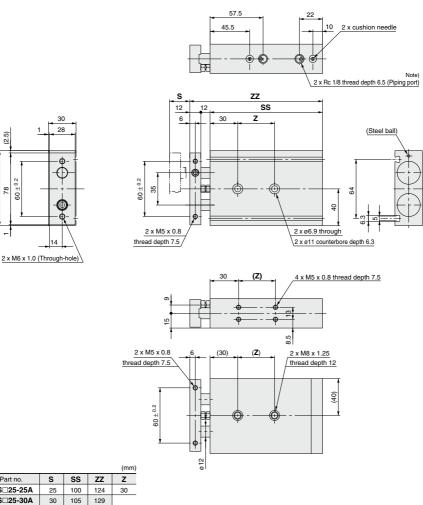

Note) For port threads TN and TF, only the piping port type varies.

				(
Part no.	S	SS	ZZ	Z
CXSD25-25A	25	100	124	30
CXSD25-30A	30	105	129	
CXSD25-35A	35	110	134	
CXSD25-40A	40	115	139	40
CXSD25-45A	45	120	144	
CXSD25-50A	50	125	149	
CXSD25-60A	60	135	159	
CXSD25-70A	70	145	169	
CXS□25-75A	75	150	174	60
CXSD25-80A	80	155	179	00
CXS□25-90A	90	165	189	
CXS□25-100A	100	175	199	

Dimensions: ø32

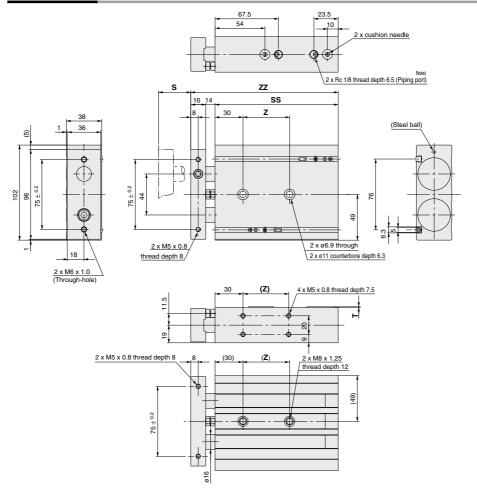

				(mm)
Part no.	S	SS	ZZ	z
CXS□32-25A	25	112	142	40
CXSD32-30A	30	117	147	
CXS□32-35A	35	122	152	
CXS□32-40A	40	127	157	50
CXS□32-45A	45	132	162	
CXSD32-50A	50	137	167	
CXS□32-60A	60	147	177	
CXSD32-70A	70	157	187	
CXS□32-75A	75	162	192	70
CXS□32-80A	80	167	197	70
CXS□32-90A	90	177	207	
CXS□32-100A	100	187	217	


(mm)

Note) For port threads TN and TF, only the piping port type varies.

CXS Series Auto Switch Mounting

Auto Switch Proper Mounting Position (Detection at Stroke End)

Electrical entry direction: Inward

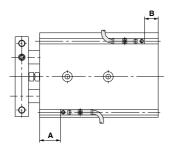

Electrical entry direction: Outward


Bore size (mm)	Α	в	D-Z7/Z8, D-Y7⊡W D-Y5⊡, D-Y7⊡		D-Y6□, D-Y7⊡\	D-Y7⊡V NV	D-Y7BA		
(11111)			С	D	С	D	С	D	
20	40.5	6.5	36.5(35)	2.5(1)	38.5	4	30.5	-3.5	
25	42	8	38(36.5)	4(2.5)	40	5.5	32	-2	
32	52.5	9.5	48.5(47)	5.5(4)	50.5	7	42.5	-0.5	

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

As for auto switch mounting dimensions, auto switch mounting and its operating range, those are the same as basic type. Refer	method
843.	



How to Order

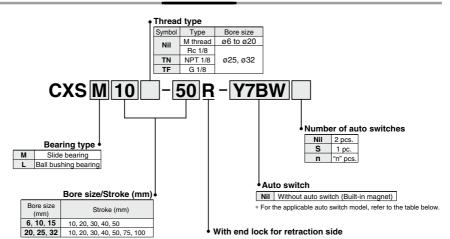

Applicable Auto Switches/Refer to pages 1289 to 1383 for further information on auto switches.

		El a stata a l	light			Load volta	age	Auto owit	oh model	Lead wire ler	ngth ((m) *						
Туре	Special function	Electrical entry	dicator	Wiring (Output)	DC		AC	Auto Switt	Auto switch model		3	5	Pre-wired connector	Applic	able load			
		onay	l pi	(Output)			AC	Perpendicular	In-line	(Nil)	(L)	(Z)	CONNECTOR					
÷				3-wire (NPN)		5 V, 12 V	Y69A	Y59A	•	٠	0	0	IC					
switch	_			3-wire (PNP)				Y7PV	Y7P	•	٠	0	0	circuit				
auto s				2-wire		12 V	12 V	Y69B	Y59B	•	۲	0	0	—	Datas			
au	Diagnostic indication	Grommet	s	3-wire (NPN)	24 V 5	^{24 V} 5 V, 12 V	—	Y7NWV	Y7NW	•	٠	0	0	IC	Relay,			
state	(2-color indication	Gronner	≻	3-wire (PNP)				Y7PWV	Y7PW	•	•	0	0	circuit	PLC			
Solid s	(2-color indicator)			2-wire			Y7BWV	Y7BW	•	۲	0	0						
S	Water resistant (2-color indicator)	1		2-wire		12 V		_	Y7BA**	-	•	0	0	_				
switch	c,					Yes	3-wire (NPN equivalent)	_	5 V	—	—	Z76	•	•	-	-	IC circuit	-
Be	-	Grommet		0	24 V	24 V 12 V	100 V	—	Z73	•	٠	•	-	—	Relay,			
aut	Gromm Gromm		None	2-wire			100 V or less	—	Z80	•	٠	—	—	IC circuit	PLC			

** Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. * Solid state auto switches marked with " " are produced upon receipt of order.

* Lead wire length symbols: 0.5 m Nil (Example) Y59A 3 m -

· Since there are other applicable auto switches than listed, refer to page 843 for details.

. For details about auto switches with pre-wired connector, refer to pages 1358 and 1359.

· Auto switches are shipped together (not assembled).



Symbol Rubber bumper



Specifications

Bore size (mm)	6	10	15	20	25	32				
Fluid		Air (Non-lube)								
Fluid			,	,						
Proof pressure		1.05 MPa								
Maximum operating pressure	0.7 MPa									
Minimum operating pressure	0.3 MPa									
Ambient and fluid temperature	-10 to 60°C (No freezing)									
Piston speed	30 to 300mm/s	30 to 800mm/s	30 to 7	00mm/s	30 to 6	00mm/s				
Cushion		Bump	er is standa	ard on both	ends					
Port size	M5 x 0.8 Rc 1/8									
Bearing type	Slide bearing, Ball bushing bearing (Same dimensions for both)									
Allowable kinetic energy	0.0023 J	0.064 J	0.095 J 0.17 J 0.27 J 0.32 J							

Lock Specifications

Lock specifications	Rear end lock									
Bore size (mm)	6	10	15	20	25	32				
Maximum holding force (N)	14.7 39.2 98.1 157 235									
Manual release	Non-lock type									

* Maximum load mass is the same as the standard type.

Standard Stroke

	(mm)
Model	Standard stroke
CXS 6	
CXS□10	10, 20, 30, 40, 50
CXSD15	
CXS□20	
CXS□25	10, 20, 30, 40, 50, 75, 100
CXS□32	
+ Etrokoo which or	read the standard strake length will be sveilable as apacial goods

* Strokes which exceed the standard stroke length will be available as special goods.

Theoretical Output

											(N)
Model	Rod size	Operating	Piston area			Opera	ating pro	essure	(MPa)		
woder	(mm)	direction	(mm ²)	0.1	0.15	0.2	0.3	0.4	0.5	0.6	0.7
CXS□ 6	4	OUT	56	_	8.4	11.2	16.8	22.4	28.0	33.6	39.2
	4	IN	31		4.6	6.2	9.3	12.4	15.5	18.6	21.7
CXS⊡10	6	OUT	157	15.7	-	31.4	47.1	62.8	78.5	94.2	110
CASLIU	0	IN	100	10.0	-	20.0	30.0	40.0	50.0	60.0	70.0
CXS 15	8	OUT	353	35.3		70.6	106	141	177	212	247
CA3115	0	IN	252	25.2	_	50.4	75.6	101	126	151	176
CXS 20	10	OUT	628	62.8		126	188	251	314	377	440
CXSL20	10	IN	471	47.1		94.2	141	188	236	283	330
CXS 25	12	OUT	982	98.2		196	295	393	491	589	687
CX5125	12	IN	756	75.6		151	227	302	378	454	529
CXS⊡32	16	OUT	1608	161		322	482	643	804	965	1126
UA3132	10	IN	1206	121	_	241	362	482	603	724	844

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)

Weight


							(kg)
Model			Stand	dard stroke	(mm)		
woder	10	20	30	40	50	75	100
CXSM6-□R	0.105	0.12	0.135	0.15	0.165	_	_
CXSL6-⊟R	0.105	0.12	0.135	0.15	0.165	_	_
CXSM10-□R	0.18	0.2	0.225	0.25	0.27	_	_
CXSL10-□R	0.18	0.2	0.225	0.25	0.27	_	_
CXSM15-□R	0.3	0.33	0.355	0.38	0.41	_	_
CXSL15-□R	0.32	0.35	0.375	0.4	0.43	_	_
CXSM20-□R	0.465	0.5	0.54	0.58	0.62	0.715	0.815
CXSL20-□R	0.485	0.52	0.56	0.60	0.64	0.735	0.835
CXSM25-□R	0.72	0.76	0.8	0.84	0.88	0.98	1.08
CXSL25-□R	0.73	0.77	0.81	0.85	0.89	0.99	1.09
CXSM32-□R	1.33	1.43	1.53	1.62	1.72	1.96	2.2
CXSL32-□R	1.35	1.45	1.55	1.64	1.74	1.98	2.22

Moisture Control Tube IDK Series

When operating an actuator with a small diameter and a short stroke at a high frequency, the dew condensation (water droplet) may occur inside the piping depending on the conditions.

Simply connecting the moisture control tube to the actuator will prevent dew condensation from occurring. For details, refer to the Web Catalog.

Construction

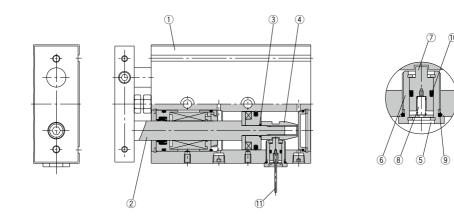

Component Parts

	-		
No.	Description	Material	Note
1	Housing	Aluminum alloy	Hard anodized
2	Piston rod B	Carbon steel	Hard chrome plated
3	O-ring	NBR	
4	Lock rod	Special steel	
5	Retaining ring	Special steel	
6	Lock holder	Aluminum alloy	
7	Lock pin	Special steel	
8	Lock spring	Piano wire	
9	O-ring	NBR	
10	Rod seal	NBR	
11	Manual lever	Special steel	

* Parts other than those listed above are the same as those for standard type.

Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
6	CXSRM6-PS	
0	CXSRL6APS]
10	CXSRM10-PS	
10	CXSRL10APS	Includes the kit
15	CXSRM15-PS	components of the seal
15	CXSRL15APS	kit featured on page
20	CXSRM20-PS	839 plus items (9) and
20	CXSRL20APS	10 from the parts list
25	CXSRM25-PS	above.
25	CXSRL25APS	1
32	CXSRM32-PS]
32	CXSRL32APS	


* Seal kits includes the basic type seal (page 839), (9) and (10). Order the seal kit, based on each bore size.


* Since the seal kit does not include a grease pack, order it separately. Grease pack part no.:GR-S-010 (10 g)

CXS Series

Dimensions: ø6, ø10, ø15




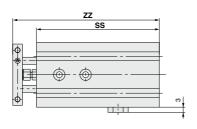



		(mm)
Model	SS	ZZ
CXSD6-10R	75	88.5
CXSD6-20R	85	98.5
CXSD6-30R	95	108.5
CXS□6-40R	105	118.5
CXSD6-50R	115	128.5

* Dimensions other than those listed above are the same as for the standard type.

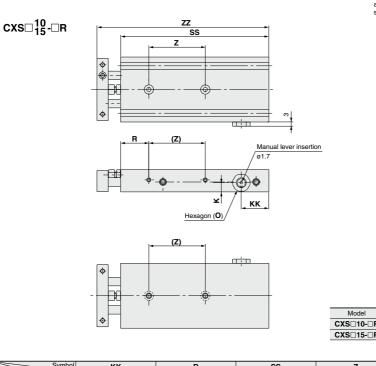

(mm)


		()
Model	к	0
CXS□10-□R	6.5	Width across flats 12
CXS□15-□R	8.5	Width across flats 13


(mm)


Symbol		КК					R						SS					z			ZZ								
Model	10	20	30	40	50	10	20	30	40	50	10	20	30	40	50	10	20	30	40	50	10	20	30	40	50				
CXS□10-□R		19.5		24	1.5		20				80	90	100	115	125	30	40		5	0	97	107	117	132	142				
CXS□15-□R			20.5			20	20 30				30 90 100 11			110	120	130	35 4			35 45				5	109	119	129	139	149

* Dimensions other than those listed above are the same as for the standard type.

Dimensions: ø20, ø25, ø32

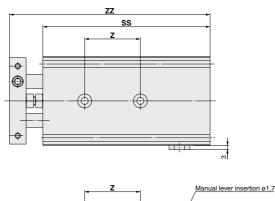



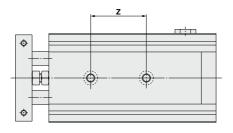

	(mm)
Model	0
CXS□20-□R	Width across flats13
CXS□25-□R	Width across flats16
CXS□32-□R	Width across flats19


(mm)

Symbol		КК								SS								z				ZZ						
Model	10	20	30	40	50	75	100	10	20	30	40	50	75	100	10	20	30	40	50	75	100	10	20	30	40	50	75	100
CXS□20-□R		22				27	22	100	110	120	130	140	170	190		40			60		80	124	134	144	154	164	194	214
CXS□25-□R	24	1.5	29	9.5		24.5		107	117	132	142	147	172	197	4	0		6	0		80	131	141	156	166	171	196	221
CXS□32-□R		29 3			34	49	122	132	142	152	162	192	232	5	0	70		70 90		0	152	162	172	182	192	222	262	


* Dimensions other than those listed above are the same as for the standard type.

CXS Series Auto Switch Mounting

Auto Switch Proper Mounting Position (Detection at Stroke End)

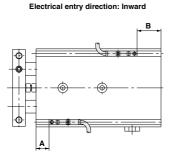

Electrical entry direction: Outward

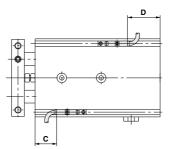

Bore size (mm)	Α	в		D-Z7/Z8, D-Y7□W D-Y6□, D-Y7□V D-Y5□, D-Y7□ D-Y7□WV				'BAL
(((((((((((((((((((((((((((((((((((((((С	D	С	D	С	D
6	15.5	24.5	11.5 (10)	20.5 (19)	13	22	5.5	14.5
10	22.5	22.5	18.5 (17)	18.5 (17)	20	20	12.5	12.5
15	30.5	24.5	26.5 (25)	20.5 (19)	28	22	20.5	14.5
20	38	27	34 (32.5)	23 (21.5)	36	24.5	28	17
25	38	34	34 (32.5)	30 (28.5)	36	31.5	28	24
32	48	39	44 (42.5)	35 (33.5)	46	6.5	38	29

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

As for auto switch mounting dimensions, auto switch mounting method and its operating range, those are the same as basic type. Refer to page 843.



CXS Series With End Lock for Retraction Side Specific Product Precautions


Be sure to read this before handling the products.

Refer to page 8 for safety instructions and pages 9 to 18 for actuator and auto switch precautions.

Recommended Pneumatic Circuit

A Caution

This is necessary for the proper operation and release of the lock.

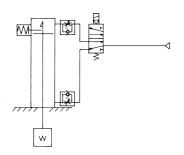

Handling Precautions

≜Caution

- 1. Do not use 3 position solenoid valves.
- Avoid using in combination with 3 position solenoid valves (especially closed center metal seal types). If pressure is trapped in the port on the head side, the cylinder cannot be locked. Even after being locked, the lock may be released after some time, due to air leakage from the solenoid valve entering the cylinder.
- Back pressure is required to release the end lock.
 Be sure that air is supplied to the rod side before starting operation, as shown in the drawing on the left. The lock may not be released. (Or Refer to the section on releasing the lock.)
- Release the lock when mounting and adjusting the cylinder. An attempt to mount or adjust a cylinder while it is locked can damage the lock.
- 4. Operate with a load ratio of 50% or less. If the load ratio exceeds 50%, this may cause problems such as failure of the lock to release, or damage to the lock unit.
- 5. Do not operate multiple cylinders in synchronization. Avoid applications in which two or more end lock cylinders are synchronized to move one workpiece, as one of the cylinder locks may not be able to release when required.
- Install speed controllers as they will be meter-out control. When they are used under meter-in control, the lock may not be released.
- 7. Never adjust the retracting stroke using a bumper bolt or external stopper. The lock will not function.

Operating Pressure

▲Caution

1. Apply a pressure more than 0.3 MPa to the port on the head side. The pressure is necessary to release the lock.

Exhaust Speed

Caution

 Locking will occur automatically if the pressure applied to the port on the head side falls to 0.05 MPa or less. In cases where the piping on the head side is long and thin, or the speed controller is separated at some distance from the cylinder port, the exhaust speed will be reduced. Note that some time may be required for the lock to engage. In addition, clogging of a silencer mounted on the solenoid valve exhaust port can produce the same effect.

Releasing the lock

A Warning

 Before releasing the lock, be sure to supply air to the rod side, so that there is no load applied to the lock mechanism when it is released. (Refer to the Recommended Pneumatic Circuit.) If the lock is released when the rod side is in an exhaust state, and with a load applied to the lock unit, the lock unit may be subjected to an excessive force and be damaged. Furthermore, sudden movement of the slide table is extremely dangerous.

Manual Release

Manual release (Non-locking type)

1. Insert the manual lever and screw it into the lock holder assembly. If the lever is screwed in sidelong, it may damage the lock spring.



 To unlock, pull the manual lever in the direction of the arrow. Release the manual lever to return the cylinder to a ready-to-lock state.




 The manual lever (ø1.6 x 35 L, tip part: M1.6 x 0.35 x 3 L) is included with the cylinder. If additional manual levers are required, use the following part number to place an order: CXS06-48BK2777 (for all series).

▲ Caution

Do not use the cylinder while the manual lever is screwed in. It may damage the lock mechanism.

Dual Rod Cylinder Double Rod Type CXSW Series ø6, ø10, ø15, ø20, ø25, ø32

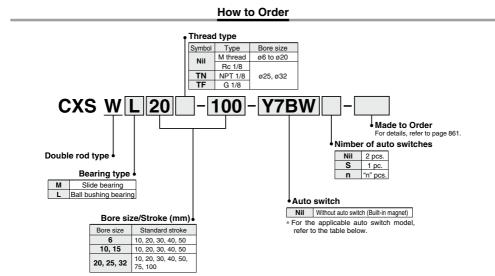

Applicable Auto Switches/Refer to pages 1289 to 1383 for further information on auto switches.

			light			Load volt	age			Lead wire len	igth (m) *					
Туре	Special function	Electrical entry	dicator	Wiring (Output)		DC	AC	Auto swite	ch model	0.5	3	5	Pre-wired connector		cable load		
		enuy	Indic	(Output)		00	AC	Perpendicular	In-line	(Nil)	(L)	(Z)	CONNECTOR				
switch				3-wire (NPN)		5 V, 12 V		Y69A	Y59A	•	۲	0	0	IC			
Ś				3-wire (PNP)		5 V, 12 V		Y7PV	Y7P	•	٠	0	0	circuit			
auto				2-wire	24 V 5 V, 12 V 12 V	,	12 V		Y69B	Y59B	•	٠	0	0	—	Deleu	
e ar	Discretio indication G	Grommet	es	3-wire (NPN)				Y7NWV	Y7NW	•	•	0	0	IC	Relay,		
state	Diagnostic indication (2-color indicator)		۶	3-wire (PNP)		5 V, 12 V				Y7PWV	Y7PW	•	٠	0	0	circuit	PLC
Solid s						12 V				Y7BWV	Y7BW	•	٠	0	0		
	Water resistant (2-color indicator)			2-wire			v	_	Y7BA**	—	٠	0	0	1 -			
Reed auto switch		Grommet	'es	3-wire (NPN equivalent)	_	5 V	-	-	Z76	•	•	-	-	IC circuit	—		
lo s B B B	-	Gronnet	~	0	24 V 12 V	100 V	—	Z73	•	٠	•	-	—	Relay,			
aut			None	2-wire		10 12 0	100 V or less	—	Z80	•	٠	-	—	IC circuit	PLC		

@SMC

** Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance.

* Lead wire length symbols: 0.5 m Nil (Example) Y59A

3 m L (Example) Y59AL

* Solid state auto switches marked with "O" are produced upon receipt of order.

5 m Z (Example) Y59AZ


. Since there are other applicable auto switches than listed, refer to page 843 for details.

. For details about auto switches with pre-wired connector, refer to pages 1358 and 1359.

· Auto switches are shipped together (not assembled).

Dual Rod Cylinder Double Rod Type CXSW Series







Symbol	Specifications		
-XB11	Long stroke		

Moisture Control Tube IDK Series

When operating an actuator with a small diameter and a short stroke at a high frequency, the dew condensation (water droplet) may occur inside the piping depending on the conditions.

Simply connecting the moisture control tube to the actuator will prevent dew condensation from occurring. For details, refer to the Web Catalog.

Specifications

	•	10				
Bore size (mm)	6	10	15	20	25	32
Fluid			Air (No	n-lube)		
Proof pressure			1.05	MPa		
Maximum operating pressure			0.7	MPa		
Minimum operating pressure		0.15 MPa		0.1 MPa		
Ambient and fluid temperature	-10 to 60°C (No freezing)					
Piston speed			50 to 50	00 mm/s		
Cushion	Bumper is standard on both ends					
Stroke adjustable range	0 to -10 mm compared to the standard stroke (Extended end: 5 mm, Retracted end: 5 mm)					
Port size		M5 :		Rc 1/8		
Bearing type	Slide bearing, Ball bushing bearing (Same dimensions for both)					

Standard Stroke

		(mm)		
Model	Standard stroke	Long stroke		
CXSW 6	10, 20, 30, 40, 50	—		
CXSW□10	10, 20, 30, 40, 50	75 100 105 150		
CXSW□15	10, 20, 30, 40, 50	75, 100, 125, 150		
CXSW 20				
CXSW 25	10, 20, 30, 40, 50, 75, 100	125, 150, 175, 200		
CXWS 32				

* For long strokes, it will be made-to-order. (-XB11)

Theoretical Output

									(N)		
Model	Rod size	Rod size Piston area		Operating pressure (MPa)							
woder	(mm)	(mm²)	0.1	0.2	0.3	0.4	0.5	0.6	0.7		
CXSW□ 6	4	31	4.6	6.2	9.3	12.4	15.5	18.6	21.7		
CXSW□10	6	100	10	20	30	40	50	60	70		
CXSW□15	8	252	25.2	50.4	75.6	101	126	151	176		
CXSW□20	10	471	47.1	94.2	141	188	236	283	330		
CXSW□25	12	756	75.6	151	227	302	378	454	529		
CXSW□32	16	1206	121	241	362	482	603	724	844		

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)

Weight

							(kg)		
Model	Standard stroke (mm)								
Model	10	20	30	40	50	75	100		
CXSWM 6	0.11	0.13	0.14	0.16	0.17	_	_		
CXSWL 6	0.12	0.13	0.15	0.16	0.18	_	_		
CXSWM10	0.24	0.26	0.28	0.30	0.32	0.37	0.42		
CXSWL 10	0.25	0.27	0.29	0.31	0.33	0.38	0.43		
CXSWM15	0.43	0.45	0.48	0.51	0.54	0.61	0.68		
CXSWL 15	0.47	0.50	0.52	0.55	0.58	0.65	0.42		
CXSWM20	0.71	0.74	0.78	0.82	0.85	0.95	1.04		
CXSWL 20	0.75	0.79	0.82	0.86	0.90	0.99	1.08		
CXSWM25	1.06	1.11	1.17	1.22	1.28	1.41	1.55		
CXSWL 25	1.07	1.12	1.18	1.23	1.29	1.42	1.56		
CXSWM32	2.04	2.12	2.21	2.29	2.38	2.59	2.81		
CXSWL 32	2.06	2.15	2.23	2.32	2.41	2.62	2.83		




CXSW Series

Operating Conditions

Maximum Load Mass -


When the cylinder is mounted as shown in the diagrams below, the maximum load mass W should not exceed the values illustrated in the graph immediately following the diagrams.

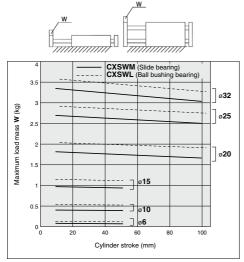

Note) Regarding the max. load mass for long strokes depending on your specific usage conditions, extend the line for each size in the graph to the long stroke range.

Allowable Kinetic Energy -

Operate a vertically mounted cylinder with a load mass and cylinder speed not exceeding the ranges shown in the graph below. A horizontally mounted cylinder should also be operated with a load weight less than the ranges given in the graph at left. Cylinder speed should be adjusted using a speed controller.

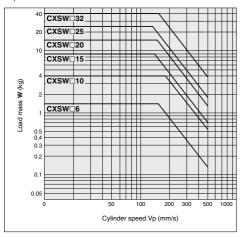

Deflection at the Plate End


An approximate plate-end deflection X without a load is shown in the table below.



Bore size (mm)	6 to 32	
CXSWM (Slide bearing)		
CXSWL (Ball bushing bearing)	±0.03 mm	


Non-rotating accuracy

Non-rotating accuracy θ° without a load should be less than or equal to the value provided in the table below as a guide.



Bore size (mm)	6 to 32
CXSWM (Slide bearing)	+0.1°
CXSWL (Ball bushing bearing)	±0.1*

Construction

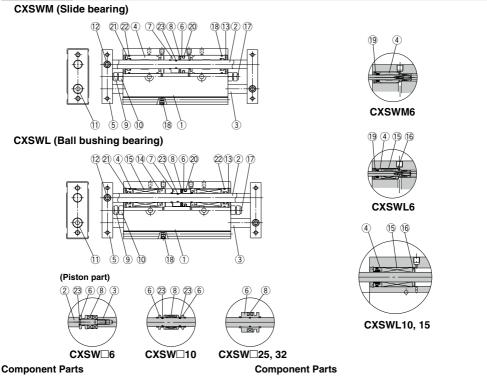

	•			
No.	Description	Material	Note	
1	Housing	Aluminum alloy	Hard anodized	
2	Piston rod A	Carbon steel	Hard chrome plated	
3	Piston rod B	Carbon steel	Hard chrome plated	
4	Rod cover	Aluminum bearing alloy		
5	Plate	Aluminum alloy	Hard anodized	
6	Piston A	Aluminum alloy	Chromated	
7	Piston B	Aluminum alloy	Chromated	
8	Magnet	_		
9	Bumper bolt	Carbon steel	Nickel plated	
10	Hexagon nut	Carbon steel	Zinc chromated	
11	Hexagon socket head cap screw	Chromium steel	Zinc chromated	
12	Hexagon socket head set screw	Chromium steel	Zinc chromated	

Note) Piston rod for CXSL is quenched.

Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
6	CXSWM6-PS	
U	CXSWL6-PS	
10	CXSWM10-PS	
10	CXSWL10APS	
15	CXSWM15-PS	
15	CXSWL15APS	Set of nos. above
20	CXSWM20-PS	20, 21 and 22
20	CXSWL20APS	
25	CXSWM25-PS	
25	CXSWL25APS	
32	CXSWM32-PS	
32	CXSWL32APS	


	-		
No.	Description	Material	Note
13	Retaining ring	Special steel	Phosphate coated
14	Bumper holder	Synthetic resin	
15	Ball bushing	-	
16	Bearing spacer	Synthetic resin	
17	Bumper	Urethane	
18	Plug	Chromium steel	Nickel plated
19	Seal retainer	Aluminum alloy	
20 °	Piston seal	NBR	
21°	Rod seal	NBR	
22°	O-ring	NBR	
23	O-ring	NBR	

* For CXSWL6, aluminum bearing alloy is used for 16.


- \ast Seal kit includes 0 to 0. To order them, use the order number given in the left table.
- Since the seal kit does not include a grease pack, order it separately. Grease pack part no.: GR-S-010 (10 g)

CXSW Series

Dimensions: ø6, ø10

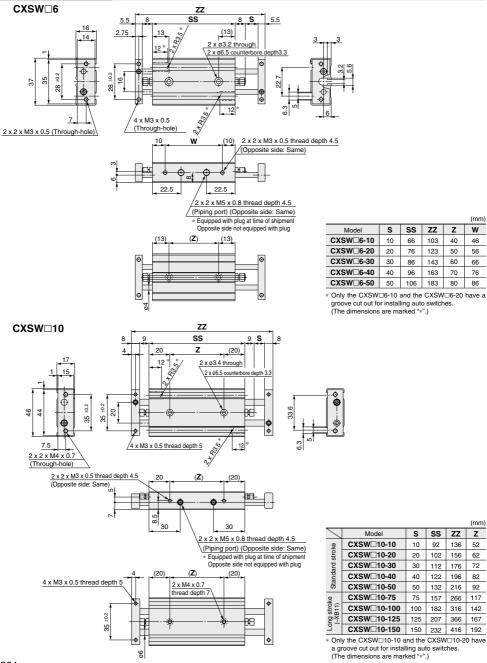


SMC

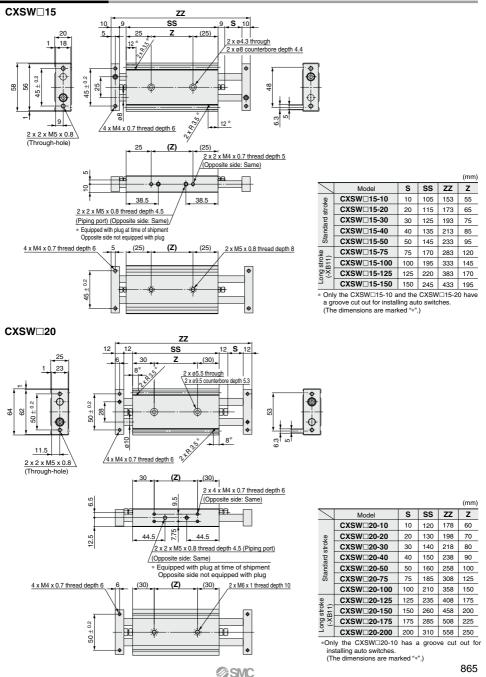

Dimensions: ø15, ø20


CXSW Series


Dimensions: ø25, ø32

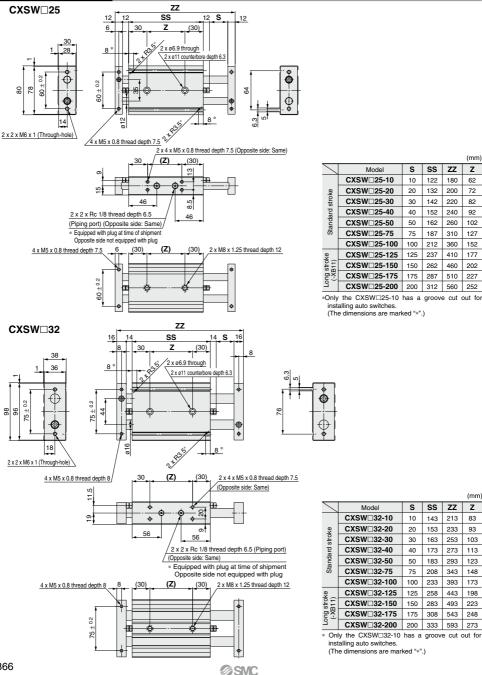

CXSW Series Auto Switch Mounting

Auto Switch Proper Mounting Position (Detection at Stroke End)

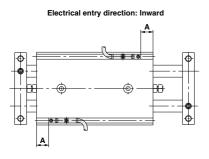

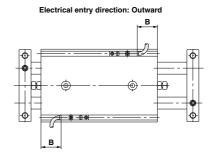

Bore size (mm)	А	D-Z7/Z8, D-Y7□W D-Y5□, D-Y7□	D-Y6□, D-Y7□V D-Y7□WV	D-Y7BA
(((((((((((((((((((((((((((((((((((((((В	В	В
6	13.8	9.8(8.3)	11.3	3.8
10	28.5	24.5(23)	26	—
15	35	31(29.5)	32.5	-
20	42.5	38.5(37)	40.5	_
25	43.5	39.5(38)	41.5	33.5
32	54	50(48.5)	52	44

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

As for auto switch mounting dimensions, auto switch mounting method and its operating range, those are the same as basic type. Refer to page 843