

# AC Servo Motor Drivers

## LECSA/LECS□-T/LECY□ Series



### Pulse Input Type/Positioning Type ..... p. 1109

#### Incremental Type/LECSA Series



### Pulse Input Type/Positioning Type ..... p. 1109

#### Absolute Type/LECSB-T Series



With STO sub-function

### CC-Link Direct Input Type ..... p. 1109

#### Absolute Type/LECSA-T Series

CC-Link



### SSCNET III/H Type ..... p. 1109

#### Absolute Type/LECSS-T Series



With STO sub-function

### Network Card Type ..... p. 1109

#### Absolute Type/LECSN□-T Series

EtherCAT  
EtherNet/IP™  
PROFINET



Safety function STO available

### MECHATROLINK-II Type ..... p. 1128

#### Absolute Type/LECYM Series




With STO sub-function

### MECHATROLINK-III Type ..... p. 1128

#### Absolute Type/LECYU Series



With STO sub-function

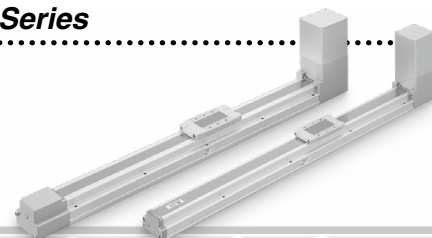

## LECSA/LECS□-T/LECY□ Series List



Series		Compatible motor				Control method			Application/Function		Compatible option
		100 W	200 W	400 W	750 W	Positioning*1	Pulse	Network direct input	Synchronous	Pushing operation*4	Setup software
Incremental Type	<b>LECSA</b> (Pulse input type/ Positioning type)	●	●	●		Up to 7 points	●				LEC-MRC2
	<b>LECSB-T</b> (Pulse input type/ Positioning type)	●	●	●	●	Up to 255 points *5	● *5			● *4 *5	LEC-MRC2
Absolute Type	<b>CC-Link</b>  <b>LECS-C-T</b> *8 (CC-Link direct input type)	●	●	●	●	Up to 255 points		CC-Link Ver.1.10			LEC-MRC2
	<b>SSCNET III/H</b>  <b>LECSS-T</b> (SSCNET III/H type) Compatible with Mitsubishi Electric's servo system controller network	●	●	●	●			SSCNET III/H	● *2	● *4	LEC-MRC2
	<b>EtherCAT</b> <b>EtherNet/IP™</b> <b>PROFINET</b>  <b>LECSN□-T</b> (Network card type)	●	●	●	●	Up to 255 points *6		PROFINET EtherCAT EtherNet/IP™	● *7		LEC-MRC2
	<b>MECHATROLINK-II</b>  <b>LECYM</b>  <b>MECHATROLINK-III</b>	●	●	●				MECHATRO LINK-II	● *3		SigmaWin+™
	<b>LECYU</b>	●	●	●				MECHATRO LINK-III	● *3		SigmaWin+™

- \*1 For positioning types, the settings need to be changed in order to use the max. set values. Setup software (MR Configurator2™) LEC-MRC2 is required.
- \*2 Available when a Mitsubishi motion controller is used as upper level equipment. When connecting products with 2 or more axes for synchronous control, operational deviations will occur due to the mechanical differences of each axis.  
Be sure to provide a floating mechanism that allows for operational deviations.  
Without a floating mechanism, there is a risk of reduced product life, increased operating resistance, and abnormal noise generation.
- \*3 Available when a motion controller is used as upper level equipment. When connecting products with 2 or more axes for synchronous control, operational deviations will occur due to the mechanical differences of each axis.  
Be sure to provide a floating mechanism that allows for operational deviations.  
Without a floating mechanism, there is a risk of reduced product life, increased operating resistance, and abnormal noise generation.
- \*4 The LECSB2-T is only applicable when the control method is positioning. The point table is used to set the pushing operation settings.  
When selecting the LECSS2-T, combine it with upper level equipment (such as the Simple Motion module manufactured by Mitsubishi Electric Corporation) which has a pushing operation function.  
\*\* For customer-provided PLC and motion controller setting and usage instructions, confirm with the retailer or manufacturer.
- \*5 The LECSB2-T can be used by adding the "MR Configurator2 dedicated file for the LECSB-T" to the setup software (MR Configurator2™: LEC-MRC2□).  
Please download this dedicated file from the SMC website: <https://www.smcworld.com>
- \*6 The LECSN□-T point table mode is only available for PROFINET and EtherCAT.
- \*7 Only EtherCAT is available. Confirm the upper-level equipment specifications in advance.
- \*8 The torque control mode is not available for the LECS-C-T.

## Gain adjustment using auto tuning



### Auto-tuning function

- Controls the difference between the command value and the actual action

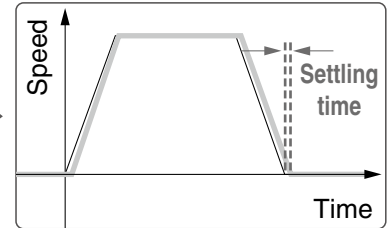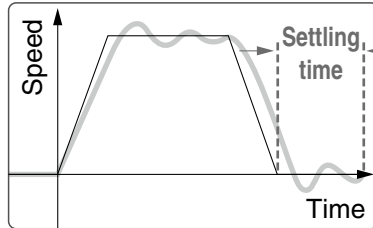

### Vibration suppression control function

- Automatically suppresses low-frequency machine vibrations (1 to 100 Hz)

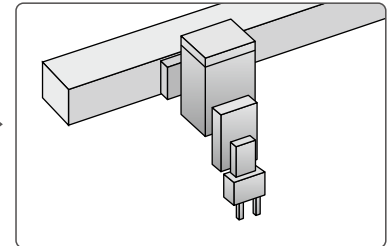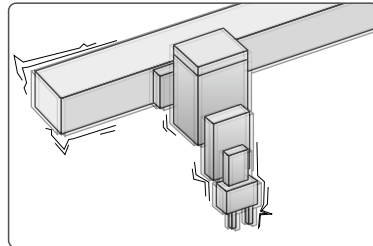

## With display setting function

### One-touch adjustment button


One-touch servo adjustment

### Display

Display the monitor, parameters, and alarm.

### Settings

Set the parameters, monitor display, etc., with push buttons.

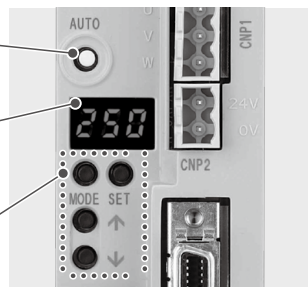


LECSA

### Display

Display the monitor, parameters, and alarm.

### Settings

Set the parameters, monitor display, etc., with push buttons.

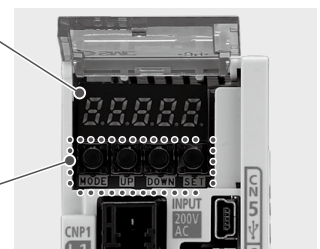

(With the front cover opened)


LECSB-T

### Display

Display the communication status with the driver, the alarm, and the point table no.

### Settings

Control the Baud rate, station number, and the occupied station count.

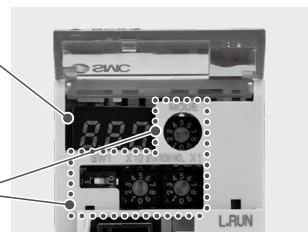

(With the front cover opened)


LECSC-T

### Display

Display the communication status with the driver and the alarm.

### Settings

Switches for axis setting, control axis deactivation, switching to the test operation, etc.

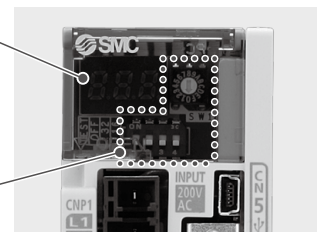


LECSS2-T

### Display

Display the communication status with the driver and the alarm.

### Settings

Switches for axis setting, switching to the test operation, etc.

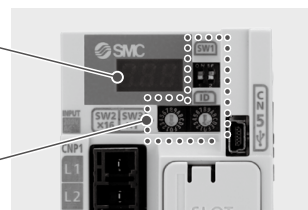


LECSN□-T

### Settings

Switches for station address, communication speed, number of transmission bytes, etc.

### Display

Display the driver status and alarm.

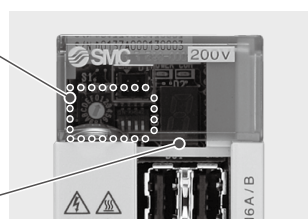


LECYM

### Settings

Switches for station address, number of transmission bytes, etc.



### Display

Display the driver status and alarm.

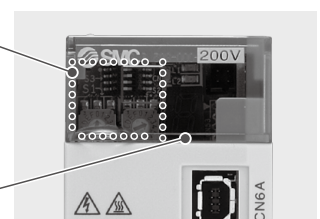

LECYU

## System Construction

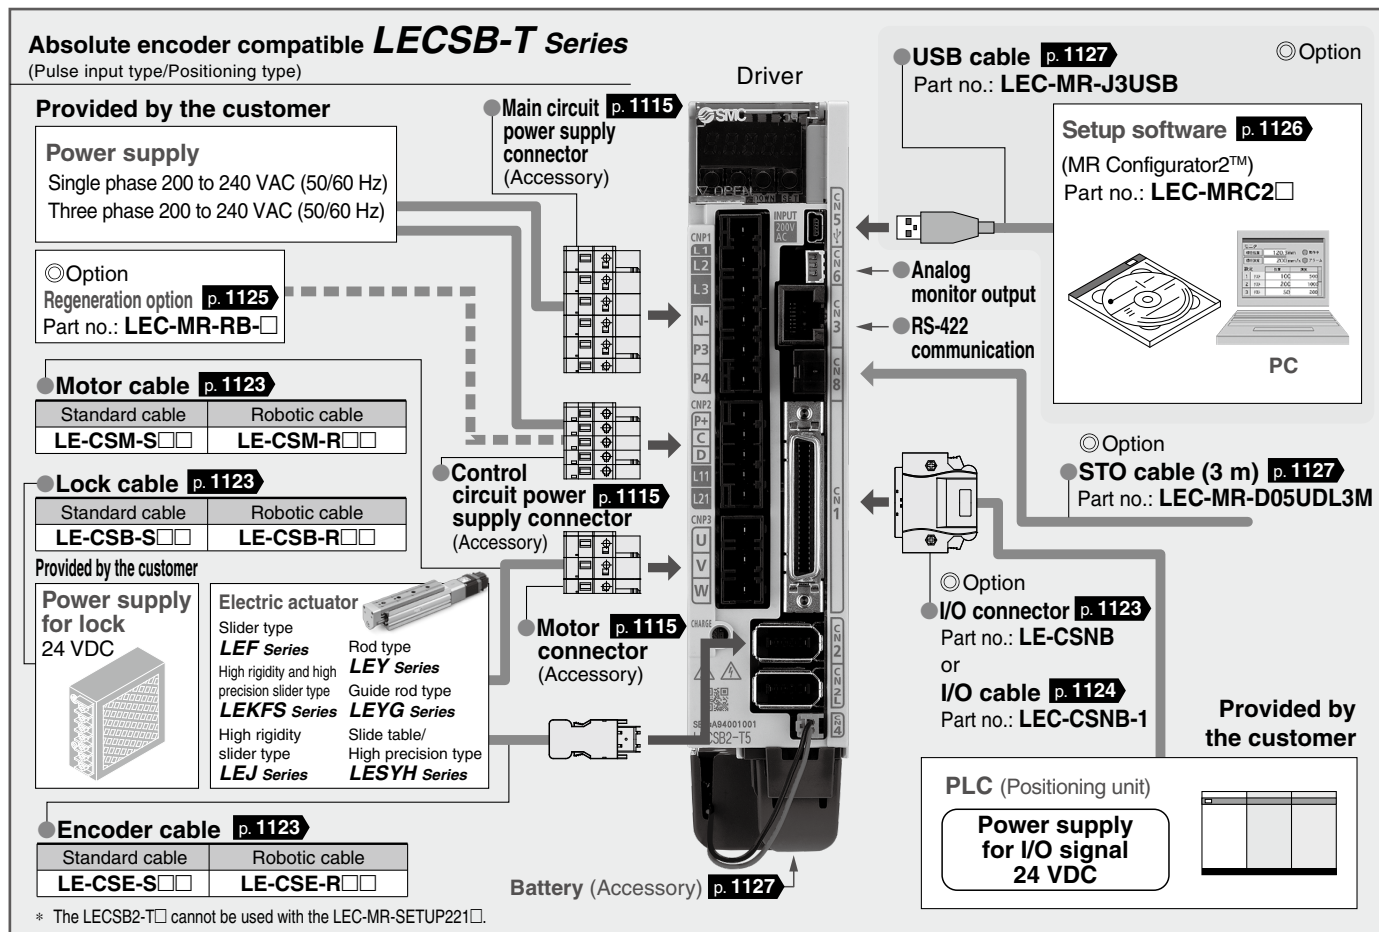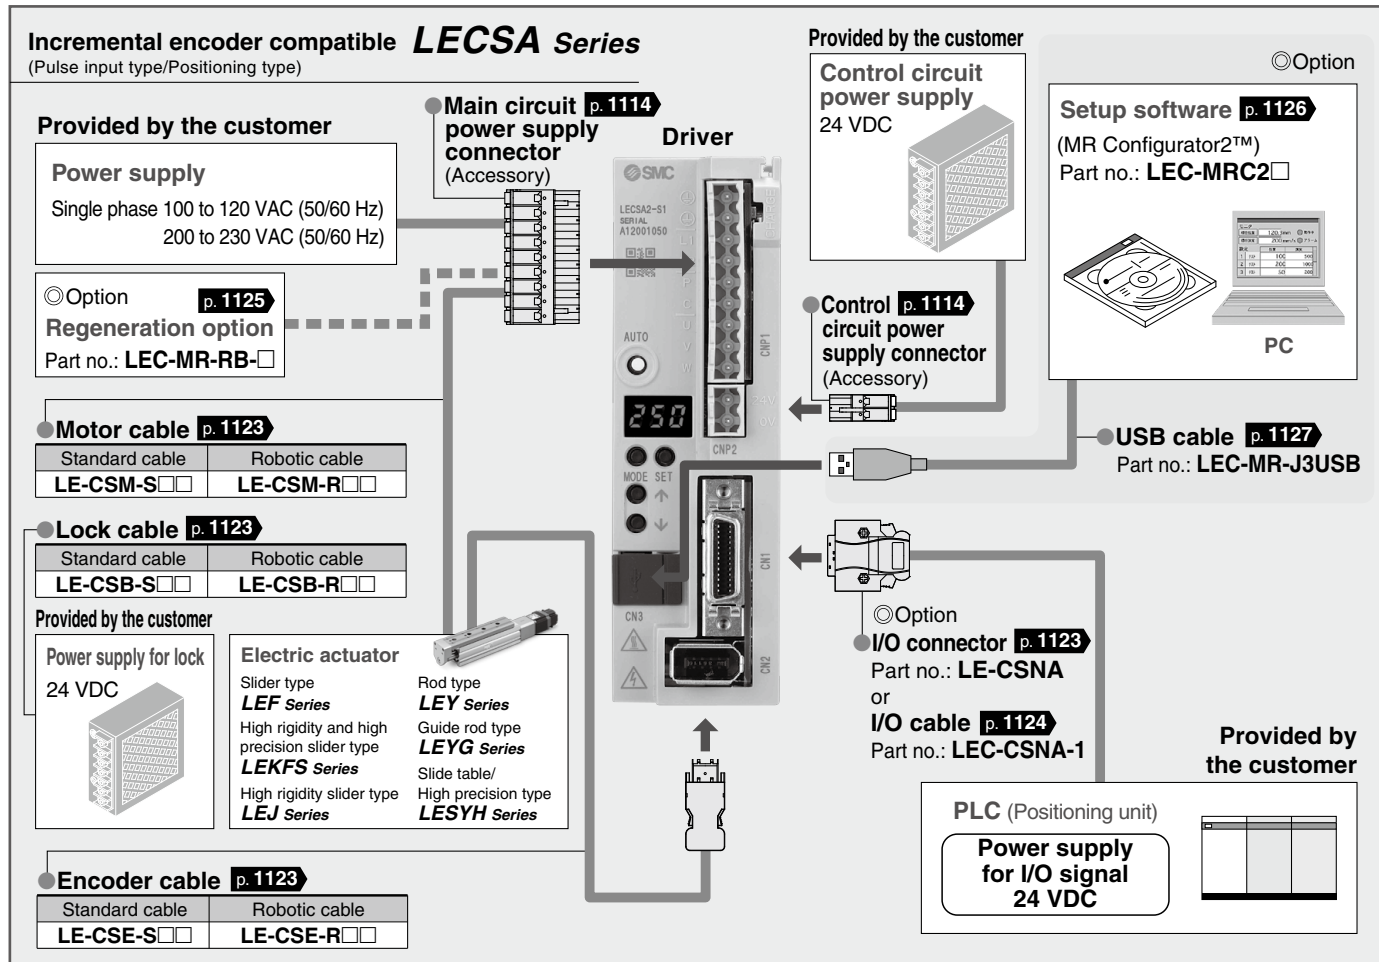



# System Construction

## Absolute encoder compatible **LECSA/LECS□-T Series**

(CC-Link direct input type)

### Provided by the customer

#### Power supply

Single phase 200 to 230 VAC (50/60 Hz)  
Three phase 200 to 230 VAC (50/60 Hz)

◎ Option

Regeneration option p. 1125

Part no.: LEC-MR-RB-□

#### Motor cable p. 1123

Standard cable	Robotic cable
LE-CSM-S□□	LE-CSM-R□□

#### Lock cable p. 1123

Standard cable	Robotic cable
LE-CSB-S□□	LE-CSB-R□□

### Provided by the customer

#### Power supply for lock

24 VDC

#### Electric actuator

Slider type  
**LEF Series**  
High rigidity and high precision slider type  
**LEKFS Series**  
High rigidity slider type  
**LEJ Series**  
Rod type  
**LEY Series**  
Rod type/Dust-tight/Water-jet-proof [IP69K Equivalent]  
**HF2A-LEY Series**  
Guide rod type  
**LEYG Series**  
Slide table/High precision type  
**LESYH Series**

#### Encoder cable p. 1123

Standard cable	Robotic cable
LE-CSE-S□□	LE-CSE-R□□

● Main circuit p. 1116  
power supply connector  
(Accessory)

● Control p. 1116  
circuit power supply connector  
(Accessory)

● Motor p. 1116  
connector  
(Accessory)

Battery (Accessory) p. 1127

### Driver

● USB cable p. 1127

Part no.: LEC-MR-J3USB

◎ Option

#### Setup software p. 1126

(MR Configurator2™)  
Part no.: LEC-MRC2□


PC

● RS-422  
communication

CC-Link connector\*1  
(Accessory)

◎ Option

● I/O connector p. 1123

Part no.: LE-CSNA

or


I/O cable p. 1124

Part no.: LEC-CSNA-1

Provided by the customer

PLC (CC-Link master unit)

Power supply  
for I/O signal  
24 VDC



\* The LECSC2-T□ cannot be used with the LEC-MR-SETUP221□. \*1 Product number: K05A50230600 manufactured by Mitsubishi Electric System &amp; Service Co., Ltd.

## Absolute encoder compatible **LECSS-T Series**



### Provided by the customer

#### Power supply

Single phase 200 to 240 VAC (50/60 Hz)  
Three phase 200 to 240 VAC (50/60 Hz)

◎ Option

Regeneration option p. 1125

Part no.: LEC-MR-RB-□

#### Motor cable p. 1123

Standard cable	Robotic cable
LE-CSM-S□□	LE-CSM-R□□

#### Lock cable p. 1123

Standard cable	Robotic cable
LE-CSB-S□□	LE-CSB-R□□

### Provided by the customer

#### Power supply for lock

24 VDC



#### Electric actuator

Slider type  
**LEF Series**  
High rigidity and high precision slider type  
**LEKFS Series**  
Rod type  
**LEY Series**  
Rod type/Dust-tight/Water-jet-proof [IP69K Equivalent]  
**HF2A-LEY Series**  
Guide rod type  
**LEYG Series**  
Slide table/High precision type  
**LESYH Series**



● Main circuit p. 1115  
power supply connector  
(Accessory)

● Control circuit p. 1115  
power supply connector  
(Accessory)

● Motor connector p. 1115  
(Accessory)

● Encoder cable p. 1123

Standard cable	Robotic cable
LE-CSE-S□□	LE-CSE-R□□

### Driver

● USB cable p. 1127

Part no.: LEC-MR-J3USB

◎ Option

#### Setup software p. 1126

(MR Configurator2™)  
Part no.: LEC-MRC2□


PC

CN3

◎ Option

● I/O connector p. 1123

Part no.: LE-CSNS

or

I/O cable p. 1124

Part no.: LEC-CSNS-1

◎ Option

● STO cable (3 m) p. 1127

Part no.: LEC-MR-D05UDL3M

CN1A

CN1B

CN1A

CN1B

CN1A

CN1B

CN1A

CN1B

CN1A

CN1B

CN1A

CN1B

CN1A

CN1B

CN1A

CN1B

CN1A

CN1B


CN1A

CN1B

Provided by the customer

PLC (Positioning unit/Motion controller)

Power supply  
for I/O signal  
24 VDC



\* The LECSS2-T□ cannot be used with the LEC-MR-SETUP221□.

## System Construction

### Absolute encoder compatible *LECSN□-T Series* (Network card type)

#### Provided by the customer

##### Power supply

Single phase 200 to 240 VAC (50/60 Hz)  
Three phase 200 to 240 VAC (50/60 Hz)

##### Option p. 1125

##### Regeneration option

Part no.: **LEC-MR-RB□**

##### Motor cable p. 1123


Standard cable	Robotic cable
<b>LE-CSM-S□□</b>	<b>LE-CSM-R□□</b>

##### Lock cable p. 1123

Standard cable	Robotic cable
<b>LE-CSB-S□□</b>	<b>LE-CSB-R□□</b>

#### Provided by the customer

Power supply for lock  
24 VDC




#### Electric actuator

Slider type <b>LEF Series</b> High rigidity and high precision slider type <b>LEKFS Series</b> High rigidity slider type <b>LEJ Series</b> Rod type <b>LEY Series</b>	Rod type/ Dust-tight/Water-jet-proof [IP69K Equivalent] <b>HF2A-LEY Series</b> Guide rod type <b>LEYG Series</b> Slide table/ High precision type <b>LESYH Series</b>
--	---

##### Encoder cable p. 1123

Standard cable	Robotic cable
<b>LE-CSE-S□□</b>	<b>LE-CSE-R□□</b>

Main circuit power supply connector  
(Accessory)

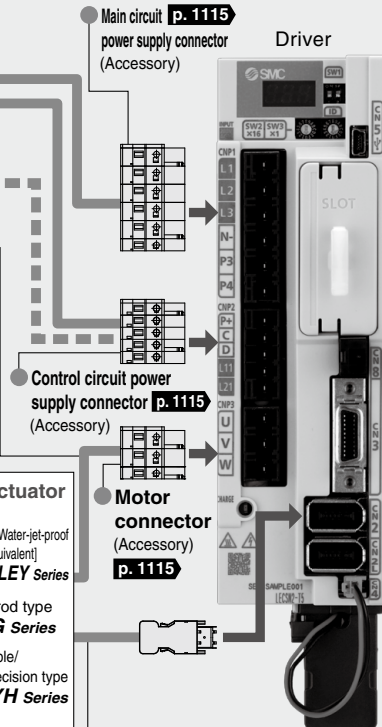

Battery (Accessory) p. 1127

Driver

USB cable p. 1127  
Part no.: **LEC-MR-J3USB**

Option

Setup software  
(MR Configurator2™) p. 1126  
Part no.: **LEC-MRC2□**



PC

Option

Network card p. 1125  
Part no.: **LEC-S-N□**

Option

STO cable (3 m) p. 1127  
Part no.: **LEC-MR-D05UDL3M**




Option

I/O connector p. 1123  
Part no.: **LE-CSNS**  
or  
I/O cable p. 1124  
Part no.: **LEC-CSNS-1**

Provided by the customer

PLC



Power supply  
for I/O signal  
24 VDC



\* The LECSN□-T cannot be used with the LEC-MR-SETUP221□.



## System Construction

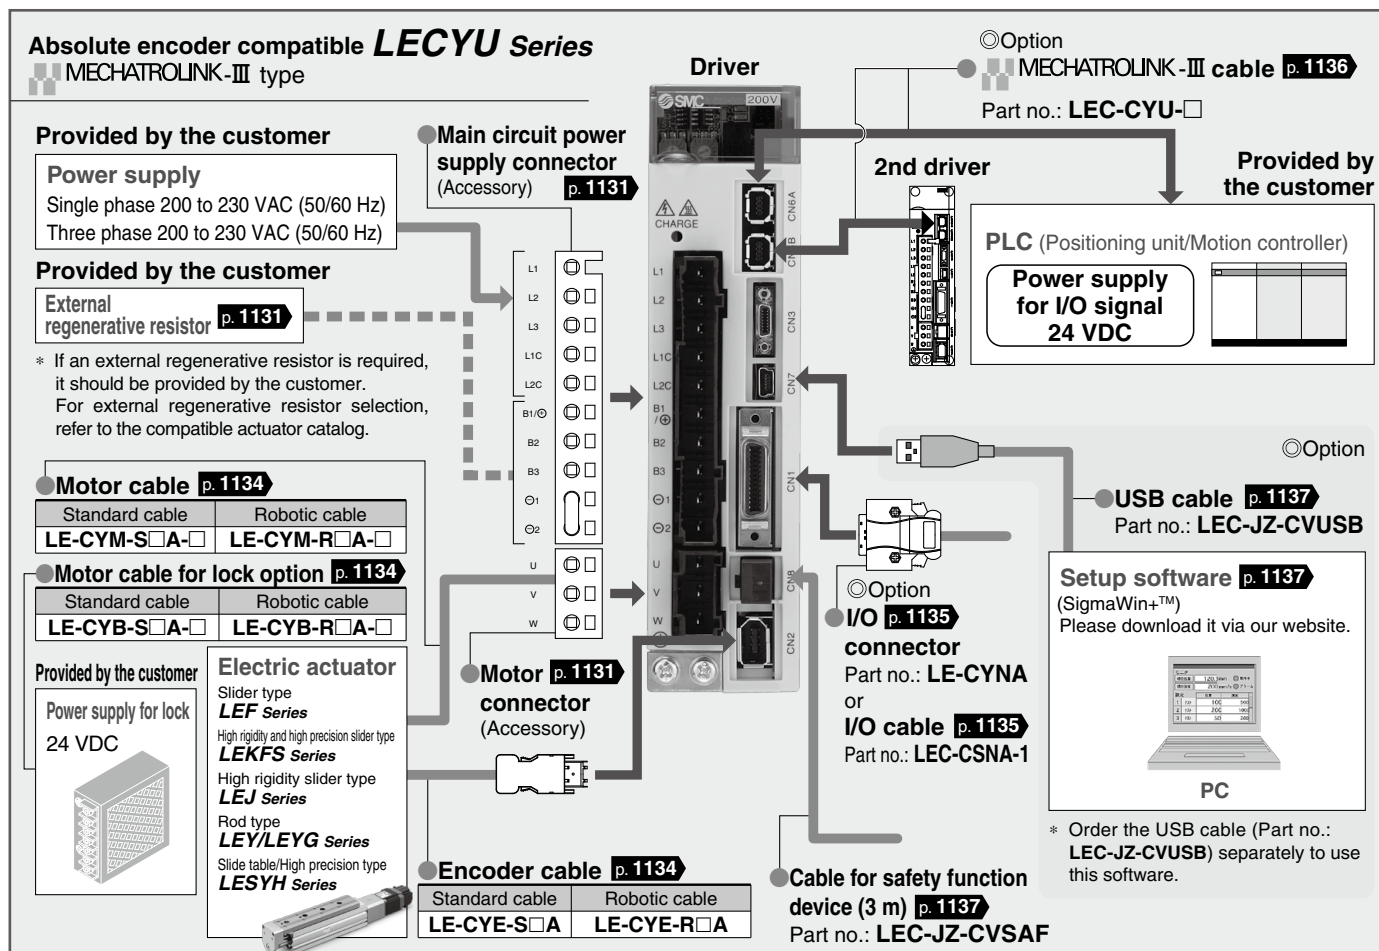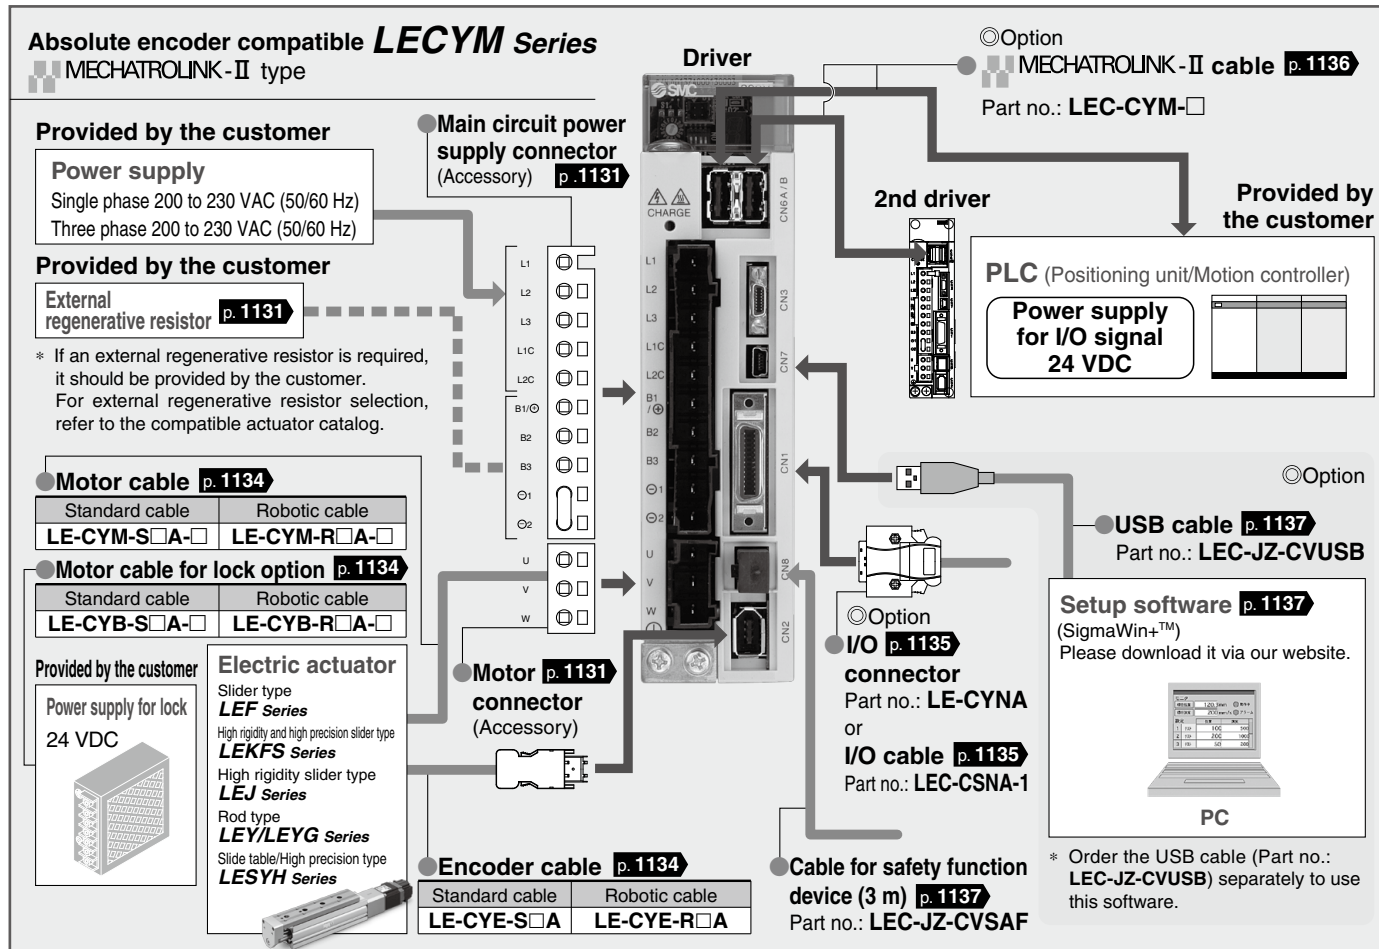



# AC Servo Motor Driver

## LECSA/LECS□-T Series

	LECSA	LECS□-T
Power supply voltage	100 to 120 VAC 200 to 230 VAC	200 to 240 VAC (LECS□-T series: 200 to 230 VAC)
Motor capacity	100/200/400 W	100/200/400/750 W

### Incremental Type

#### LECSA Series (Pulse input type/Positioning type)

- Up to 7 positioning points by point table
- Input type: Pulse input
- Control encoder: Incremental 17-bit encoder (Resolution: 131072 p/rev)
- Parallel input: 6 inputs  
output: 4 outputs



### Absolute Type

#### LECSB-T Series (Pulse input type/Positioning type)

- Positioning by up to 255 point tables
- Input type: Pulse input (Sink (NPN) type interface/Source (PNP) type interface)
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)
- STO (Safe Torque Off) safety function available
- Parallel input: 10 inputs  
output: 6 outputs




#### LECSC-T Series (CC-Link direct input type)

- Position data/speed data setting and operation start/stop
- Positioning by up to 255 point tables (when 2 stations are occupied)
- Up to 32 drivers can be connected (when 2 stations are occupied) with CC-Link communication.
- Applicable Fieldbus protocol: CC-Link (Ver. 1.10, Max. communication speed: 10 Mbps)
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)

CC-Link



#### LECSS-T Series (SSCNET III/H type)

- Applicable Fieldbus protocol:  (High-speed optical communication, max. bidirectional communication speed: 150 Mbps)
- Bidirectional communication speed: 3 times
- SSCNET III/H and SSCNET III products are compatible.
- Improved noise resistance
- STO (Safe Torque Off) safety function available
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)

 SSCNET III/H  
SERVO SYSTEM CONTROLLER NETWORK



#### LECSN□-T Series (Network card type)

- Supports 3 types of network card (EtherCAT, EtherNet/IP™, and PROFINET)
- STO (Safe Torque Off) safety function available
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)



# AC Servo Motor Driver


**LECY**□ *Series*

Power supply voltage 200 to 230 VAC

Motor capacity 100/200/400 W

Absolute Type


## **LECYM Series** (MECHATROLINK-II type)

- Applicable Fieldbus protocol:  MECHATROLINK-II
- Number of connectable drivers: 30 units (Transmission distance: Max. 50 m in total)
- Max. transmission speed: 10 Mbps
- Min. transmission cycle: 250  $\mu$ s
- Control encoder: Absolute 20-bit encoder (Resolution: 1048576 p/rev)
- STO (Safe Torque Off) safety function available
- Compliant with the SEMI F47 Standard (Torque limit for low DC power supply voltage for main circuit)

 **MECHATROLINK-II**



## **LECYU Series** (MECHATROLINK-III type)

- Applicable Fieldbus protocol:  MECHATROLINK-III
- Number of connectable drivers: 62 units (Transmission distance: Max. 75 m between stations)
- Max. transmission speed: 100 Mbps
- Min. transmission cycle: 125  $\mu$ s
- Control encoder: Absolute 20-bit encoder (Resolution: 1048576 p/rev)
- STO (Safe Torque Off) safety function available
- Compliant with the SEMI F47 Standard (Torque limit for low DC power supply voltage for main circuit)

 **MECHATROLINK-III**



# CONTENTS

## AC Servo Motor


### Incremental Type/Absolute Type **LECSA/LECS□-T Series**



How to Order .....	p. 1109
Dimensions .....	p. 1110
Specifications .....	p. 1112
Power Supply Wiring Example .....	p. 1114
Control Signal Wiring Example .....	p. 1117
Options .....	p. 1123

## AC Servo Motor

### MECHATROLINK Compatible Absolute Type **LECY□ Series**

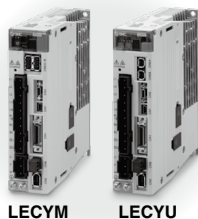

How to Order .....	p. 1128
Dimensions .....	p. 1128
Specifications .....	p. 1129
Power Supply Wiring Example .....	p. 1131
Control Signal Wiring Example .....	p. 1132
Options .....	p. 1134

Specific Product Precautions .....	p. 1138
------------------------------------	---------

Compatible actuators

LEF LEJ LEY  
LESYH LEKFS HF2A  
-LEY

# AC Servo Motor Driver

## Incremental Type

**LECSA Series** (Pulse Input Type/Positioning Type)

## Absolute Type

**LECSB-T** (Pulse Input Type/Positioning Type)/**LECSC-T** (CC-Link Direct Input Type)

**LECSN□-T** (Network Card Type)/**LECSS-T** (SSCNETⅢ/H Type) **Series**



### How to Order

#### For LECSA

**LECSA 1-S1**

##### Driver type

<b>A</b>	Pulse input type/Positioning type (For incremental encoder)
----------	--

##### Power supply voltage

<b>1</b>	100 to 120 VAC, 50/60 Hz
<b>2</b>	200 to 230 VAC, 50/60 Hz

##### Compatible motor type

Symbol	Type	Capacity	Encoder
<b>S1</b>	AC servo motor (S2*1)	100 W	Incremental
<b>S3</b>	AC servo motor (S3*1)	200 W	
<b>S4</b>	AC servo motor (S4*1)*2	400 W	

\*1 The symbol shows the motor type (actuator).

\*2 Only available for power supply voltage "200 to 230 VAC"



- \* If an I/O connector is required, order the part number "LE-CSNA" separately.
- \* If an I/O cable is required, order the part number "LEC-CSNA-1" separately.

#### For LECSB-T/LECSC-T/LECSS-T

**LECSB 2-T5**

##### Driver type

<b>B</b>	Pulse input type/Positioning type (For absolute encoder)
<b>C</b>	CC-Link direct input type (For absolute encoder)
<b>S</b>	SSCNETⅢ/H type (For absolute encoder)

##### Power supply voltage

<b>2</b>	200 to 240 VAC, 50/60 Hz (For LECSB2-T/LECSS2-T) 200 to 230 VAC, 50/60 Hz (For LECSC2-T)
----------	---

##### Compatible motor type

Symbol	Type	Capacity	Encoder
<b>T5</b>	AC servo motor (T6*1)	100 W	Absolute
<b>T7</b>	AC servo motor (T7*1)	200 W	
<b>T8</b>	AC servo motor (T8*1)	400 W	
<b>T9</b>	AC servo motor (T9*1)	750 W	

\*1 The symbol shows the motor type (actuator).



- \* If an I/O connector is required, order the part number "LE-CSN□" separately.
  - \* If an I/O cable is required, order the part number "LEC-CSN□-1" separately.
- (Since the electric actuator will not operate without forced stop (EM2) wiring when using the LECSB-T in any mode other than positioning mode, an I/O connector or an I/O cable is required.)

#### For LECSND-T

**LECSND 2-T7-9**

##### Driver type

<b>ND</b>	Network card type (For absolute encoder)
-----------	---

##### Power supply voltage

<b>2</b>	200 to 240 VAC, 50/60 Hz
----------	--------------------------

##### Compatible motor type

Symbol	Type	Capacity	Encoder
<b>T7</b>	AC servo motor (T7*1)	200 W	Absolute
<b>T8</b>	AC servo motor (T8*1)	400 W	
<b>T9</b>	AC servo motor (T9*1)	750 W	

\*1 The symbol shows the motor type (actuator).

##### Network card type\*1

<b>Nil</b>	Without network card
<b>E</b>	EtherCAT
<b>9</b>	EtherNet/IP™
<b>P</b>	PROFINET

\*1 Only the "Without network card" option is UL compliant.



- \* If an I/O connector is required, order the part number "LE-CSNS" separately.
- \* If an I/O cable is required, order the part number "LEC-CSNS-1" separately.

## How to Order

### For LECSN-T

**LECS N 2 - T5 - 9**

Driver type●

<b>N</b>	Network card type (For absolute encoder)
----------	---

Power supply voltage●

<b>2</b>	200 to 240 VAC, 50/60 Hz
----------	--------------------------

Compatible motor type●

Symbol	Type	Capacity	Encoder
<b>T5</b>	AC servo motor (T6*1)	100 W	Absolute

\*1 The symbol shows the motor type (actuator).

● Network card type\*1

<b>Nil</b>	Without network card
<b>E</b>	EtherCAT
<b>9</b>	EtherNet/IP™
<b>P</b>	PROFINET

\*1 Only the "Without network card" option is UL compliant.



LECSN-T

- \* If an I/O connector is required, order the part number "LE-CSNS" separately.
- \* If an I/O cable is required, order the part number "LEC-CSNS-1" separately.







## Dimensions

### LECSA□

For LECSA□-S1, S3

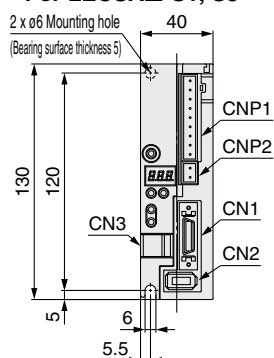


For LECSA□-S4

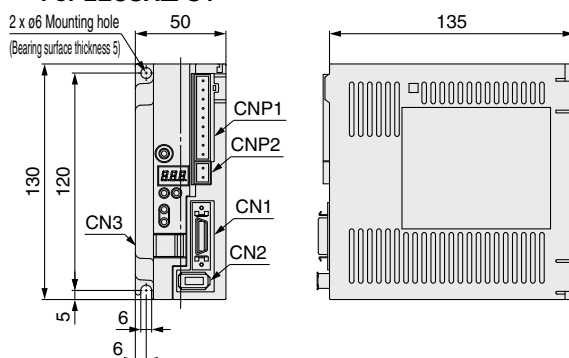

Connector name	Description
<b>CN1</b>	I/O signal connector
<b>CN2</b>	Encoder connector
<b>CN3</b>	USB communication connector
<b>CNP1</b>	Main circuit power supply connector
<b>CNP2</b>	Control circuit power supply connector

### LECSB2-T□

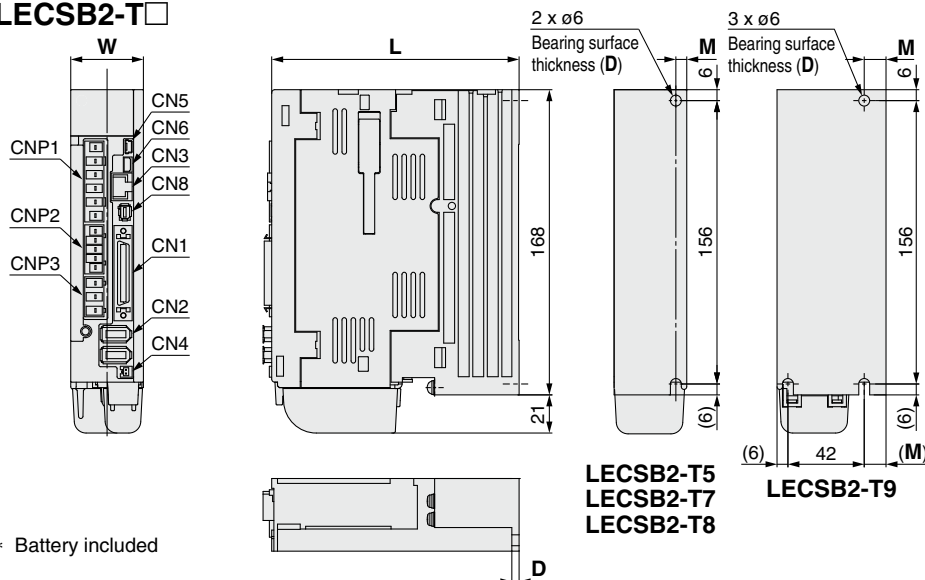


Connector name	Description
<b>CN1</b>	I/O signal connector
<b>CN2</b>	Encoder connector
<b>CN3</b>	RS-422 communication connector
<b>CN4</b>	Battery connector
<b>CN5</b>	USB communication connector
<b>CN6</b>	Analog monitor connector
<b>CN8</b>	STO input signal connector
<b>CNP1</b>	Main circuit power supply connector
<b>CNP2</b>	Control circuit power supply connector
<b>CNP3</b>	Servo motor power connector

Dimensions [mm]				
Model	W	L	D	M
<b>LECSB2-T5</b>	40	135	4	6
<b>LECSB2-T7</b>		170	5	
<b>LECSB2-T8</b>		185	6	
<b>LECSB2-T9</b>	60	185	6	12

\* Battery included

### LECS2-T□

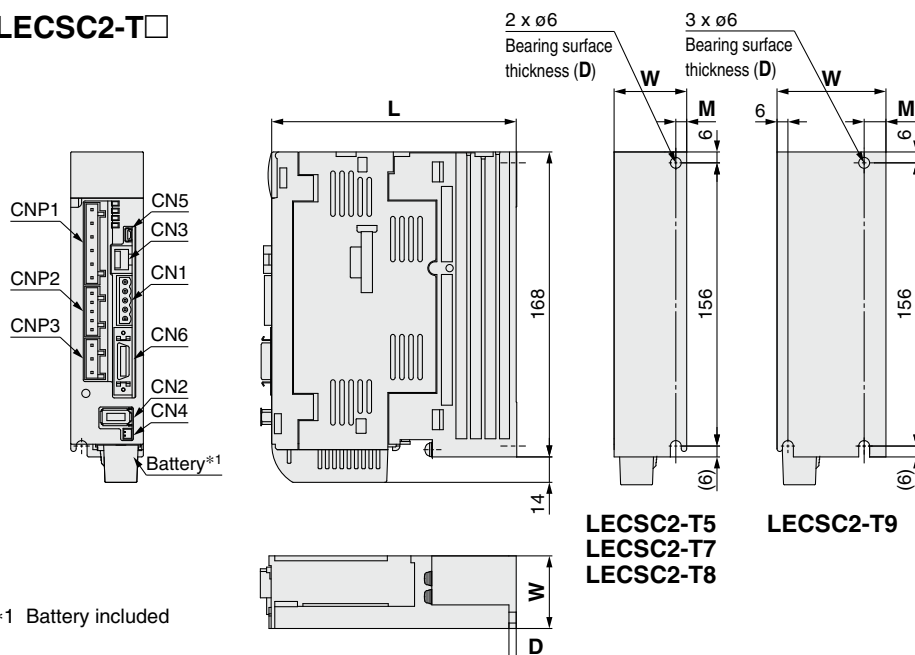

Connector name	Description
<b>CN1</b>	CC-Link connector
<b>CN2</b>	Encoder connector
<b>CN3</b>	RS-422 communication connector
<b>CN4</b>	Battery connector
<b>CN5</b>	USB communication connector
<b>CN6</b>	I/O signal connector
<b>CNP1</b>	Main circuit power supply connector
<b>CNP2</b>	Control circuit power supply connector
<b>CNP3</b>	Servo motor power connector


Dimensions [mm]				
Model	W	L	D	M
<b>LECS2-T5</b>	40	135	4	6
<b>LECS2-T7</b>		170	5	
<b>LECS2-T8</b>		185	6	
<b>LECS2-T9</b>	60	185	6	12

\*1 Battery included

# LECSA/LECS□-T Series

## Dimensions


### LECSS2-T□

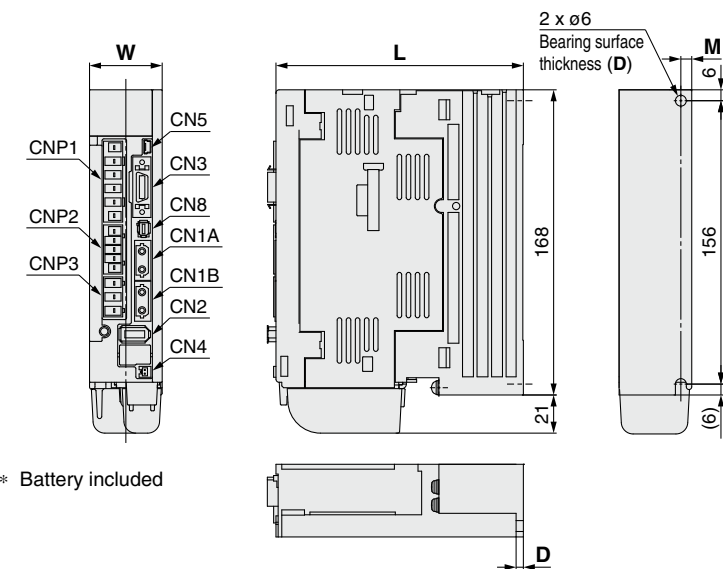

Connector name	Description
CN1A	Front axis connector for SSCNET III/H
CN1B	Rear axis connector for SSCNET III/H
CN2	Encoder connector
CN3	I/O signal connector
CN4	Battery connector
CN5	USB communication connector
CN8	STO input signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

Dimensions [mm]				
Model	W	L	D	M
LECSS2-T5	40	135	4	6
LECSS2-T7		170	5	
LECSS2-T8	60	185	6	12
LECSS2-T9		185	6	

### LECSN□-T□

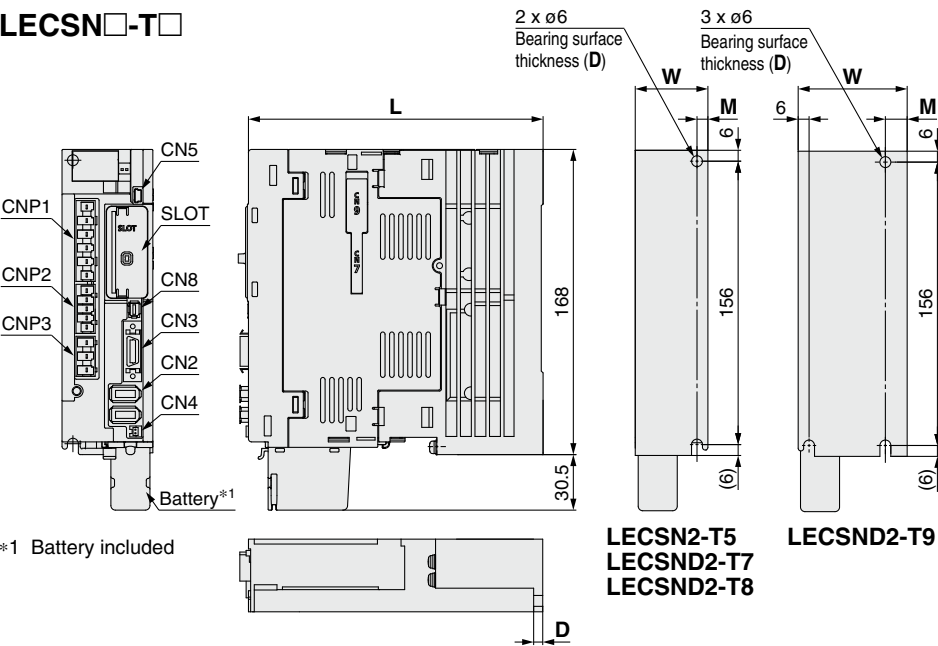

Connector name	Description
CN3	I/O signal connector
CN2	Encoder connector
CN4	Battery connector
CN5	USB communication connector
CN8	STO input signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector
SLOT	Network card slot

Dimensions [mm]				
Model	W	L	D	M
LECSN2-T5	50	161	5	6
LECSND2-T7		161	5	
LECSND2-T8	60	191	6	12
LECSND2-T9		191	6	

## Specifications

### LECSA Series

Model		LECSA1-S1	LECSA1-S3	LECSA2-S1	LECSA2-S3	LECSA2-S4
Rated power supply capacity [kVA]		0.3	0.5	0.3	0.5	0.9
Max. power supply capacity [kVA]		0.9	1.5	0.9	1.5	2.7
Compatible motor capacity [W]		100	200	100	200	400
Compatible encoder		Incremental 17-bit encoder (Resolution: 131072 p/rev)				
Main power supply	Power voltage [V]	Single phase 100 to 120 VAC (50/60 Hz)		Single phase 200 to 230 VAC (50/60 Hz)		
	Allowable voltage fluctuation [V]	Single phase 85 to 132 VAC		Single phase 170 to 253 VAC		
	Rated current [A]	3.0	5.0	1.5	2.4	4.5
Control power supply	Control power supply voltage [V]	24 VDC				
	Allowable voltage fluctuation [V]	21.6 to 26.4 VDC				
	Rated current [A]	0.5				
Parallel input		6 inputs				
Parallel output		4 outputs				
Max. input pulse frequency [pps]		1 M (for differential receiver), 200 k (for open collector)*2				
Function	In-position range setting [pulse]	0 to ±65535 (Command pulse unit)				
	Error excessive	±3 rotations				
	Torque limit	Parameter setting				
	Communication	USB communication				
	Point table	Up to 7 points				
Operating temperature range [°C]		0 to 55 (No freezing)				
Operating humidity range [%RH]		90 or less (No condensation)				
Storage temperature range [°C]		-20 to 65 (No freezing)				
Storage humidity range [%RH]		90 or less (No condensation)				
Enclosure		IP20				
Insulation resistance [MΩ]		Between the housing and SG: 10 (500 VDC)				
Weight [g]		600				700

### LECSB-T Series

Model		LECSB2-T5	LECSB2-T7	LECSB2-T8	LECSB2-T9
Rated power supply capacity [kVA]		0.3	0.5	0.9	1.3
Max. power supply capacity [kVA]		1.05	1.75	3.15	4.55
Compatible motor capacity [W]		100	200	400	750
Compatible encoder		Absolute 22-bit encoder (Resolution: 4194304 p/rev)			
Main power supply	Power voltage [V]*3	Three phase 200 to 240 VAC (50/60 Hz), Single phase 200 to 240 VAC (50/60 Hz)			
	Allowable voltage fluctuation [V]*3	Three phase 170 to 264 VAC (50/60 Hz), Single phase 170 to 264 VAC (50/60 Hz)			
	Rated current [A]	0.9	1.5	2.6	3.8
Control power supply	Control power supply voltage [V]	Single phase 200 to 240 VAC (50/60 Hz)			
	Allowable voltage fluctuation [V]	Single phase 170 to 264 VAC			
	Rated current [A]	0.2			
Parallel input		10 inputs			
Parallel output		6 outputs			
Max. input pulse frequency [pps]		4 M (for differential receiver), 200 k (for open collector)			
Function	In-position range setting [pulse]	0 to ±65535 (Command pulse unit)			
	Error excessive	±3 rotations			
	Torque limit	Parameter setting or external analog input setting (0 to 10 VDC)			
	Communication	USB communication, RS422 communication*1			
	Point table	Up to 255 points			
		Pushing operation			
		Point table no. input method, Up to 127 points			
Operating temperature range [°C]		0 to 55 (No freezing)			
Operating humidity range [%RH]		90 or less (No condensation)			
Storage temperature range [°C]		-20 to 65 (No freezing)			
Storage humidity range [%RH]		90 or less (No condensation)			
Enclosure		IP20			
Insulation resistance [MΩ]		Between the housing and SG: 10 (500 VDC)			
Safety function		STO (IEC/EN 61800-5-2)			
Safety standards*2		EN ISO 13849-1 Category 3 PL e, IEC 61508 SIL 3, EN 62061 SIL CL3, EN 61800-5-2			
Weight [g]		800	1000	1400	

\*1 USB communication and RS422 communication cannot be performed at the same time.

\*2 The safety level depends on the set value of the driver parameter [Pr. PF18 STO diagnosis error detection time] and whether STO input diagnosis by TOFB output is performed or not. Refer to the LECSB-T operation manual for details.

\*3 Three phase 400 VAC is not supported.

# LECSA/LECS□-T Series

## Specifications

### LECSC-T Series

Model		LECSC2-T5	LECSC2-T7	LECSC2-T8	LECSC2-T9
Rated power supply capacity [kVA]		0.3	0.5	0.9	1.3
Max. power supply capacity [kVA]		1.05	1.75	3.15	4.55
Compatible motor capacity [W]		100	200	400	750
Compatible encoder		Absolute 18-bit encoder (Resolution: 262144 p/rev)			
Main power supply	Power voltage [V]*3	Three phase 200 to 230 VAC (50/60 Hz), Single phase 200 to 230 VAC (50/60 Hz)			
	Allowable voltage fluctuation [V]*3	Three phase 170 to 253 VAC, Single phase 170 to 253 VAC			
	Rated current [A]	0.9	1.5	2.6	3.8
Control power supply	Control power supply voltage [V]	Single phase 200 to 230 VAC (50/60 Hz)			
	Allowable voltage fluctuation [V]	Single phase 170 to 253 VAC			
	Rated current [A]	0.2			
Communication specifications	Applicable Fieldbus protocol (Version)		CC-Link communication (Ver. 1.10)		
	Connection cable		CC-Link Ver. 1.10 compliant cable (Shielded 3-core twisted pair cable)*1		
	Remote station number		1 to 64		
	Cable length	Communication speed [bps]/ Maximum overall cable length [m]	16 k/1200, 625 k/900, 2.5 M/400, 5 M/160, 10 M/100		
		Cable length between stations [m]	0.2 or more		
	I/O occupation area (Inputs/Outputs)		1 station occupied (Remote I/O 32 points/32 points)/(Remote register 4 words/4 words) 2 stations occupied (Remote I/O 64 points/64 points)/(Remote register 8 words/8 words)		
	Number of connectable drivers		Up to 42 (when 1 station is occupied by 1 driver), Up to 32 (when 2 stations are occupied by 1 driver), when there are only remote device stations.		
Command method	Remote register input		Available with CC-Link communication (2 stations occupied)		
	Point table No. input		Available with CC-Link communication, RS422 communication CC-Link communication (1 station occupied): 31 points, CC-Link communication (2 stations occupied): 255 points RS422 communication: 255 points		
	Indexer positioning input		Available with CC-Link communication CC-Link communication (1 station occupied): 31 points, CC-Link communication (2 stations occupied): 255 points		
	Communication function		USB communication, RS-422 communication*2		
Operating temperature range [°C]		0 to 55 (No freezing)			
Operating humidity range [%RH]		90 or less (No condensation)			
Storage temperature range [°C]		-20 to 65 (No freezing)			
Storage humidity range [%RH]		90 or less (No condensation)			
Enclosure		IP00			
Insulation resistance [MΩ]		Between the housing and SG: 10 (500 VDC)			
Weight [g]		800		1000	1400

\*1 If the system comprises of both CC-Link Ver. 1.00 and Ver. 1.10 compliant cables, Ver. 1.00 specifications are applied to the overall cable length and the cable length between stations.

\*2 USB communication and RS422 communication cannot be performed at the same time.

\*3 Three phase 400 VAC is not supported.

### LECSS-T Series

Model		LECSS2-T5	LECSS2-T7	LECSS2-T8	LECSS2-T9
Rated power supply capacity [kVA]		0.3	0.5	0.9	1.3
Max. power supply capacity [kVA]		1.05	1.75	3.15	4.55
Compatible motor capacity [W]		100	200	400	750
Compatible encoder		Absolute 22-bit encoder (Resolution: 4194304 p/rev)			
Main power supply	Power voltage [V]*2	Three phase 200 to 240 VAC (50/60 Hz), Single phase 200 to 240 VAC (50/60 Hz)			
	Allowable voltage fluctuation [V]*2	Three phase 170 to 264 VAC (50/60 Hz), Single phase 170 to 264 VAC (50/60 Hz)			
	Rated current [A]	0.9	1.5	2.6	3.8
Control power supply	Control power supply voltage [V]	Single phase 200 to 240 VAC (50/60 Hz)			
	Allowable voltage fluctuation [V]	Single phase 170 to 264 VAC			
	Rated current [A]	0.2			
Applicable Fieldbus protocol		SSCNET III/H (High-speed optical communication)			
Communication function		USB communication			
Operating temperature range [°C]		0 to 55 (No freezing)			
Operating humidity range [%RH]		90 or less (No condensation)			
Storage temperature range [°C]		-20 to 65 (No freezing)			
Storage humidity range [%RH]		90 or less (No condensation)			
Enclosure		IP20			
Insulation resistance [MΩ]		Between the housing and SG: 10 (500 VDC)			
Safety function		STO (IEC/EN 61800-5-2)			
Safety standards*1		EN ISO 13849-1 Category 3 PL d, EN 61508 SIL 2, EN 62061 SIL CL2, EN 61800-5-2			
Weight [g]		800	1000	1400	

\*1 Refer to the LECSS-T operation manual for details.

\*2 Three phase 400 VAC is not supported.



## Specifications

### LECSN□-T Series

Model		LECSN2-T5	LECSND2-T7	LECSND2-T8	LECSND2-T9
Compatible motor capacity [W]		100	200	400	750
Compatible encoder		Absolute 22-bit encoder (Resolution: 4194304 p/rev)			
Main power supply	Power voltage [V]	Three phase 200 to 240 VAC (50/60 Hz), Single phase 200 to 240 VAC (50/60 Hz)			
	Allowable voltage fluctuation [V]	Three phase 170 to 264 VAC (50/60 Hz), Single phase 170 to 264 VAC (50/60 Hz)			
	Rated current [A]	0.9	1.5	2.6	3.8
Control power supply	Control power supply voltage [V]	Single phase 200 to 240 VAC (50/60 Hz)			
	Allowable voltage fluctuation [V]	Single phase 170 to 264 VAC			
	Rated current [A]	0.2			
Applicable Fieldbus protocol		PROFINET, EtherCAT, EtherNet/IP™			
Function	Communication	USB communication			
	Point table*1	Up to 255 points			
Operating temperature range [°C]		0 to 55 (No freezing)			
Operating humidity range [%RH]		90 or less (No condensation)			
Storage temperature range [°C]		-20 to 65 (No freezing)			
Storage humidity range [%RH]		90 or less (No condensation)			
Enclosure		IP20			
Insulation resistance [MΩ]		Between the housing and SG: 10 (500 VDC)			
Safety function		STO (IEC/EN 61800-5-2)			
Safety standards*2		EN ISO 13849-1 Category 3 PL e, IEC 61508 SIL 3, EN 62061 SIL CL3, EN 61800-5-2			
Weight [g]		1000			1400


\*1 Only supports PROFINET and EtherCAT

\*2 The safety level depends on the set value of the driver parameter [Pr. PF18 STO diagnosis error detection time] and whether STO input diagnosis by TOFB output is performed or not. Refer to the LECSND-T operation manual for details.



## Power Supply Wiring Example: LECSA

LECSA□-□

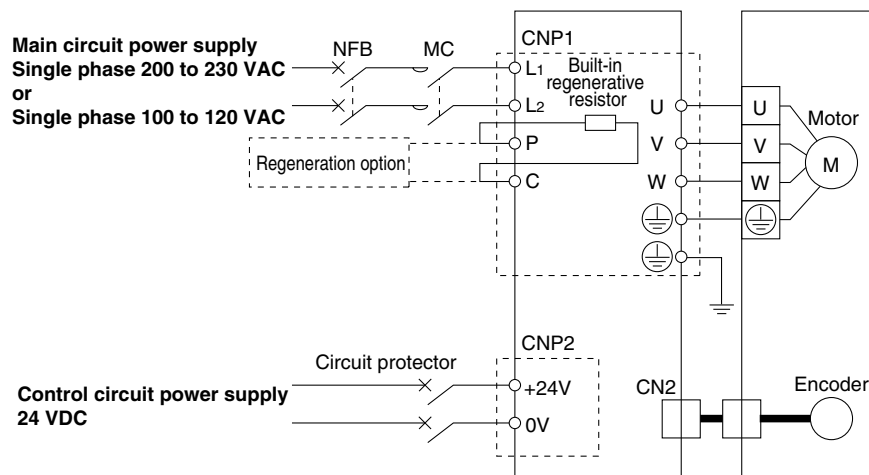


### Main Circuit Power Supply Connector: CNP1 \* Accessory

Terminal name	Function	Details
	Protective earth (PE)	Should be grounded by connecting the servo motor's earth terminal and the control panel's protective earth (PE)
L1	Main circuit power supply	Connect the main circuit power supply. LECSA1: Single phase 100 to 120 VAC, 50/60 Hz LECSA2: Single phase 200 to 230 VAC, 50/60 Hz
L2		
P	Regeneration option	Terminal to connect regeneration option LECSA□-S1: Not connected at time of shipping LECSA□-S3, S4: Connected at time of shipping * If regeneration option is required for "Model Selection," connect to this terminal.
C		
U	Servo motor power (U)	Connect to motor cable (U, V, W).
V	Servo motor power (V)	
W	Servo motor power (W)	

### Control Circuit Power Supply Connector: CNP2 \* Accessory


Terminal name	Function	Details
24V	Control circuit power supply (24 V)	24 V side of the control circuit power supply (24 VDC) supplied to the driver
0V	Control circuit power supply (0 V)	0 V side of the control circuit power supply (24 VDC) supplied to the driver

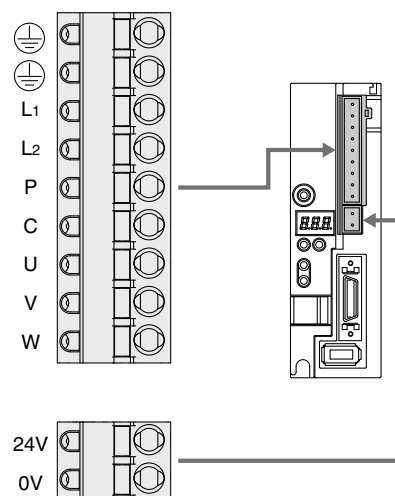


# LECSA/LECS□-T Series

## Power Supply Wiring Example: LECSB2-T□, LECSS2-T□, LECSN□-T□

For single phase 200 VAC

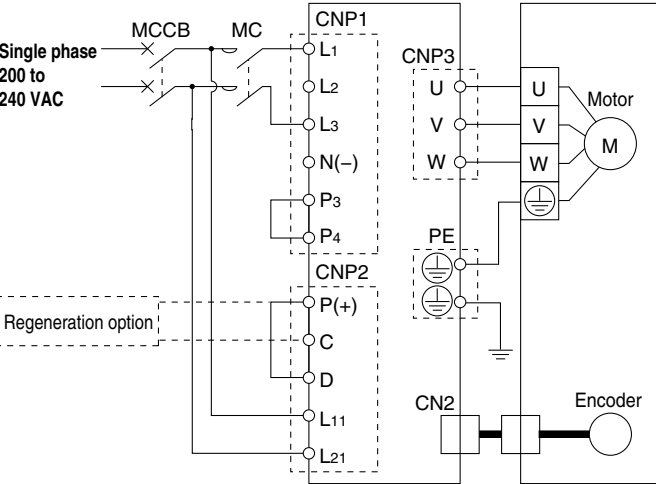

For three phase 200 VAC

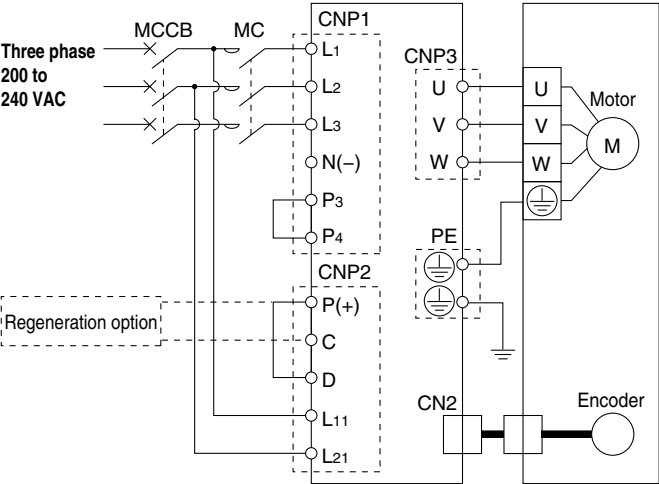

\* For single phase 200 to 240 VAC, power supply should be connected to L1 and L3 terminals, with nothing connected to L2.  
Please note that the wiring locations differ from the LECS□.

### Main Circuit Power Supply Connector: CNP1 \* Accessory


Terminal name	Function	Details
L1	Main circuit power supply	Connect the main circuit power supply. LECSB2-T/LECSS2-T/LECSND2-T: Single phase 200 to 240 VAC, 50/60 Hz Connection terminal: L1, L3 Three phase 200 to 240 VAC, 50/60 Hz Connection terminal: L1, L2, L3
L2		
L3		
N(-)		Do not connect.
P3		Connect between P3 and P4. (Connected at time of shipping)
P4		

### Control Circuit Power Supply Connector: CNP2 \* Accessory

Terminal name	Function	Details
P(+)	Regeneration option	Connect between P(+) and D. (Connected at time of shipping) * If regeneration option is required for "Model Selection," connect to this terminal.
C		
D		
L11	Control circuit power supply	Connect the control circuit power supply. LECSB2-T/LECSS2-T/LECSND2-T: Single phase 200 to 240 VAC, 50/60 Hz Connection terminal: L11, L21
L21		


### Motor Connector: CNP3 \* Accessory

Terminal name	Function	Details
U	Servo motor power (U)	Connect to motor cable (U, V, W).
V	Servo motor power (V)	
W	Servo motor power (W)	

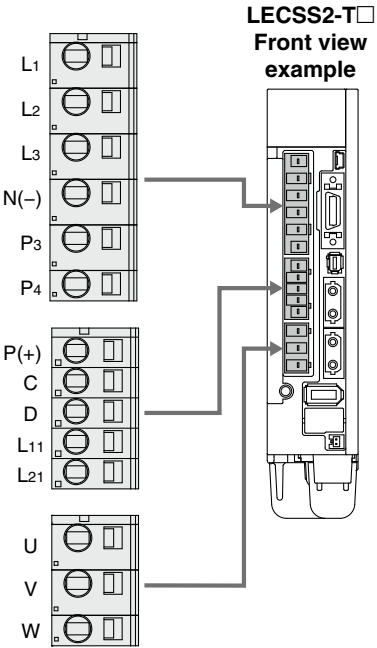


## Power Supply Wiring Example: LECSC2-T□

For single phase 200 VAC

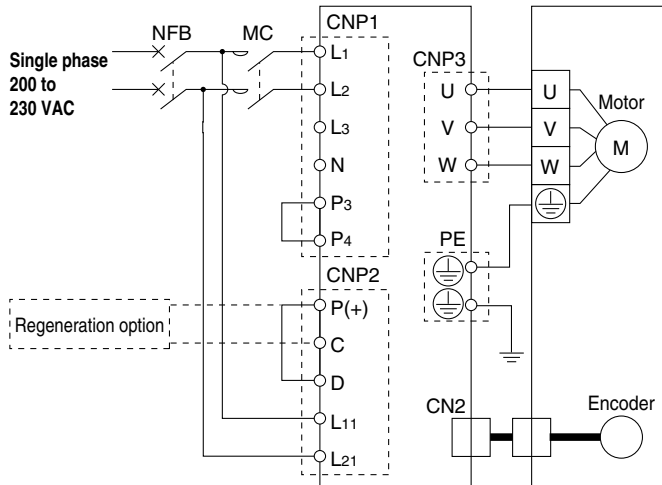

For three phase 200 VAC

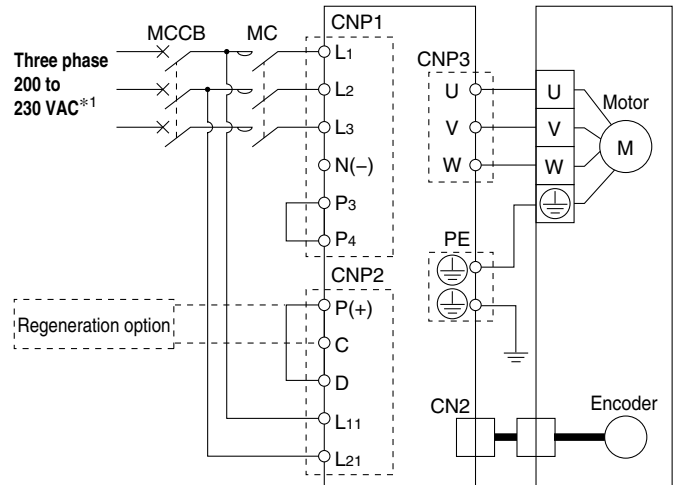

\*1 Three phase 400 VAC is not supported.

\* For single phase 200 to 230 VAC, power supply should be connected to L1 and L2 terminals, with nothing connected to L3.

### Main Circuit Power Supply Connector: CNP1 \* Accessory


Terminal name	Function	Details
L1	Main circuit power supply	Connect the main circuit power supply. LECSA/LECS-T: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2 Three phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2, L3
L2		
L3		
N		Do not connect.
P3		Connect between P3 and P4. (Connected at time of shipping)
P4		

### Control Circuit Power Supply Connector: CNP2 \* Accessory

Terminal name	Function	Details
P(+)	Regeneration option	Connect between P and D. (Connected at time of shipping) * If regeneration option is required for "Model Selection," connect to this terminal.
C		
D		
L11	Control circuit power supply	Connect the control circuit power supply. LECSA/LECS-T: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L11, L21
L21		

### Motor Connector: CNP3 \* Accessory

Terminal name	Function	Details
U	Servo motor power (U)	Connect to motor cable (U, V, W).
V	Servo motor power (V)	
W	Servo motor power (W)	

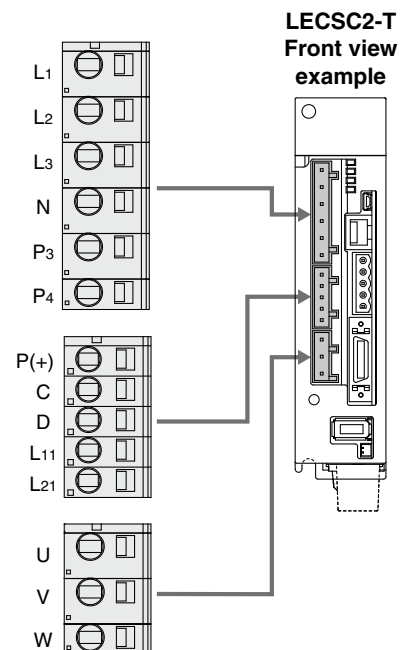





## Control Signal Wiring Example: LECSA

## LECSA-

This wiring example shows connection with a PLC (FX3U-□□MT/ES) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSA series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

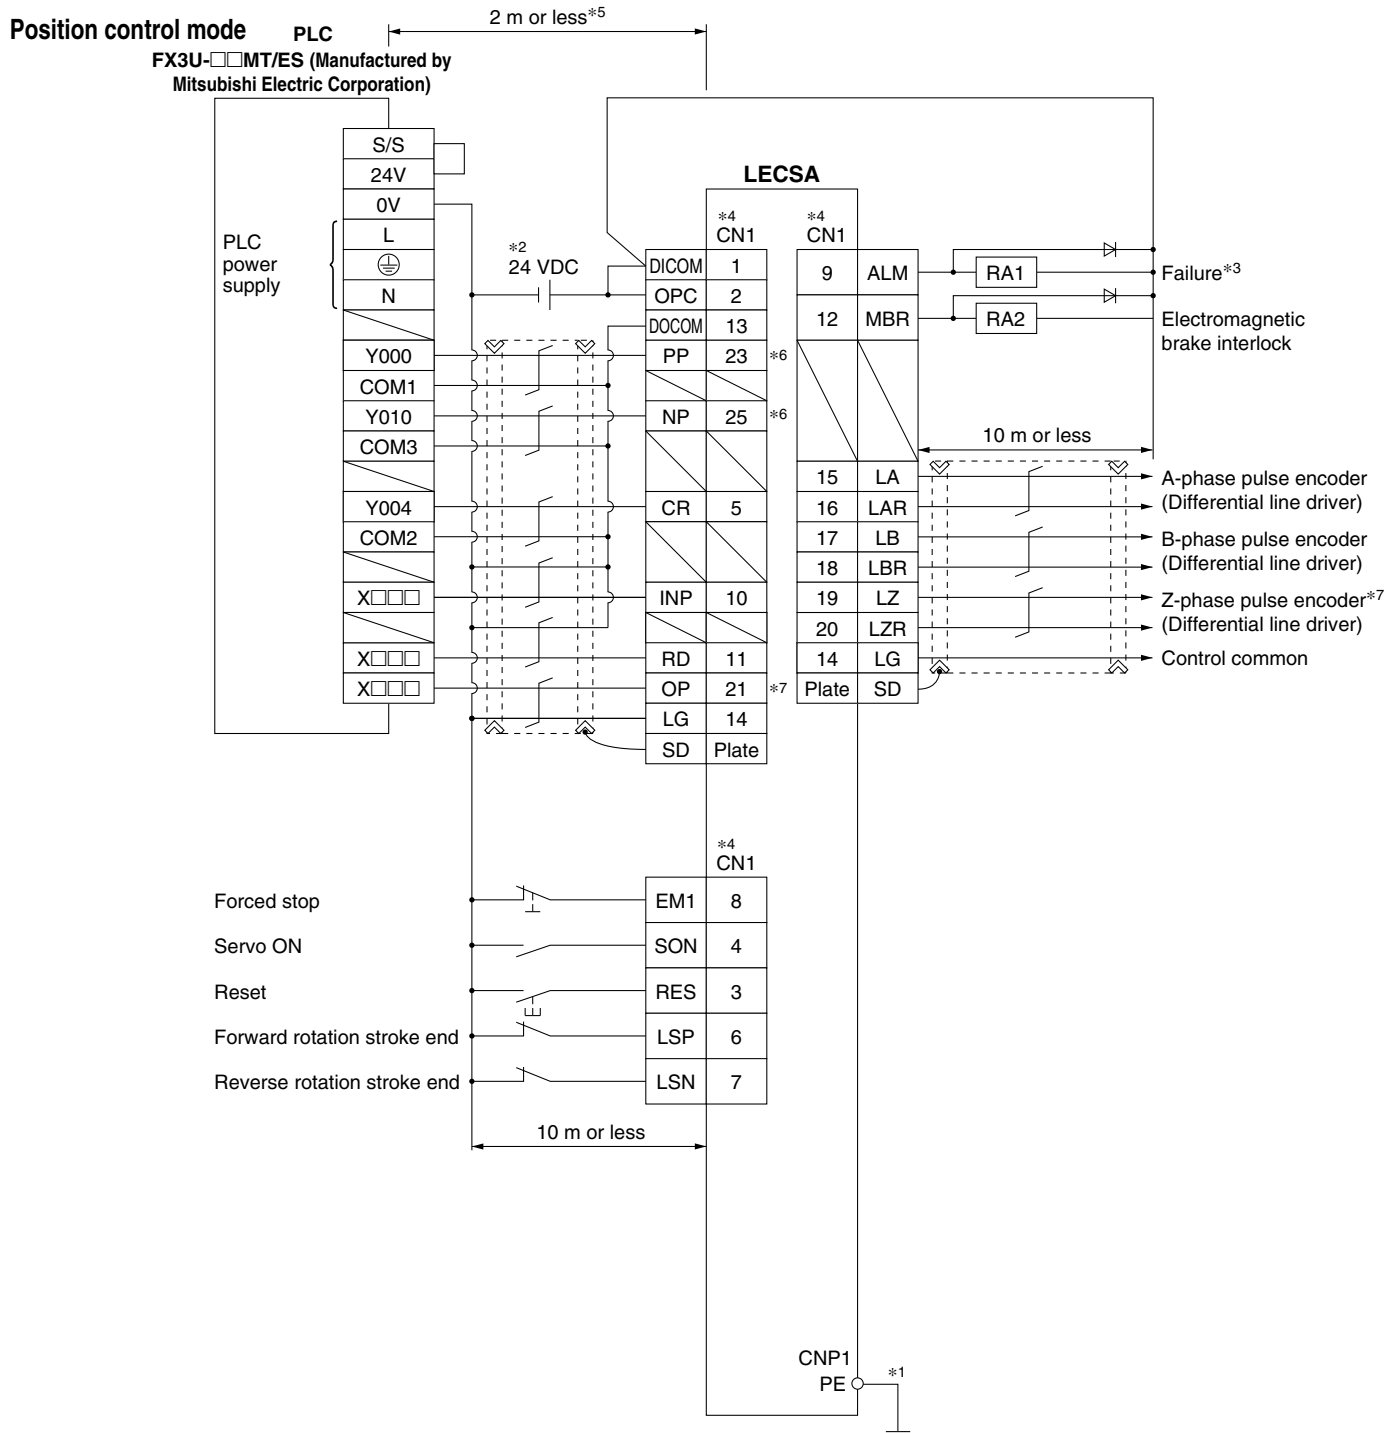

- \*1 For preventing electric shock, be sure to connect the driver main circuit power supply connector (CNP1)'s protective earth (PE) terminal (marked ) to the control panel's protective earth (PE).
- \*2 For interface use, supply 24 VDC  $\pm 10\%$  200 mA using an external source. 200 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity. Refer to the Operation Manual for required current for interface.
- \*3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- \*4 Signals of the same name are connected inside the driver.
- \*5 For command pulse input with an open collector method. When a positioning unit loaded with a differential line driver method is used, it is 10 m or less.
- \*6 If the command pulse input is open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.
- \*7 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.


## Control Signal Wiring Example: LECSA


In this wiring example, the device of the CN1-10 pin in the initial status has been changed to the device shown below. For details on the device and changing method, refer to the LECSA series Operation Manual.

CN1-10: MEND (Travel completion)

### Positioning mode (Point table method)


For sink (NPN) I/O interface

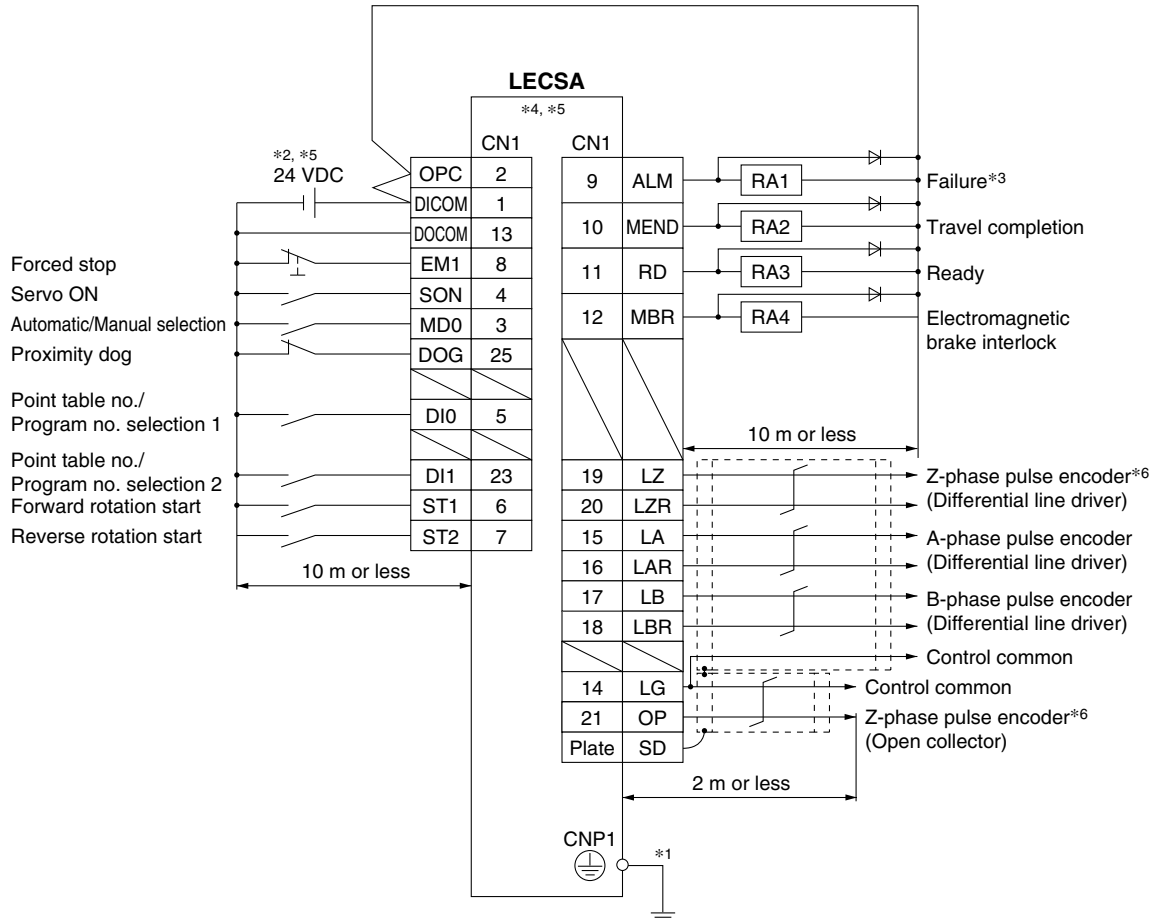

- \*1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked ) to the control panel's protective earth (PE).
- \*2 For interface use, supply 24 VDC  $\pm 10\%$  200 mA using an external source. 200 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- \*3 The failure (ALM) is normally ON.
- \*4 Signals of the same name are normally connected inside the driver.
- \*5 The wiring example is for the sink (NPN) type interface. Refer to the LECSA series Operation Manual for the source (PNP) type interface. Note that the 23 pin and 25 pin cannot be used for the source type interface.
- \*6 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.

# LECSA/LECS□-T Series

## Control Signal Wiring Example: LECS2-T□

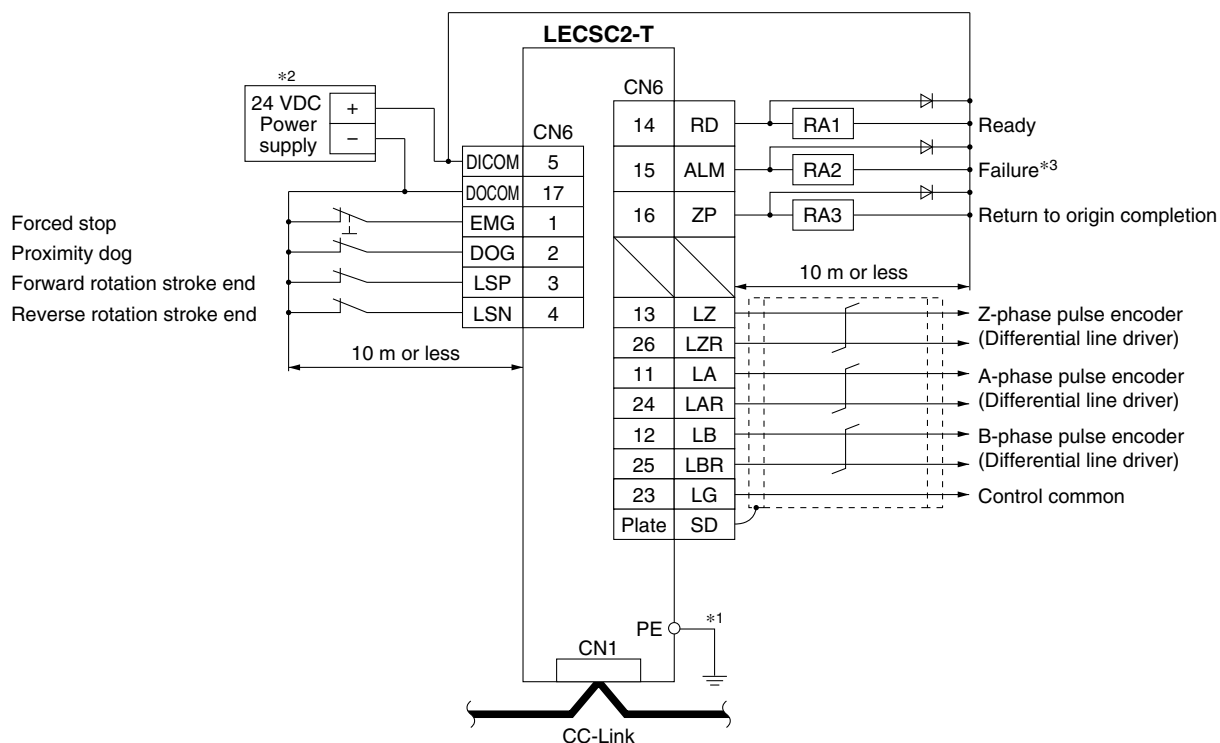

\*1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked  $\oplus$ ) to the control panel's protective earth (PE).


\*2 For interface use, supply 24 VDC  $\pm 10\%$  150 mA using an external source.

\*3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.

## Control Signal Wiring Example: LECSB2-T□

This wiring example shows connection with a positioning unit (QD75D) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSB2-T series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

### Position control mode For sink (NPN) I/O interface

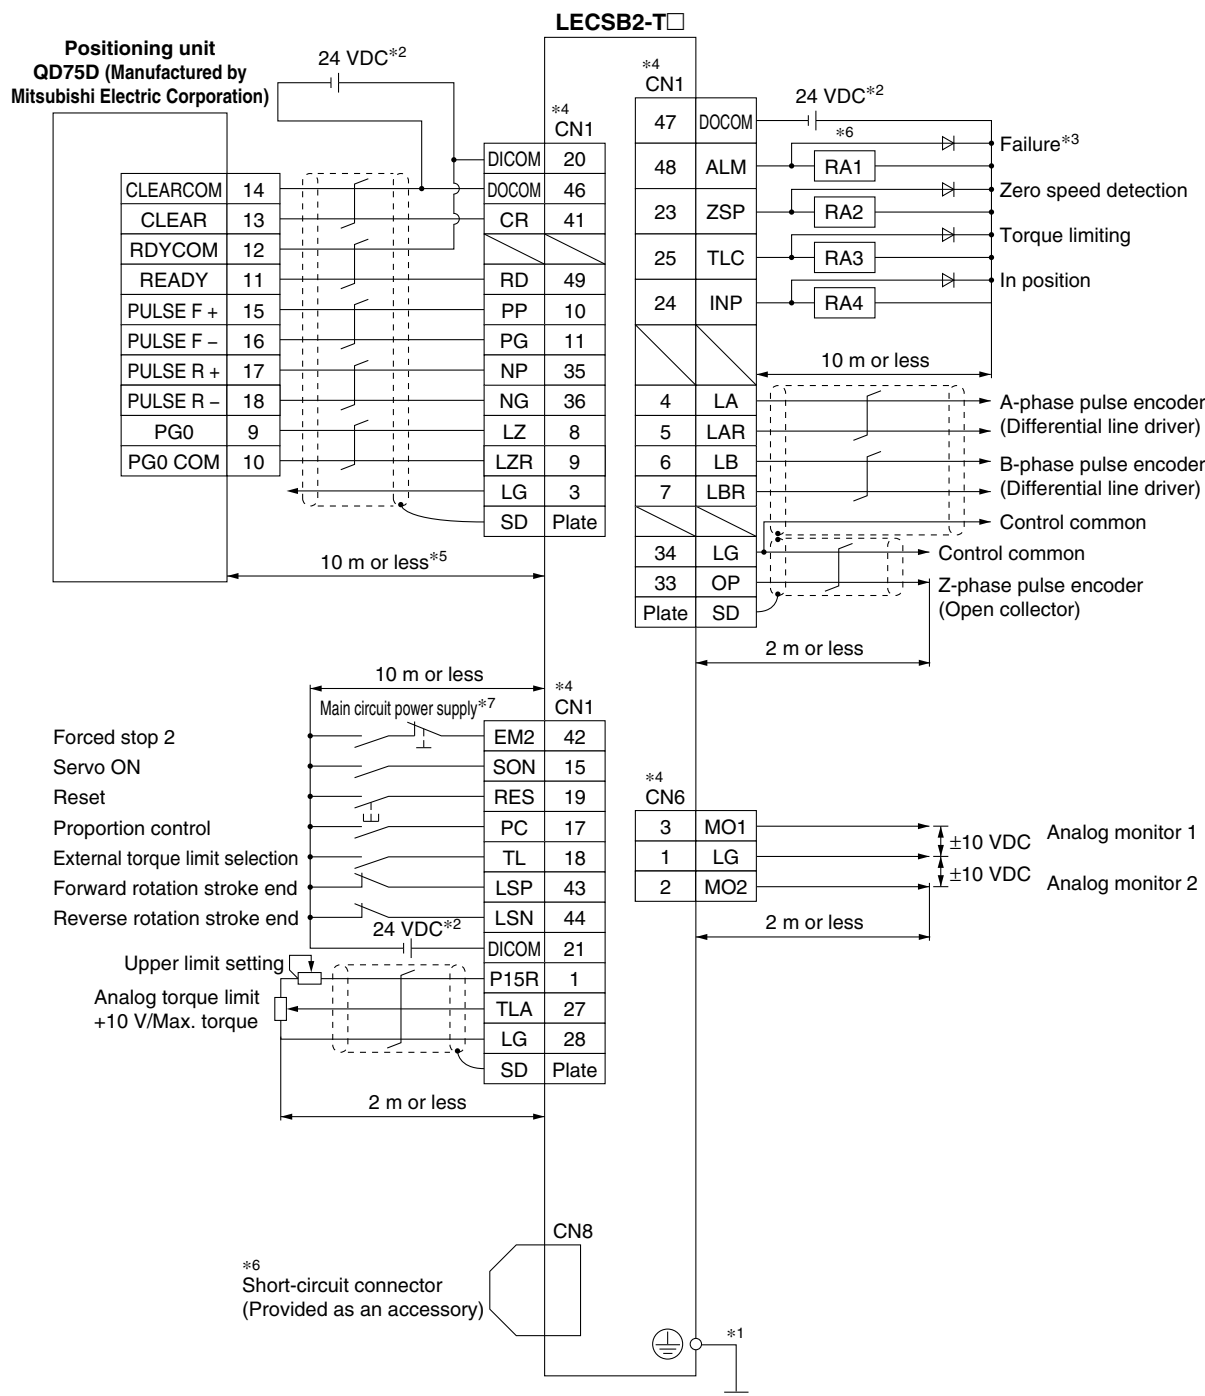

- \*1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked  $\oplus$ ) to the control panel's protective earth (PE).
- \*2 For interface use, supply 24 VDC  $\pm 10\%$  using an external source. Set the total current capacity to 500 mA. 500 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- \*3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- \*4 Signals of the same name are connected inside the driver.
- \*5 For command pulse input with a differential line driver method. For open collector method, it is 2 m or less.
- \*6 When not using the STO function, use the driver with the short-circuit connector (provided as an accessory) inserted.
- \*7 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.


## Control Signal Wiring Example: LECSB2-T□


In this wiring example, the devices of the CN1-22 pin, CN1-23 pin, and CN1-25 pin in the initial status have been changed to the devices shown below. For details on the devices and changing method, refer to the LECSB2-T series Operation Manual.

CN1-22: CPO (Rough match)/CN1-23: ZP (Return to origin completion)/CN1-25: MEND (Travel completion)

### Positioning mode (Point table method)


### For sink (NPN) I/O interface

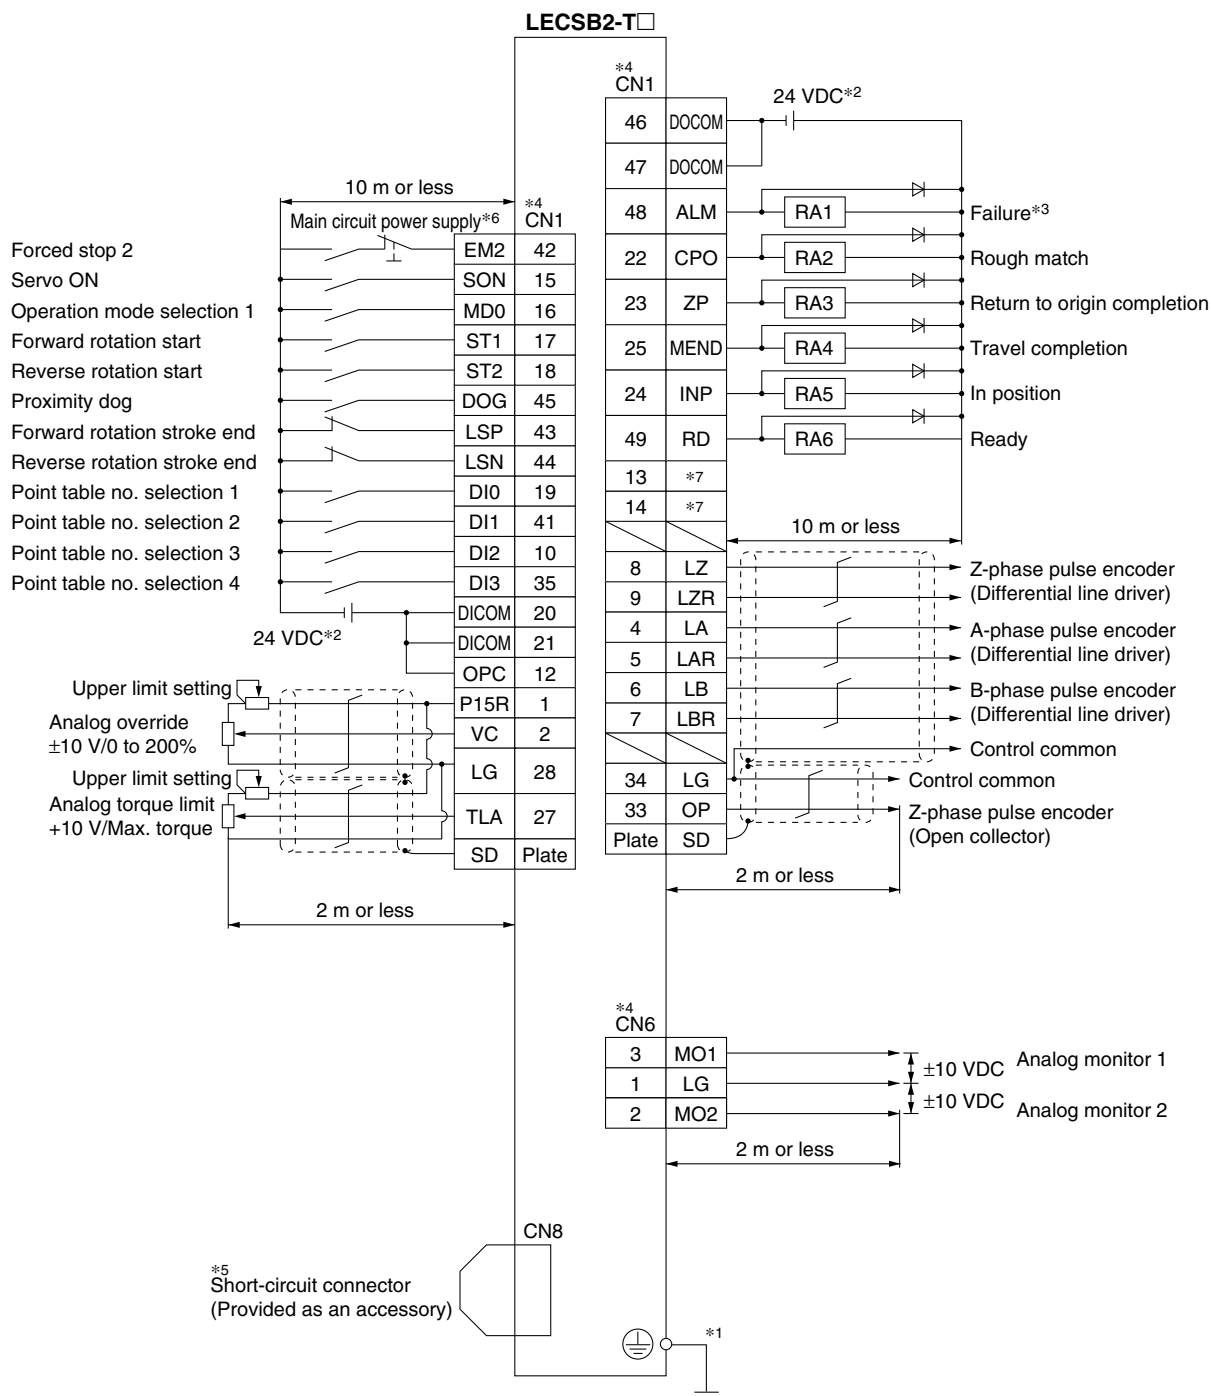


- \*1 For preventing electric shock, be sure to connect the servo amplifier's protective earth (PE) terminal (marked ) to the control panel's protective earth (PE).
- \*2 For interface use, supply 24 VDC  $\pm 10\%$  using an external source. Set the total current capacity to 500 mA. 500 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- \*3 The ALM (Failure) is normally ON. (Normally closed contact)
- \*4 Signals of the same name are connected inside the servo amplifier.
- \*5 When not using the STO function, use the servo amplifier with the short-circuit connector (provided as an accessory) inserted.
- \*6 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.
- \*7 Output devices are not assigned in the initial status. Assign the output devices as necessary.



## Control Signal Wiring Example: LECSN□-T□

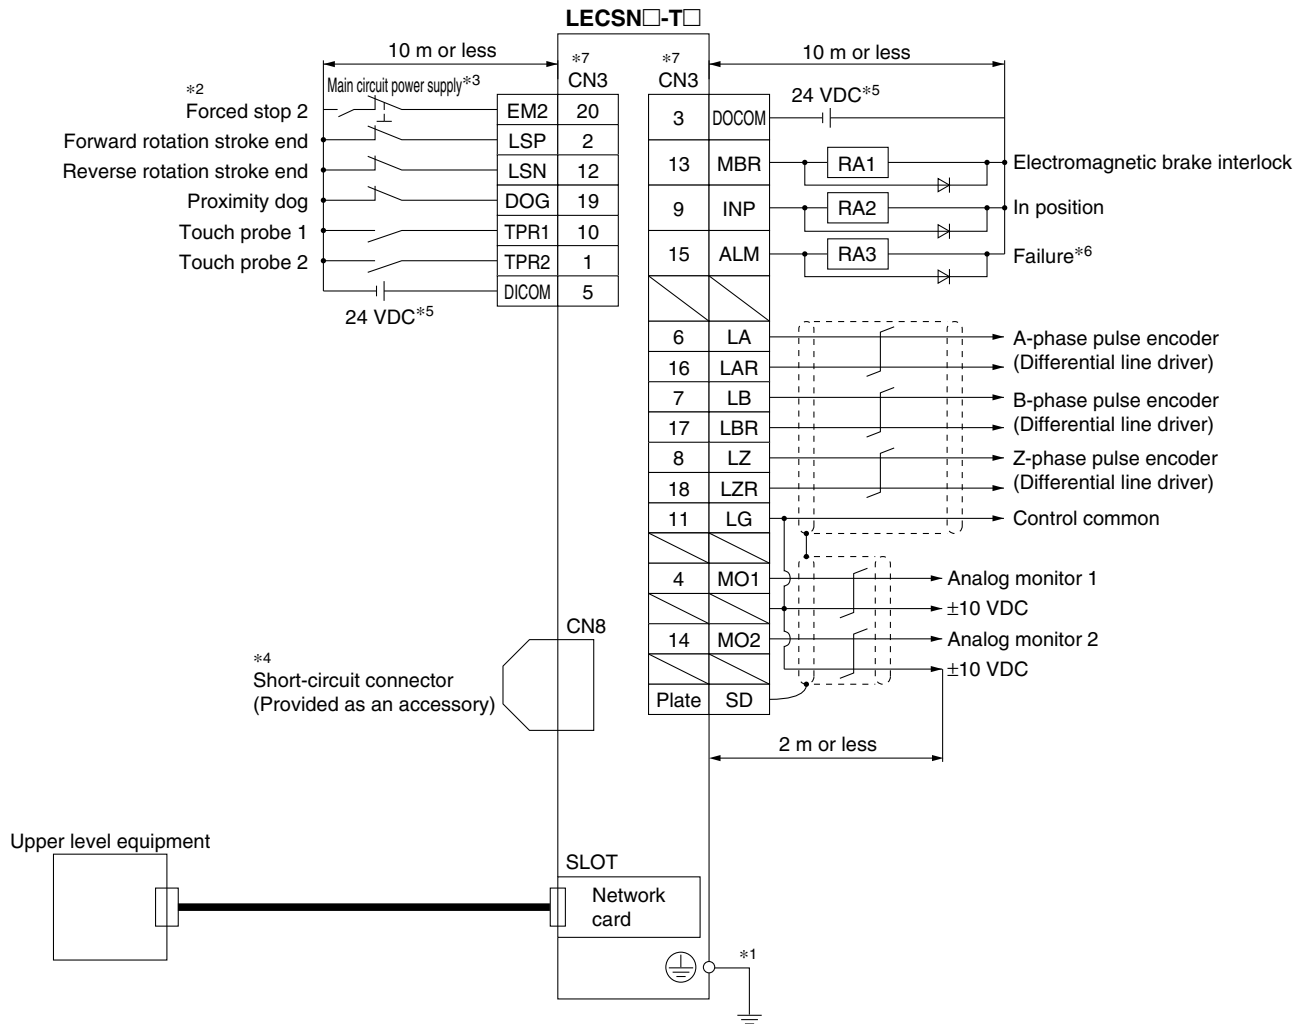


- \*1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked ) to the control panel's protective earth (PE).
- \*2 If upper level equipment does not have forced stop function, always install the forced stop 2 switch (normally closed contact).
- \*3 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.
- \*4 When not using the STO function, use the driver with the short-circuit connector (provided as an accessory) inserted.
- \*5 For interface use, supply 24 VDC  $\pm 10\%$  using an external source. Set the total current capacity to 300 mA. 300 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- \*6 The ALM (Failure) is normally ON. (Normally closed contact)
- \*7 Signals of the same name are connected inside the driver.



## Control Signal Wiring Example: LECSS2-T□

For sink (NPN) I/O interface

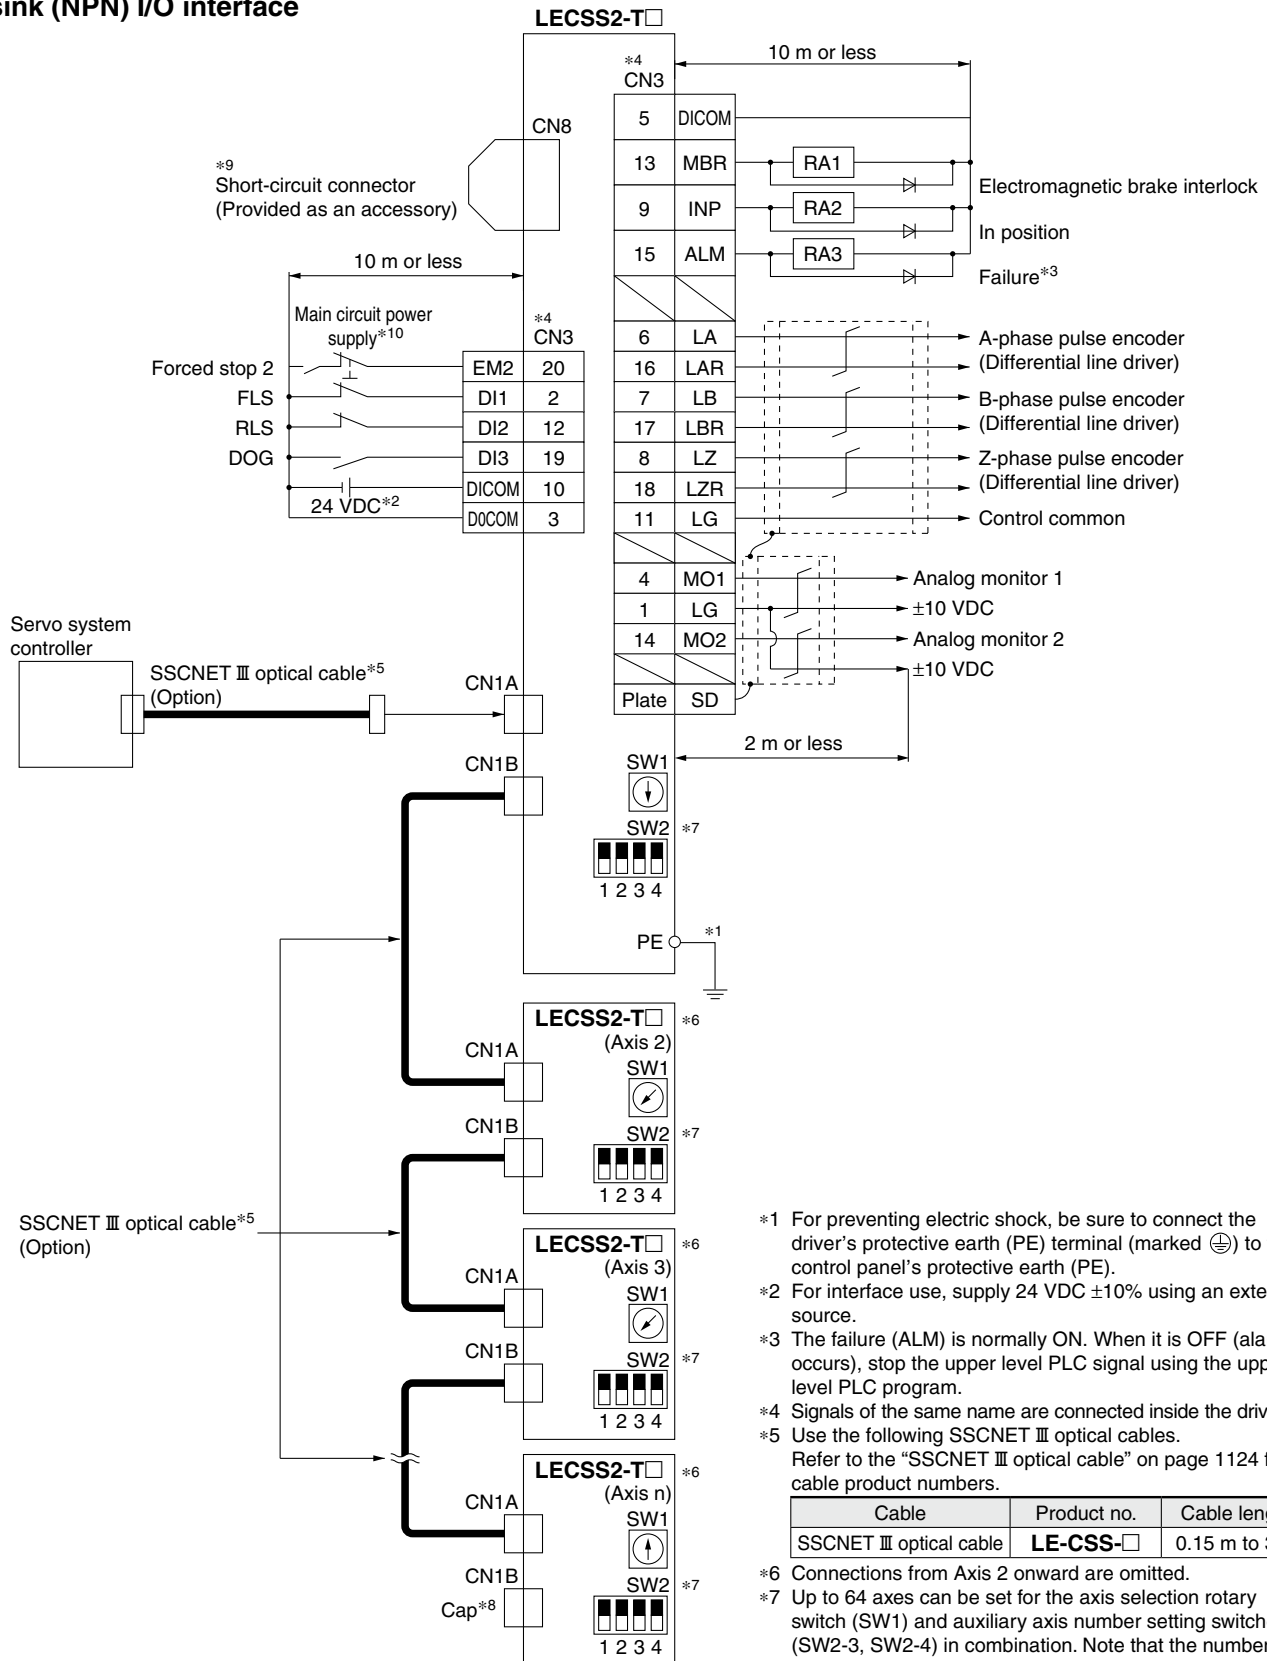

# LECSA/LECS□-T Series

## Options

Motor cable, Lock cable, Encoder cable (LECSA, LECS□-T common)

**LE-CSM-S5A**


**Motor type**  
S AC servo motor

**Cable description**  
M Motor cable  
B Lock cable  
E Encoder cable


**Cable type**  
S Standard cable  
R Robotic cable

Cable length (L) [m]	
2	2
5	5
A	10


**Direction of connector**

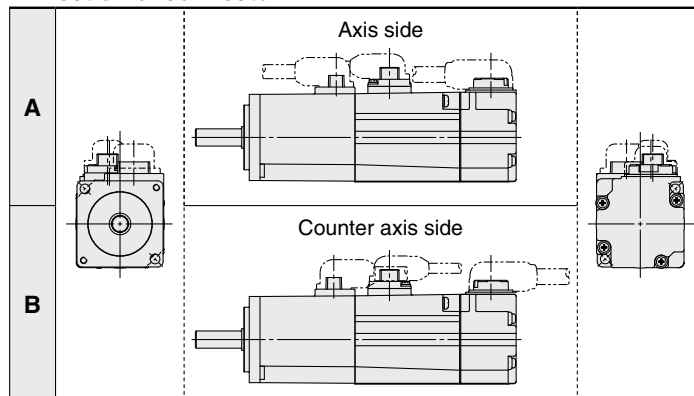


**LE-CSM-□□: Motor cable**



**LE-CSB-□□: Lock cable<sup>\*1</sup>**



**LE-CSE-□□: Encoder cable**

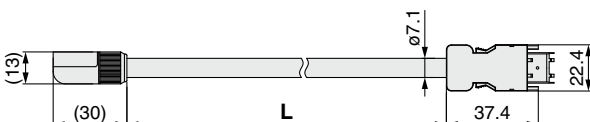

<sup>\*1</sup> If using an actuator with a lock, a lock cable is required.

Product no.	øD
LE-CSM-S□A	6.2
LE-CSM-S□B	6.2
LE-CSM-R□A	5.7
LE-CSM-R□B	5.7

Product no.	øD
LE-CSB-S□A	4.7
LE-CSB-S□B	4.7
LE-CSB-R□A	4.5
LE-CSB-R□B	4.5

**Weight**

Product no.	Length [m]	Weight [g]
LE-CSM-S2□	2	180
LE-CSM-S5□	5	400
LE-CSM-SA□	10	800
LE-CSM-R2□	2	180
LE-CSM-R5□	5	400
LE-CSM-RA□	10	800

**Weight**

Product no.	Length [m]	Weight [g]
LE-CSB-S2□	2	80
LE-CSB-S5□	5	200
LE-CSB-SA□	10	400
LE-CSB-R2□	2	80
LE-CSB-R5□	5	200
LE-CSB-RA□	10	400

**Weight**


Product no.	Length [m]	Weight [g]
LE-CSE-S2□	2	220
LE-CSE-S5□	5	600
LE-CSE-SA□	10	1200
LE-CSE-R2□	2	220
LE-CSE-R5□	5	600
LE-CSE-RA□	10	1200

**I/O connector (Without cable, Connector only)**


**LE-CSN A**

Driver type	
A	LECSA□, LECS2-T□
B	LECSB2-T□
S	LECSS2-T□, LECSN□-T□


**LE-CSNA**

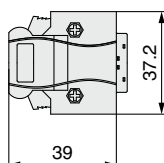

**LE-CSNB**

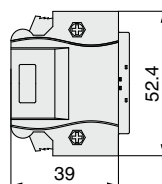

**LE-CSNS**

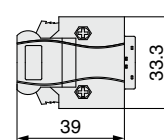

**Weight**

Product no.	Weight [g]
LE-CSNA	25
LE-CSNB	30
LE-CSNS	16

\* LE-CSNA: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent  
LE-CSNB: 10150-3000PE (connector)/10350-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent  
LE-CSNS: 10120-3000PE (connector)/10320-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent

\* Applicable conductor size: AWG24 to 30

\* If using the LECSB-T in any mode other than positioning mode, forced stop (EM2) wiring is required in all cases. (The electric actuator will not operate without the wiring.)  
Prepare an I/O connector or an I/O cable in advance.

## Options

### SSCNET III optical cable (LECSSL2-T□)

LE-CSS-1	
Motor type	●
<b>S</b>	AC servo motor
Cable description	●
<b>S</b>	SSCNET III optical cable
Cable length	●
<b>L</b>	0.15 m
<b>K</b>	0.3 m
<b>J</b>	0.5 m
<b>1</b>	1 m
<b>3</b>	3 m


\* LE-CSS-□ is MR-J3BUS□M manufactured by Mitsubishi Electric Corporation.

#### Weight

Product no.	Length [m]	Weight [g]
<b>LE-CSS-L</b>	0.15	100
<b>LE-CSS-K</b>	0.3	100
<b>LE-CSS-J</b>	0.5	200
<b>LE-CSS-1</b>	1	200
<b>LE-CSS-3</b>	3	200

### I/O cable

LEC-CSN A-1	
Driver type	●
<b>A</b>	LECSA□, LECSC2-T□
<b>B</b>	LECSB2-T□
<b>S</b>	LECSSL2-T□, LECSSN□-T□
Cable length (L) [m]	●
<b>1</b>	1.5
Weight	●
Product no.	Weight [g]
<b>LEC-CSNA-1</b>	303
<b>LEC-CSNB-1</b>	472
<b>LEC-CSNS-1</b>	221

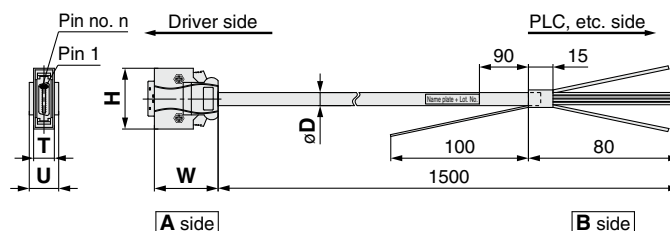

\* LEC-CSNA-1: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent  
 LEC-CSNB-1: 10150-3000PE (connector)/10350-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent  
 LEC-CSNS-1: 10120-3000PE (connector)/10320-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent

\* Conductor size: AWG24

\* If using the LECSB-T in any mode other than positioning mode, forced stop (EM2) wiring is required in all cases. (The electric actuator will not operate without the wiring.)

Prepare an I/O connector or an I/O cable in advance.

#### Cable O.D.

Product no.	ØD
<b>LEC-CSNA-1</b>	11.1
<b>LEC-CSNB-1</b>	13.8
<b>LEC-CSNS-1</b>	9.1

#### Dimensions/Pin Nos.

Product no.	W	H	T	U	Pin no. n
<b>LEC-CSNA-1</b>	39	37.2	12.7	14	14
<b>LEC-CSNB-1</b>		52.4		18	26
<b>LEC-CSNS-1</b>		33.3		14	21

## Wiring

LEC-CSNA-1: Pin nos. 1 to 26

LEC-CSNB-1: Pin nos. 1 to 50

LEC-CSNS-1: Pin nos. 1 to 20

Connector pin no.	Pair no. of wire	Insulation color	Dot mark	Dot color
<b>A side</b>	1	Orange	■	Red
	2		■	Black
	3	Light gray	■	Red
	4		■	Black
	5	White	■	Red
	6		■	Black
	7	Yellow	■	Red
	8		■	Black
	9	Pink	■	Red
	10		■	Black
	11	Orange	■ ■	Red
	12		■ ■	Black
	13	Light gray	■ ■	Red
	14		■ ■	Black
	15	White	■ ■	Red
	16		■ ■	Black
	17	Yellow	■ ■	Red
	18		■ ■	Black

Connector pin no.	Pair no. of wire	Insulation color	Dot mark	Dot color
<b>A side</b>	19	Pink	■ ■	Red
	20		■ ■	Black
	21	Orange	■ ■ ■	Red
	22		■ ■ ■	Black
	23	Light gray	■ ■ ■	Red
	24		■ ■ ■	Black
	25	White	■ ■ ■	Red
	26		■ ■ ■	Black
	27	Yellow	■ ■ ■	Red
	28		■ ■ ■	Black
	29	Pink	■ ■ ■	Red
	30		■ ■ ■	Black
	31	Orange	■ ■ ■ ■	Red
	32		■ ■ ■ ■	Black
	33	Light gray	■ ■ ■ ■	Red
	34		■ ■ ■ ■	Black

Connector pin no.	Pair no. of wire	Insulation color	Dot mark	Dot color
<b>A side</b>	35	White	■ ■ ■ ■	Red
	36		■ ■ ■ ■	Black
	37	Yellow	■ ■ ■ ■	Red
	38		■ ■ ■ ■	Black
	39	Pink	■ ■ ■ ■	Red
	40		■ ■ ■ ■	Black
	41	Orange	■ ■ ■ ■ ■ (Continuous)	Red
	42		■ ■ ■ ■ ■ (Continuous)	Black
	43	Light gray	■ ■ ■ ■ ■ (Continuous)	Red
	44		■ ■ ■ ■ ■ (Continuous)	Black
	45	White	■ ■ ■ ■ ■ (Continuous)	Red
	46		■ ■ ■ ■ ■ (Continuous)	Black
	47	Yellow	■ ■ ■ ■ ■ (Continuous)	Red
	48		■ ■ ■ ■ ■ (Continuous)	Black
	49	Pink	■ ■ ■ ■ ■ (Continuous)	Red
	50		■ ■ ■ ■ ■ (Continuous)	Black

# LECSA/LECS□-T Series

## Options

Regeneration option (LECS□ common)


### LEC – MR – RB – 12

Regeneration option type●

032	Allowable regenerative power 30 W
12	Allowable regenerative power 100 W
32	Allowable regenerative power 300 W

\* Confirm regeneration option to be used in “Model Selection.”

#### LEC-MR-RB-032

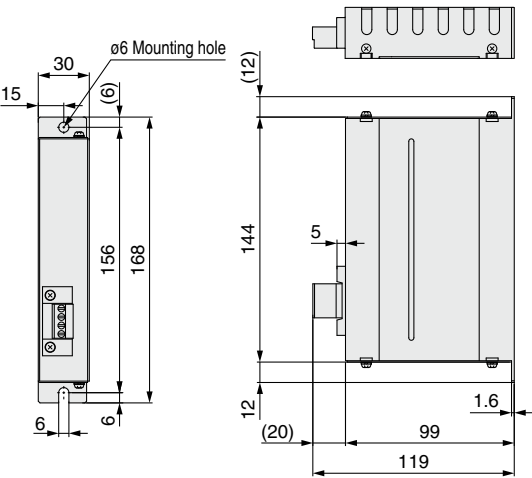


#### Weight

Product no.	Weight [kg]
LEC-MR-RB-032	0.5

\* MR-RB032 manufactured by Mitsubishi Electric Corporation

#### LEC-MR-RB-12

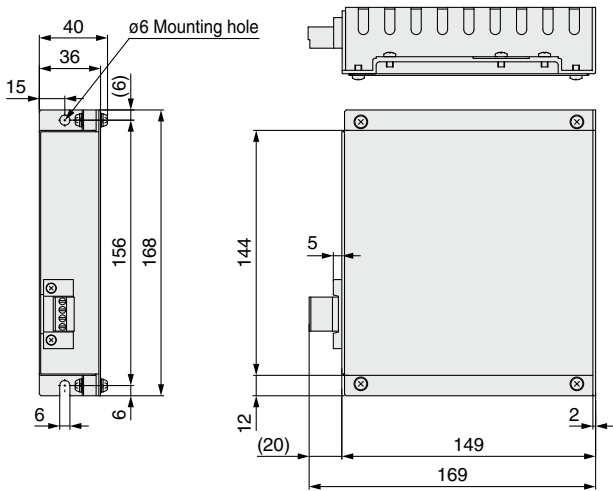


#### Weight

Product no.	Weight [kg]
LEC-MR-RB-12	1.1

\* MR-RB12 manufactured by Mitsubishi Electric Corporation

#### LEC-MR-RB-32

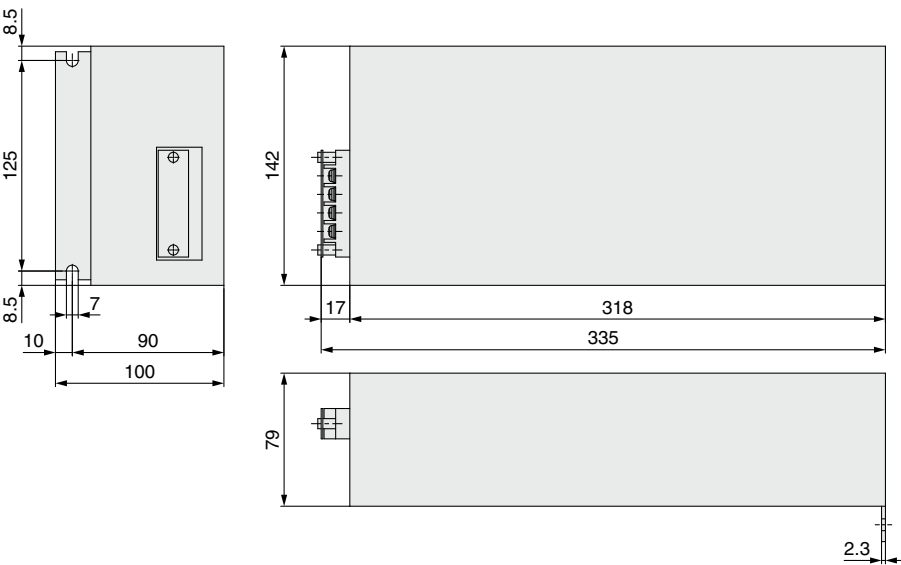

#### Weight

Product no.	Weight [kg]
LEC-MR-RB-32	2.9

\* MR-RB32 manufactured by Mitsubishi Electric Corporation

## Options


### Network card (LECSN□-T□)

**LEC-S-□**

Network card type ●

<b>NE</b>	EtherCAT
<b>N9</b>	EtherNet/IP™
<b>NP</b>	PROFINET

LEC-S-□ common

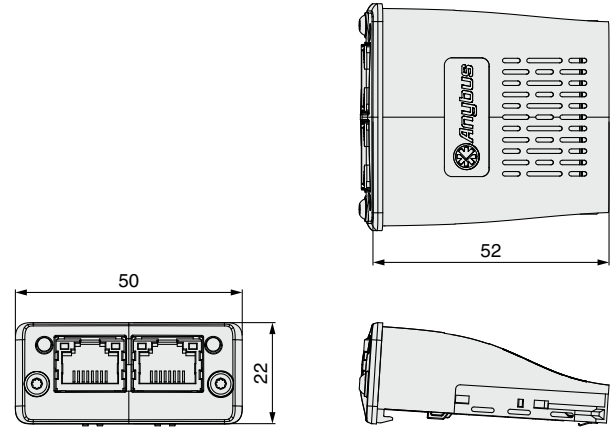

#### Weight

Product no.	Weight [g]
<b>LEC-S-□</b>	30





## Options



Setup software (MR Configurator2™) (LECSA, LECSB2-T□, LECSC2-T□, LECSS2-T□, LECSN□-T□ common)

## LEC-MRC2□

### Display language

Nil	Japanese version
E	English version
C	Chinese version

\* SW1DNC-MRC2□ manufactured by Mitsubishi Electric Corporation  
Refer to Mitsubishi Electric Corporation's website for operating environment and version upgrade information.  
MR Configurator2™ is a registered trademark or trademark of Mitsubishi Electric Corporation.

Adjustment, waveform display, diagnostics, parameter reading/writing, and test operations can be performed on a PC.

## Hardware Requirements\*1 \*3

Equipment		Description
OS		Microsoft® Windows® 11 Education Operating System Microsoft® Windows® 11 Enterprise Operating System Microsoft® Windows® 11 Pro Operating System Microsoft® Windows® 11 Home Operating System Microsoft® Windows® 10 Education Microsoft® Windows® 10 Enterprise Microsoft® Windows® 10 Pro Microsoft® Windows® 10 Home Microsoft® Windows® 10 IoT Enterprise 2016 LTSB*2 Microsoft® Windows® 8.1 Enterprise Microsoft® Windows® 8.1 Pro Microsoft® Windows® 8.1 Microsoft® Windows® 8 Enterprise Microsoft® Windows® 8 Pro Microsoft® Windows® 8 Microsoft® Windows® 7 Enterprise Microsoft® Windows® 7 Ultimate Microsoft® Windows® 7 Professional Microsoft® Windows® 7 Home Premium Microsoft® Windows® 7 Starter
CPU (Recommended)	Windows® 11	2-core or higher 64-bit compatible processor or System on a Chip (SoC)
	Other than Windows® 11	Desktop PC: Intel® Celeron® processor 2.8 GHz or higher Laptop: Intel® Pentium® M processor 1.7 GHz or higher
Memory (Recommended)	Windows® 11	4 GB or more (64-bit OS)
	Other than Windows® 11	1 GB or more (32-bit OS) 2 GB or more (64-bit OS)
Available HD space		1.5 GB or more
Display		Resolution: 1024 x 768 or more, Must be capable of high color (16-bit) display Connectable with the PCs listed above
USB cable		LEC-MR-J3USB
Ethernet cable		Cable type: Category 5e or higher, (Double shielded/STP) Straight cable Standards: IEEE 802.3 (1000BASE-T) or ANSI/TIA/EIA-568-B (Category 5e) Connector: Shielded RJ-45

\*1 On some PCs, this software may not run properly.

\*2 Only the 64-bit edition is supported.

\*3 Surrogate pair characters and environment-dependent characters cannot be used.

## Setup Software Compatible Drivers

Compatible driver	Setup software	
	MR Configurator™	MR Configurator2™
	LEC-MR-SETUP221□	LEC-MRC2□
LECSA	○	○
LECSB2-T□	—	○
LECSC2-T□	—	○
LECSS2-T□	—	○
LECSN□-T□	—	○

# LECSA/LECS□-T Series

## Options

USB cable (3 m)  
(LECSA, LECS□-T common)

### LEC – MR – J3USB

\* MR-J3USBCBL3M manufactured by Mitsubishi Electric Corporation  
Weight: 140 g


Cable for connecting the PC and driver when using the setup software (MR Configurator2™)  
Do not use any cable other than this cable.

STO cable (3 m)  
(Only for LECSB2-T□, LECSN□-T□ and LECSS2-T□)

### LEC – MR – D05UDL3M

\* MR-D05UDL3M-B manufactured by Mitsubishi Electric Corporation

Cable for connecting the driver and device, when using the safety function  
Do not use any cable other than this cable.

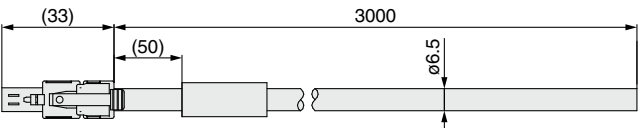


Weight: 500 g

## Battery

Replacement batteries must be purchased from Mitsubishi Electric Corporation.

### Part no.: MR-J3BAT manufactured by Mitsubishi Electric Corporation

Battery for replacement  
Absolute position data is maintained by installing the battery to the driver.




Weight: 30 g

\* The MR-J3BAT is a single battery that uses a lithium metal battery ER6V.  
When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is to transport such products, it is necessary for them to confirm the latest regulations, or the laws and regulations of the country of transport, on their own in order to apply the proper measures.

### Part no.: MR-BAT6V1SET manufactured by Mitsubishi Electric Corporation


Battery for replacement  
Absolute position data is maintained by installing the battery to the driver.

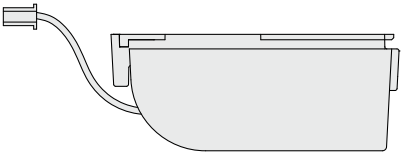

Weight: 60 g

### Part no.: MR-BAT6V1SET-A manufactured by Mitsubishi Electric Corporation

Battery for replacement  
Absolute position data is maintained by installing the battery to the driver.

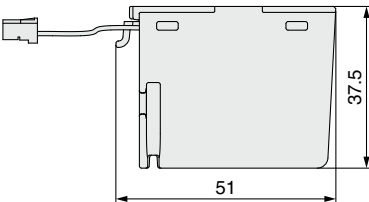

Weight: 60 g

\* The MR-BAT6V1SET and MR-BAT6V1SET-A are assembled batteries that use lithium metal battery 2CR17335A.  
When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is transporting products such as shown above, it is necessary to confirm the latest regulations, or the laws and regulations of the country of transport on your own, in order to apply the proper measures.

## Battery Types and Compatible Drivers

Compatible driver	Battery type		
	MR-J3BAT	MR-BAT6V1SET	MR-BAT6V1SET-A
LECSB□-T□	—	○	—
LECS□-T□	○	—	—
LECSS□-T□	—	○	—
LECSN□-T□	—	—	○

# AC Servo Motor Driver Absolute Type

## LECYM/LECYU Series

(MECHATROLINK-II Type)

(MECHATROLINK-III Type)



\* For details, refer to page 1343 and onward.

### How to Order

#### Driver

LECY M 2 -

#### Driver type

M	MECHATROLINK-II type (For absolute encoder)
U	MECHATROLINK-III type (For absolute encoder)

#### Power supply voltage

2	200 to 230 VAC, 50/60 Hz
---	--------------------------

- \* If an I/O connector (CN1) is required, order the part number "LE-CYNA" separately.
- \* If an I/O cable (CN1) is required, order the part number "LEC-CSNA-1" separately.

#### Compatible motor type


Symbol	Type	Capacity	Encoder
V5	AC servo motor (V6*1)	100 W	Absolute
V7	AC servo motor (V7*1)	200 W	
V8	AC servo motor (V8*1)	400 W	

\*1 The symbol shows the motor type (actuator).

### Dimensions

MECHATROLINK-II type

LECYM2-V□

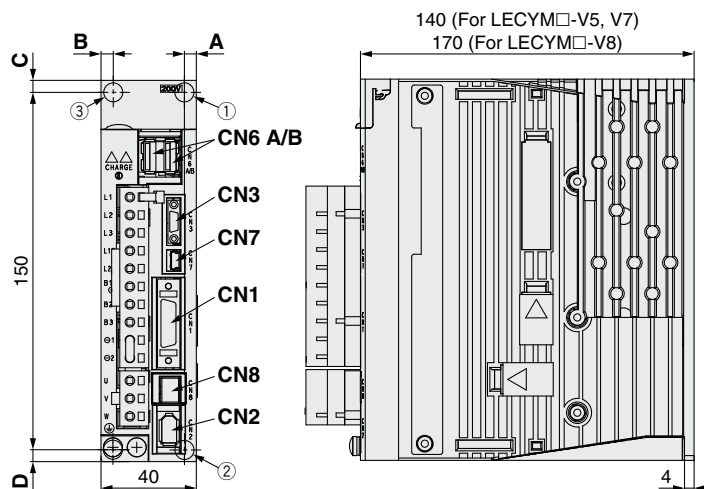

Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3*1	Digital operator connector
CN6A	MECHATROLINK-II communication connector
CN6B	MECHATROLINK-II communication connector
CN7	PC connector
CN8	Safety connector


\*1 Digital operator is JUSP-OP05A-1-E manufactured by YASKAWA Electric Corporation. When using the digital operator, it should be provided by the customer.

Motor capacity	Hole position	Mounting dimensions	Mounting hole
		A B C D	
V5 (100 W)	①②	5 — 5 5	ø5
V7 (200 W)	①②	5 — 5 5	
V8 (400 W)	②③	5 5 5 5	

\* The mounting hole position varies depending on the motor capacity.

MECHATROLINK-III type

LECYU2-V□

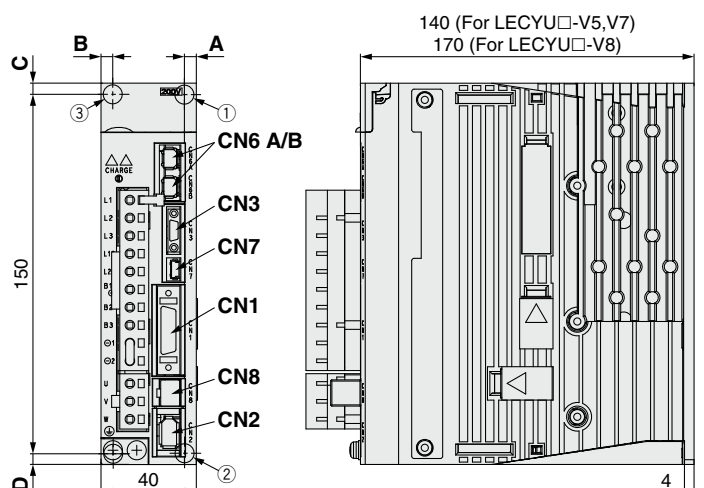

Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3*1	Digital operator connector
CN6A	MECHATROLINK-III communication connector
CN6B	MECHATROLINK-III communication connector
CN7	PC connector
CN8	Safety connector

\*1 Digital operator is JUSP-OP05A-1-E manufactured by YASKAWA Electric Corporation. When using the digital operator, it should be provided by the customer.

Motor capacity	Hole position	Mounting dimensions	Mounting hole
		A B C D	
V5 (100 W)	①②	5 — 5 5	ø5
V7 (200 W)	①②	5 — 5 5	
V8 (400 W)	②③	5 5 5 5	

\* The mounting hole position varies depending on the motor capacity.

## Specifications

### MECHATROLINK-II Type

Model			LECYM2-V5	LECYM2-V7	LECYM2-V8
Rated power supply capacity [kVA]			0.3	0.6	1
Max. power supply capacity [kVA]			1.05	2.1	3.5
Compatible motor capacity [W]			100	200	400
Compatible encoder			Absolute 20-bit encoder (Resolution: 1048576 p/rev)		
Main circuit power supply	Power voltage [V]*2		Three phase 200 to 230 VAC (50/60 Hz)		
	Allowable voltage fluctuation [V]*2		Three phase 170 to 253 VAC		
Control power supply	Power voltage [V]		Single phase 200 to 230 VAC (50/60 Hz)		
	Allowable voltage fluctuation [V]		Single phase 170 to 253 VAC		
Power supply capacity (at rated output) [A]			0.91	1.6	2.8
Input circuit			NPN (Sink circuit)/PNP (Source circuit)		
Parallel input (7 inputs)	Number of optional allocations	7 inputs	[Initial allocation] · Homing deceleration switch (/DEC) · External latch (/EXT 1 to 3) · Forward run prohibited (P-OT), reverse run prohibited (N-OT)  [Can be allocated by setting the parameters] · Forward external torque limit (/P-CL), reverse external torque limit (/N-CL)  Signal allocations can be performed, and positive and negative logic can be changed.		
Parallel output (4 outputs)	Number of fixed allocations	1 output	· Servo alarm (ALM)		
	Number of optional allocations	3 outputs	[Initial allocation] · Lock (/BK)  [Can be allocated by setting the parameters] · Positioning completion (/COIN) · Speed limit detection (/VLT) · Speed coincidence detection (/V-CMP) · Rotation detection (/TGON) · Warning (/WARN) · Servo ready (/S-RDY) · Near (/NEAR) · Torque limit detection (/CLT)  Signal allocations can be performed, and positive and negative logic can be changed.		
MECHATROLINK communication	Communication protocol		MECHATROLINK- II		
	Station address		41H to 5FH		
	Transmission speed		10 Mbps		
	Transmission cycle		250 μs, 0.5 ms to 4 ms (Multiples of 0.5 ms)		
	Number of transmission bytes		17 bytes, 32 bytes		
	Max. number of stations		30		
	Cable length		Overall cable length: 50 m or less, Cable length between the stations: 0.5 m or more		
Command method	Control method		Position, speed, or torque control with MECHATROLINK- II communication		
	Command input		MECHATROLINK- II command (Motion, data setting, monitoring, or adjustment)		
Function	Gain adjustment		Tuning-less/Advanced auto tuning/One-parameter tuning		
	Communication setting		USB communication, RS-422 communication		
	Torque limit		Internal torque limit, external torque limit, and torque limit by analog command		
	Encoder output		Phase A, B, Z: Line driver output		
	Emergency stop		CN8 Safety function		
	Overtravel		Dynamic brake stop, deceleration to a stop, or free run to a stop at P-OT or N-OT		
Alarm			Alarm signal, MECHATROLINK- II command		
Operating temperature range [°C]			0 to 55 (No freezing)		
Operating humidity range [%RH]			90 or less (No condensation)		
Storage temperature range [°C]			-20 to 85 (No freezing)		
Storage humidity range [%RH]			90 or less (No condensation)		
Enclosure			IP10		
Insulation resistance [MΩ]			10 MΩ (500 VDC)		
Safety function			STO (IEC 61800-5-2)		
Safety standards*1			EN ISO 13849-1 Category 3 PL d, IEC 61508 SIL2, IEC 62061 SIL CL2, IEC 61800-5-2		
Weight [g]			900		1000

\*1 Refer to the LECYM operation manual for details.

\*2 Three phase 400 VAC is not supported.

## Specifications

### MECHATROLINK-III Type

Model			LECYU2-V5	LECYU2-V7	LECYU2-V8
Rated power supply capacity [kVA]			0.3	0.6	1
Max. power supply capacity [kVA]			1.05	2.1	3.5
Compatible motor capacity [W]			100	200	400
Compatible encoder			Absolute 20-bit encoder (Resolution: 1048576 p/rev)		
Main circuit power supply	Power voltage [V]*2		Three phase 200 to 230 VAC (50/60 Hz)		
	Allowable voltage fluctuation [V]*2		Three phase 170 to 253 VAC		
Control power supply	Power voltage [V]		Single phase 200 to 230 VAC (50/60 Hz)		
	Allowable voltage fluctuation [V]		Single phase 170 to 253 VAC		
Power supply capacity (at rated output) [A]			0.91	1.6	2.8
Input circuit			NPN (Sink circuit)/PNP (Source circuit)		
Parallel input (7 inputs)	Number of optional allocations	7 inputs	[Initial allocation] · Homing deceleration switch (/DEC) · External latch (/EXT 1 to 3) · Forward run prohibited (P-OT), reverse run prohibited (N-OT)  [Can be allocated by setting the parameters] · Forward external torque limit (/P-CL), reverse external torque limit (/N-CL)  Signal allocations can be performed, and positive and negative logic can be changed.		
Parallel output (4 outputs)	Number of fixed allocations	1 output	· Servo alarm (ALM)		
	Number of optional allocations	3 outputs	[Initial allocation] · Lock (/BK)  [Can be allocated by setting the parameters] · Positioning completion (/COIN) · Speed limit detection (/VLT) · Speed coincidence detection (/V-CMP) · Rotation detection (/TGON) · Warning (/WARN) · Servo ready (/S-RDY) · Near (/NEAR) · Torque limit detection (/CLT)  Signal allocations can be performed, and positive and negative logic can be changed.		
MECHATROLINK communication	Communication protocol		MECHATROLINK-Ⅲ		
	Station address		03H to EFH		
	Transmission speed		100 Mbps		
	Transmission cycle		125 μs, 250 μs, 500 μs, 750 μs, 1 ms to 4 ms (Multiples of 0.5 ms)		
	Number of transmission bytes		16 bytes, 32 bytes, 48 bytes		
	Max. number of stations		62		
	Cable length		Cable length between the stations: 0.5 m or more, 75 m or less		
Command method	Control method		Position, speed, or torque control with MECHATROLINK-Ⅲ communication		
	Command input		MECHATROLINK-Ⅲ command (Motion, data setting, monitoring, or adjustment)		
Function	Gain adjustment		Tuning-less/Advanced auto tuning/One-parameter tuning		
	Communication setting		USB communication, RS-422 communication		
	Torque limit		Internal torque limit, external torque limit, and torque limit by analog command		
	Encoder output		Phase A, B, Z: Line driver output		
	Emergency stop		CN8 Safety function		
	Overtravel		Dynamic brake stop, deceleration to a stop, or free run to a stop at P-OT or N-OT		
	Alarm		Alarm signal, MECHATROLINK-Ⅲ command		
Operating temperature range [°C]			0 to 55 (No freezing)		
Operating humidity range [%RH]			90 or less (No condensation)		
Storage temperature range [°C]			-20 to 85 (No freezing)		
Storage humidity range [%RH]			90 or less (No condensation)		
Enclosure			IP10		
Insulation resistance [MΩ]			10 MΩ (500 VDC)		
Safety function			STO (IEC 61800-5-2)		
Safety standards*1			EN ISO 13849-1 Category 3 PL d, IEC 61508 SIL2, IEC 62061 SIL CL2, IEC 61800-5-2		
Weight [g]			900		1000


\*1 Refer to the LECYU operation manual for details.

\*2 Three phase 400 VAC is not supported.





## Control Signal Wiring Example: LECYM

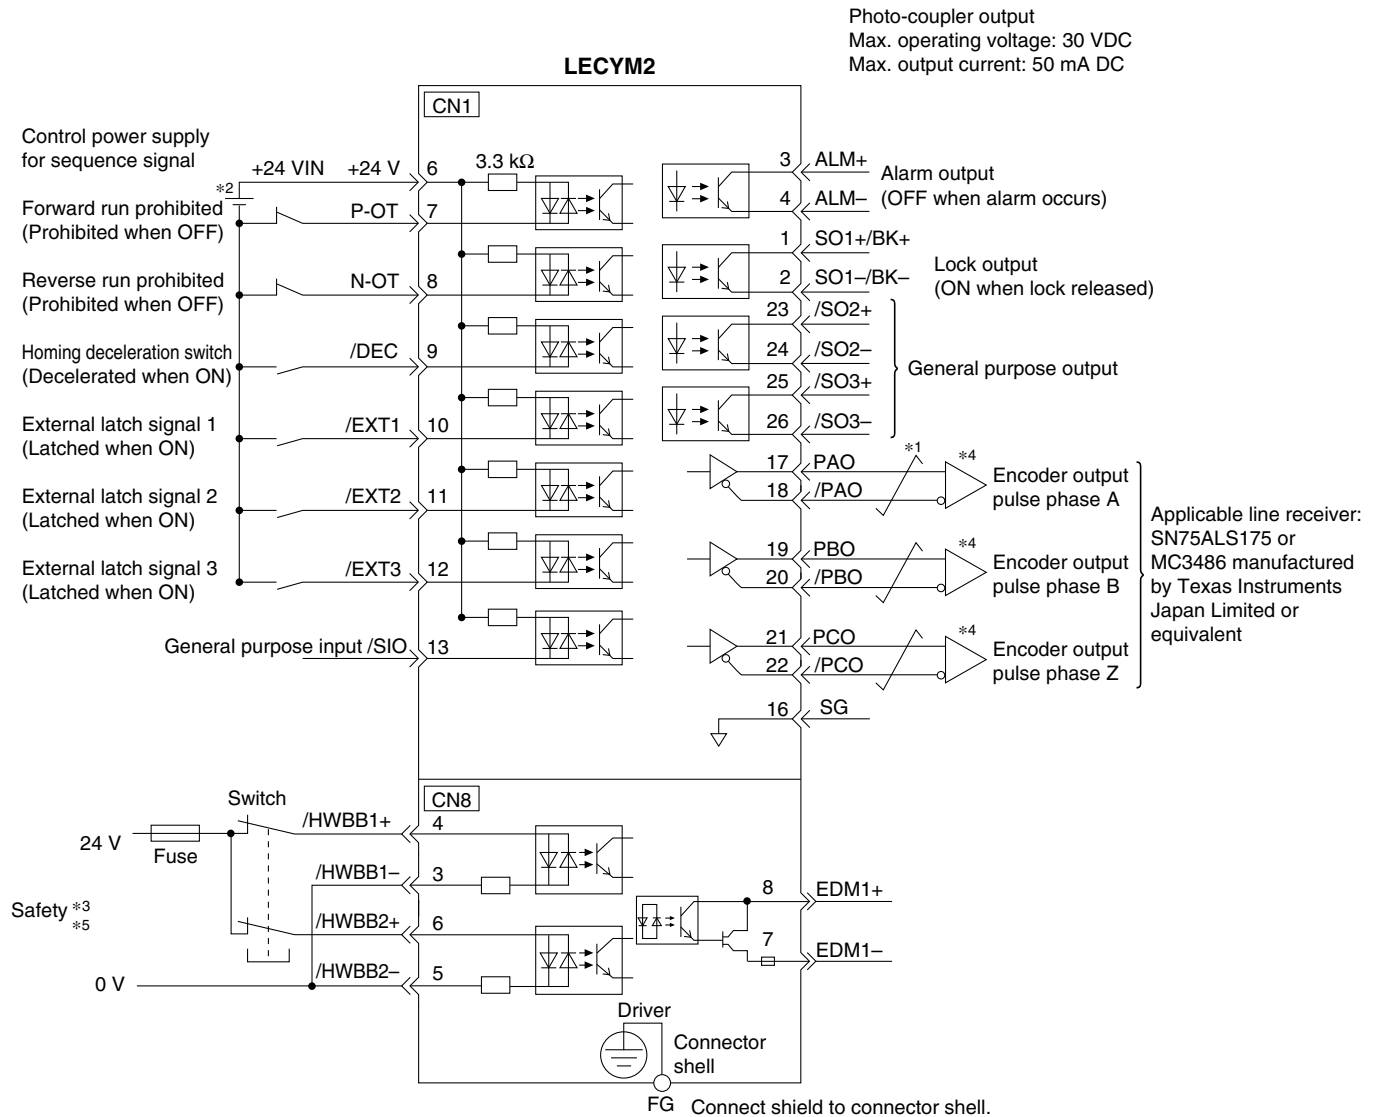

\*1  $\overline{\text{---}}$  shows twisted-pair wires.

\*2 The 24 VDC power supply is not included. Use a 24 VDC power supply with double insulation or reinforced insulation.


\*3 When using the safety function, a safety function device must be connected to the wiring that is necessary to activate the safety function. Otherwise, the servo motor is not turned ON. When not using the safety function, use the driver with the Safety Jumper Connector (provided as an accessory) inserted into the CN8.

\*4 Always use line receivers to receive the output signals.

\*\* The functions allocated to the input signals /DEC, P-OT, N-OT, /EXT1, /EXT2, and /EXT3, and the output signals /SO1, /SO2, and /SO3 can be changed by setting the parameters.

\*5 It is a safety function equivalent to the STO function (IEC 61800-5-2) using the hard wire base block function (HWBB).

## Control Signal Wiring Example: LECYU

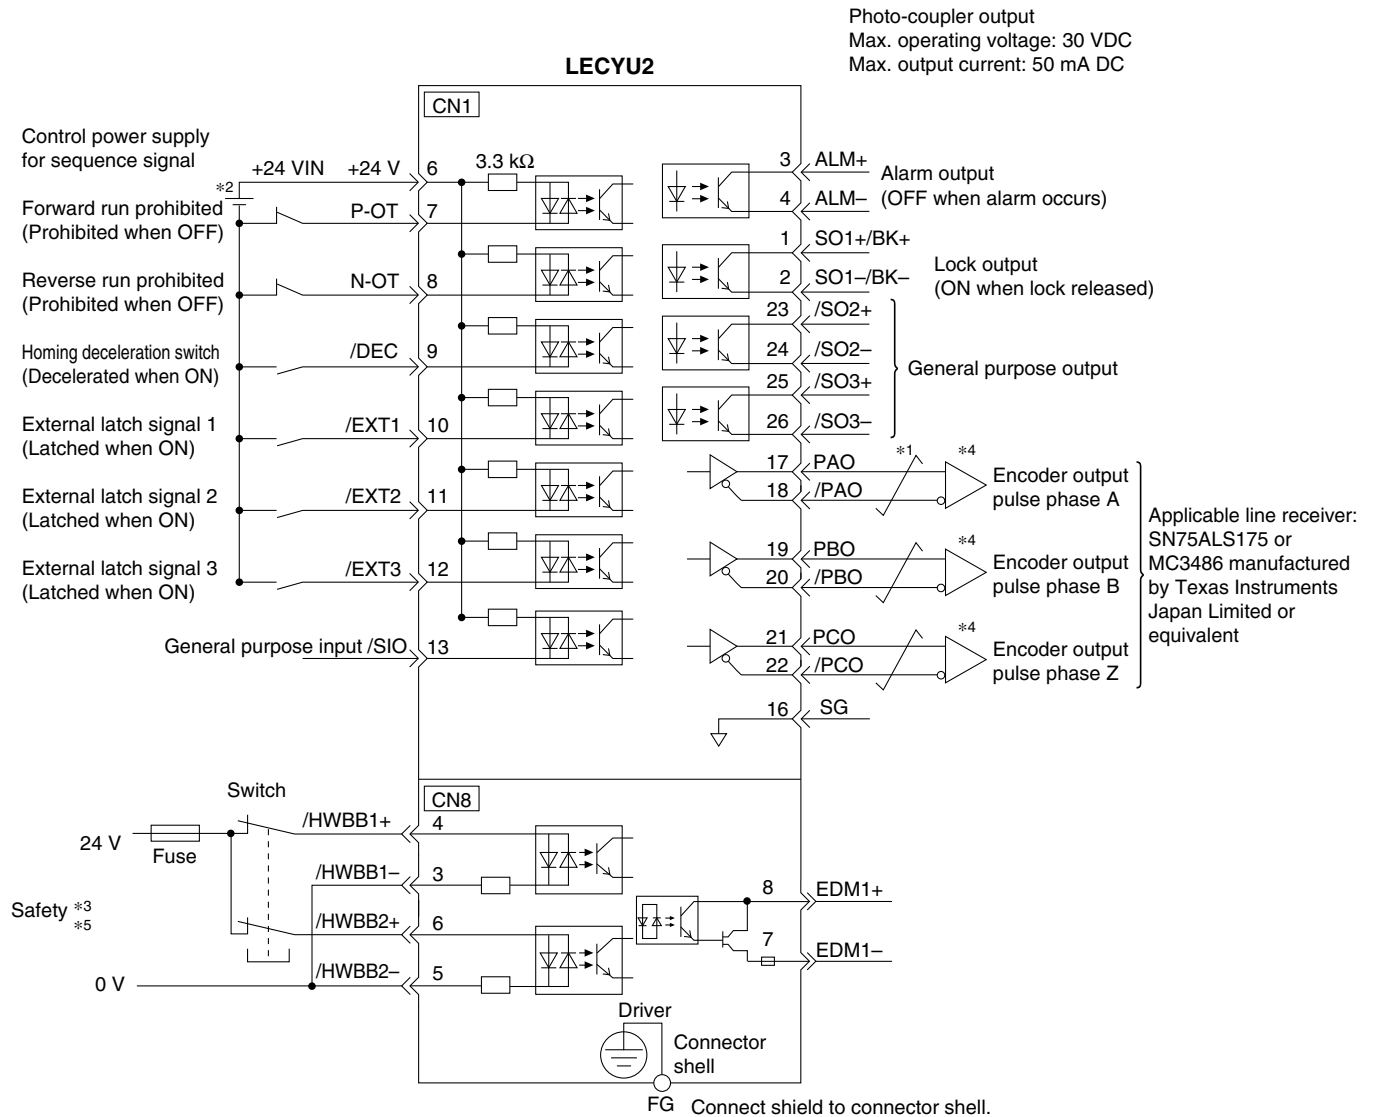

\*1  $\overline{\text{---}}$  shows twisted-pair wires.

\*2 The 24 VDC power supply is not included. Use a 24 VDC power supply with double insulation or reinforced insulation.

\*3 When using the safety function, a safety function device must be connected to the wiring that is necessary to activate the safety function. Otherwise, the servo motor is not turned ON. When not using the safety function, use the driver with the Safety Jumper Connector (provided as an accessory) inserted into the CN8.

\*4 Always use line receivers to receive the output signals.

\*\* The functions allocated to the input signals /DEC, P-OT, N-OT, /EXT1, /EXT2, and /EXT3, and the output signals /SO1, /SO2, and /SO3 can be changed by setting the parameters.

\*5 It is a safety function equivalent to the STO function (IEC 61800-5-2) using the hard wire base block function (HWBB).

## Options

Motor cable, Motor cable for lock option, Encoder cable (LECYM/LECYU common)

**LE-CY M-S 5 A-5**

● **Motor type**

<b>Y</b>	AC servo motor
----------	----------------

● **Cable description**

<b>M</b>	Motor cable
<b>B</b>	Motor cable for lock option
<b>E</b>	Encoder cable (With battery case)

● **Cable type**

<b>S</b>	Standard cable
<b>R</b>	Robotic cable

● **Cable length (L) [m]**


<b>3</b>	3
<b>5</b>	5
<b>A</b>	10
<b>C</b>	20

● **Motor capacity**

<b>5</b>	100 W
<b>7</b>	200/400 W

\* For encoder cable, the suffix “-□” (Motor capacity) is not necessary.

● **Direction of connector**

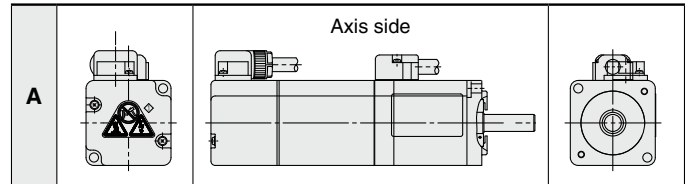

\* The cable entry direction is axis side only.

### Weight

Product no.	Length [m]	Weight [g]	Note
<b>LE-CYM-S3A-5</b>	3	250	100 W
<b>LE-CYM-S5A-5</b>	5	390	
<b>LE-CYM-SAA-5</b>	10	750	
<b>LE-CYM-SCA-5</b>	20	1500	
<b>LE-CYM-S3A-7</b>	3	250	200/ 400 W
<b>LE-CYM-S5A-7</b>	5	390	
<b>LE-CYM-SAA-7</b>	10	750	
<b>LE-CYM-SCA-7</b>	20	1500	
<b>LE-CYM-R3A-5</b>	3	220	100 W
<b>LE-CYM-R5A-5</b>	5	350	
<b>LE-CYM-RAA-5</b>	10	670	
<b>LE-CYM-RCA-5</b>	20	1300	
<b>LE-CYM-R3A-7</b>	3	220	200/ 400 W
<b>LE-CYM-R5A-7</b>	5	350	
<b>LE-CYM-RAA-7</b>	10	670	
<b>LE-CYM-RCA-7</b>	20	1300	


### Weight

Product no.	Length [m]	Weight [g]	Note
<b>LE-CYB-S3A-5</b>	3	240	100 W
<b>LE-CYB-S5A-5</b>	5	390	
<b>LE-CYB-SAA-5</b>	10	750	
<b>LE-CYB-SCA-5</b>	20	1490	
<b>LE-CYB-S3A-7</b>	3	240	200/ 400 W
<b>LE-CYB-S5A-7</b>	5	390	
<b>LE-CYB-SAA-7</b>	10	750	
<b>LE-CYB-SCA-7</b>	20	1490	
<b>LE-CYB-R3A-5</b>	3	220	100 W
<b>LE-CYB-R5A-5</b>	5	350	
<b>LE-CYB-RAA-5</b>	10	670	
<b>LE-CYB-RCA-5</b>	20	1300	
<b>LE-CYB-R3A-7</b>	3	220	200/ 400 W
<b>LE-CYB-R5A-7</b>	5	350	
<b>LE-CYB-RAA-7</b>	10	670	
<b>LE-CYB-RCA-7</b>	20	1300	


### Weight

Product no.	Length [m]	Weight [g]
<b>LE-CYE-S3A</b>	3	230
<b>LE-CYE-S5A</b>	5	360
<b>LE-CYE-SAA</b>	10	680
<b>LE-CYE-SCA</b>	20	1250
<b>LE-CYE-R3A</b>	3	220
<b>LE-CYE-R5A</b>	5	330
<b>LE-CYE-RAA</b>	10	660
<b>LE-CYE-RCA</b>	20	1240


### LE-CYM-□□A-□: Motor cable

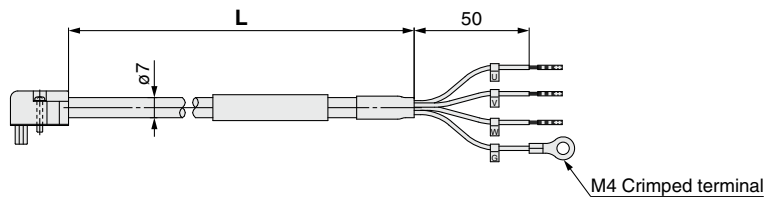

### LE-CYB-□□A-□: Motor cable for lock option

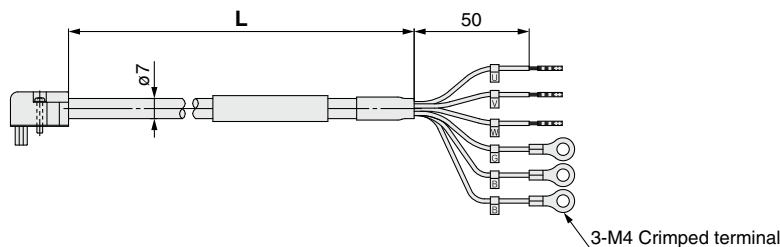

### LE-CYE-□□A: Encoder cable

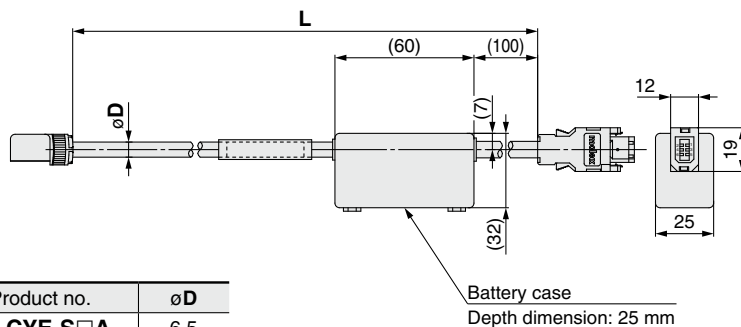

Product no.	øD
<b>LE-CYE-S□A</b>	6.5
<b>LE-CYE-R□A</b>	6.8

\* LE-CYM-S□A-□ is JZSP-CSM0□-□□-E manufactured by YASKAWA CONTROLS CO., LTD.  
LE-CYB-S□A-□ is JZSP-CSM1□-□□-E manufactured by YASKAWA CONTROLS CO., LTD.  
LE-CYE-S□A is JZSP-CSP05-□□-E manufactured by YASKAWA CONTROLS CO., LTD.

LE-CYM-R□A-□ is JZSP-CSM2□-□□-E manufactured by YASKAWA CONTROLS CO., LTD.  
LE-CYB-R□A-□ is JZSP-CSM3□-□□-E manufactured by YASKAWA CONTROLS CO., LTD.  
LE-CYE-R□A is JZSP-CSP25-□□-E manufactured by YASKAWA CONTROLS CO., LTD.

Options


I/O connector (Without cable, Connector only)

LE – CYN A

Driver type

A For LECYM2, LECYU2

LE-CYNA

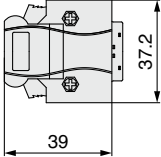

Weight	
Product no.	Weight [g]
LE-CYNA	25

\* LE-CYNA: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent  
\* Conductor size: AWG24 to 30

I/O cable


LEC – CSN A – 1

Driver type

A For LECYM2, LECYU2

Cable length (L) [m]

1 1.5

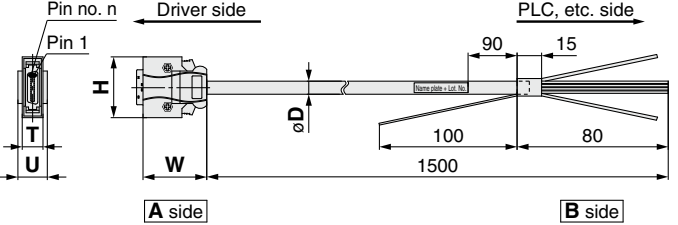

Weight	
Product no.	Weight [g]
LEC-CSNA-1	303

\* LEC-CSNA-1: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent  
\* Conductor size: AWG24

Wiring

LEC-CSNA-1: Pin nos. 1 to 26

Connector pin no.		Pair no. of wire	Insulation color	Dot mark	Dot color	Connector pin no.		Pair no. of wire	Insulation color	Dot mark	Dot color	Connector pin no.		Pair no. of wire	Insulation color	Dot mark	Dot color	
A side	1	1	Orange	■	Red	A side	11	6	Orange	■ ■	Red	A side	21	11	Orange	■ ■ ■ ■	Red	
	2			■	Black		12			■ ■	Black		22			■ ■ ■ ■	Black	
	3	2	Light gray	■	Red		13	7	Light gray	■ ■	Red		23	12	Light gray	■ ■ ■ ■	Red	
	4			■	Black		14			■ ■	Black		24			■ ■ ■ ■	Black	
	5	3	White	■	Red		15	8	White	■ ■	Red		25	13	White	■ ■ ■ ■	Red	
	6			■	Black		16			■ ■	Black		26			■ ■ ■ ■	Black	
	7	4	Yellow	■	Red		17	9	Yellow	■ ■	Red							
	8			■	Black		18			■ ■	Black							
	9	5	Pink	■	Red		19	10	Pink	■ ■	Red							
	10			■	Black		20			■ ■	Black							

Cable O.D.		Dimensions/Pin No.					
Product no.	øD	Product no.	W	H	T	U	Pin no. n
LEC-CSNA-1	11.1	LEC-CSNA-1	39	37.2	12.7	14	14

Options

**MECHATROLINK** cable type

LEC-CY**M**-**1**

Motor type

Y

AC servo motor

Cable description

M

MECHATROLINK-Ⅱ cable

U

MECHATROLINK-Ⅲ cable


Cable length (L)

L*1	0.2 m
J	0.5 m
1	1 m
3	3 m

\*1 Not available for the MECHATROLINK-Ⅱ cable

\* LEC-CYM-□ is JEPMC-W6002-□□-E manufactured by YASKAWA CONTROLS CO., LTD.  
\* LEC-CYU-□ is JEPMC-W6012-□□-E manufactured by YASKAWA CONTROLS CO., LTD.


**MECHATROLINK-Ⅱ** cable

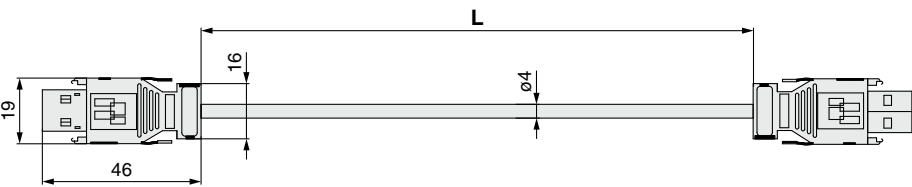

Weight

Product no.	Length [m]	Weight [g]
LEC-CYM-J	0.5	50
LEC-CYM-1	1	80
LEC-CYM-3	3	200

**MECHATROLINK-Ⅲ** cable

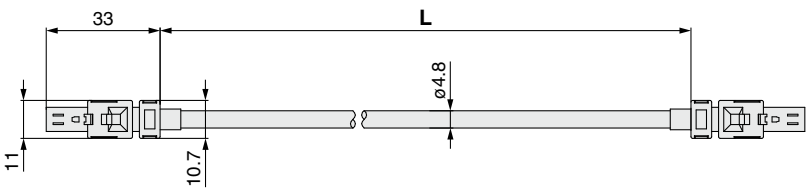


Weight

Product no.	Length [m]	Weight [g]
LEC-CYU-L	0.2	21
LEC-CYU-J	0.5	41
LEC-CYU-1	1	75
LEC-CYU-3	3	205

Terminating connector for **MECHATROLINK-Ⅱ**


**LEC-CYRM**

\* LEC-CYRM is JEPMC-W6022-E manufactured by YASKAWA CONTROLS CO., LTD.



Weight: 10 g

Options

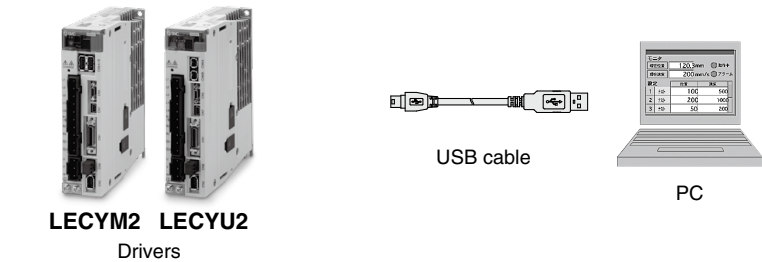

**Setup software (SigmaWin+™) (LECYM/LECYU common)** \* Please download the SigmaWin+™ via our website.  
SigmaWin+™ is a registered trademark or trademark of YASKAWA Electric Corporation.

**Adjustment, waveform display, parameter reading/writing, and test operations can be performed on a PC.**  
**Compatible PCs**

When using the setup software (SigmaWin+™), use an IBM PC/AT compatible PC that meets the following operating conditions.

Hardware Requirements

Equipment		Setup software (SigmaWin+™) Ver. 5	Setup software (SigmaWin+™) Ver. 7
*1, 2, 3, 4 PC	OS	Windows® XP*5, Windows Vista®, Windows® 7 (32-bit/64-bit)	Compatible with 64-bit OS · Windows 11, Windows 10, Windows 8.1*7, Windows 7 SP1*8 Compatible with 32-bit OS · Windows 10, Windows 8.1*7, Windows 7 SP1*8
	Available HD space	350 MB or more (When the software is installed, 400 MB or more is recommended.)	500 MB or more
	Communication interface	Uses the USB port	
Display		XVGA monitor (1024 x 768 or more, used with small font) 256 color or more (65536 color or more is recommended) Connectable with the PCs listed above	Resolution: 1280 x 800 or more (Recommended) Connectable with the PCs listed above
Keyboard		Connectable with the PCs listed above	
Mouse		Connectable with the PCs listed above	
Printer		Connectable with the PCs listed above	
USB cable		LEC-JZ-CVUSB*6	
Other		Adobe Reader Ver. 5.0 or higher (* Excludes Ver. 6.0)	—


- \*1 Windows, Windows Vista®, Windows® 7, Windows® 8.1, Windows® 10, and Windows® 11 are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- \*2 On some PCs, this software may not run properly.
- \*3 Not compatible with 64-bit Windows® XP and 64-bit Windows Vista®
- \*4 For Windows® XP, install and run the software as an administrator.
- \*5 For PCs that have HotfixQ328310 installed, installation of the software is likely to fail. In such cases, install HotfixQ329623 instead.
- \*6 Order a USB cable separately.
- \*7 WindowsUpdate KB2919442, KB2919355, and KB2999226 are required.
- \*8 WindowsUpdate KB2999226 is required.

**Battery (LECYM/LECYU common)**

Replacement batteries must be purchased from YASKAWA Electric Corporation.

**Part no.: JZSP-BA01**  
**manufactured by YASKAWA Electric Corporation**


Battery for replacement  
Absolute position data is maintained by installing the battery to the battery case of the encoder cable.



Weight: 10 g

**USB cable (2.5 m)**  
**LEC-JZ-CVUSB**

\* JZSP-CVS06-02-E manufactured by YASKAWA CONTROLS CO., LTD.  
Cable for connecting the PC and driver when using the setup software (SigmaWin+™)  
Do not use any cable other than this cable.

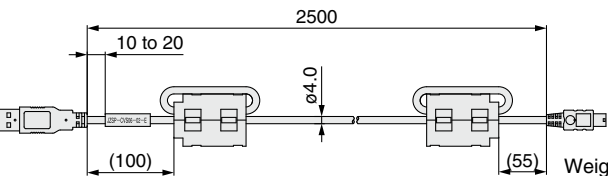


Weight: 150 g

\* The JZSP-BA01 is a single battery that uses a lithium metal battery ER3V.  
When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is to transport such products, it is necessary for them to confirm the latest regulations, or the laws and regulations of the country of transport, on their own in order to apply the proper measures.

**Cable for safety function device (3 m)**  
**LEC-JZ-CVSAF**

\* JZSP-CVH03-03-E manufactured by YASKAWA CONTROLS CO., LTD.  
Cable for connecting the driver and device when using the safety function  
Do not use any cable other than this cable.



Weight: 160 g



# LECSA/LECS□-T/LECY□ Series

## Specific Product Precautions 1

Be sure to read this before handling the products.

Refer to page 1351 for safety instructions and pages 1352 to 1357 for electric actuator precautions.

### Design / Selection

#### Warning

- 1. Be sure to apply the specified voltage.**  
Otherwise, malfunction or breakage may occur. If the applied voltage is lower than the specified voltage, it is possible that the load will not be able to be moved due to an internal voltage drop of the driver. Please check the operating voltage before use.
- 2. Do not operate the product beyond the specifications.**  
Otherwise, a fire, malfunction, or actuator damage may result. Please check the specifications before use.
- 3. Install an emergency stop circuit.**  
Please install an emergency stop outside of the enclosure so that the system operation can be stopped immediately and the power supply can be intercepted.
- 4. In order to prevent any damage caused by the breakdown or malfunction of the driver and its peripheral devices, a backup system should be established in advance by giving a multiple-layered structure or a fail-safe design to the equipment, etc.**
- 5. If the danger of human injury is expected due to abnormal heat generation, smoking, ignition, etc., of the driver and its peripheral devices, cut off the power supply of the product and the system immediately.**
- 6. The parameters of the driver are set to initial values. Please change the parameters according to the specifications of the customer's equipment before use. Refer to the operation manual for parameter details.**

### Handling

#### Warning

- 1. Do not touch the inside of the driver and its peripheral devices.**  
Doing so may cause an electric shock or damage to the driver.
- 2. Do not perform the operation or setting of the product with wet hands.**  
Doing so may cause an electric shock.
- 3. Products with damage or those missing any components should not be used.**  
An electric shock, fire, or injury may result.
- 4. Use only the specified combination between the electric actuator and the driver.**  
Failure to do so may cause damage to the actuator or the driver.
- 5. Be careful not to be hit by workpieces while the actuator is moving.**  
It may cause an injury.
- 6. Do not connect the power supply or power on the product before confirming the area to which the workpiece moves is safe.**  
The movement of the workpiece may cause an accident.
- 7. Do not touch the product when it is energized and for some time after the power has been disconnected, as it is very hot.**  
Doing so may lead to a burn due to the high temperature.
- 8. Before installation, wiring, and maintenance, the voltage should be checked with a tester 5 minutes after the power supply has been turned off.**  
Otherwise, an electric shock, fire, or injury may result.

### Handling

#### Warning

- 9. Static electricity may cause a malfunction or break the driver. Do not touch the driver while power is supplied.**  
When touching the driver for maintenance, take sufficient measures to eliminate static electricity.
- 10. Do not use the product in an area where dust, powder dust, water, chemicals, or oil is in the air.**  
It will cause failure or malfunction.
- 11. Do not use the product in an area where a magnetic field is generated.**  
It will cause failure or malfunction.
- 12. Do not install the product in an environment containing flammable gas, explosive gas, or corrosive gas.**  
It could lead to fire, explosion, or corrosion.
- 13. Radiant heat from strong heat sources, such as a furnace, direct sunlight, etc., should not be applied to the product.**  
It will cause failure of the driver or its peripheral devices.
- 14. Do not use the product in an environment subject to a temperature cycle.**  
It will cause failure of the driver or its peripheral devices.
- 15. Do not use the product in a place where surges are generated.**  
When there are units that generate a large amount of surge around the product (e.g. solenoid type lifters, high-frequency induction furnaces, motors, etc.), this may cause deterioration or damage to the product's internal circuit. Avoid sources of surge generation and crossed lines.
- 16. Do not install the product in an environment under the effect of vibrations and impacts.**  
It will cause failure or malfunction.
- 17. When a surge-generating load, such as a relay or solenoid valve, is driven directly, use a product that incorporates a surge absorption element.**

### Installation

#### Warning

- 1. Install the driver and its peripheral devices on a fire-proof material.**  
Direct installation on or near a flammable material may cause a fire.
- 2. Do not install the product in a place subject to vibrations and impacts.**  
It will cause failure or malfunction.
- 3. The driver should be mounted on a vertical wall in a vertical direction. Also, be sure not to cover the driver's suction/exhaust ports.**
- 4. Install the driver and its peripheral devices on a flat surface.**  
If the mounting surface is distorted or uneven, an unacceptable force may be added to the housing, etc., causing problems.





# LECSA/LECS□-T/LECY□ Series

## Specific Product Precautions 2

Be sure to read this before handling the products.

Refer to page 1351 for safety instructions and pages 1352 to 1357 for electric actuator precautions.

### Power Supply

#### ⚠ Caution

1. Use a power supply that has low noise between lines and between the power and ground.  
In cases where noise is high, an isolation transformer should be used.
2. To prevent lightning surges, appropriate measures should be taken. Ground the surge absorber for lightning separately from the grounding of the driver and its peripheral devices.

### Wiring


#### ⚠ Warning

1. The driver will be damaged if a commercial power supply (100/200 V) is added to the driver's servo motor power (U, V, and W). Be sure to check wiring for mistakes when the power supply is turned on.
2. Connect the ends of the U, V, and W wires of the motor cable correctly to the phases (U, V, and W) of the servo motor power. If these wires do not match up, the servo motor cannot be controlled.

### Grounding

#### ⚠ Warning

1. For grounding the actuator, connect the copper wire of the actuator to the driver's protective earth (PE) terminal and connect the copper wire of the driver to the earth via the control panel's protective earth (PE) terminal. Do not connect them directly to the control panel's protective earth (PE) terminal.

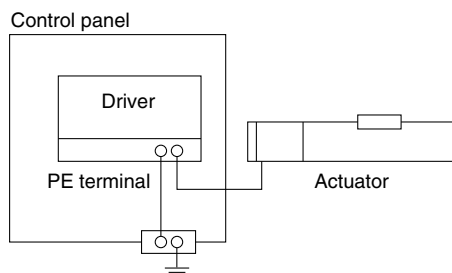

2. In the unlikely event that a malfunction is caused by the ground, please disconnect it.

### Maintenance

#### ⚠ Warning

1. Perform a maintenance and inspection periodically.  
Confirm wiring and screws are not loose.  
Loose screws or wires may cause unintentional malfunction.
2. Conduct an appropriate functional inspection after completing the maintenance and inspection.  
At times where the equipment or machinery does not operate properly, conduct an emergency stop of the system. Otherwise, an unexpected malfunction may occur and it will become impossible to ensure safety. Conduct a test of the emergency stop in order to confirm the safety of the equipment.
3. Do not disassemble, modify, or repair the driver and its peripheral devices.
4. Do not put anything conductive or flammable inside the driver.  
It may cause a fire.
5. Do not conduct an insulation resistance test or withstand voltage test on this product.
6. Ensure sufficient space for maintenance activities.  
Design the system allowing the required space for maintenance and inspection.