


Ionizer




Potential amplitude: **25 V or less** ^{Note 1)}

Rapid neutralization of static electricity: Fastest time: **0.1 seconds** ^{Note 2)}

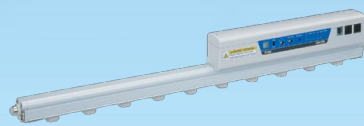

Dual AC type *Series IZS42*

Potential amplitude of the workpiece is reduced with Dual AC type.

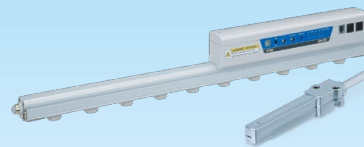

Feedback sensor type *Series IZS41*

Rapid neutralization of static electricity by a feedback sensor



Standard type *Series IZS40*

Simple operation: Can be controlled by powering the ionizer ON.

Note 1) IZS42, Installation height: 300 mm

Note 2) Conditions/With feedback sensor, Discharge time from 1000 V to 100 V
Discharged object: Charged plate (150 mm x 150 mm, capacitance 20 pF)
Installation distance: 200 mm (Tungsten electrode needle with air purge)

Series *IZS40/41/42*

⚠ According to the establishment of the JIS Glossary of Terms, the applicable terms were changed to JIS terms. Refer to the JIS C 61340-4-7 for more details.



CAT.ES100-97B ^A


Dual AC type Series IZS42 (Potential amplitude reduction specification)

Potential amplitude: 25 V or less 80% reduction compared to the conventional model
 (Compared to the IZS31 series at the installation height of 300 mm)

Potential amplitude is reduced with **SMC independent Dual AC type sensor**.


Static neutralization in consideration of damage to a device which is sensitive to electrostatic discharge (ESD) can be achieved.

Potential amplitude applied to the applicable workpiece is reduced even if the workpiece is mounted within close proximity of the ionizer.

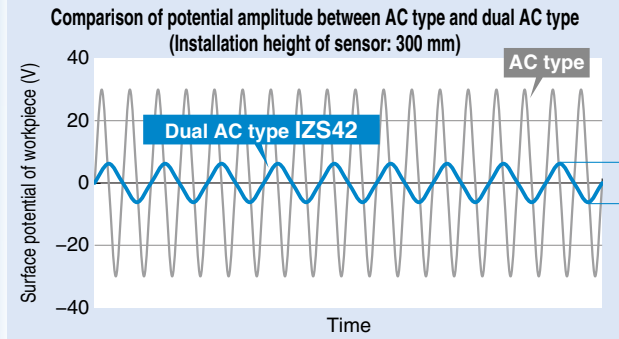


Independent Dual AC type is implemented.

Dual AC type/IZS42

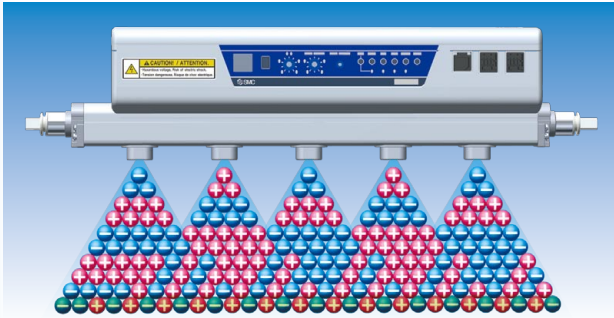


Discharges + ions and - ions at the same time to allow the + and - ions to reach the workpiece evenly, thereby reducing the potential amplitude.

Neutralizing static electricity on a glass substrate

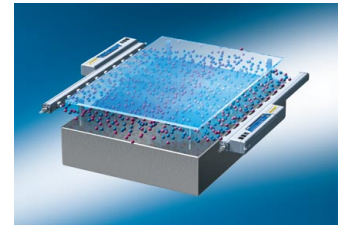


Prevents the breakage of glass substrates due to the static electricity which is generated when the substrate is lifted from the surface plate.

AC type

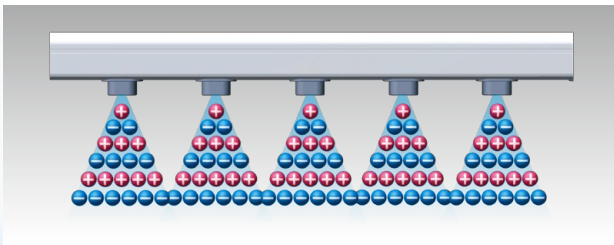

+ ion and - ion layers reach the workpiece alternately, which increases the potential amplitude.

Neutralizing static electricity on an electric substrate

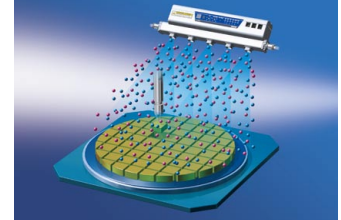

Prevents the breakage of electric substrates due to the static electricity which is generated when the substrates are picked up after dicing.

Standard type Series IZS40


Simple operation: Can be controlled by powering the ionizer ON.

Discharge time = 3.2 seconds (41% shortened)
when installed at long distance (1000 mm)



Static neutralization data when voltage is reduced from 1000 V to 100 V.

Conditions: Ion generation frequency 30 Hz Supply pressure: 0.1 MPa High speed static neutralization cartridge



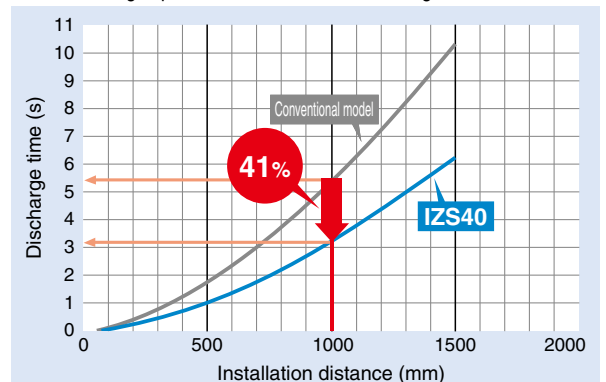


Feedback sensor type Series IZS41 (High speed static neutralization specification)


Rapid neutralization of static electricity by a feedback sensor

Note) An auto balance sensor is installed.

The discharge speed has been increased by reading the workpiece's electrostatic potential by the feedback sensor (option) and continuously emitting ions with a reverse polarity.

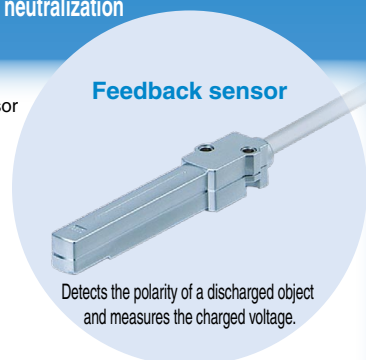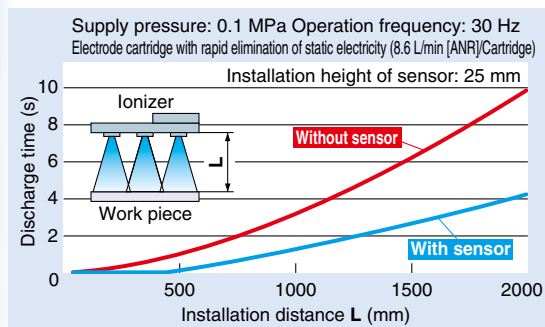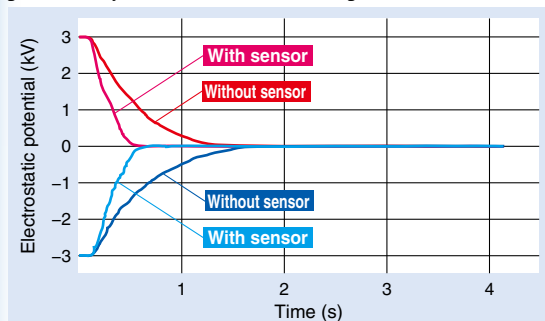


Neutralizing static electricity on an electric substrate

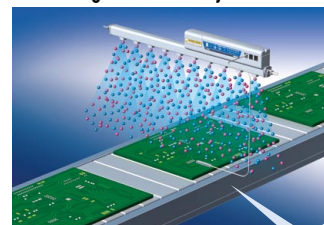

- Prevents element disruption due to discharge.
- Prevents adhesion of dust.


Neutralizing static electricity on a glass substrate

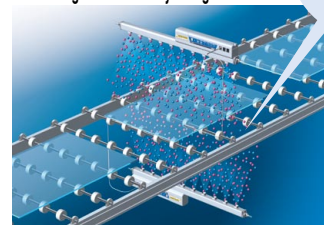

- Prevents breakage due to adhesion and discharge.
- Prevents adhesion of dust.

Run mode after static neutralization (electrostatic potential: within ± 30 V) can be selected.

- **Energy saving run mode** Stops generating ions after static neutralization to reduce power consumption.
 - **Continuous static neutralization run mode** After static neutralization, the ionizer switches to AC mode. Continues to neutralize static electricity to make it approach 0 V even if the ion balance is within ± 30 V.
- Continuous static neutralization run mode**

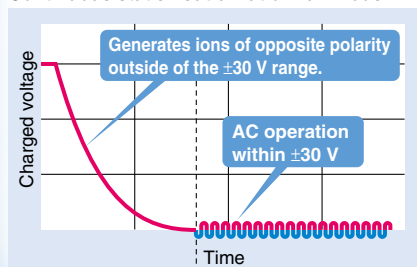


		Mode	Ion emission waveform	
Sensing AC	Energy saving run	+	—	Stop
	Continuous static neutralization run	+	—	—
AC (Without sensor)		+	—	—
		-	—	—
Workpiece electrification			++++	Static neutralization completion

- AC adapter power supply is available.




e-con connector is used.

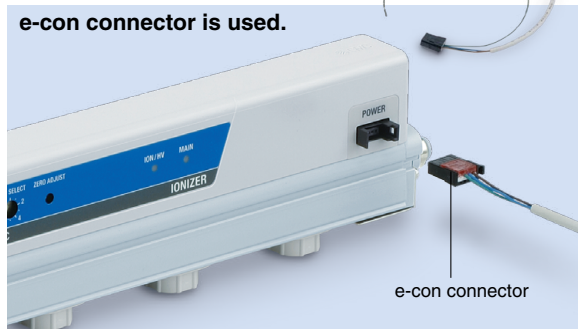


Suitable for static neutralization of resin and rubber pieces (small parts).

Neutralizing static electricity on PET bottles

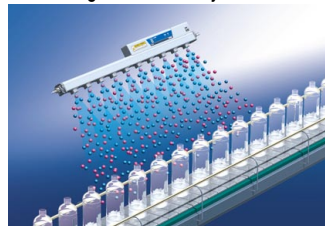

- Trip-resistance during conveying
- Prevents adhesion of dust.

Neutralizing static electricity on molded goods

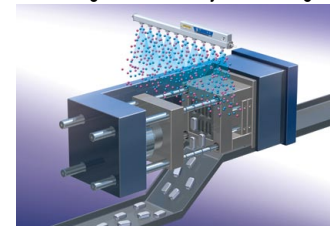



- Improves detachability of molded goods from a die.

Reduction of adjustment and maintenance labor by auto balance sensor IZS 41 IZS 42

Built-in type (Standard)

The sensor is installed within the ionizer body and may be mounted anywhere. The offset voltage (ion balance) in the static neutralization area is controlled so that the voltage is maintained at a constant value by monitoring the ions emitted from the ionizer using the ground line, and adjusting the + and - ion supply rate.

Effect of autobalance sensor (Image)

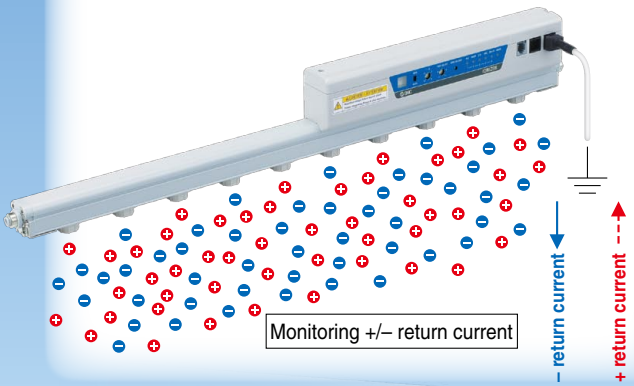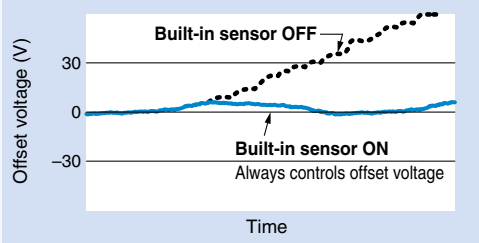


High accuracy type (Option)

- The ion balance near the workpiece is accurately adjusted.
- Reduces the variation in the offset voltage of the static neutralization area due to the effect from the installation height and disturbance.

Auto balance sensor


Measures the nearest offset voltage.

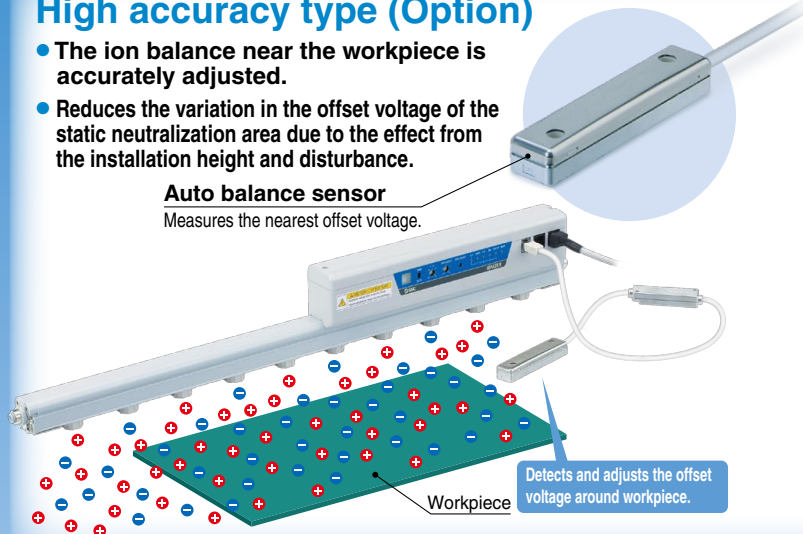

Low maintenance emitter cartridges are used.

IZS 40 IZS 41 IZS 42

- Minimizes contamination of emitters by discharging compressed air at the surface of the emitters.

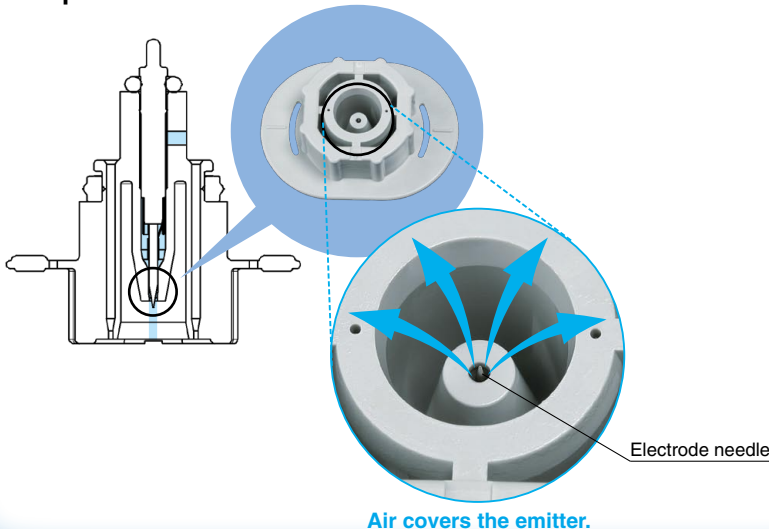

- 2 types of emitter materials

Tungsten


: General-purpose emitter excellent against wear

Single crystal silicon

: Emitter specialized in static neutralization of silicon wafers




Tungsten (Emitter cartridge color: White)

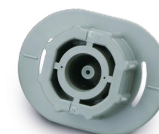

Silicon (Emitter cartridge color: Gray)

- The mode can be selected from “Manual Run” mode which performs adjustment only when connected, and “Automatic Run” mode which always performs adjustment while connected.

Effect of autobalance sensor (Image)

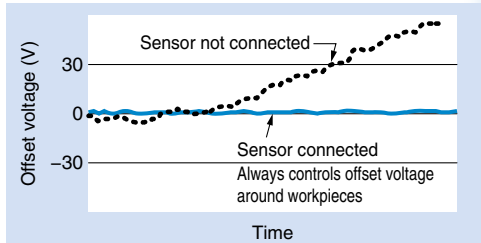

Setting ionizer with remote controller **IZS 41** **IZS 42**


- May be used to adjust and set several ionizers remotely.
- Can recognize and control up to 16 ionizers through address setting.
- Frequency setting
- Offset voltage adjustment
- Maintenance detection alarm level can be adjusted (3 levels).
- Built-in sensor valid/invalid may be selected.



Transition wiring may be used. **IZS 41** **IZS 42**

Total number of ionizers that may be connected IZS41: Max. 8 units. IZS42: Max. 5 units.
 <Conditions> Bar length 340 to 2500 mm, Power supply cable 3 m, Transition wiring cable 2 m


Reduces man hours required for connecting wires to the power supply.

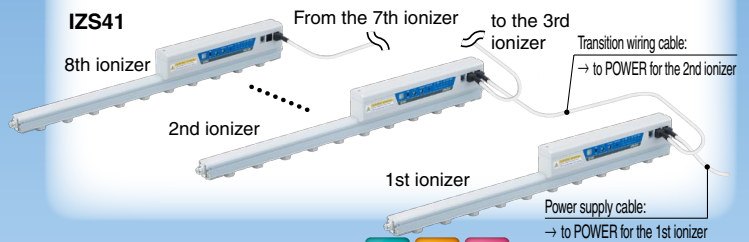

Safety functions **IZS 40** **IZS 41** **IZS 42**

- Emitter cartridge drop prevention function

Locking by double-action

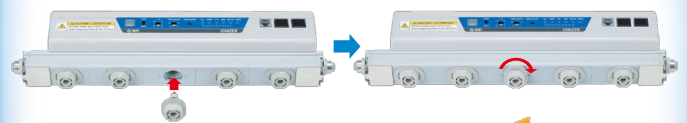

- Drop prevention cover


Can even more reliably prevent emitter cartridges from dropping off.



When attached to the body

- High speed static neutralization cartridges and energy saving static neutralization cartridges are available.

High speed de-ionizing cartridge

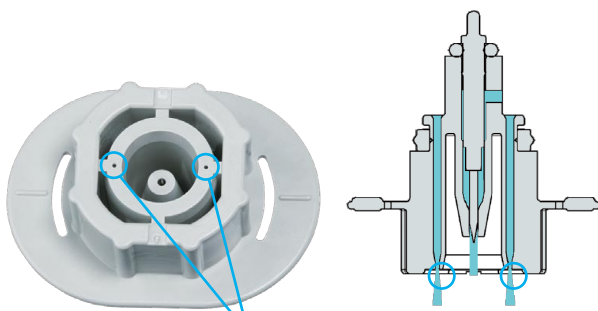


Ions are transferred to the workpieces efficiently by using two pneumatic nozzles to improve the static neutralization performance.

Energy saving type de-ionizing cartridge

The flow rate consumption of the energy-saving static neutralization cartridge is **approximately 50%** less than that of the high speed static neutralization cartridge.

The discharge speed is reduced by approximately 20 to 30%.

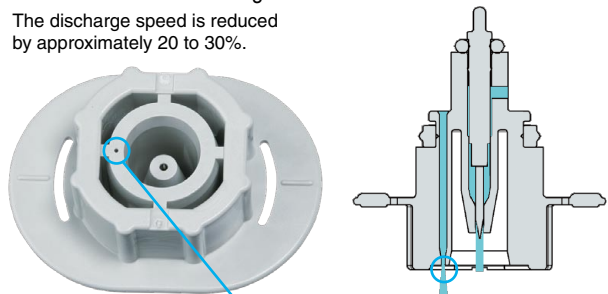


Neutralization of static electricity with reduced air consumption through the use of one pneumatic nozzle.

Ionizer Series IZS40/41/42

Models and Functions

Series		IZS42	IZS41	IZS40
Method of applying voltage		Dual AC	AC, Sensing AC, DC	AC, DC
Auto balance sensor	Built-in type (Standard)	●	●	—
	High accuracy type (Option)	●	●	—
Feedback sensor (Option)		—	●	—
I/O		●	●	—
Transition wiring may be used. Note 1)		●	●	—
Maintenance detector		●	●	—
Incorrect high voltage warning		●	●	●
Low maintenance emitter		●	●	●
Emitter cartridge	Energy saving type de-ionizing	●	●	●
	High speed de-ionizing	●	●	●
With One-touch fitting (ø6, ø8, ø10)		●	●	●
Bracket mount		●	●	●
Non-standard bar length (Made to Order)		●	●	●

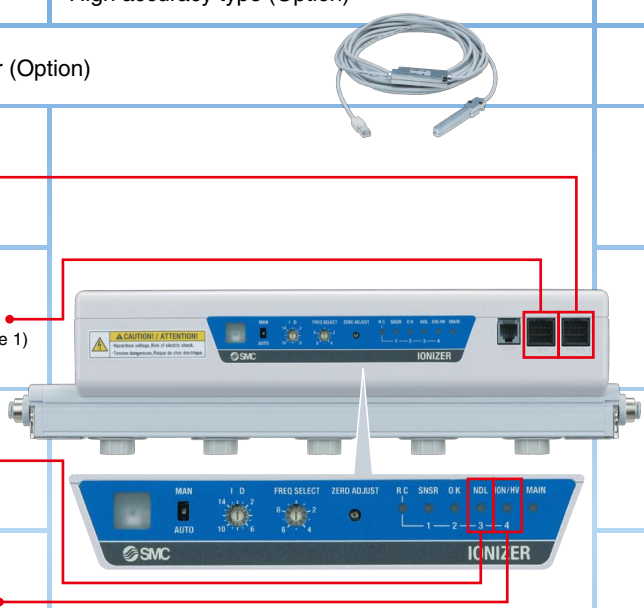

Note 1) Order transition wiring separately.


Accessories sold separately (per series)

Series	IZS42	IZS41	IZS40
Remote controller	●	●	—
AC adapter	●	●	●
Drop prevention cover	●	●	●
Cleaning kit	●	●	●

Application Examples


Neutralizing static electricity from films

- Prevents adhesion of dust. · Prevents winding failure due to wrinkles etc.

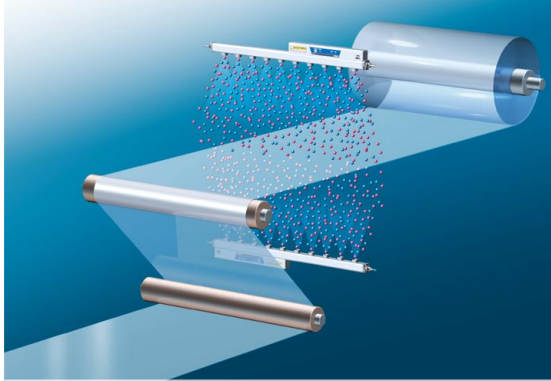


Neutralizing static electricity on film molded goods

- Prevents attaching to conveyer. · Prevents dispersion of finished goods.

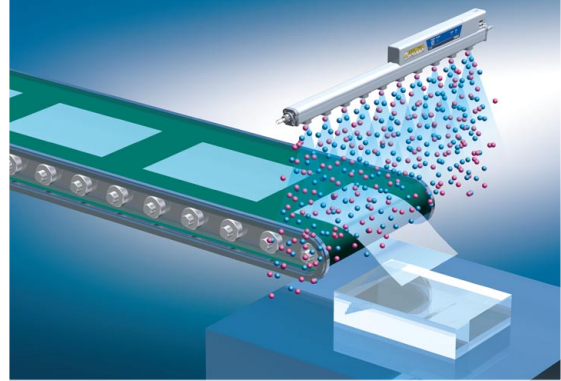


Neutralizing static electricity during wafer transfer

- Prevents breakage due to discharge between wafers and hands.

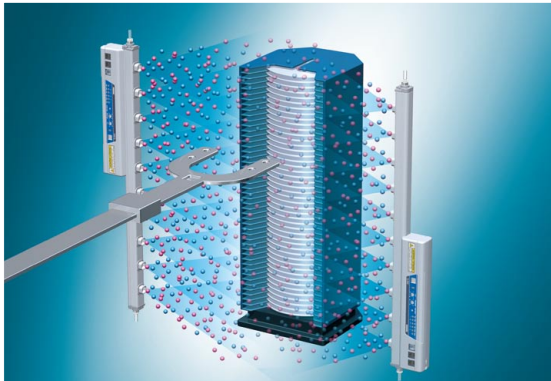


Neutralizing static electricity from packing films

- Prevents the filled substance from adhering to the packing film. · Reduces packing mistakes.

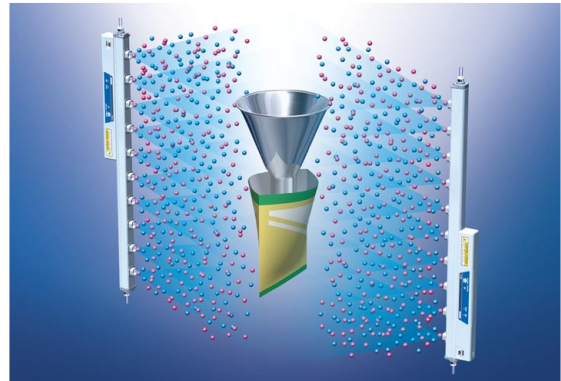


Neutralizing static electricity from lens

- Removes dust from lens. · Prevents adhesion of dust.

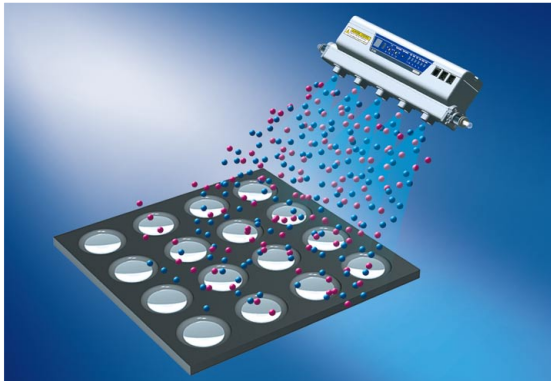

Neutralizing static electricity from parts feeder

- Prevents clogging of parts feeder.

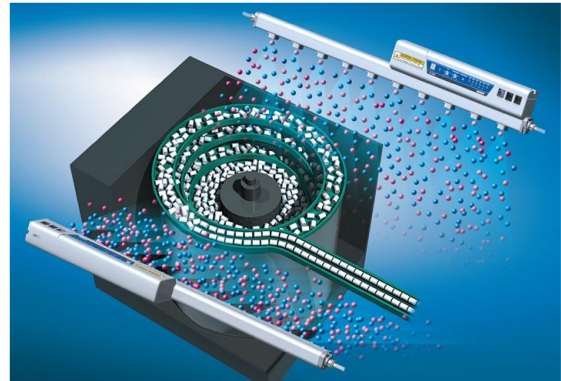

Series IZS40/41/42

Technical Data


Note) Static neutralization features are based on the data using the charged plate (size: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD, STM3.1-2006). For "Sensing AC" mode, the installation height of the sensor is 25 mm. Use this as a guideline purpose only for model selection because the value varies depending on the material and/or size of a subject.

Static Neutralization Characteristics

① Installation Distance and Discharge Time (Discharge Time from 1000 V to 100 V)


IZS40, 41

1) Without air purge

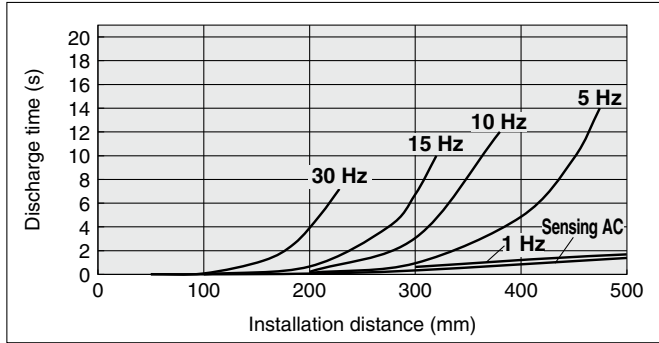


2) With high speed de-ionizing cartridge, With air purge

Supply pressure: 0.1 MPa (8.6 L/min [ANR] per cartridge)

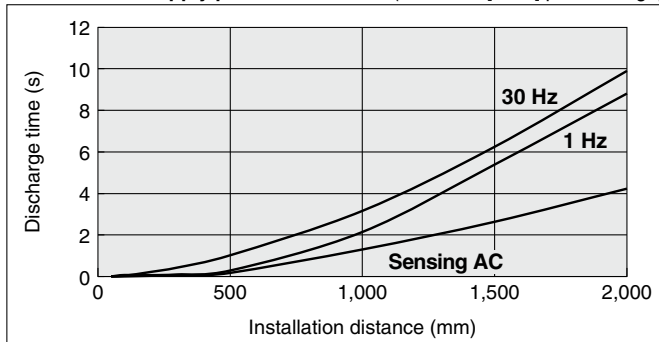


3) With energy saving type de-ionizing cartridge, With air purge


Supply pressure: 0.1 MPa (4.3 L/min [ANR] per cartridge)

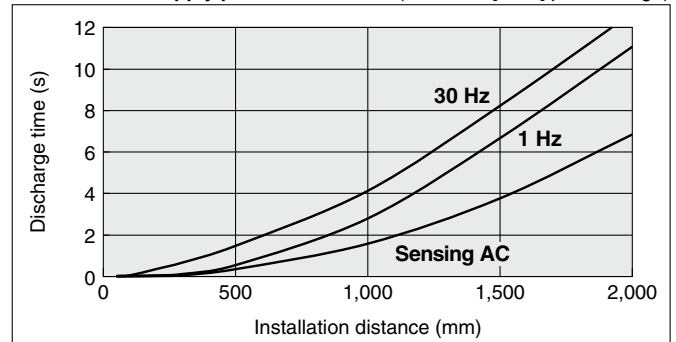


Supply pressure: 0.3 MPa (17.6 L/min [ANR] per cartridge)

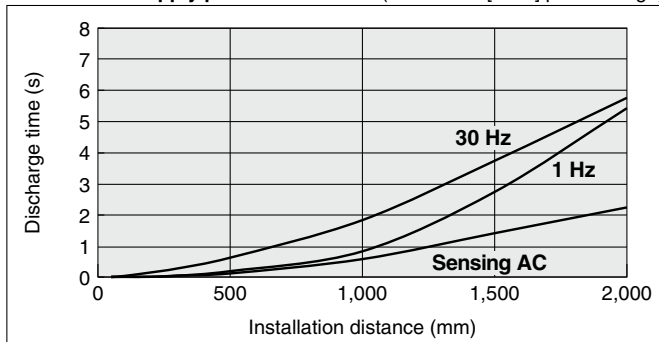


Supply pressure: 0.3 MPa (8.6 L/min [ANR] per cartridge)

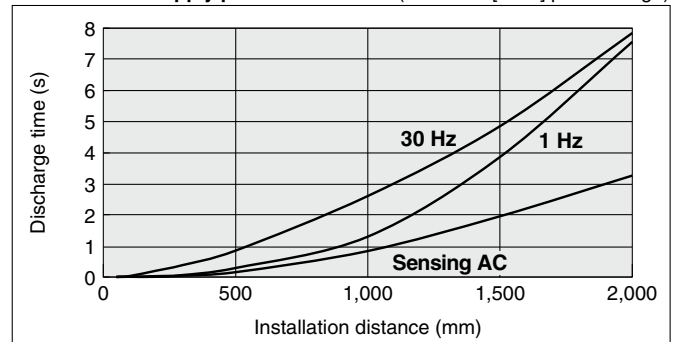

Supply pressure: 0.5 MPa (26.4 L/min [ANR] per cartridge)

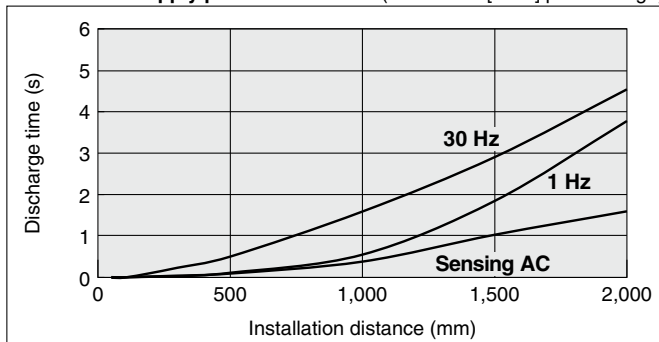


Supply pressure: 0.5 MPa (13.3 L/min [ANR] per cartridge)

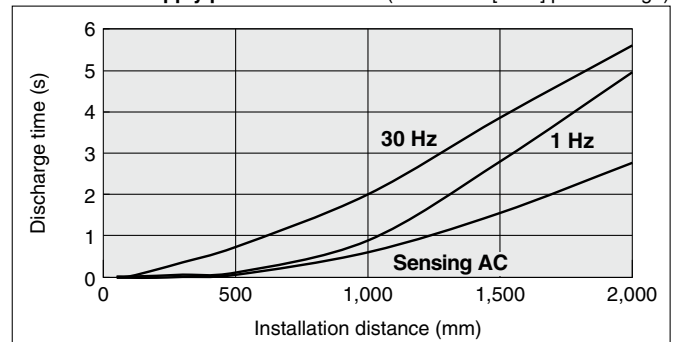


IZS42

1) Without air purge

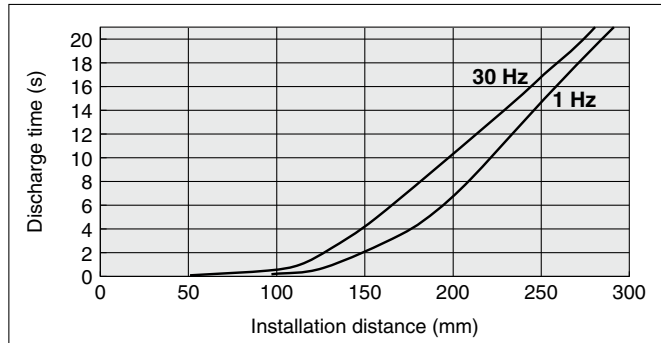


2) With high speed de-ionizing cartridge, With air purge

Supply pressure: 0.1 MPa (8.6 L/min [ANR] per cartridge)

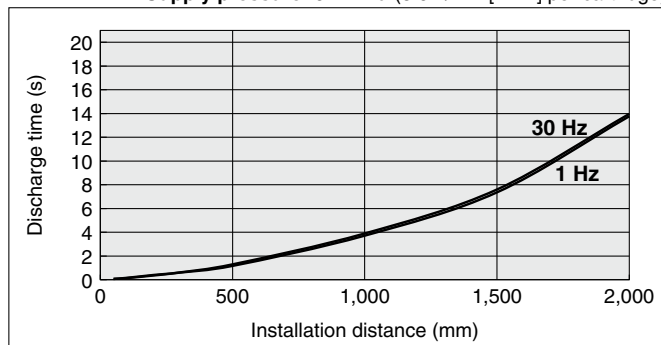


3) With energy saving type de-ionizing cartridge, With air purge


Supply pressure: 0.1 MPa (4.3 L/min [ANR] per cartridge)

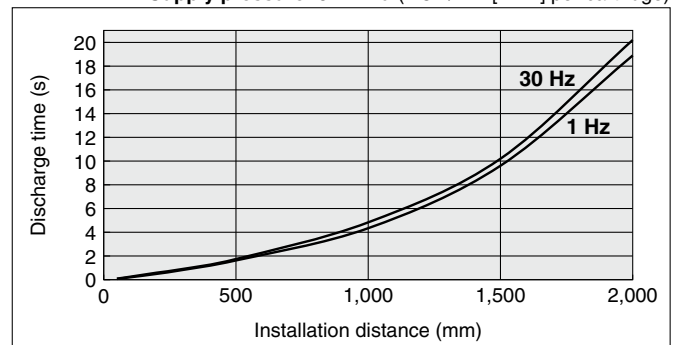


Supply pressure: 0.3 MPa (17.6 L/min [ANR] per cartridge)

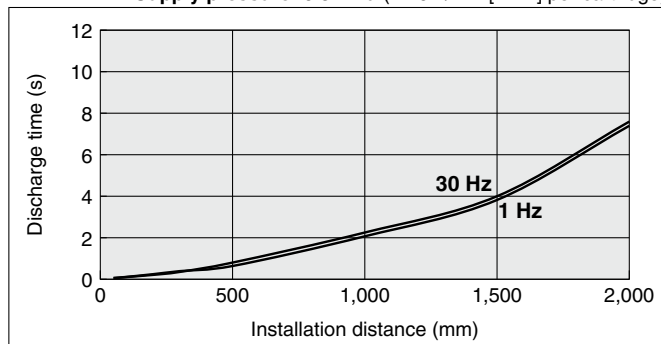


Supply pressure: 0.3 MPa (8.6 L/min [ANR] per cartridge)

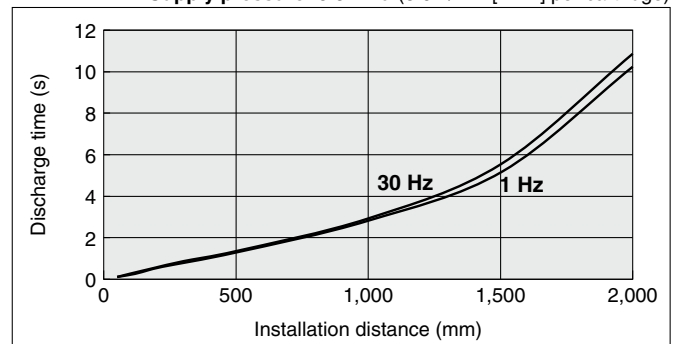

Supply pressure: 0.5 MPa (26.4 L/min [ANR] per cartridge)

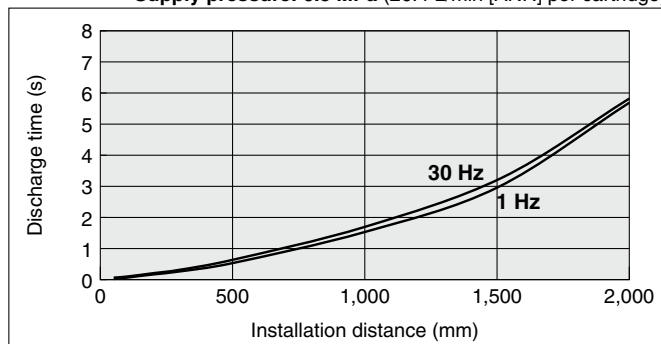

Supply pressure: 0.5 MPa (13.3 L/min [ANR] per cartridge)

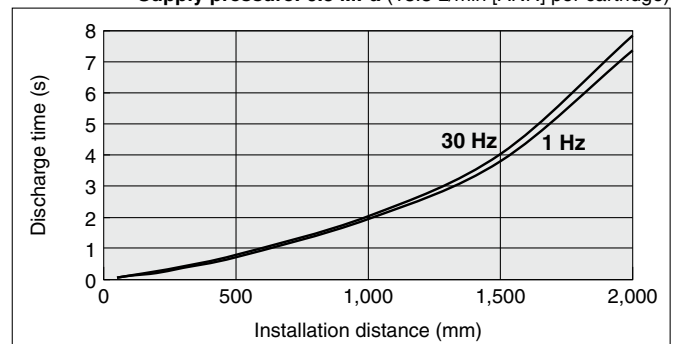

Series IZS40/41/42

Static Neutralization Characteristics



Note) Static neutralization features are based on the data using the charged plate (size: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD, STM3.1-2006). Use this as a guideline purpose only for model selection because the value varies depending on the material and/or size of a subject.

② Static Neutralization Range



IZS40, 41

Frequency: 30 Hz



1) Supply pressure: 0 MPa

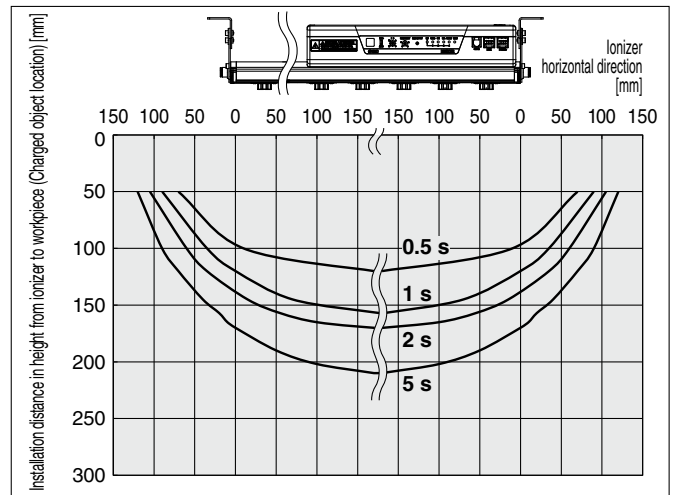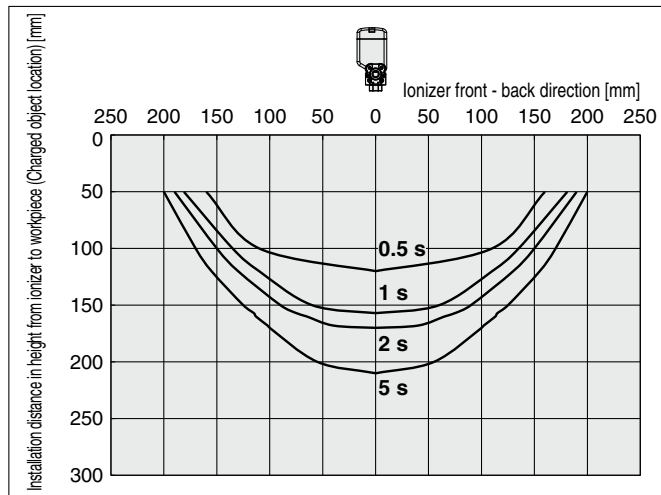

2) With high speed de-ionizing cartridge, Supply pressure: 0.3 MPa

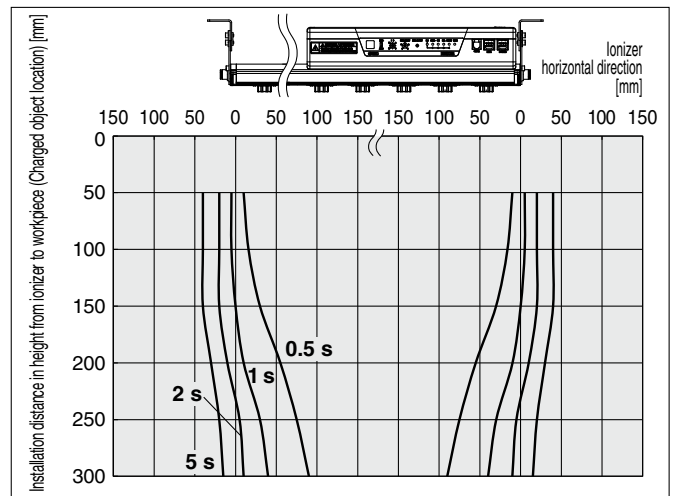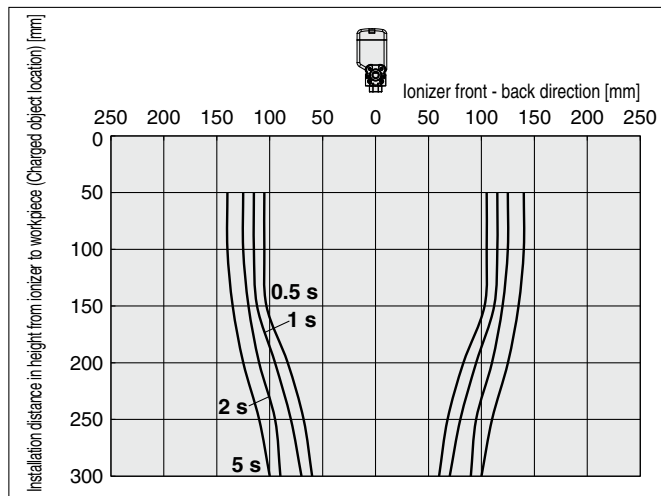



3) With energy saving type de-ionizing cartridge, Supply pressure: 0.3 MPa

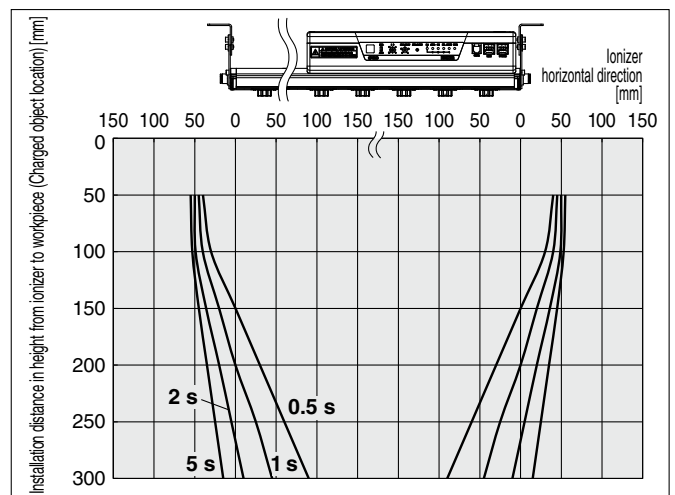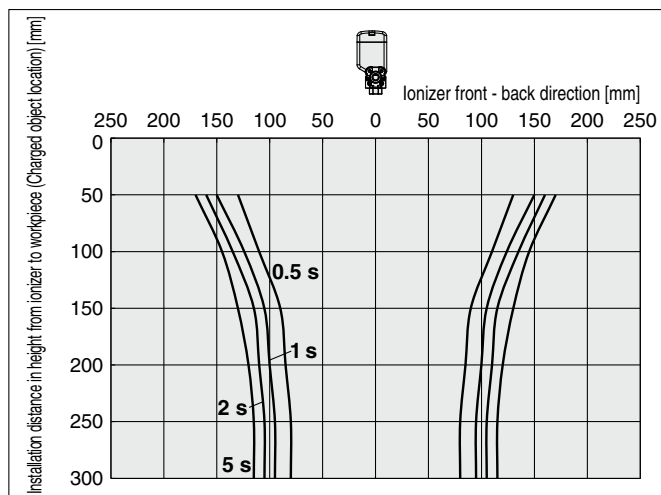



IZS42

Frequency: 30 Hz



1) Supply pressure: 0 MPa

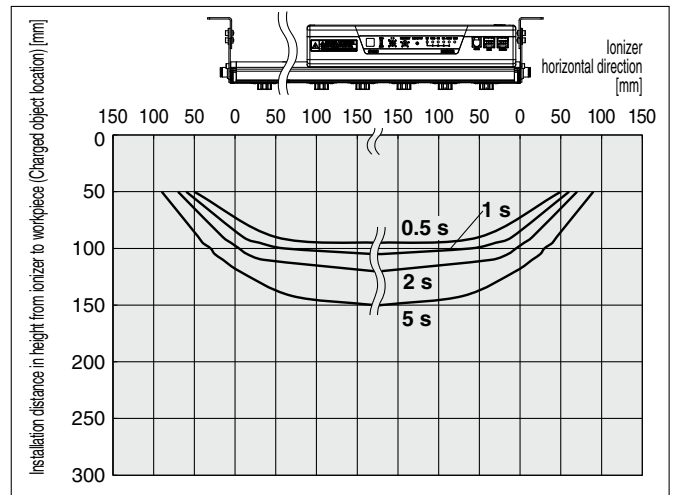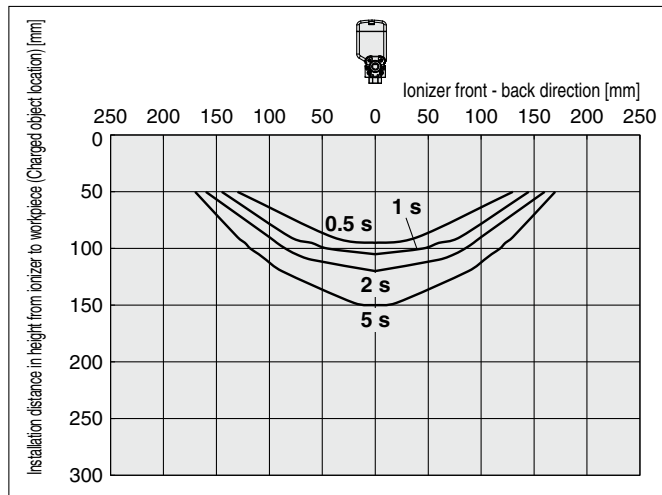

2) With high speed de-ionizing cartridge, Supply pressure: 0.3 MPa

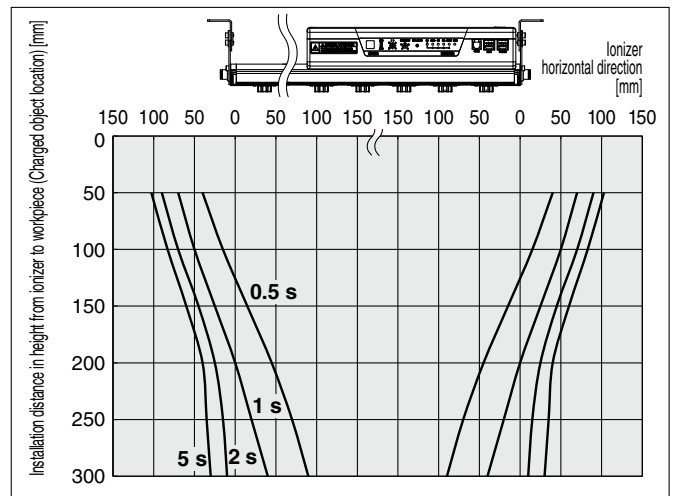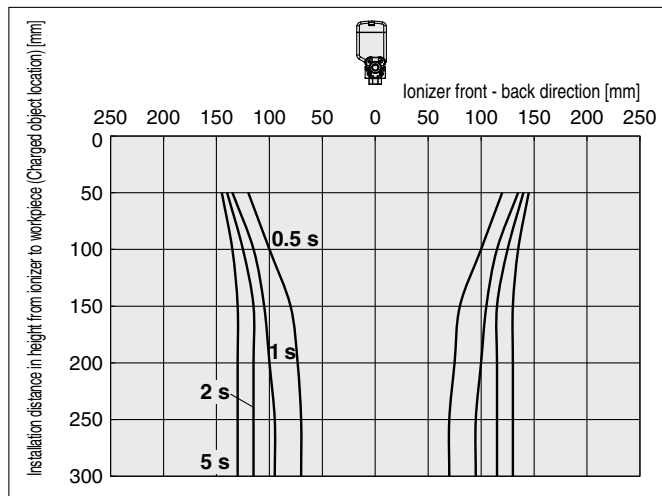

3) With energy saving type de-ionizing cartridge, Supply pressure: 0.3 MPa

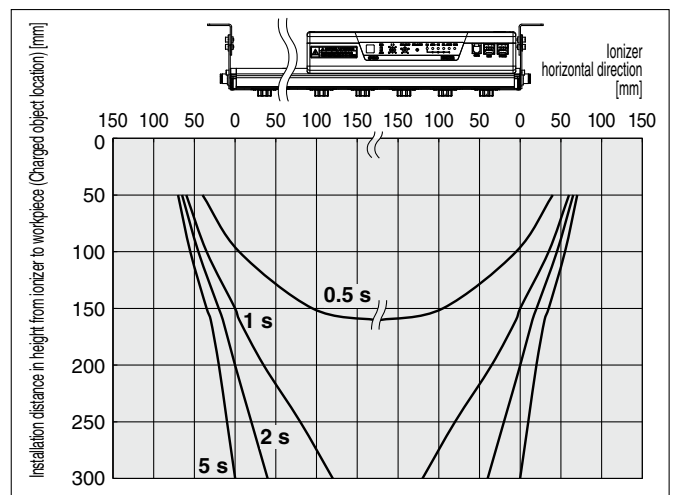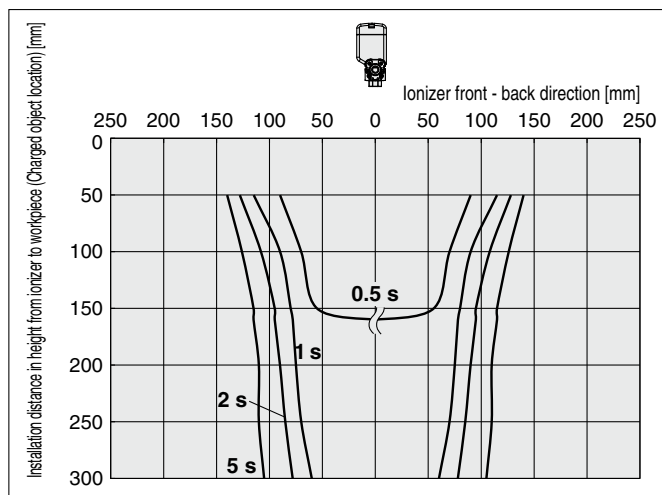

Series IZS40/41/42

Static Neutralization Characteristics


Note) Static neutralization features are based on the data using the charged plate (size: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD, STM3.1-2006). Use this as a guideline purpose only for model selection because the value varies depending on the material and/or size of a subject.

③ Potential Amplitude


IZS40, 41

Supply pressure: 0.3 MPa

With high speed de-ionizing cartridge

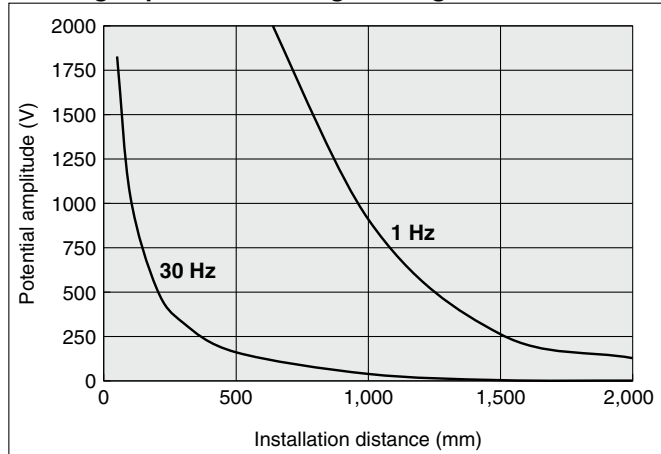


With energy saving type de-ionizing cartridge

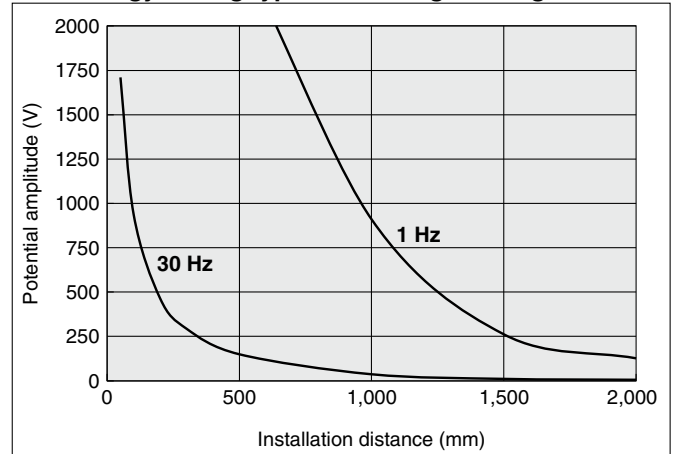


IZS42

Supply pressure: 0.3 MPa

With high speed de-ionizing cartridge

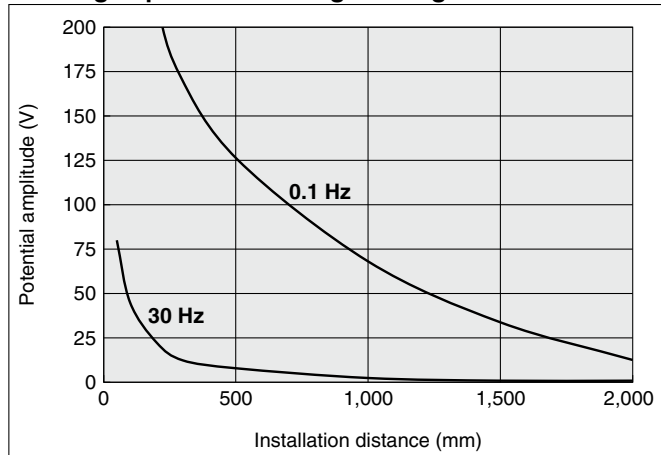


With energy saving type de-ionizing cartridge

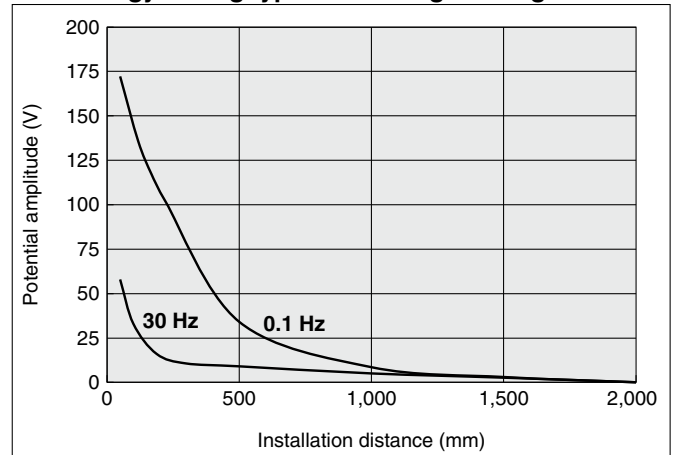


④ **Flow Rate — Pressure Characteristics**

With high speed de-ionizing cartridge

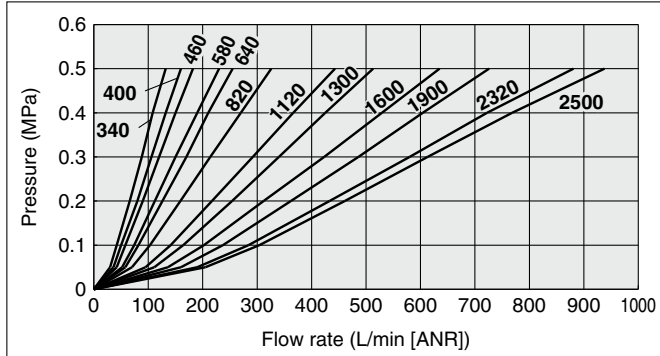


With energy saving type de-ionizing cartridge

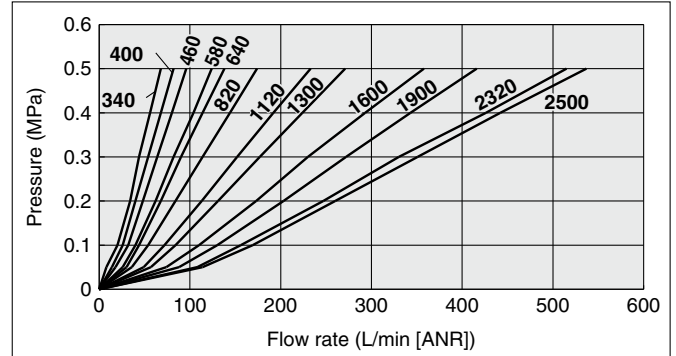


How to measure


a) **Single side air supply (Connecting tube: O.D. $\phi 6$ x I.D. $\phi 4$)**
(IZS4□-340, 400, 460, 580, 640)

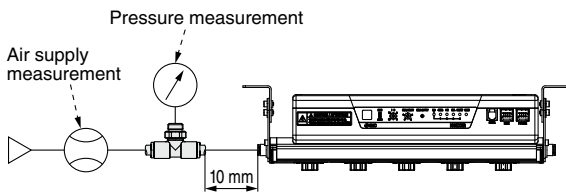

b) **Both sides air supply (Connecting tube: O.D. $\phi 6$ x I.D. $\phi 4$)**
(IZS4□-820, 1120, 1300)

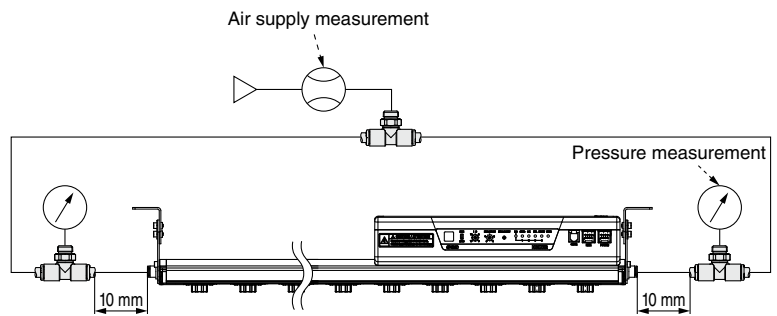


c) **Both sides air supply (Connecting tube: O.D. $\phi 8$ x I.D. $\phi 5$)**
(IZS4□-1600, 1900, 2320, 2500)

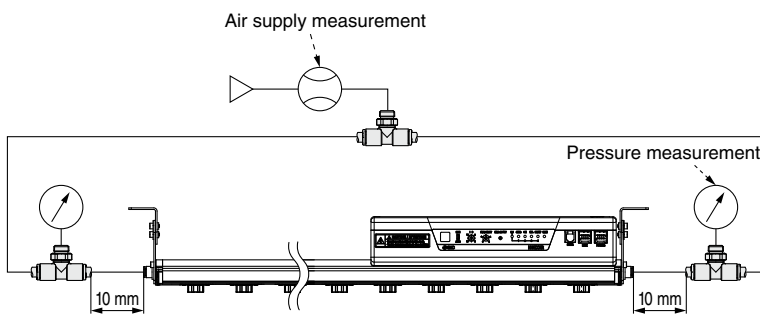


Feedback Sensor Detection Range

The relationship between the feedback sensor's installation distance and the detection range is as follows:

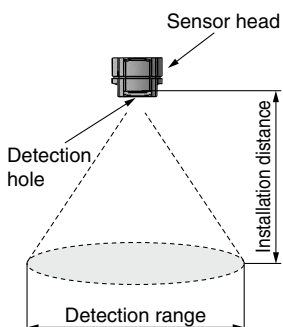

Installation distance	Detection range
10	45
25	100
50	180

Enlarged view of sensor head

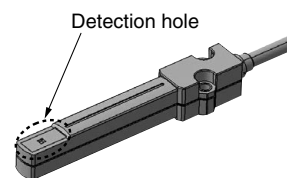

Ionizer



Series IZS40/41/42

How to Order

Type
40 Standard type

Type 40 IZS 40 - 1600 [] [] - 10 B - []

Type 41/42 IZS 42 - 1600 [] [] [] - 10 B [] - []

Bar type
41 Feedback sensor type
42 Dual AC type

Type
41 Feedback sensor type
42 Dual AC type

Emitter cartridge type/Emitter material

Symbol	Emitter cartridge type	Emitter material
Nil	High speed de-ionizing cartridge	Tungsten
C	Energy saving type de-ionizing cartridge	Silicon
J		Tungsten
K		Silicon

Bar length

Symbol	Bar length (mm)
340	340
400	400
460	460
580	580
640	640
820	820
1120	1120
1300	1300
1600	1600
1900	1900
2320	2320
2500	2500

Input/Output specifications

Symbol	Input/Output
Nil	NPN
P	PNP

* Since input/output function cannot be used, specify "Nil" when the AC adapter is being used.

Power supply cable

Symbol	Power supply cable
Nil	With power supply cable (3 m)
Z	With power supply cable (10 m)
N	Without power supply cable

* When only an e-con connector for the IZS40 is required, specify "N", and order a part (Model: ZS-28-C) separately.
* To use AC adapter, specify "N", and select AC adapter sold separately (on page 16). (A cord is attached to the AC adapter.)

Sensor

Symbol	Sensor	IZS41	IZS42
Nil	Built-in sensor	●	●
F	Feedback sensor	●	—
G	Auto balance sensor [High accuracy type]	●	●

* Feedback sensor cannot be used for the IZS42.

Bracket

Symbol	Bracket
Nil	Without bracket
B	With bracket*

* The number of intermediate brackets differ depending on the bar length. (Refer to the below table.)

Number of brackets

Bar length symbol	End bracket	Intermediate bracket
340 to 760	With 2 pcs.	None
820 to 1600		With 1 pc.
1660 to 2380		With 2 pcs.
2440 to 2500		With 3 pcs.

One-touch fitting

Symbol	One-touch fitting
06	ø6 One-touch fitting
08	ø8 One-touch fitting
10	ø10 One-touch fitting

* Refer to the table below for selection of One-touch fittings.

Recommended piping port size (mm)

One-touch fitting symbol	Applicable tube O.D. mm	Bar length symbol											
		340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
06	ø6	○	○	○	○	○	●	●	●	—	—	—	—
08	ø8	—	—	—	—	—	○	○	○	●	●	●	●
10	ø10	—	—	—	—	—	—	—	—	○	○	○	○

○ : With piping on one side
● : With piping on both sides

Made to Order

Symbol	Contents	Specifications
-X10	Non-standard bar length	Symbol for producible bar length: 460 + 60 x n (n: Integer from 1 to 34) (For 2, 3, 6, 11, 14, 19, 24, 31 and 34 for n, use a standard model.)

Ordering example) IZS 40 - 1660 [] [] - 10 B - X10

IZS 42 - 1660 [] [] [] - 10 B [] - X10

Type
41
42

Bar length

520	1000	1420	1780	2140
700	1060	1480	1840	2200
760	1180	1540	1960	2260
880	1240	1660	2020	2380
940	1360	1720	2080	2440

Symbol	Contents	Specifications
-X14	Model with drop prevention cover	The main unit is shipped fitted with a drop prevention cover available as an option.

Specifications

Ionizer model	IZS40	IZS41-□□ (NPN)	IZS41-□□P (PNP)	IZS42-□□ (NPN)	IZS42-□□P (PNP)
Ion generation method	Corona discharge type				
Method of applying voltage	AC, DC	AC, Sensing AC, DC		Dual AC	
Applied voltage	±7,000 V			±6,000 V	
Offset voltage <small>(Note)</small>	Within ±30 V				
Air purge	Fluid	Air (Clean dry air)			
	Operating pressure	0.5 MPa or less			
	Proof pressure	0.7 MPa			
	Connecting tube O.D.	ø6, ø8, ø10			
Current consumption	330 mA or less	440 mA or less (Sensing AC, Automatic run/Manual run: 480 mA or less)		700 mA or less (Automatic run/Manual run: 740 mA or less)	
Power supply voltage	24 VDC ±10% (100 to 240 VAC: AC adapter option)				
Power supply voltage in a transition wiring	—	24 VDC to 26.4 VDC			
Input signal	Discharge stop signal	Connected to 0 V	Connected to +24 V	Connected to 0 V	Connected to +24 V
	Maintenance detection signal	—	Voltage range: 5 VDC or less Current consumption: 5 mA or less	Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less	Voltage range: 5 VDC or less Current consumption: 5 mA or less
Output signal	Maintenance detection signal	—	Max. load current: 100 mA Residual voltage 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC	Max. load current: 100 mA Residual voltage 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC	Max. load current: 100 mA Residual voltage 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC
	Error signal	—	Max. load current: 100 mA Residual voltage 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC	Max. load current: 100 mA Residual voltage 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC	Max. load current: 100 mA Residual voltage 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC
Function	Incorrect high voltage ion discharge detection (Ion discharge stops during detection)	Offset voltage control with the built-in sensor, maintenance detection, incorrect high voltage ion discharge detection (stops discharge during detection), ion discharge stop input, transition wiring, remote controller (sold separately), external sensor connection			
Effective de-ionizing distance	50 to 2000 mm	50 to 2000 mm (Sensing AC mode: 200 to 2000 mm, Manual run/Automatic run: 100 to 2000 mm)		50 to 2000 mm (Manual run/Automatic run: 100 to 2000 mm)	
Ambient and fluid temperature	0 to 40°C				
Ambient humidity	35 to 80% Rh (with no condensation)				
Material	Ionizer cover: ABS, Emitter cartridge: PBT, Emitter: Tungsten, Single crystal silicon				
Impact resistance	100 m/s ²				
Standards/Directive	CE (EMC Directive: 2004/108/EC)				

Note) When the air purge is performed between a charged object and an ionizer at a distance of 300 mm

Number of emitter cartridges/Bar weight

Bar length symbol	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
Number of emitter cartridges	5	6	7	9	10	13	18	21	26	31	38	41
Weight (g)	IZS40	590	640	690	790	830	980	1220	1360	1600	1840	2170
	IZS41	740	790	840	940	980	1130	1370	1510	1750	1990	2320
	IZS42	860	910	960	1060	1100	1250	1490	1630	1870	2110	2440

External sensor

Sensor model	IZS31-DF (Feedback sensor)	IZS31-DG (Auto balance sensor) [High accuracy type]
Ambient temperature	0 to 50°C	
Ambient humidity	35 to 80% Rh (with no condensation)	
Case material	ABS	ABS, Stainless steel
Impact resistance	100 m/s ²	
Weight	200 g (including cable weight)	220 g (including cable weight)
Installation distance	10 to 50 mm (Recommended)	—
Standards/Directive	CE, UL, CSA	

AC adapter (Sold separately)

Model	IZF10-CG□, IZS41-CG□
Input voltage	100 VAC to 240 VAC, 50/60 Hz
Output current	1 A
Ambient temperature	0 to 40°C
Ambient humidity	35 to 65% Rh (with no condensation)
Weight	220 g
Standards/Directive	CE, UL, CSA

Remote controller (Sold separately)

Model	IZS41-RC
Type	Infrared ray type
Transmission capacity	5 m <small>Note 1)</small>
Power supply	2 AAA sized batteries (sold separately) <small>Note 2)</small>
Ambient temperature	0 to 45°C
Ambient humidity	35 to 80% Rh (with no condensation)
Weight	33 g (excluding dry cell batteries)
Standards/Directive	CE


Note 1) Varies depending on the operating conditions and environment.

Note 2) Batteries are not supplied.



Note 3) Refer to the operation manual for handling of the remote controller.

Construction

Series IZS40

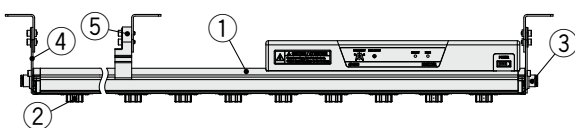

Series IZS41/42

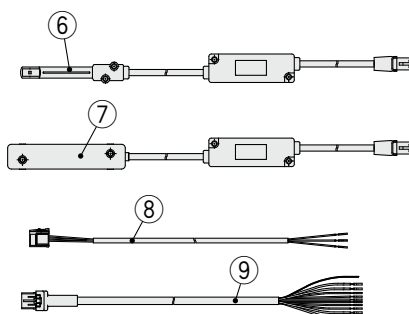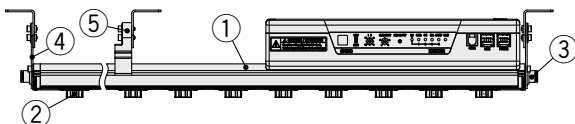

No.	Description
1	Ionizer
2	Emitter cartridge
3	One-touch fitting
4	End bracket
5	Intermediate bracket
6	Feedback sensor
7	Auto balance sensor [High accuracy type]
8	Power supply cable (for IZS40)
9	Power supply cable (for IZS41/42)

Series IZS40/41/42

Accessories (for Individual Parts)

Feedback sensor
IZS31-DF



Auto balance sensor [High accuracy type]
IZS31-DG



Power supply cable

- IZS40-CP (3 m)
- IZS41-CP (3 m)
- IZS40-CPZ (10 m)
- IZS41-CPZ (10 m)




For IZS40

For IZS41/42

High speed de-ionizing cartridge

- IZS40-NT (Emitter material: Tungsten)
 - IZS40-NC (Emitter material: Silicon)
- Energy saving type de-ionizing cartridge
- IZS40-NJ (Emitter material: Tungsten)
 - IZS40-NK (Emitter material: Silicon)

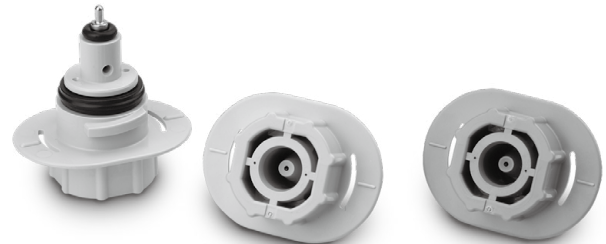

Tungsten
(Emitter cartridge color: White)

Silicon
(Emitter cartridge color: Gray)

Made to Order

How to Order

IZS - **CP** - **X13**


Type ● Power supply cable full length

40	For IZS40
41	For IZS41/42

Symbol	Cable full length
01	1 m
02	2 m
⋮	⋮
19	19 m
20	20 m


Model with Made-to-order power supply cable
Available in 1 m increments from 1 m to 20 m.
Note 1) 11 m or longer power cables are not CE Marking-compliant.
Note 2) Use standard power supply cables for 3 m and 10 m lengths.

End bracket/IZS40-BE

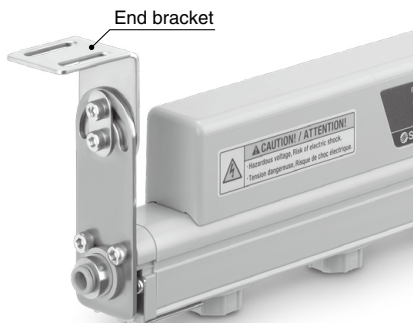

Note) Ionizer mounting screws attached, M4 x 8, 2 pcs.

Intermediate bracket/IZS40-BM

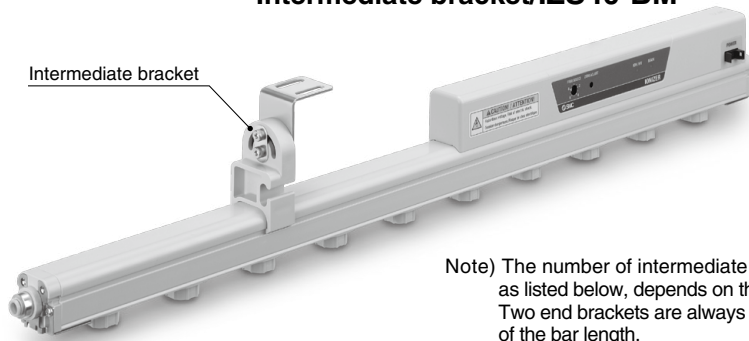

Note) The number of intermediate brackets required, as listed below, depends on the bar length.
Two end brackets are always required regardless of the bar length.

Bar length symbol	End bracket	Intermediate bracket
340 to 760	With 2 pcs.	None
820 to 1600		With 1 pc.
1660 to 2380		With 2 pcs.
2440 to 2500		With 3 pcs.

Note) The model number is for a single bracket.

Sold Separately

Drop prevention cover

IZS40-E 3


Number of fixed emitter cartridges

IZS40-E3	3
IZS40-E4	4
IZS40-E5	5

Number of required drop prevention covers

Bar length symbol	Number of required drop prevention covers		
	IZS40-E3	IZS40-E4	IZS40-E5
340	—	—	1
400	2	—	—
460	1	1	—
580	—	1	1
640	—	—	2
820	1	—	2
1120	1	—	3
1300	2	—	3
1600	2	—	4
1900	2	—	5
2320	1	—	7
2500	2	—	7

Mounted part of emitter cartridge

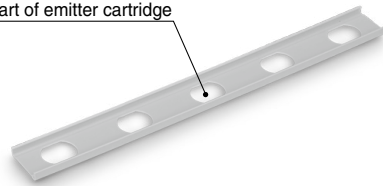

The model number requires the suffix "-X14" to indicate that the body is to be shipped fitted with a drop prevention cover.

Standard model no. - X14



Drop prevention cover

When attached to the body

Remote controller/IZS41-RC



AC adapter For IZS40

IZF10-C

AC adapter

G1	AC adapter + AC cord
G2	AC adapter (without AC cord)

* AC cord is only for use in Japan. (Rated voltage 125 V, plug JIS C8303, inlet IEC60320-C8) External input and output cannot be used when the AC adapter is being used.



For IZS40

For IZS41/42

IZS41-C

AC adapter

G1	AC adapter + AC cord
G2	AC adapter (without AC cord)

* AC cord is only for use in Japan. (Rated voltage 125 V, plug JIS C8303, inlet IEC60320-C8) External input and output cannot be used when the AC adapter is being used.



For IZS41/42

Transition wiring cable

IZS41 - CF

Transition wiring cable

02	Full length 2 m
05	Full length 5 m
08	Full length 8 m



Made to Order

How to Order

IZS41 - CF - X13

Transition wiring cable length

Model with Made-to-order transition wiring cable

Available in 1 m increments from 1 m to 20 m.
Note 1) 11 m or longer power cables are not CE Marking-compliant.

Note 2) Use standard power supply cables for 2 m, 5 m and 8 m lengths.

Note 3) Transition wiring is not possible for the IZS40.

Symbol	Cable full length
01	1 m
03	3 m
...	...
19	19 m
20	20 m

Cleaning kit/IZS30-M2



Series IZS40/41/42

Wiring/IZS40

Wire cables according to the circuitry and wiring chart.

1. Grounding of F.G. cable


Make sure to ground the F.G. cable (green) with a ground resistance of 100 Ω or less.

The F.G. cable is used as a reference electric potential for de-ionization. If the ground terminal is not properly grounded, an optimal offset voltage cannot be acquired and also causes failure of the equipment. Be sure to connect the ground terminal using a ground resistance of 100 Ω or less.

2. Connection circuit ("POWER" connector)

Wiring of the IZS40

e-con is adopted for the connector of the IZS40. Connector with cable or without cable may be selected when placing an order for the power supply cable. When only an e-con is required, place an order for it as a part. (Cable is not supplied.)

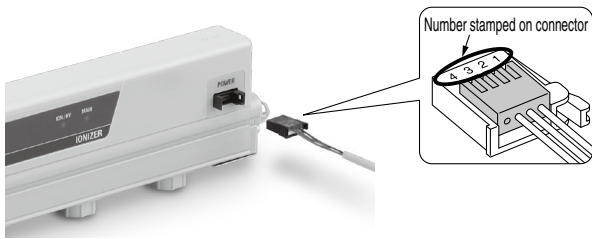


Wiring

Number stamped on connector	Description	Description
1	24 VDC	Power supply is connected to operate the ionizer.
2	0 V	
3	F.G.	Make sure to ground with a ground resistance of 100 Ω or less to use it as a reference electric potential for ionizer. If not grounded, performance cannot be acquired, and also causes failure of the equipment.
4	—	Unused

How to connect the cable of the connector


- 1) Cut the cable as shown in the figure to the below.
Refer to the following table for the applicable wire size.

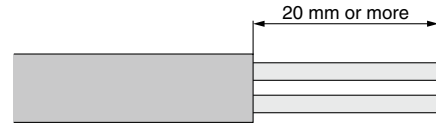

Applicable wire


AWG No.	Conductor cross section mm ²	Finish O.D. mm	Model
26-24	0.14-0.2	ø0.8-ø1.0	ZS-28-C

- 2) Insert the cable which was cut into the back of the connector.
- 3) Confirm that the cable is inserted into the back of the connector and press part A with your finger to hold tentatively.
- 4) Use a tool such as pliers to firmly tighten the center of Part A.
- 5) The connector cannot be reused once crimped. If cable insertion fails, use a new connector.

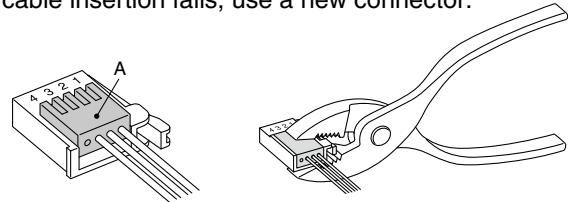


Connection Circuit/IZS40

Ionizer (IZS40)

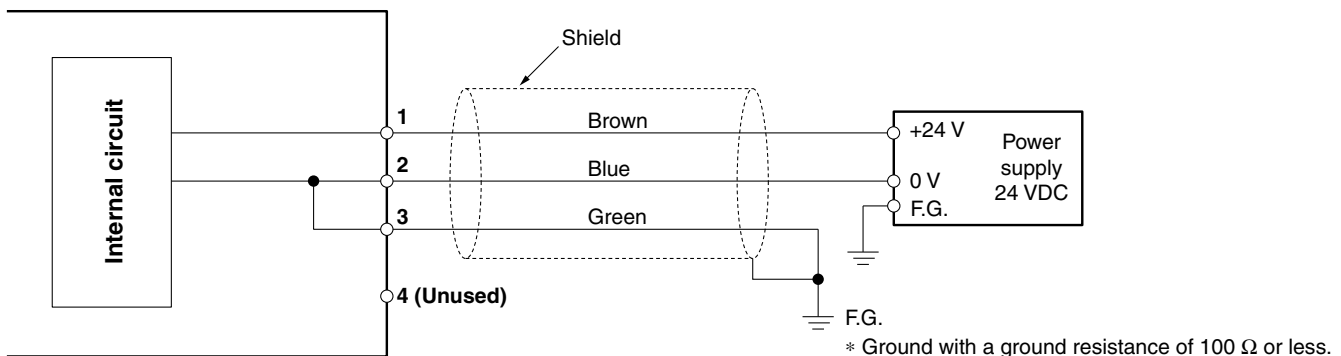

If cables are prepared by the user, the cable colors shown in the diagram may change according to the cable colors by the user.

Wiring/IZS41, 42

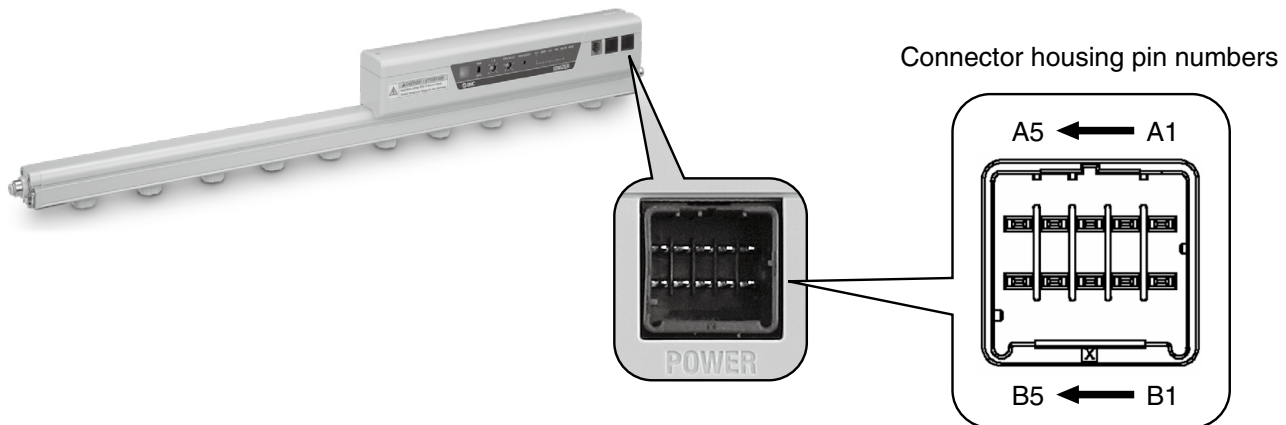

Wiring

Pin no.	Cable color	Cable size	Description	Signal direction	Description
A1	Brown	AWG20 AWG28	+24 VDC	IN	Power supply is connected to operate the ionizer.
B1					
A2	Blue		0 V	IN	Make sure to ground with a ground resistance of 100 Ω or less to use it as a reference electric potential for ionizer. If not grounded, performance cannot be acquired, and also causes failure of the equipment.
B2					
A3	Green		F.G.	—	
B3	Light green		Discharge stop signal	IN	Signal input to turn ON/OFF the ion discharge. NPN specification: Stops ion discharge by connecting to 0 V. (Starts discharging ion when disconnected.) PNP specification: Stops ion discharge by connecting to +24 VDC. (Starts discharging ion when disconnected.)
A4	Gray		Maintenance detection signal	IN	Input signal when determining the necessity of electrode needle maintenance.
B4	Yellow		Maintenance detection signal	OUT(Contact point A)	Turns ON when electrode needs cleaning.
A5	Purple		Error signal	OUT(Contact point B)	Turns OFF when power supply failure, ion discharge error, connected sensor failure, or CPU operation failure. (ON when there is no problem.)
B5	White		Unused	—	

* Confirm the power supply cable dimensions on page 23 for the cable specifications.

Frequencies


Frequency set Switch set no.	Frequency (Hz), Remote controller		
	IZS40	IZS41	IZS42
0	1	Remote controller*	Remote controller*
1	3	1	0.1
2	5	3	0.5
3	8	5	1
4	10	10	3
5	15	15	5
6	20	20	10
7	30	30	15
8	DC+	DC+	20
9	DC-	DC-	30

* Set when remote controller is used.


Series IZS40/41/42

Wiring Circuit/IZS41, 42

NPN specification

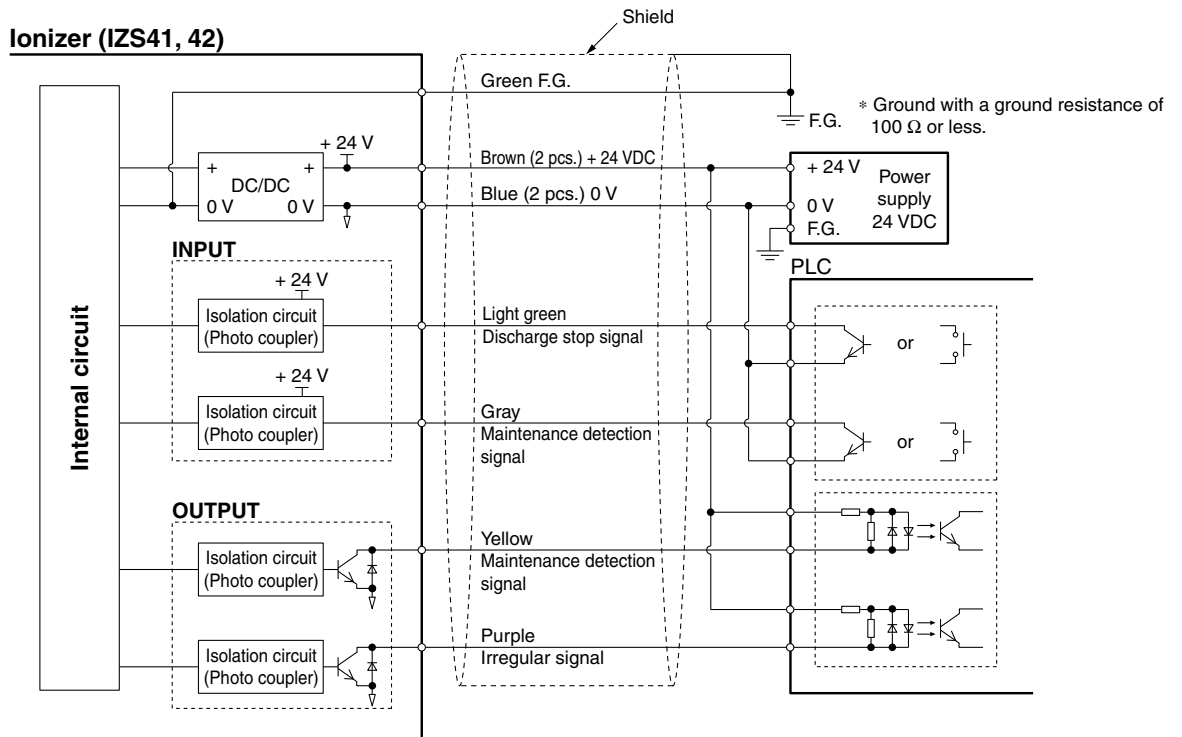


PNP specification

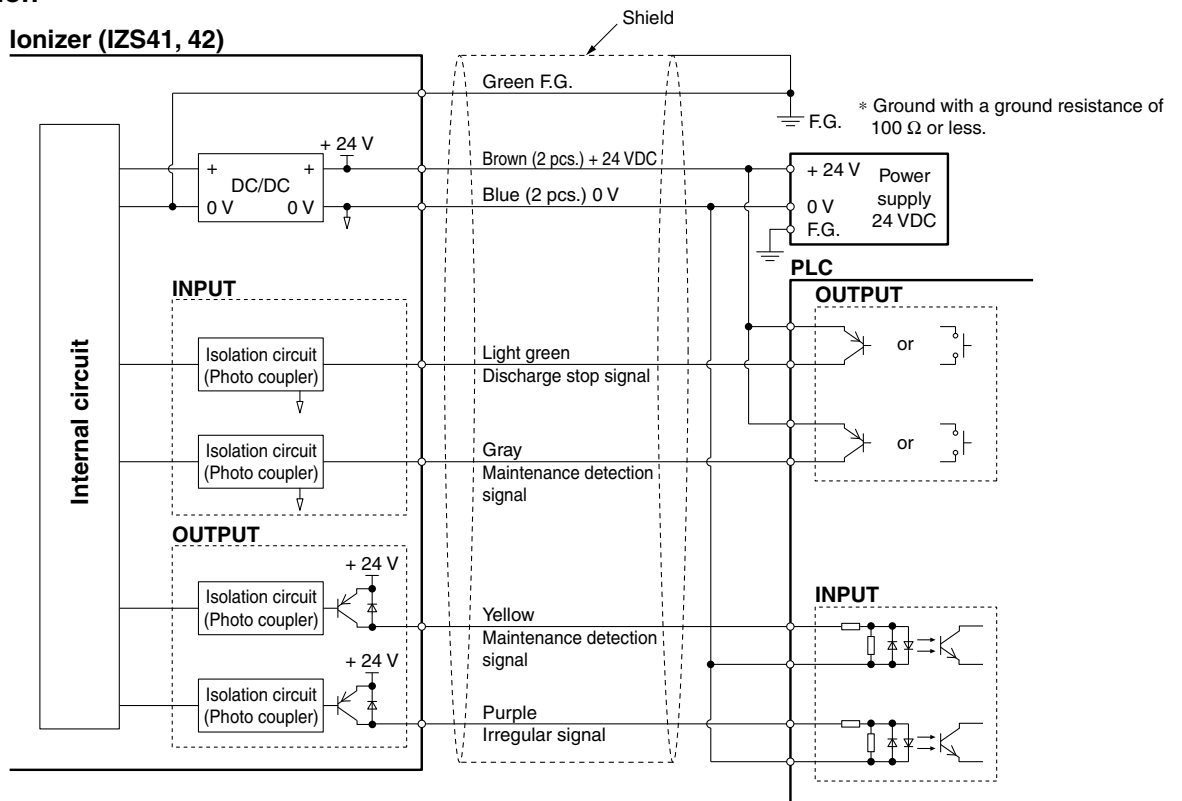

Dimensions

Ionizer/IZS40

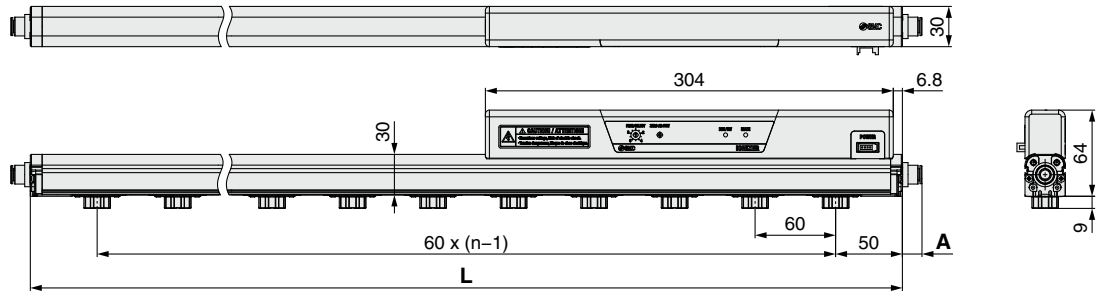


n (Number of emitter cartridges),
L Dimension


Applicable tube O.D.	A
06	13
08	15
10	22

Part no.	n	L (mm)
IZS40-340	5	340
IZS40-400	6	400
IZS40-460	7	460
IZS40-580	9	580
IZS40-640	10	640
IZS40-820	13	820
IZS40-1120	18	1120
IZS40-1300	21	1300
IZS40-1600	26	1600
IZS40-1900	31	1900
IZS40-2320	38	2320
IZS40-2500	41	2500

End bracket/IZS40-BE

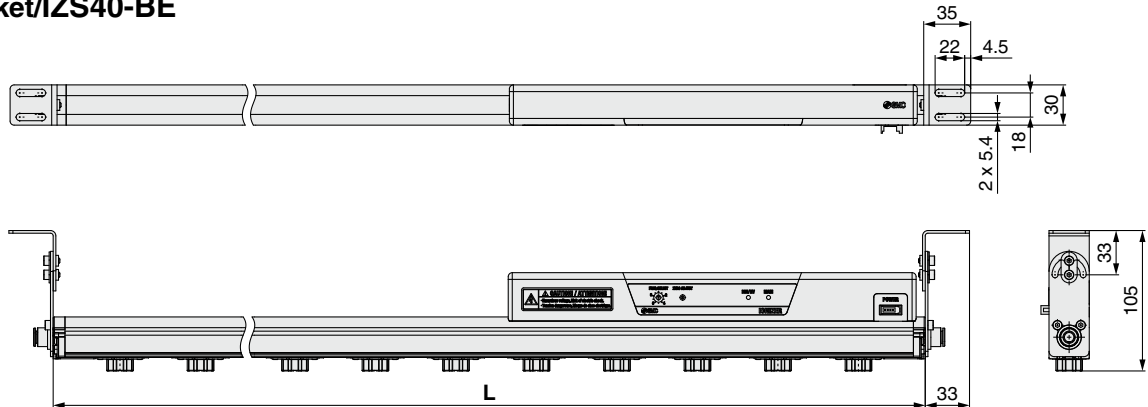

Intermediate bracket/IZS40-BM

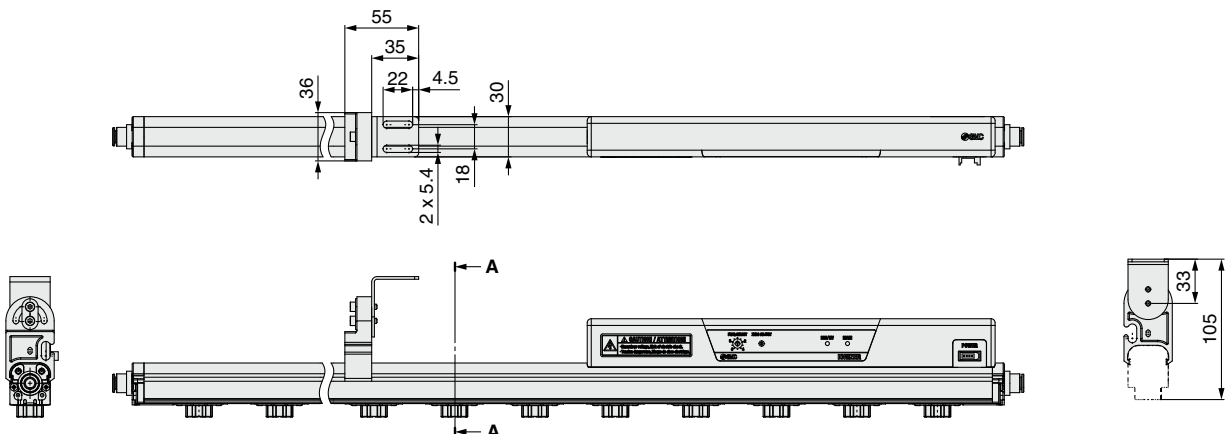


A-A section

Series IZS40/41/42

Dimensions

Ionizer/IZS41, 42

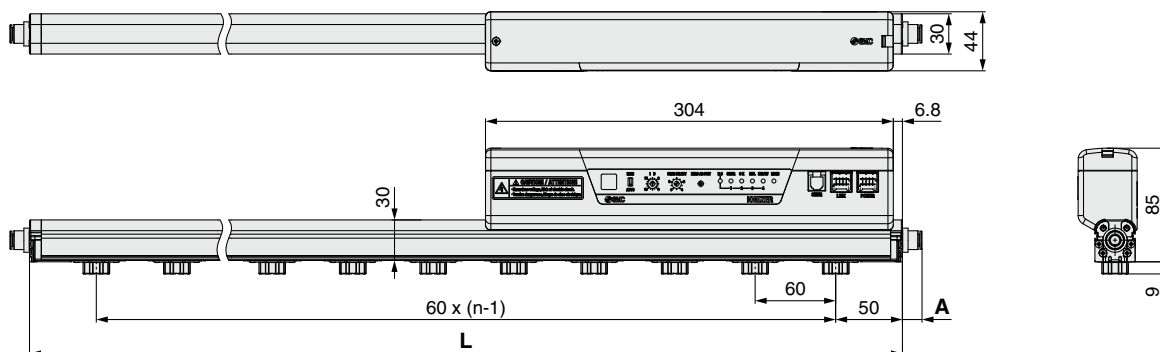


Applicable tube O.D.	A
06	13
08	15
10	22


n (Number of emitter cartridges),
L Dimension

Part no.	n	L (mm)
IZS4□-340	5	340
IZS4□-400	6	400
IZS4□-460	7	460
IZS4□-580	9	580
IZS4□-640	10	640
IZS4□-820	13	820
IZS4□-1120	18	1120
IZS4□-1300	21	1300
IZS4□-1600	26	1600
IZS4□-1900	31	1900
IZS4□-2320	38	2320
IZS4□-2500	41	2500

End bracket/IZS40-BE

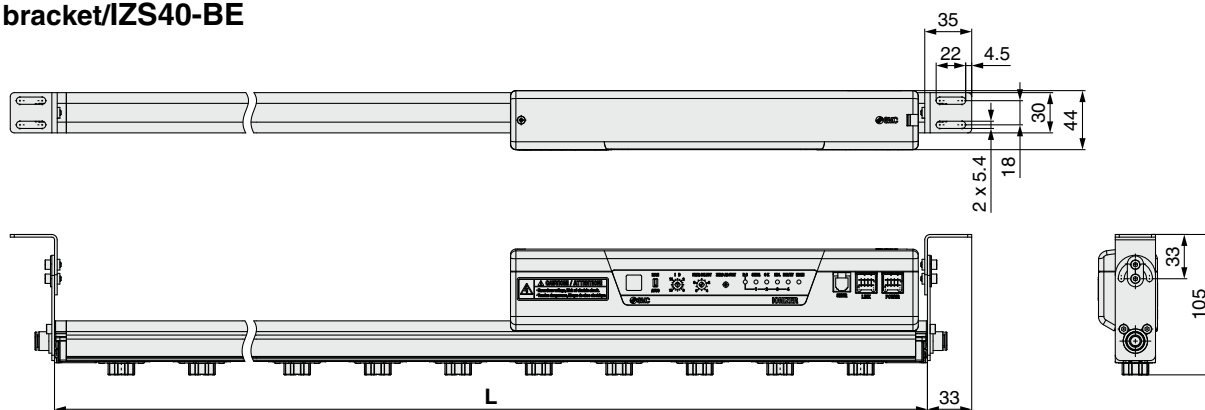


Intermediate bracket/IZS40-BM

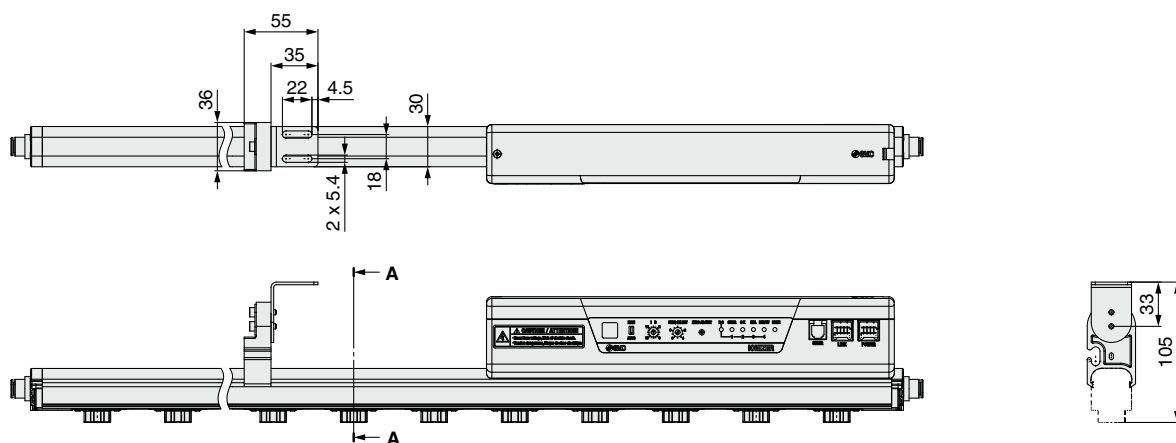


A-A section

Dimensions

Feedback sensor/IZS31-DF

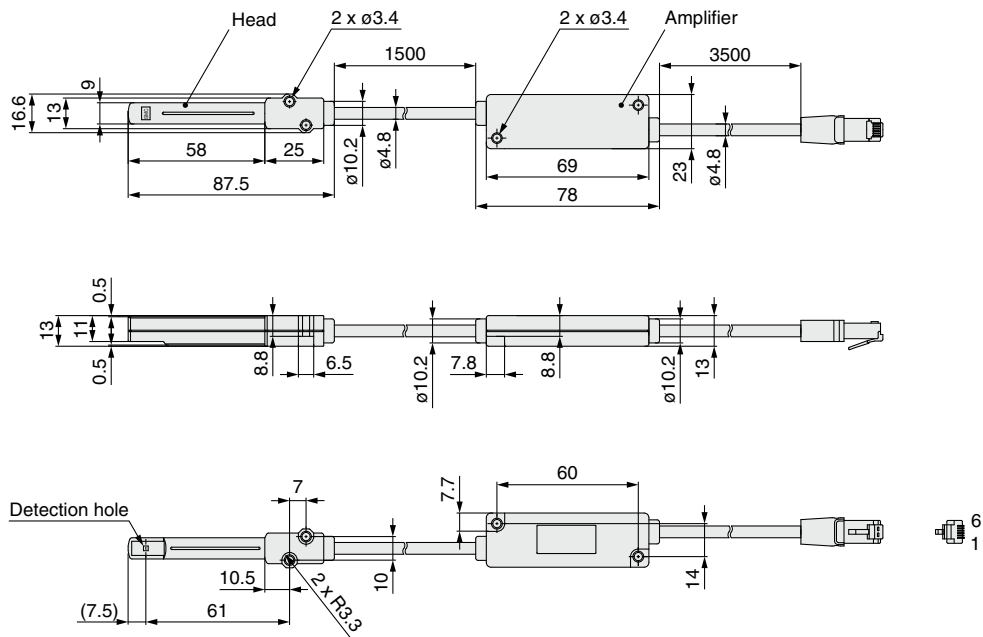

Auto balance sensor [High accuracy type]/IZS31-DG

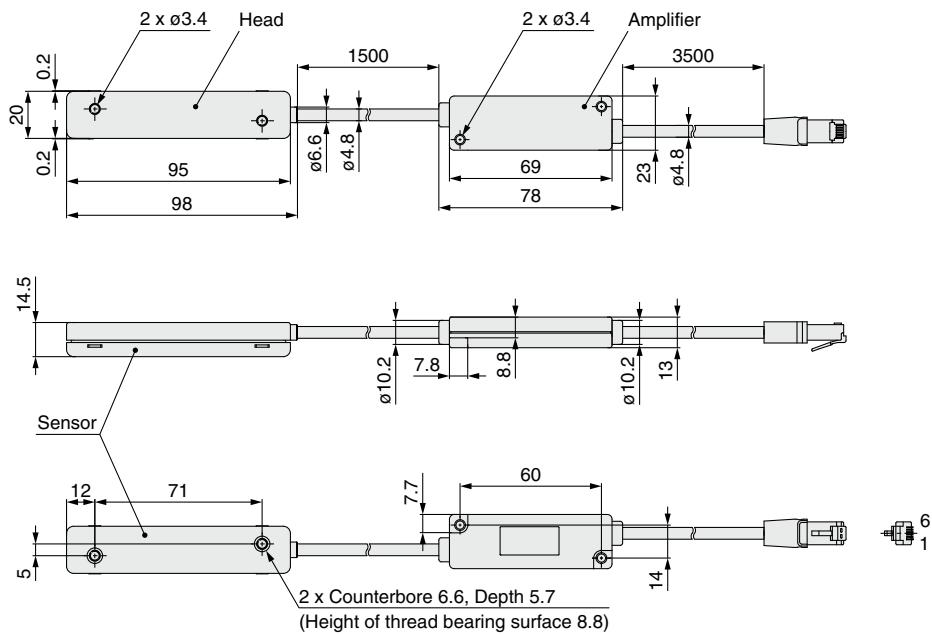


Series IZS40/41/42

Dimensions

Power supply cable


IZS40-CP□

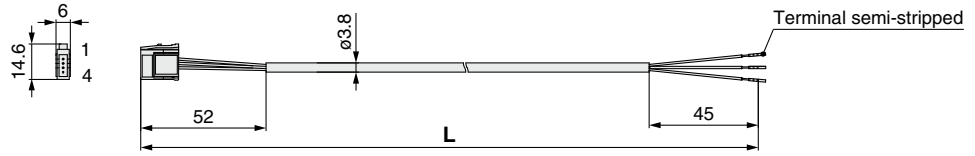

Cable Specifications

No. of cable wire/Size	3 cores/AWG24	
Conductor	Nominal cross section	0.2 mm ²
	Outside diameter	0.66 mm
Insulator	Outside diameter	1.0 mm
	Material	Lead-free PVC
Sheath	Material	Lead-free PVC
	Outside diameter	3.8 mm

IZS41-CP□

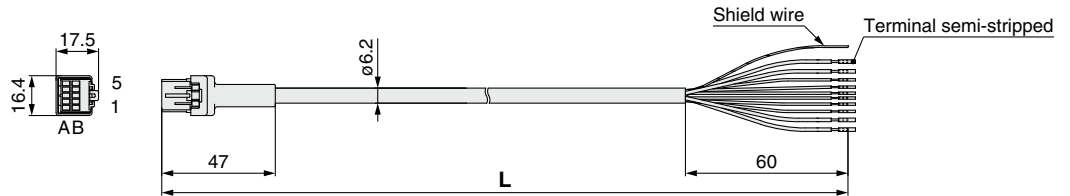


Cable Specifications

No. of cable wire/Size	10 cores/AWG20 (4 cores), AWG28 (6 cores)	
Conductor	Nominal cross section	0.54 mm ² (4 cores), 0.09 mm ² (6 cores)
	Outside diameter	0.96 mm (4 cores), 0.38 mm (6 cores)
Insulator	Outside diameter	1.4 mm Blue, Brown 0.7 mm White, Green, Light green, Purple, Gray, Yellow
	Material	Heat resistant PVC
Sheath	Material	Heat resistant PVC
	Outside diameter	6.2 mm


Part no.	L (mm)
IZS40-CP	3000
IZS41-CP	
IZS40-CPZ	9800
IZS41-CPZ	

Remote controller

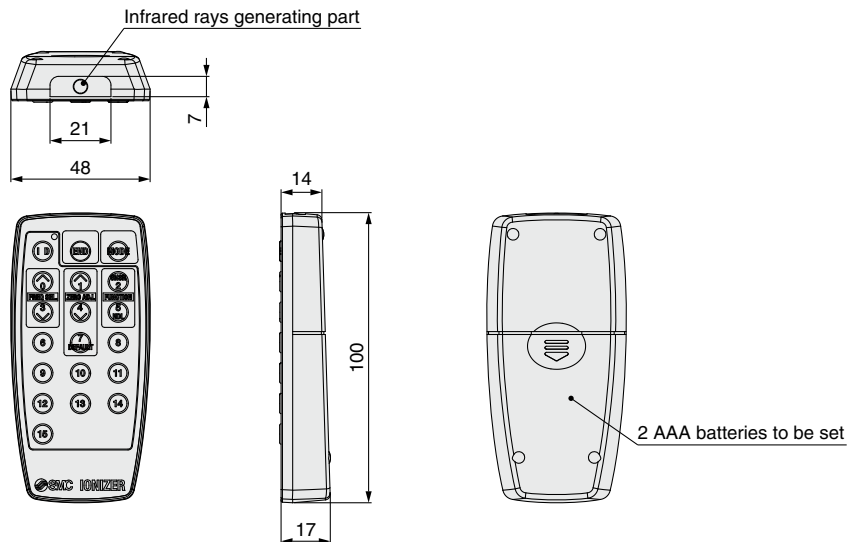


Transition wiring cable/IZS41-CF□


Part no.	L (mm)
IZF41-CF02	2000
IZF41-CF05	5000
IZF41-CF08	8000

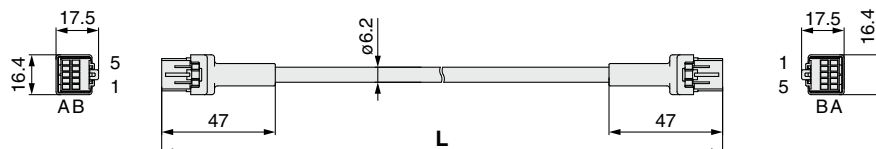


Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

 **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

 **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

 **Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines.
(Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots – Safety.
etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2)
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.
Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read the “Handling Precautions for SMC Products” (M-E03-3) and “Operation Manual” before use.



Series IZS40/41/42

Specific Product Precautions 1

Be sure to read this before handling.

Selection

⚠ Caution

1. This product is intended to be used with general factory automation (FA) equipment.

If considering using the product for other applications (especially those stipulated on Safety Instructions), please consult SMC beforehand.

2. Use this product within the specified voltage and temperature range.

Using outside of the specified voltage can cause a malfunction, damage, electrical shock, or fire.

3. Use clean compressed air as fluid. (Air quality Class 2.6.3 specified in ISO 8573-1: 2001 is recommended.) This product is not explosion proof. Never use a flammable gas or an explosive gas as a fluid and never use this product in the presence of such gases.

Please contact us when fluids other than compressed air are used.

This product is not explosion proof. Never use a flammable gas or an explosive gas as a fluid and never use this product in the presence of such gases. Please contact us when fluids other than compressed air are used.

4. This product is not explosion-protected.

Never use this product in locations where the explosion of dust is likely to occur or flammable or explosive gases are used. This can cause fire.

⚠ Caution

1. Clean specification is not available with this product.

This product is not washed. When bringing into a clean room, flush for several minutes and confirm the required cleanliness before using. A minute amount of particles are generated due to wearing of the emitters while the ionizer is operating.

Mounting

⚠ Warning

1. Reserve an enough space for maintenance, piping and wiring

Please take into consideration that the one-touch fittings for supplying air, need enough space for the air tubing to be easily attached/detached.

To avoid excessive stress on the connector and one-touch fitting, please take into consideration the cable and tube minimum bending radius and avoid bending at acute angles.

Wiring with excessive twisting, bending, etc. can cause a malfunction, wire breakage or fire.

Minimum bending radius: Power supply cable: 38 mm

Transition wiring cable: 38 mm

Sensor cable: 25 mm

Note: Shown above is wiring with the fixed minimum allowable bending radius and at a temperature of 20 °C. If used under this temperature, the connector can receive excessive stress even though the minimum bending radius is allowable.

Regarding the minimum bending radius of the tubing, refer to the operation manual or catalog for tubing.

2. Mount this product on a plane surface.

If there are irregularities, cracks or height differences, excessive stress will be applied to the housing or brackets, resulting in damage or other trouble. Also, do not drop or apply a strong shock. Otherwise, damage or an accident can occur. Also, do not drop or apply a strong shock. Otherwise, damage or an accident may occur.

Mounting

⚠ Warning

3. Install the product so that the entire bar does not have an excessive deflection.

For a bar length of 820 mm or more, support the bar at both ends and in the middle by using brackets (IZS40-BM). If the bar is held only at the both ends, self-weight of the bar causes deflection, resulting in damage to the bar.

4. Do not use this product in an area where noise (electric magnetic field or surge voltage, etc.) are generated.

Using the ionizer under such conditions may cause it to malfunction or internal devices to deteriorate or break down. Take noise countermeasures and prevent the lines from mixing or coming into contact with each other.

5. Observe the tightening torque requirements when installing the ionizer.

If overtightened with a high torque, the mounting screws or mounting brackets may break. Also, if under tightened with a low torque, the connection may loosen.


Refer to the operation manual for details.

6. Do not touch the emitter directly with fingers or metallic tools.

If a finger is used to touch the emitter, it may get stuck or an injury or electrical shock may occur from touching the surrounding equipment. In addition, if the emitter or cartridge is damaged with a tool, the specification will not be met and damage and/or an accident may occur.

⚠ Danger High Voltage

Emitters are under high voltage. Never touch them as there is a danger of electric shock or injury due to an evasive action against a momentary electrical shock caused by inserting foreign matter in the emitter cartridge or touching the emitter.

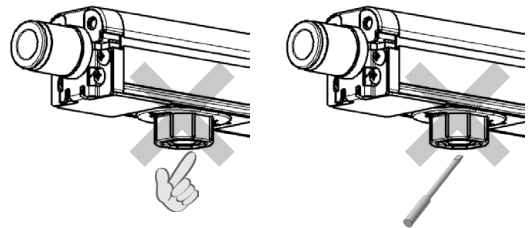

7. Do not affix any tape or seals to the body.


If a tape or seal contains any conductive adhesive or reflective paint, a dielectric phenomenon may occur due to the generated ions, resulting in electrostatic charge or electric leakage. Avoid using such tape and seals as it will not only cause difficulties in maintaining the performance of the product, but may also result in the failure of the product.

8. Installation should be conducted after turning off the power supply.

⚠ Caution

1. Do not install the IZS4□ series in a location where walls or structures are within the range shown in the following figure.

If structures including walls or conductive items are located close to the unit, the generated ions will not effectively reach the object, and the specification may not be satisfied, or cause failure of the product or electric shock due to dielectricity or electric leakage. Install the product according to the dimensions shown in the following figure, keeping away from structures or conductive items.

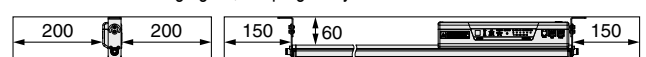

Unit: mm



Series IZS40/41/42

Specific Product Precautions 2

Be sure to read this before handling.

Mounting

⚠ Caution


2. After installation, be sure to verify the effects of static neutralization.

The effects vary depending on the ambient conditions, operating conditions, etc. After installation, verify the effects of static neutralization.

3. When installing the IZS41 or IZS42 in proximity with an ionizer which operates in DC mode, they should be positioned at least 2 meters away from each other.

When using the IZS41 or IZS42 near the ionizer in DC mode, keep clearance of at least 2 m between them.

Offset voltage may not be adjusted by the internal sensor due to the ions which are discharged from the DC mode ionizer.

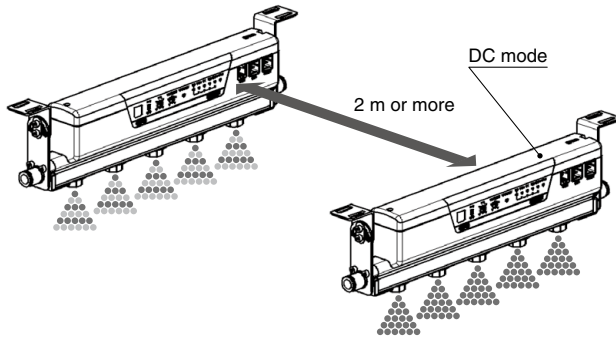

Wiring/Piping

⚠ Warning

1. Confirm that the power supply voltage is enough and that it is within the specifications before wiring.
2. To maintain product performance, a DC power supply shall be connected per UL listed Class 2 certified by National Electric Code (NEC) or evaluated as a limited power source provided by UL60950.
3. Ground the F.G. wire with 100 Ω or less according to the instructions in this catalog. An incomplete ground or no grounding not only prevents the performance of the product from being maintained, but may also cause failure or damage of the product, or electric shock to the human body.
4. Be sure to turn off the power supply before wiring (including attachment/detachment of the connector).
5. To connect a feedback sensor or auto balance sensor to the ionizer, use the cable included with the sensor. Do not disassemble or modify the ionizer.
6. When applying the power supply, pay special attention to the wiring and/or surrounding environment until the safety is confirmed.
7. Do not connect or remove any connectors including the power supply, while power is being supplied. Otherwise, the ionizer may malfunction.
8. If the power line and high-pressure line are routed together, this product may malfunction due to noise. Therefore, use a separate wiring route for this product.
9. Be sure to confirm that there are no wiring errors before starting this product. Faulty wiring will lead to product damage or malfunction.
10. Flush the piping before using. Before piping this product, exercise caution to prevent particles, water drops, or oil contents from entering the piping.

Wiring/Piping

⚠ Warning

11. Transition wiring of ionizer

For transition wiring of ionizers, use a transition wiring cable for connection between ionizers. Use a power supply cable for connection between ionizer and power supply or external equipment. (Transition wiring is not possible with the IZS40.) The number of ionizers that may be connected using transition wiring varies depending on the power supply cable; the length of the transition wiring cable; the use of external sensor(s) and/or models. Refer to the table shown below "Connectable number of ionizers with transition wiring".

The IZS41 and IZS42 can be connected in the same transition wiring, but mixed wiring of the NPN and PNP I/O specifications is not possible.

Please contact SMC when connecting conditions other than specified in the table below are applied.

Connectable number of ionizers (IZS41) with transition wiring (without external sensor)

Bar length symbol	Power supply cable length: 3 m										Power supply cable length: 10 m									
	Transition wiring cable length (same cable length) m										Transition wiring cable length (same cable length) m									
	1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	10
340																				
400																				
460																				
580																				
640																				
820																				
1120																				
1300																				
1600																				
1900																				
2320																				
2500																				


Connectable number of ionizers (IZS42) with transition wiring (without external sensor)

Bar length symbol	Power supply cable length: 3 m										Power supply cable length: 10 m									
	Transition wiring cable length (same cable length) m										Transition wiring cable length (same cable length) m									
	1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	10
340																				
400																				
460																				
580																				
640																				
820																				
1120																				
1300																				
1600																				
1900																				
2320																				
2500																				

It is recommended that the power supply used to operate the ionizers have a current capacity twice that of the total current consumption of the ionizers to be used. Power supply voltage should be from 24 to 26.4 VDC.

AC adapter must not be used when ionizer is used in a transition wiring. When ionizers are connected with transition wiring, the same input signal serves as input to all the ionizers. When a signal is output from at least one ionizer in the connection, the signal will be output from the power supply cable.

Connect the power supply cable to the "POWER" connector of the 1st ionizer, and connect the "LINK" connector of the 1st ionizer to the "POWER" connector of the 2nd ionizer with a transition wiring cable. Follow the same procedure to connect subsequent ionizer(s) and after with transition wiring cables.

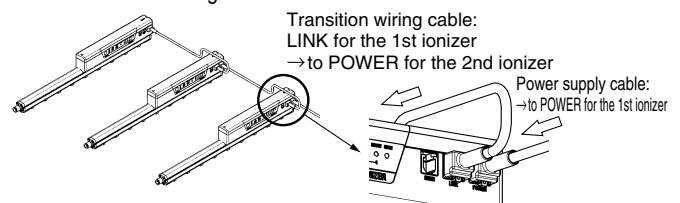



Series IZS40/41/42

Specific Product Precautions 3

Be sure to read this before handling.

Operating Environment/Storage Environment

Warning

1. Observe the fluid temperature and ambient temperature range.

Fluid temperature and ambient temperature ranges are; 0 to 40°C for ionizer, 0 to 50°C for feedback sensor and auto balance sensor (high accuracy type), 0 to 40°C for AC adapter, and 0 to 45°C for remote controller. Do not use the sensor in locations where the temperature may change suddenly even if the ambient temperature range is within the specified limits, resulting in condensation.

2. Do not use this product in an enclosed space.

This product utilizes a corona discharge phenomenon. Do not use the product in an enclosed space as ozone and nitrogen oxides exist in such places, even though in marginal quantities.

3. Environments to avoid

Avoid using and storing this product in the following environments since they may cause damage to this product.

- Avoid using in a place that exceeds an ambient temperature range.
- Avoid using in a place that exceeds an ambient humidity range.
- Avoid using in a place where condensation occurs due to a drastic temperature change.
- Avoid using in a place in the presence of corrosive or explosive gas or where there is a volatile combustible.
- Avoid using in an atmosphere where there are particles, conductive iron powders, oil mist, salt, solvent, blown dust, cutting oil (water, liquid), etc.
- Avoid using in a place where ventilated air from an air conditioner is directly applied to the product.
- Avoid using in a closed place without ventilation.
- Avoid using in direct sunlight or radiated heat.
- Avoid using in a place where there is a strong magnetic noise (strong electric field, strong magnetic field, or surge).
- Avoid using in a place where static electricity is discharged to the body.
- Avoid using in a place where a strong high frequency occurs.
- Avoid using in a place where this product is likely to be damaged by lightning.
- Avoid using in a place where direct vibration or shock is applied to the main body.
- Avoid using in a place where there is a force large enough to deform this product or weight is applied to the product.

4. Do not use an air containing mist or dust.

The air containing mist or dust will cause the performance to decrease and shorten the maintenance cycle.

Install a dryer (IDF series), air filter (AF/AFF series), and/or mist separator (AFM/AM series) to obtain clean compressed air (air quality of Class 2.6.3 or higher according to ISO 8573-1: 2001 is recommended for operation).

5. Ionizer, feedback sensor, auto balance sensor, remote controller, and AC adapter are not resistant to lightning surge.

Maintenance

Warning

1. Periodically inspect the ionizer and clean the emitters.

Periodically inspect the electrostatic sensor to check if it is operated while being out of order. Only a person having an adequate knowledge and experience about the system is allowed to inspect the sensor. If particles attach to the emitter by using for long periods of time, the static neutralizing performance will be lowered.

Replace the emitter cartridge, if the emitters are worn and the static neutralizing performance does not return even after being cleaned.

Danger High Voltage

This product contains a high voltage generation circuit. When performing maintenance inspection, be sure to confirm that the power supply to the ionizer is turned off. Never disassemble or modify the ionizer, as this may not only impair the product's functionality but could cause an electric shock or electric leakage.

Maintenance


Warning

2. When cleaning the emitter or replacing the emitter cartridge, be sure to turn off the power supply or air supply to the body.


If the emitters are touched while the product is energized, this may cause an electric shock or accident.

If an attempt to replace the emitter cartridges is performed before removing air supply, the emitter cartridges may eject unexpectedly due to presence of the supply air. Remove air supply before replacing the cartridges. If emitter cartridges are not securely mounted to the bar, they may eject or release when air is supplied to the product. Securely mount or remove the emitter cartridges referencing the instructions shown below.

Removal of emitter cartridge

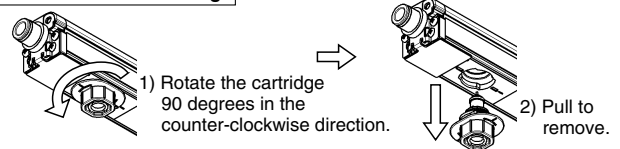

Mounting of emitter cartridge

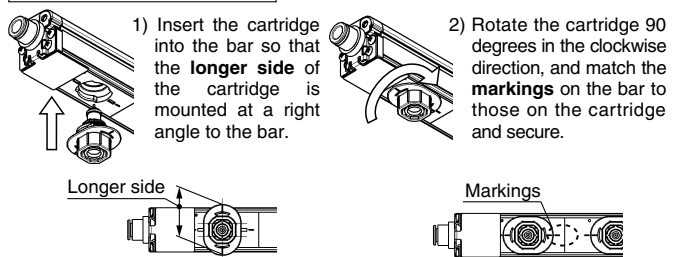

3. Perform the detection procedure in the absence of workpieces. (IZS41, 42)

4. Do not disassemble or modify this product.

Otherwise, an electrical shock, damage and/or a fire may occur. Also, the disassembled or modified products may not achieve the performances guaranteed in the specifications, and exercise caution because the product will not be warranted.

5. Do not operate this product with wet hands.

Otherwise, an electrical shock or accident may occur.

Handling

Caution

1. Do not drop, bump or apply excessive impact (100 m/s² or more) while handling.

Even though it does not appear to be damaged, the internal parts may be damaged and cause a malfunction.

2. When installing the product, handle the product so that no moment is applied to the controller and the ends of the bar.

Handling the product by holding either end of the bar may cause damage to the product.

3. When mounting/dismounting the cable, use your finger to pinch the claw of the plug, then attach/detach it correctly.

If the modular plug is at a difficult angle to attach/detach, the jack's mounting section may be damaged and cause a disorder.


Related Products

SMC can provide all the equipment required to supply air to the ionizer.

Consider the equipment below not only for providing an "opportunity to decrease maintenance" and "preventing damage" but also for an "energy-saving countermeasure".

Recommended pneumatic circuit diagram

* The following is an example. Since the product group differs by application, please contact an SMC sales representative.

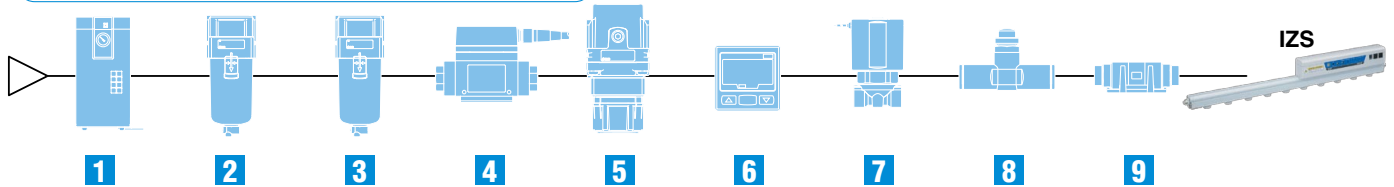

1 Air Dryer/Series IDF

Decreases the dew point of compressed air. Limits moisture generation which can lead to damage.



Best Pneumatics No.⑤

2 Air Filter/Series AF

Eliminates solid foreign matter such as powder particles in the compressed air.



Best Pneumatics No.⑤

3 Mist Separator/Series AFM


Eliminates oil mist which is difficult to eliminate with an air filter.



Best Pneumatics No.⑤

4 Digital Flow Switch/Series PF2A

Decreases the air consumption by flow control.

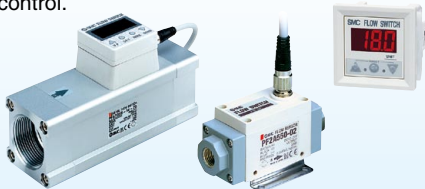

Best Pneumatics No.⑥

2-Color Display Digital Flow Switch/Series PFM



Best Pneumatics No.⑥

5 Regulator/Series AR

Decreases the air consumption by setting to an appropriate pressure.



Best Pneumatics No.⑤


6 Digital Pressure Switch/Series ISE30A

The pressure control prevents the ability of static electricity removal from being reduced in accordance with the reduction of air pressure.



Best Pneumatics No.⑥

7 2 Port Solenoid Valve/Series VX

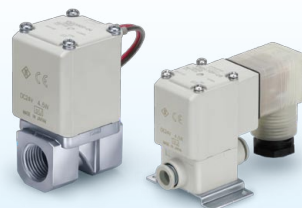

Best Pneumatics No.⑦

Pilot Type 2 Port Solenoid Valve for Dry Air/Series VQ



Best Pneumatics No.⑦

8 Restrictor/Series AS-X214

Regulates to the appropriate air volume depending upon the installation condition. Decreases the air consumption.



Best Pneumatics No.⑥

9 Clean Air Filter/Series SFD

Built-in capillary element nominal filtration rating: 0.01 μm
Hollow fiber elements with over 99.99% filtering efficiency do not contaminate work pieces.



Best Pneumatics No.⑤

Ionizer Series Variations

Ionizer/Nozzle type Series IZN10


Dust removal and static neutralization by air blow

- Eliminates dust clinging to lamp cover.



Spot type static neutralization

- Prevents electrostatic breakdown of electric parts.
- Prevents detachment failure.

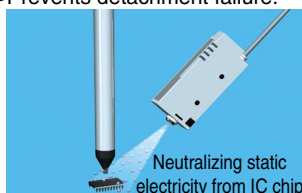

Offset voltage ± 10 V (In case of energy saving static neutralization nozzle)

Slim design: Thickness dimension 16 mm


1 Maintenance detector

Always outputs LED display and signal when contamination or wear of the emitter is detected.

Detects optimal maintenance time, reduced labor for maintenance.

2 Built-in high-voltage power supply

Installation of external high-voltage power supply and high-voltage power supply cable are unnecessary.

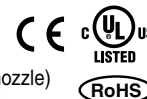

Ionizer/Fan type Series IZF10

Compact fan type with simple functions

- Compact design: 80 x 110 x 39 mm
- Weight: 280 g
- 2 types of fans available

⊙ Rapid static neutralizing fan: Discharge time* 1.5 seconds
(When neutralizing static electricity from 1000 V to 100 V at a distance of 300 mm from the workpiece)

⊙ Low-noise fan: 48 dB (A) (Measured at a distance of 300 mm from the workpiece)
Rapid static neutralizing fan: 57 dB (A)

- Offset voltage*: ± 13 V
* Based on ANSI/ESD-STM3.1-2006 standards
- With alarm function
High-voltage error, maintenance detection



Electrostatic Sensor Series IZD10/Electrostatic Sensor Monitor Series IZE11

Electrostatic Sensor Series IZD10

The importance of the static electric control is put on confirming the "actual status".

- Potential measurement: ± 20 kV (detected at a 50 mm distance)
 ± 0.4 kV (detected at a 25 mm distance)
- Detects the electrostatic potential and outputs in an analog voltage.
· Output voltage: 1 to 5 V (Output impedance: Approx. 100 Ω)
- Broadens your coverage of electrostatic potential measurement applications.



Electrostatic Sensor Monitor Series IZE11

- Output: Switch output x 2 + Analog output (1 to 5 V, 4 to 20 mA)
- Minimum unit setting: 0.001 kV (at ± 0.4 kV), 0.1 kV (at ± 20 kV)
- Display accuracy: $\pm 0.5\%$ F.S. ± 1 digit or less
- Detection distance correction function (adjustable in 1 mm increments)
- Supports two types of sensors (± 0.4 kV and ± 20 kV) through range selection.



Handheld Electrostatic Meter Series IZH10

The importance of the static electric control is put on confirming the "actual status".

Easy-to-use handheld electrostatic meter

- Measurement range: ± 20.0 kV
- Minimum display unit: 0.1 kV (± 1.0 to ± 20.0 kV)
0.01 kV (0 to ± 0.99 kV)
- Compact and lightweight: 85 g (excluding dry cell batteries)
- Backlight for reading in the dark
- LOW battery indicator
- Peak/Bottom value indication
- Zero-clear function
- Auto power-off function



Revision history

Edition B * Excerpted from pages 1097 to 1124 of the Best Pneumatics No. 6 (Ver. 5).

RZ