


power supplies in Europe, Asia, Oceania, North, Central and South America

 Single-phase 100 VAC (50/60 Hz), 115 VAC (60 Hz)
 Single-phase 200 to 230 VAC (50/60 Hz)

Series HRS




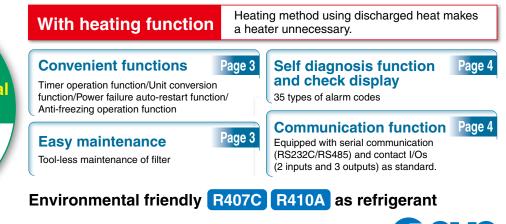

Temperature stability $\pm 0.1^{\circ}C$ / Compact

The precision temperature control method by expansion valve and temperature sensor, realized high temperature stability of $\pm 0.1^{\circ}$ C and a small-size tank.

Air-cooled HRS

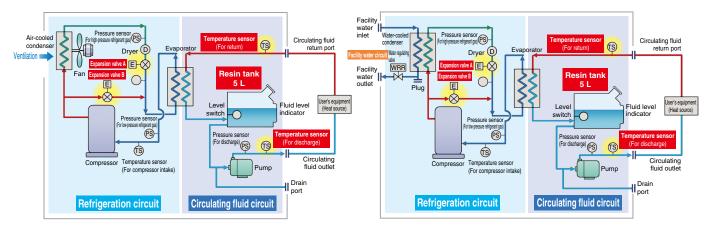

Refrigeration circuit

- The compressor compresses the refrigerant gas, and discharges the high temperature and high pressure refrigerant gas.
- In the case of air-cooled refrigeration, the high temperature and high pressure refrigerant gas is cooled down by an air-cooled condenser with the ventilation of the fan, and becomes a liquid. In the case of water-cooled refrigeration, the refrigerant gas is cooled by a water-cooled condenser with the facility water in the facility water circuit, and becomes a liquid.
- The liquefied high pressure refrigerant gas expands and its temperature lowers when it passes through expansion valve A and vaporizes by taking heat from the circulating fluid in the evaporator.
- The vaporized refrigerant gas is sucked into the compressor and compressed again.
- When heating the circulating fluid, the high pressure and high temperature refrigerant gas is bypassed into the evaporator by expansion valve B, to heat the circulating fluid.



Circulating fluid circuit

■ Water-cooled HRS□-W-□

- The circulating fluid discharged from the pump, is heated or cooled by the user's equipment and returns to the thermo-chiller.
- The circulating fluid is controlled to a set temperature by the refrigeration circuit, to be discharged to the user's equipment side again by the thermo-chiller.

Point Since the refrigeration circuit is controlled by the signal from 2 temperature sensors (for return and discharge), precise temperature control of the circulating fluid can be performed. Therefore, there is no necessity of absorbing the temperature difference in the circulating fluid with a large tank capacity, and realizes high temperature stability even with a small-size tank. Also, contributes to space-saving.

Facility water circuit

For water-cooled refrigeration HRS \Box -W- \Box


• The water regulating valve opens and closes to keep the refrigerant gas pressure consistent. The facility water flow rate is controlled by the water regulating valve.

Installation close to a wall is possible on both sides.


(HRS012/018/024 * Except option G)

Termineton


Reduced-height double condenser structure (HRS030/060)

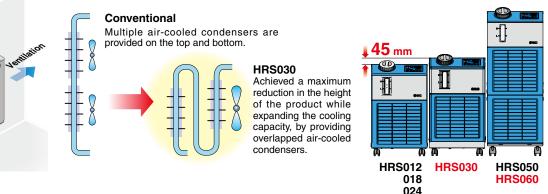


*∕∂*SMC

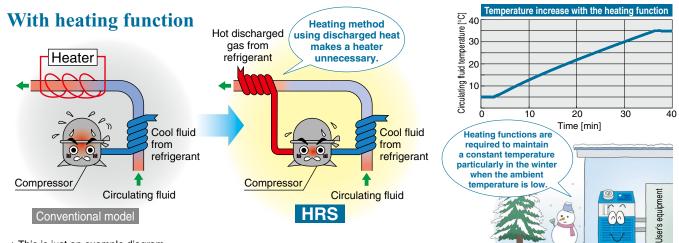

* This is just an example diagram.

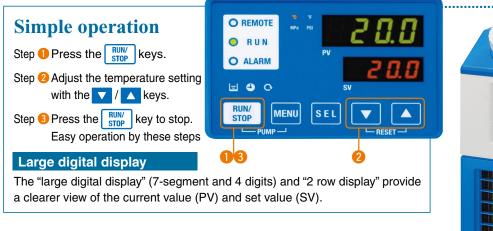

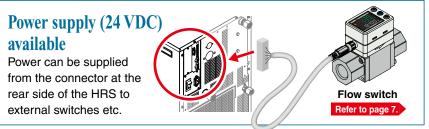




Variations

Mode	el	Cooling method	Cooling capacity [W] (50/60 Hz)	Single-phase 100 VAC (50/60 Hz) 115 VAC (50/60 Hz)	Single-phase 200 to 230 VAC (50/60 Hz)	Option Page 23	Optional accessories Page 27	International standards
	HRS012		1100/1300	•	•		Anti-quake bracket Piping conversion fitting (For size assignt writer content astign)	
	HRS018		1500/1700	•	_	 With earth leakage breaker 	(For air-cooled, water-cooled and option) · Concentration meter	
			1700/1900	—	•	· With automatic water	Particle filter set	()
	HRS024	Air-cooled refrigeration	2100/2400	_	•	fill function Applicable to DI water (deionized water) piping 		
	HRS030	Water-cooled refrigeration	2600/3200	_	•	High pressure pump mounted (* The HRS050/ 060 cannot be selected.) High temperature		(UL Standards Refer to pages to 12 for details
	HRS050		4700/5100	—	•	 High temperature environment specification (* The HRS030/050/060 cannot be selected.) 		on applicable models.
	HRS060		4900/5900	_	•		Separately installed power transformer	



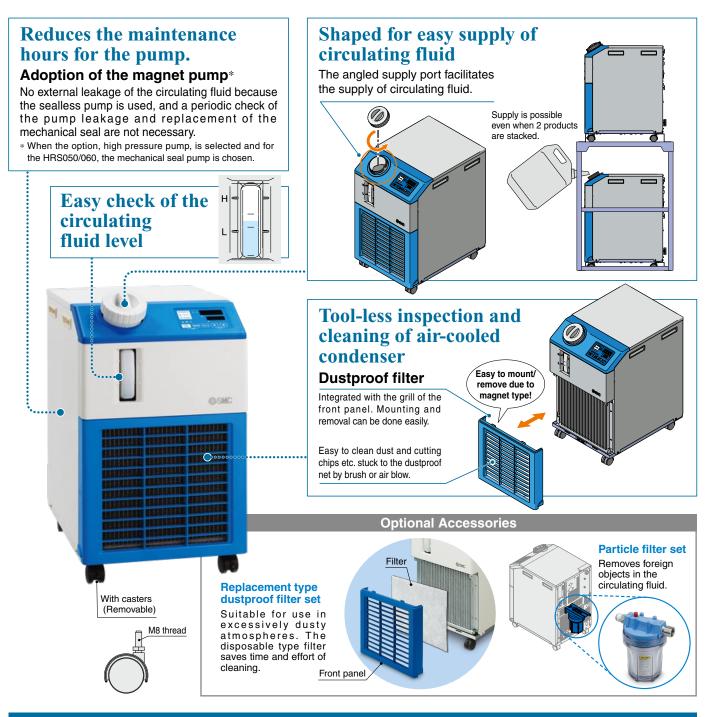


Convenient Functions (Refer to the Operation Manual for details.)


Timer operation function

Timer for ON and OFF can be set in units of 0.5 h up to 99.5 h. Ex.) Can set to stop on Saturday and Sunday

and restart on Monday morning.

Ex. SE.02 "ON timer"

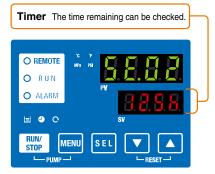

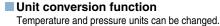



- Power failure auto-restart function
 Automatic restart from stoppage due to power failure etc. is
 possible without pressing the
 power failure auto-restart function
 Automatic restart from stoppage due to power failure etc.
- Anti-freezing operation function If the temperature approaches freezing point, e.g. in winter at night, the pump operates automatically and the heat generated by the pump warms the circulating fluid, preventing freezing.
- Key-lock function

Can be set in advance to protect the set values from being changed by pressing keys by mistake.

- Function to output a signal for completion of preparation Notifies by communication when the temperature reaches the pre-set temperature range.
- Independent operation of the pump The pump can be operated independently while chiller is powered off. You can check piping leak and remove the air.

PV 🖁 🗋 🚺

Alarm code

Self Diagnosis Function and Check Display

Display of 35 types of alarm codes For details, refer to page 21.

Operation is monitored all the time by the integrated sensor.

Should any error occur, the self diagnosis result is displayed by the applicable alarm code from 35 types. This makes it easier to identify the cause of the alarm.

Can be used before requesting service.

Changeable alarm set values


0	
Setting item	Set value
Circulating fluid discharge temperature rise	5 to 48°C
Circulating fluid discharge temperature drop	1 to 39°C
Circulating fluid discharge pressure rise	0.05 to 0.75 MPa*
Circulating fluid discharge pressure drop	0.05 to 0.18 MPa*

* Set values vary depending on the model.

Alarm codes notify of checking times.

Notifies when to check the pump and fan motor. Helpful for facility maintenance.

* The fan motor is not used in water-cooled refrigeration.

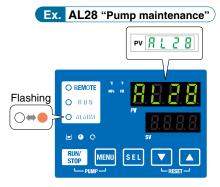

Check display

Flashing


Lights up

0

The internal temperature, pressure and operating time of the product are displayed.

SEL

Ex. AL01 "Low level in tank"

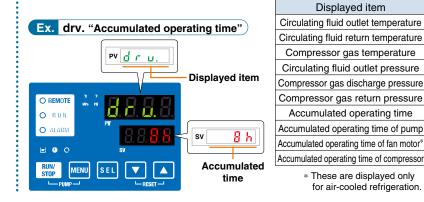


Communication Function

The serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) are equipped as standard. Communication with the user's equipment and system construction are possible, depending on the application. A 24 VDC output can be also provided, and is available for a flow switch (SMC's PF2W etc.).


Ex. 1 Remote signal I/O through serial communication

The remote operation is enabled (to start and stop) through serial communication.

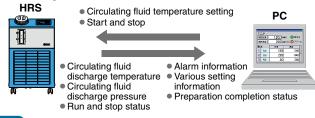


Ex. 3 Alarm and operation status (start, stop, etc.) signal output


The alarm and status generated in the product are assigned to 3 output signals based on their contents, and can be

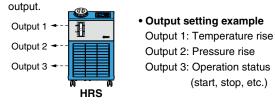

Ex. 2 Remote operation signal input

One of the contact inputs is used for remote operation and the other is used for a flow switch to monitor the flow, and their warning outputs are taken in.

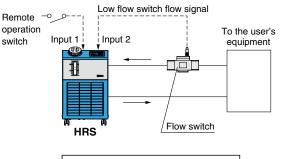

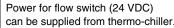

Application Examples

	Heat source	Automotive	Light electrical appliance	Food	Machinery	Medical	Semiconduct
Arc welding machine	Torch	•			•		
Resistance welding machine	Tip	•			•		
Laser welding machine	Oscillator	•			•		
UV curing device	Lamp	•	•	•		•	
X-ray instrument			•			•	
Electronic microscope	Lens		•			•	•
Laser marker	Oscillator	•	•	•		•	
Ultra sonic wave inspection machine		•	•		•		
Atomizing device/ Crushing equipment	Blade			•			
Linear motor	Motor	•			•		
Packaging machines (food products)	Dies/ Welded portions			•			
Mold cooling	Mold	•	•	•		•	
Temperature control of adhesive and paint material	Paint material/ Welding materials	•	•	•			
Cooling of vacuum pump	Pump	•					•
Shrink fit machine	Workpiece	•			•		
Gas cylinder cabinet							•
Concentrating equipment	Test liquid			•		•	
Reagent cooling equipment	Reagent			•		•	
Cleaning machine (hydrocarbon-based)	Cleaning tank	•			•		
Printing machine	Roller			•	•		
Chamber electrode	Electrode						
High frequency induction heating equipment	Power supply/ Heating coil				•		

Global Supply Network

SMC has a comprehensive network in the global market.

We now have a presence of more than 400 branch offices and distributors in 78 countries world wide such as Asia, Oceania, North/Central/South America, and Europe. With this global network, we are able to provide a global supply of our substantial range of products with the best service. We also provide full support to local factories, foreign manufacturing companies and Japanese companies in each country.






SMC Thermo-chiller Variations

Lots of variations are available in response to the users' requirements.

As of August 2014																
Series		Temperature Set temperature stability range -		Cooling capacity [kW]									Environment	International standards		
			range [°C]	1.2	1.8	2.4	3	5	6	9	10	15	20	25	Environment	international standards
	HRSE Basic type	±2.0	10 to 30	•	•	•									Indoor use	—
	HRS Standard type	±0.1	5 to 40	•	•	•	•	•	•						Indoor use	(ور) (Only 60 Hz)
	HRS100/150 Standard type	±1.0	5 to 35								•	•			Outdoor installation IPX4	—
	HRSH090 Inverter type	±0.1	5 to 40							•					Indoor use	€ € (400 V as standard) UL Standards (To be obtained)
	HRSH Inverter type	±0.1	5 to 35									•	•	•	Outdoor installation IPX4	(400 V as standard, 200 V as an option) ست. (Only 200 V as an option)

As of August 2014

Circulating Fluid/Facility Water Line Equipment

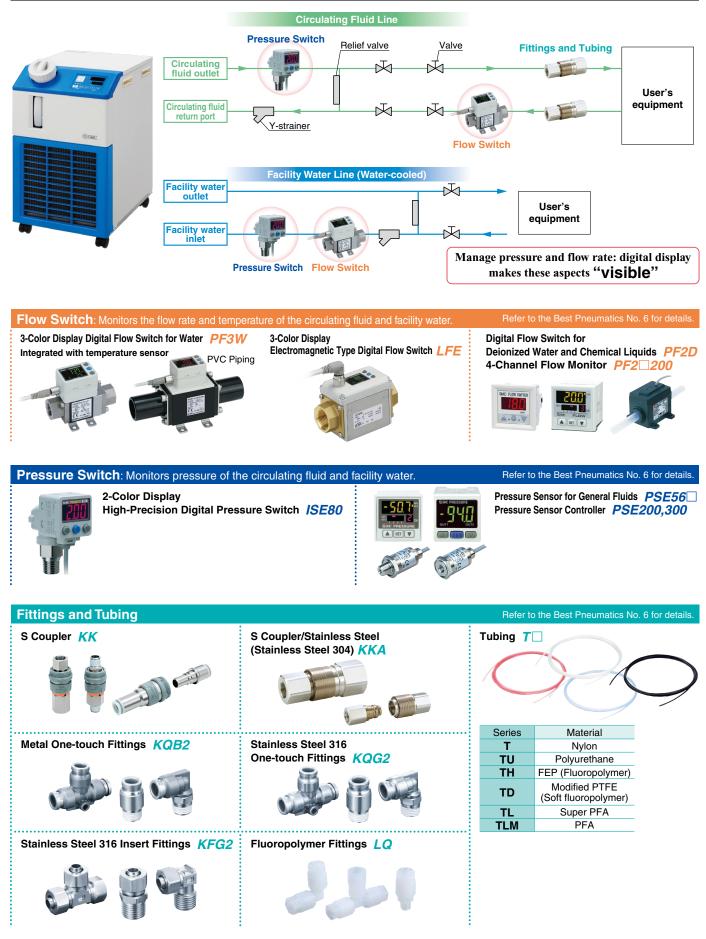









Thermo-chiller Series HRS

How to Order/Specifications

Single-phase 100/115 VAC	·Page 9
Single-phase 200 to 230 VAC	Page 11
Cooling Capacity ·····	Page 13
Heating Capacity	Page 15
Pump Capacity/	
Required Facility Water Flow Rate	·Page 17
Dimensions	Page 18
Operation Display Panel	Page 21
Alarm ·····	Page 21
Communication Function	Dogo 00

Options

With Earth Leakage Breaker	Page 23
With Automatic Water Fill Function	Page 23
Applicable to DI Water (Deionized Water)	
D ¹	
Piping ·····	Page 23
High Pressure Pump Mounted ······	

Optional Accessories	5 Page 27
O • • • • • • •	


1) Anti-quake Bracket ······Page 29
 Piping Conversion Fitting (For Air-Cooled Refrigeration/Water-Cooled Refrigeration) ···· Page 29
③ Piping Conversion Fitting (For Option)Page 30
•
(4) Concentration Meter ······Page 31
5 Bypass Piping Set Page 31
6 Power Supply Cable Page 32
⑦ DI Filter Set
(8) Electrical Resistance Sensor SetPage 34
Particle Filter Set Page 35
$\textcircled{10}$ Drain Pan Set (With Water Leakage Sensor) \cdots Page 36
1) Connector Cover Page 37
12 Analog Gateway Unit Page 37
13 Replacement Type Dustproof Filter SetPage 37
14 Separately Installed Power Transformer Page 38

Cooling Capacity Calculation

Required Cooling Capacity Calculation	Page 39
Precautions on Cooling Capacity Calculation	Page 40
Circulating Fluid Typical Physical	
Property Values	Page 40

Specific Product PrecautionsPage 41



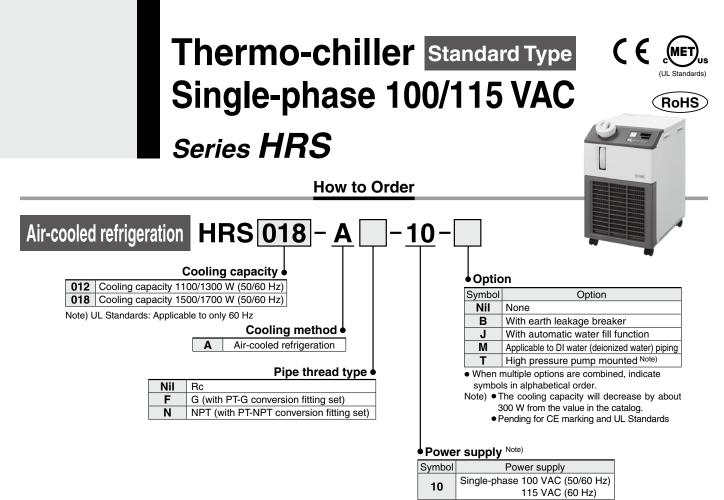

Note) UL Standards: Applicable to only 60 Hz

Specifications * There are different values from standard specifications. Refer to pages 23 to 25 for details.

		Model	HRS012-A□-10	HRS018-A□-10				
Cooling meth	nod		Air-cooled	refrigeration				
Refrigerant			R407	C (HFC)				
Control meth	od		PID control					
Ambient temperature/humidity Note 1)			Temperature: 5 to 40	Temperature: 5 to 40°C, Humidity: 30 to 70%				
	Circulat	ing fluid Note 2)	Tap water, 15% ethylene g	glycol aqueous solution Note 4)				
	Set temp	oerature range Note 1) °C		to 40				
		capacity Note 3) (50/60 Hz) W	1100/1300	1500/1700				
		capacity Note 3) (50/60 Hz) W	36	0/450				
	Temper	ature stability Note 5) °C		:0.1				
Circulating		Rated flow Note 6) 7) (50/60 Hz) L/mi	n 7 (0.13 MPa)/7 (0.18 MPa)				
fluid	Pump	Maximum flow rate (50/60 Hz) L/mi	n 2'	7/29				
system	i unp	Maximum pump head (50/60 Hz) m	14	14/19				
		Output W	200					
	Tank ca		Approx. 5					
	Port siz	e	Rc1/2					
	Fluid co	ntact material	Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC					
			Single-phase 100 VAC (50/60 Hz), 115 VAC (60 Hz)					
	Power s	upply	Allowable voltage range ±10%					
Electrical	Circuit	protector A		15				
system	Applicable	e earth leakage breaker capacity Note 8) A		15				
	Rated o	perating current A	7.5/8.3	7.7/8.4				
	Rated po	wer consumption Note 3) (50/60 Hz) kVA	0.7/0.8	0.8/0.8				
Noise level N	^{ote 9)} (50/6	0 Hz) dB	58	8/55				
			Fitting (for drain outlet) 1 pc., Input/output signation	al connector 1 pc., Power supply connector 1 pc.,				
Accessories				tion) 1, Quick Manual (with a clear case) 1,				
Accessories				Alarm code list sticker 1, Ferrite core (for communication) 1 pc.,				
			Power supply cable: Option (sold separately) to be ordered or prepared by user.					
Weight Note 10))	kg	40					
pan Refrig ing water s Note 3) ① Ambier	er is used, us geration and system - circo at temperatur	ensation. se water that conforms to Water Quality Star Air Conditioning Industry Association (JRA C Jating type - make-up water). e: 25°C, (2) Circulating fluid temperature: 20° Uniting fluid Top where	dards of the Ja- L-02-1994 cool- Note 7) Required minimum flow rat C, ③ Circulating Diping set (sold separately)	b-chiller outlet when the circulating fluid temperature is 20°C te for cooling capacity or maintaining the temperature stabilit cooling capacity and the temperature stability may not b s lower than the rated flow. (In such a case, use a bypas ().)				

fluid rated flow, (Circulating fluid: Tap water Refer to the cooling capacity graph on page 13 for details.

Note 4) Use a 15% ethylene glycol aqueous solution if operating in a place where the circu-lating fluid temperature is 10°C or less.


Note 5) Outlet temperature when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.

Note 8) Purchase an earth leakage breaker with current sensitivity of 15 mA or 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 23.) Note 9) Front: 1 m, height: 1 m, stable with no load, Other conditions \rightarrow Note 3)

Note 10) Weight in the dry state without circulating fluids Note 11) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 "* For altitude of 1000 m or higher".



Thermo-chiller Standard Type Series HRS

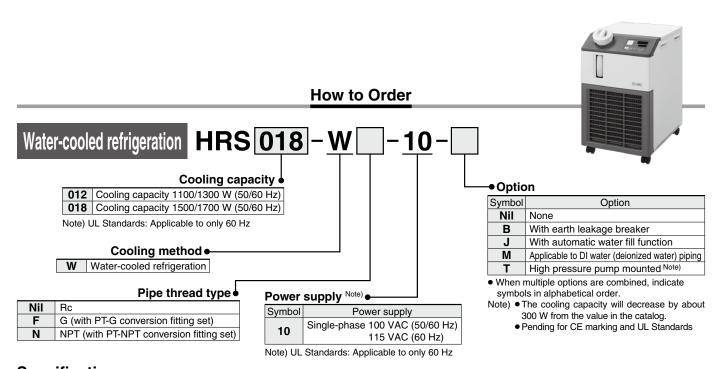

Specifications * There are different values from standard specifications. Refer to pages 23 to 25 for details.


		Model		HRS012-W□-10	HRS018-W□-10			
Cooling meth	nod			Water-cooled refrigeration				
Refrigerant				R4070	C (HFČ)			
Control meth	Control method PID control				control			
Ambient tem	perature/h	numidity Note 1)	Temperature: 5 to 40°C, Humidity: 30 to 70%					
	Circulat	ing fluid Note 2)		Tap water, 15% ethylene glycol aqueous solution Note 4)				
	Set temperature range Note 1)			5 to 40				
	Cooling capacity Note 3) (50/60 Hz) W			1100/1300	1500/1700			
	Heating	capacity Note 3) (50/60 Hz)	w	360)/450			
	Tempera	ature stability Note 5)	°C	±(0.1			
Circulating		Rated flow Note 6) 7) (50/60 Hz)	L/min	7 (0.13 MPa)	/7 (0.18 MPa)			
fluid	Dump	Maximum flow rate (50/60 Hz)	L/min	27	7/29			
system	Pump	Maximum pump head (50/60 H	lz) m	14	/19			
		Output	W	2	00			
	Tank ca	pacity	L	App	rox. 5			
	Port size	9			:1/2			
	Eluid oo	ntaat matarial		Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic,				
	Fluid contact material			Carbon, PP, PE, POM, FKM, EPDM, PVC				
	Temperature range °C			5 to 40				
Facility	Pressure range MPa			0.3 to 0.5				
water	Required flow rate Note 11) (50/60 Hz) L/min							
system	Inlet-outlet pressure differential of facility water MPa			0.3 or more				
system	Port size			Rc3/8				
	Fluid contact material			Stainless steel, Copper (Heat exchanger brazing), Bronze, Synthetic rubber				
	Power supply			Single-phase 100 VAC (50/60 Hz), 115 VAC (60 Hz)				
	Fower s	арріу		Allowable voltage range ±10%				
Electrical	Circuit protector A			15				
system	Applicable	e earth leakage breaker capacity Note	⁸⁾ A	15				
		perating current	Α	7.5/8.3	7.7/8.4			
		wer consumption Note 3) (50/60 Hz		0.7/0.8	0.8/0.8			
Noise level N	ote 9) (50/6	0 Hz)	dB		3/55			
					I connector 1 pc., Power supply connector 1 pc.,			
Accessories			ion) 1, Quick Manual (with a clear case) 1,					
Accessories				Alarm code list sticker 1, Ferrite core (for communication) 1 pc.,				
				Power supply cable: Option (sold separately) to be ordered or prepared by user.				
Weight Note 10))		kg	40				
Note 1) It should h					e for cooling capacity or maintaining the temperature stability			
		se water that conforms to Water Qual			ooling capacity and the temperature stability may not be			
		Air Conditioning Industry Association ulating type - make-up water).	(JRA GL-	-02-1994 cool- satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)				
Note 3) 1) Ambien	t temperatur	e: 25°C, 2 Circulating fluid temperati	ure: 20°C.	 Girculating Ote 8) Purchase an earth leakage 	 e breaker with current sensitivity of 15 mA or 30 mA sepa			

Note 3) (1) Ambient temperature: 25°C, (2) Circulating fluid temperature: 20°C, (3) Circulating Note 3) ① Artholent temperature: 25 ℃, ② Circulating fluid temperature: 20 ℃, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water, ⑤ Facility water temperature: 25°C Refer to the cooling capacity graph on page 13 for details.
 Note 4) Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10°C or less.

Note 5) Outlet temperature when the circulating fluid flow is rated flow, and the circulating flu-id outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable. Note 6) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.

Note 9) Functions and earth leakage breaker with current sensitivity of 15 mA of 50 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 23.)
 Note 9) Front: 1 m, height: 1 m, stable with no load, Other conditions → Note 3)
 Note 10) Weight in the dry state without circulating fluids

Note 10) Weight in the dry state without and including index
 Note 11) Required flow rate when a load for the cooling capacity is applied at a circulating fluid temperature of 20°C, and circulating fluid rated flow and facility water temperature of 25°C.
 Note 12) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 "* For altitude of 1000 m or higher".

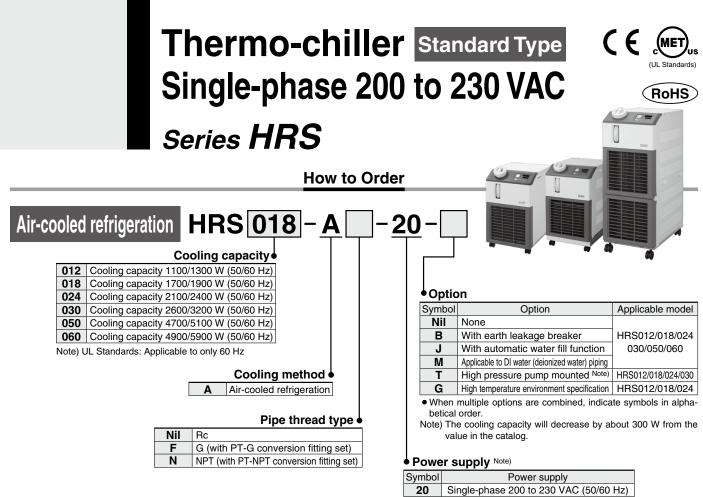

Note) UL Standards: Applicable to only 60 Hz

Specifications * There are different values from standard specifications. Refer to pages 23 to 25 for details.

Model	HRS012-A□-20	HRS018-A□-20		HRS030-A□-20	HRS050-A□-20	HRS060-A□-20		
Cooling method	Air-cooled refrigeration							
Refrigerant		R407C	<u> </u>		R410A (HFC)			
Control method		PID control						
Ambient temperature/humidity Note 1)	Temperature: 5 to 40°C, High temperature environment specification (option): 5 to 45°C, Humidity: 30 to 70%							
Circulating fluid Note 2)	Tap water, 15% ethylene glycol aqueous solution Note 4)							
Set temperature range Note 1) °C			5 to	-				
Cooling capacity Note 3) (50/60 Hz) W Heating capacity Note 3) (50/60 Hz) W Temperature stability Note 5) °C	1100/1300	1700/1900	2100/2400	2600/3200	4700/5100	4900/5900		
Heating capacity Note 3) (50/60 Hz) W		530/650		600/640	1100/1400	1000/1300		
			±0	.1				
Bated flow Note 6) 7) (50/60 Hz) L/min C Maximum flow rate (50/60 Hz) L/min		7 (0.13 MPa)/	7 (0.18 MPa)		23 (0.24 MPa)/28 (0.32 MPa)			
Maximum flow rate (50/60 Hz) L/min Maximum pump head (50/60 Hz) m		27/29		34/40	31/42	29/38		
Maximum pump head (50/60 Hz)		14/	-		5	-		
Uutput W		20	•		550			
Definition Maximum pump head (50/60 Hz) m Output W Tank capacity L Port size	Approx. 5							
·o Port size	Rc1/2							
Fluid contact material	Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC							
For the supply	Single-phase 200 to 230 VAC (50/60 Hz) Allowable voltage range ±10%							
Circuit protector A		1	20	30				
Applicable earth leakage breaker capacity Note 8) A Rated operating current A		1	0		20	30		
ਸ਼ Rated operating current A	4.6/5.1	4.7/5.2	5.1/5.9	5.2/6.0	8/11	8.9/11.5		
Rated power consumption Note 3) (50/60 Hz) kVA	0.9/1.0	0.9/1.0	1.0/1.2	1.0/1.2	1.7/2.2	1.8/2.3		
Noise level Note 9) (50/60 Hz) dB		60/61		62/65	65/68	66/68		
Accessories	Fitting (for drain outlet) 1 pc. Note 11), Input/output signal connector 1 pc., Power supply connector 1 pc. Note 11), Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1 Note 11), Alarm code list sticker 1, Ferrite core (for communication) 1 pc., Power supply cable: Option (sold separately) to be ordered or prepared by user.							
Weight Note 10) kg		43		47	69	73		
 Vote 1) It should have no condensation. Vote 2) If tap water is used, use water that conforms to Water pan Refrigeration and Air Conditioning Industry Assoc ing water system - circulating type - make-up water). Vote 3) ① Ambient temperature: 25°C. (2) Circulating fluid tem 	iation (JRA GL-02-19	f the Ja- Note 94 cool-	7) Required minimum The specification of	low rate for cooling cap of the cooling capacity rate is lower than the	hen the circulating fluic pacity or maintaining the y and the temperature e rated flow. (In such	e temperature stability. e stability may not be		

ing water system - circulating type - make-up water). Note 3) 0 Ambient temperature: 25°C, 0 Circulating fluid temperature: 20°C, 3 Circulating

Find of the second secon

Note 5) Outlet temperature when the circulating fluid flow is rated flow, and the circulating flu-id outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.

piping set (sold separately).) Note 8) Purchase an earth leakage breaker with current sensitivity of 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available.) Note 9) Front: 1 m, height: 1 m, stable with no load, Other conditions \rightarrow Note 3)


Note 10) Weight in the dry state without circulating fluids

Note 11) It is not provided for the HRS050/060.

Note 17) It is not product is used at altitude of 1000 m or higher, refer to "Operating Environ-ment/Storage Environment" (page 42) Item 14 "* For altitude of 1000 m or higher".



Thermo-chiller Standard Type Series HRS

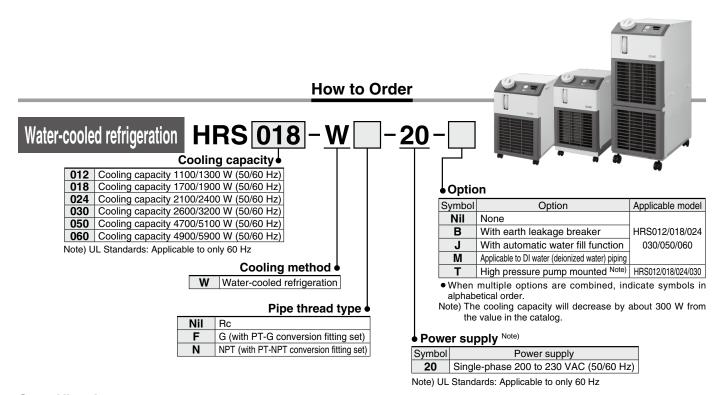

Specifications * There are different values from standard specifications. Refer to pages 23 to 25 for details.

Refr Con	ling method	HRS012-W□-20 HRS018-W□-20 HRS024-W□-20 HRS030-W□-20 HRS050-W□-20 H				1110000 11 -20		
Con				Water-cooled	l refrigeration			
	rigerant		R407C	(HFC)		R410A	(HFC)	
	trol method			PID c				
Amt	pient temperature/humidity Note 1)	Temperature: 5	to 40°C, High temp				midity: 30 to 70%	
	Circulating fluid Note 2)		Tap wate	r, 15% ethylene gly		ution Note 4)		
۶L	Set temperature range Note 1)			5 to				
Ē	Cooling capacity Note 3) (50/60 Hz) W	1100/1300	1700/1900	2100/2400	2600/3200	4700/5100	4900/5900	
	Heating capacity Note 3) (50/60 Hz) W		530/650		400/600	1000/	1300	
	Temperature stability Note 5) °C			±0	.1			
fluid	Rated flow Note 6) 7) (50/60 Hz) L/min		7 (0.13 MPa)	/7 (0.18 MPa)		23 (0.24 MPa)/28 (0.32 MPa)	23 (0.21 MPa)/28 (0.29 MP	
ŧ	E Maximum flow rate (50/60 Hz) L/min		27/29		34/40	31/42	29/38	
g	Maximum flow rate (50/60 Hz) L/min Maximum pump head (50/60 Hz) m		14	/19		5	0	
ati	Output W		2	00		55	50	
Circulating	Tank capacity L			Appr	ox. 5			
. <u></u>	Port size			Rc	1/2			
-	Fluid contact material	S	Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC					
E I	Temperature range °C			5 to	40			
system	Pressure range MPa	0.3 to 0.5						
er.	Required flow rate Note 11) (50/60 Hz) L/min	8	12	14	15	16	17	
Facility water	Inlet-outlet pressure differential of facility water MPa	1		0.3 or	more			
ŧ	Port size		Ro	3/8		Rc1/2		
	Fluid contact material	S	tainless steel, Cop	per (Heat exchang	ger brazing), Bror	nze, Synthetic rubb	ber	
system	Power supply		Sir	ngle-phase 200 to Allowable volta		Hz)		
	Circuit protector A		1	0		2	0	
ica	Applicable earth leakage breaker capacity Note 8) A		1	0		2	0	
	Rated operating current A	4.6/5.1	4.7/5.2	5.1/5.9	5.2/6.0	7.6/10	7.6/10.4	
щ	Rated power consumption Note 3) (50/60 Hz) kVA	0.9/1.0	0.9/1.0	1.0/1.2	1.0/1.2	1.5/2.0	1.5/2.1	
	se level Note 9) (50/60 Hz) dB		60/61		62/65	65/68	66/68	
Acc	essories	Fitting (for drain outlet) 1 pc. Note 12), Input/output signal connector 1 pc., Power supply connector 1 pc. Note Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1 Note 12), Alarm code list sticker 1, Ferrite core (for communication) 1 pc., Power supply cable: Option (sold separately) to be ordered or prepared by user.			Note 12)			
Wei	ght Note 10) kg		43		46	6		
lote 1 lote 2	 b) It should have no condensation. b) It should have no condensation. c) If tap water is used, use water that conforms to W Japan Refrigeration and Air Conditioning Industry cooling water system - circulating type - make-up wat 0) ① Ambient temperature: 25°C, ② Circulating fluid ter 	Association (JRA GL er).	rds of the -02-1994	The specification of satisfied if the flow piping set (sold sep	of the cooling capacit rate is lower than th parately).)	pacity or maintaining the ty and the temperature e rated flow. (In such current sensitivity of 30	e stability may not b a case, use a bypas	

Note 3) ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water, ⑤ Facility water temperature: 25°C Refer to the cooling capacity graph on pages 13 and 14 for details.
 Note 4) Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10°C or less.

Note 5) Outlet temperature when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable. Note 6) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.

(A product with an optional earth leakage breaker with current sensitivity of 50 ms separately (A product with an optional earth leakage breaker (option B) is also available.) Note 9) Front: 1 m, height: 1 m, stable with no load, Other conditions \rightarrow Note 3) Note 10) Weight in the dry state without circulating fluids Note 11) Required flow rate when a load for the cooling capacity is applied at a circulating fluid tem-perature of 20°C, and circulating fluid rated flow and facility water temperature of 25°C.


Note 12) It is not provided for the HRS050/060. Note 13) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/ Storage Environment" (page 42) Item 14 "* For altitude of 1000 m or higher".

Series HRS Standard Type


Note 1) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 "* For altitude of 1000 m or higher".

Cooling Capacity Note 2) For models with high pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.


HRS012-A-10, HRS012-W-10 (Single-phase 100/115 VAC) (50 Hz)

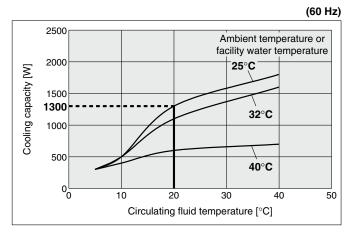




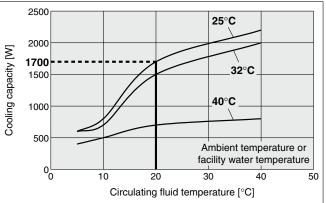





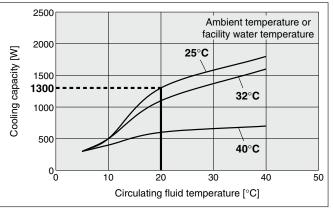




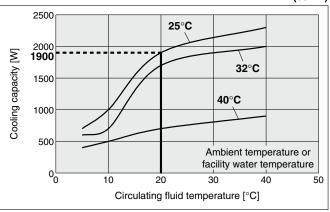


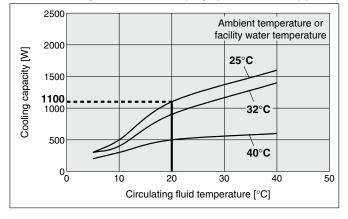


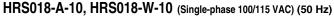


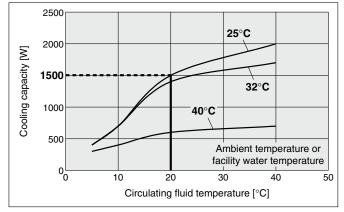



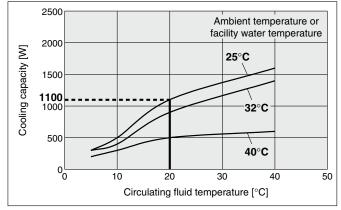

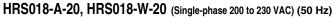


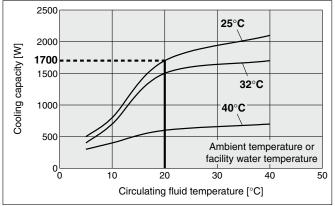


Thermo-chiller Standard Type Series HRS

Note 1) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 "* For altitude of 1000 m or higher".


Cooling Capacity Note 2) For models with high pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

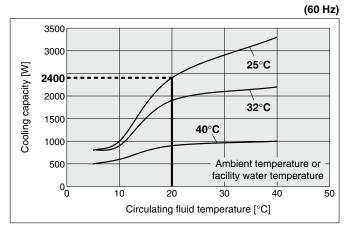





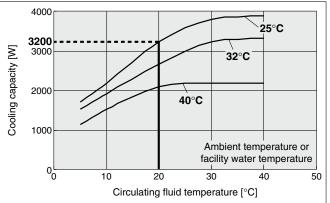




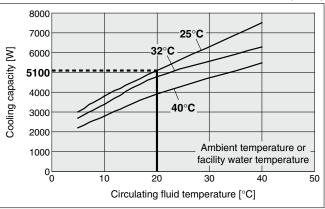


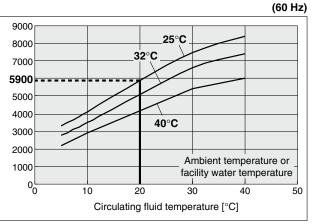


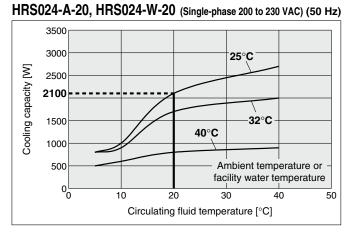





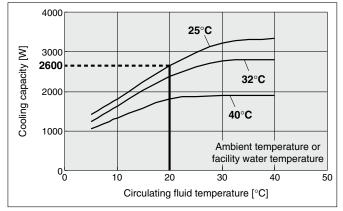

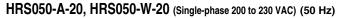

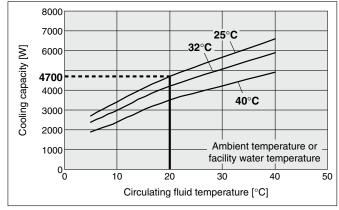

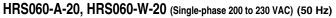


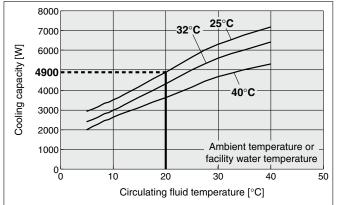

Cooling capacity [W]

Series HRS Standard Type


Heating Capacity

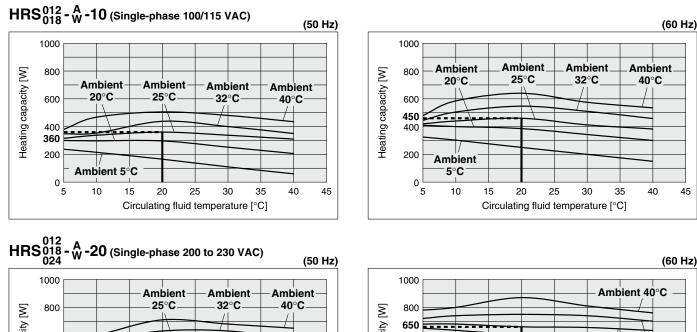


(50 Hz)


(50 Hz)


SMC

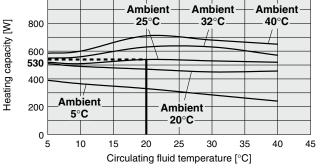

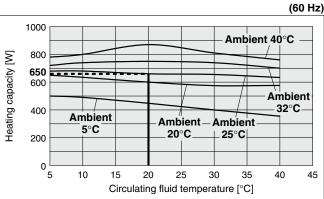

45

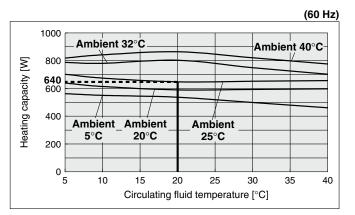


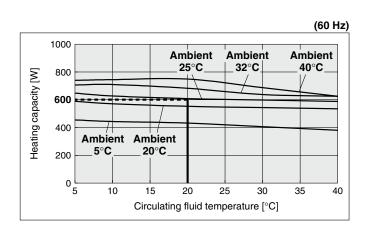

1000 Ambient 25°C Åmbient Ambient 800 32°C 40°C Heating capacity [W] 600 400 Ambient Ambient 200 5°C 20°C 0 L 5 10 15 20 25 30 35 40 Circulating fluid temperature [°C]


HRS030-A-20 (Single-phase 200 to 230 VAC)

HRS030-W-20 (Single-phase 200 to 230 VAC)

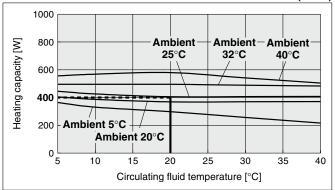



Heating Capacity


HRS050-A-20 (Single-phase 200 to 230 VAC) (50 Hz)

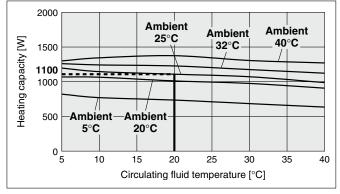





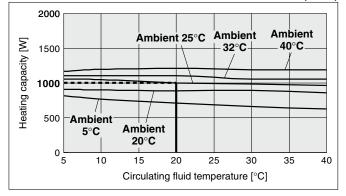


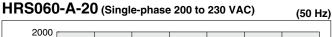

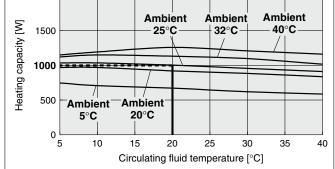


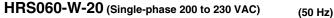


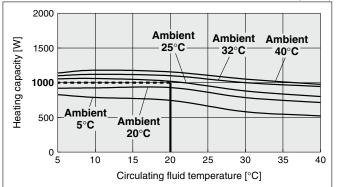


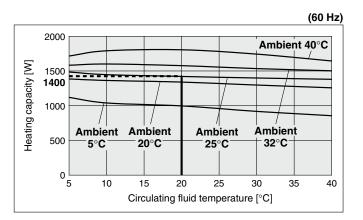



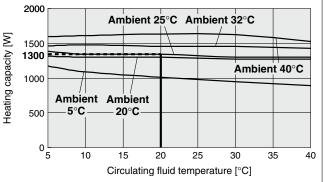


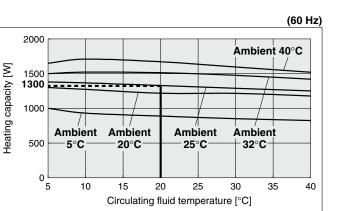

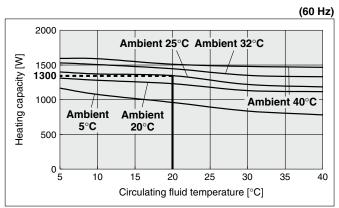


Series HRS Standard Type


Pump Capacity

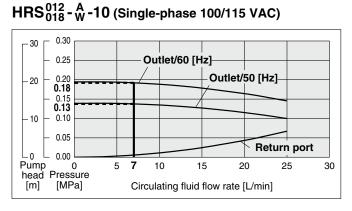

HRS030- ^A/_W-20 (Single-phase 200 to 230 VAC)

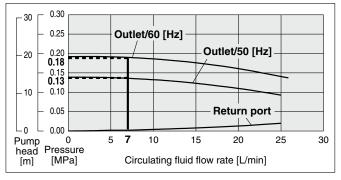



HRS060- ^A/_W-20 (Single-phase 200 to 230 VAC)

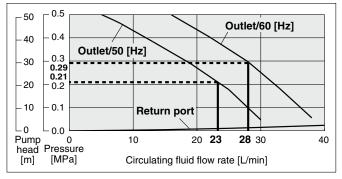

Required Facility Water Flow Rate

HRS012-W-¹⁰₂₀, HRS018-W-¹⁰₂₀, HRS024-W-20 HRS030-W-20, HRS050-W-20, HRS060-W-20

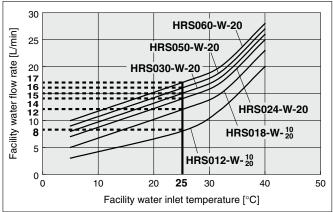

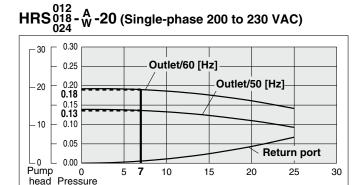


Circulating fluid flow rate [L/min]

$HRS050\text{-}\,^{\text{A}}_{\text{W}}\text{-}20$ (Single-phase 200 to 230 VAC)


[MPa]

[m]

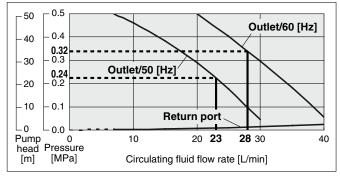

* This is the facility water flow rate at the circulating fluid rated flow and the cooling capacity listed in the "Cooling Capacity" specifications.


SMC

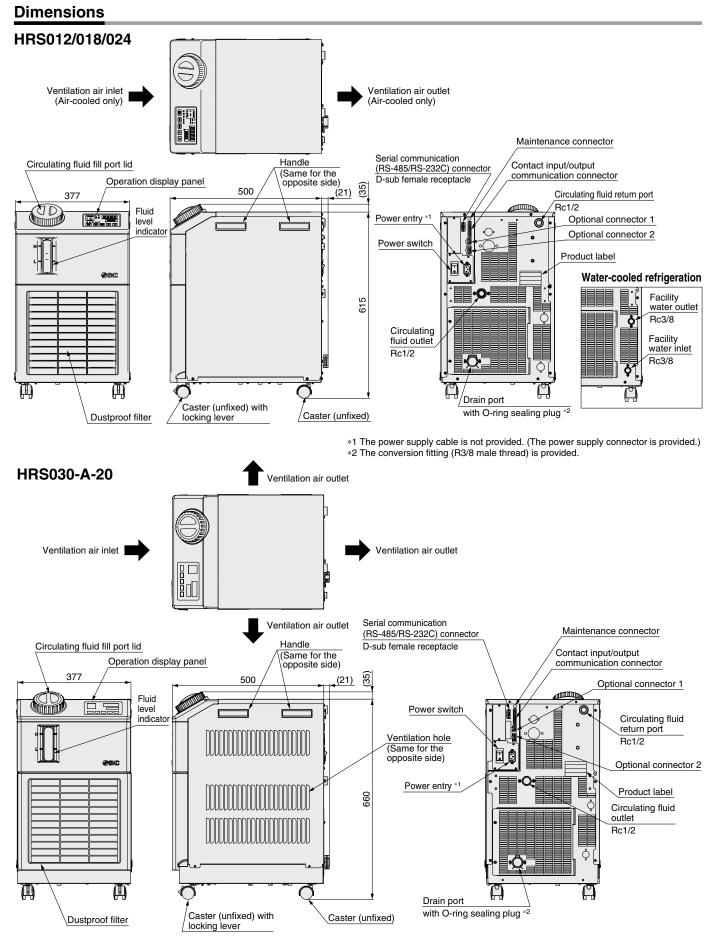

*1 The power supply cable is not provided. (The power supply connector is provided.) *2 The conversion fitting (R3/8 male thread) is provided.


Series HRS Standard Type

Dimensions

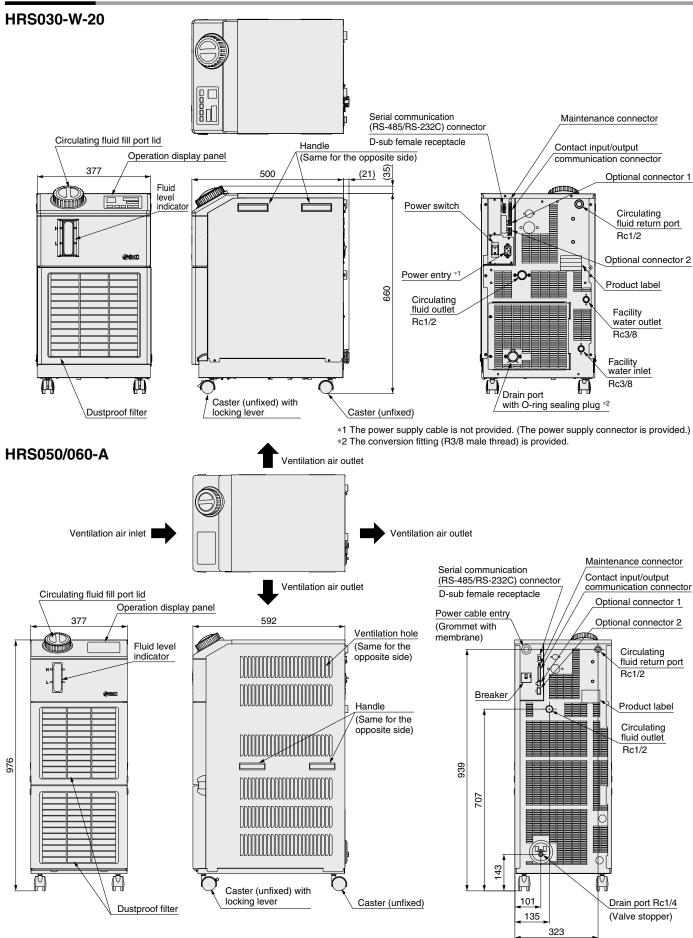

Thermo-chiller Standard Type Series HRS

Dimensions

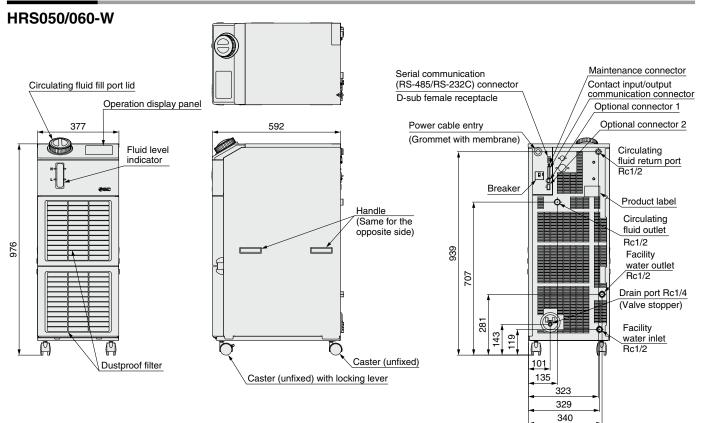

Series HRS Standard Type

Operation Display Panel

The basic operation of this unit is controlled through the operation display panel on the front of the product.



No.	Description		Function					
(1)	Digital display	PV	Displays the circulating fluid current discharge temperature and pressure and alarm codes and other menu items (codes).					
	(7-segment and 4 digits)	SV	Displays the circulating fluid discharge temperature and the set values of other menus.					
2	[°C] [°F] indicator	Equip	Equipped with a unit conversion function. Displays the unit of display temperature (default setting: °C).					
3	[MPa] [PSI] indicator	Equip	ped with a unit conversion function. Displays the unit of display pressure (default setting: MPa).					
4	[REMOTE] indicator	Enable	es remote operation (start and stop) by communication. Lights up during remote operation.					
(5)	[RUN] indicator		Lights up when the product is started, and goes off when it is stopped. Flashes during stand-by for stop or anti-freezing function, or independent operation of the pump.					
6	[ALARM] indicator	Flashe	es with buzzer when alarm occurs.					
\bigcirc	[🖃] indicator	Lights up when the surface of the fluid level indicator falls below the L level.						
8	[🕘] indicator	Equipped with a timer for start and stop. Lights up when this function is operated.						
9	[C] indicator	Equipped with a power failure auto-restart function, which restarts the product automatically after stopped due to a power failure, is provided. Lights up when this function is operated.						
10	[RUN/STOP] key	Makes	s the product start or stop.					
1	[MENU] key		the main menu (display screen of circulating fluid discharge temperature and pressure) and other menus onitoring and entry of set values).					
12	[SEL] key	Chang	ges the item in menu and enters the set value.					
13	[▼] key	Decre	Decreases the set value.					
14	[▲] key	Increa	ncreases the set value.					
(15)	[PUMP] key	Press th	e [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air).					
16	[RESET] key	Press	the $[\mathbf{V}]$ and $[\mathbf{A}]$ keys simultaneously. The alarm buzzer is stopped and the [ALARM] indicator is reset.					

Alarm

This unit has 35 types of alarms as standard, and displays each of them by its alarm code on the PV screen with the [ALARM] lamp ([LOW LEVEL] lamp) lit up on the operation display panel. The alarm can be read out through communication.

Alarm code	Alarm message	Operation status	Alarm code	Alarm message	Operation status
AL01	Low level in tank	Stop *1	AL20	Memory error	Stop
AL02	High circulating fluid discharge temperature	Stop	AL21	DC line fuse cut	Stop
AL03	Circulating fluid discharge temperature rise	Continue *1	AL22	Circulating fluid discharge temperature sensor failure	Stop
AL04	Circulating fluid discharge temperature drop	Continue *1	AL23	Circulating fluid return temperature sensor failure	Stop
AL05	High circulating fluid return temperature (60°C)	Stop	AL24	Compressor intake temperature sensor failure	Stop
AL06	High circulating fluid discharge pressure	Stop	AL25	Circulating fluid discharge pressure sensor failure	Stop
AL07	Abnormal pump operation	Stop	AL26	Compressor discharge pressure sensor failure	Stop
AL08	Circulating fluid discharge pressure rise	Continue *1	AL27	Compressor intake pressure sensor failure	Stop
AL09	Circulating fluid discharge pressure drop	Continue *1	AL28	Pump maintenance	Continue
AL10	High compressor intake temperature	Stop	AL29	Fan motor maintenance *3	Continue
AL11	Low compressor intake temperature	Stop	AL30	Compressor maintenance	Continue
AL12	Low super heat temperature	Stop	AL31 *2	Contact 1 input signal detection	Stop *1
AL13	High compressor discharge pressure	Stop	AL32 *2	Contact 2 inputs signal detection	Stop *1
AL15	Refrigerating circuit pressure (high pressure side) drop	Stop	AL33 *4	Water leakage	Stop *1
AL16	Refrigerating circuit pressure (low pressure side) rise	Stop	AL34 *4	Electrical resistance rise	Continue
AL17	Refrigerating circuit pressure (low pressure side) drop	Stop	AL35 *4	Electrical resistance drop	Continue
AL18	Compressor overload	Stop	AL36 *4	Electrical resistance sensor failure	Continue
AL19 *2	Communication error *2	Continue *1			

*1 "Stop" or "Continue" are default settings. Users can change them to "Continue" and "Stop". For details, refer to the Operation Manual. *2 "AL19, AL31, AL32" are disabled in the default setting. If this function is necessary, it should be set by user, referring to the Operation Manual. *4 This alarm function can be used when the option (sold separately) is used.

Please download the Operation Manual via our website, http://www.smcworld.com

Communication Function


	Item	Specifications				
Connector	type (to the product)	MC 1,5/12-GF-3,5				
	Insulation method	Photocoupler				
	Rated input voltage	24 VDC				
Input signal	Operating voltage range	21.6 VDC to 26.4 VDC				
	Rated input current	5 mA TYP				
	Input impedance	4.7 kΩ				
Contact output	Rated load voltage	48 VAC or less/30 VDC or less				
signal	Maximum load current	500 mA AC/DC (resistance load)				
Signal	Minimum load current	5 VDC 10 mA				
Ou	tput voltage	24 VDC ±10% 0.5 A Max				
Cir	cuit diagram	$\begin{array}{c} 24 \text{ VDC} \\ (0.5 \text{ A MAX}) \\ (0.5 A $				

* The pin numbers and output signals can be set by user. For details, refer to the Operation Manual.

Serial Communication

The serial communication (RS-485/RS-232C) enables the following items to be written and read out.

For details, refer to the Operation Manual for communication.

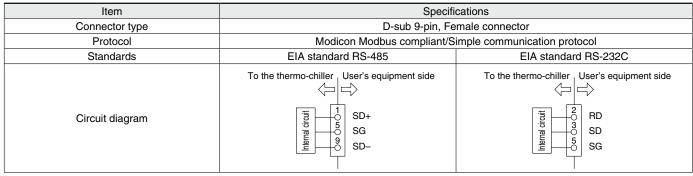

* The terminal resistance of RS-485 (120 Ω) can be switched by the operation display panel. For details, refer to the Operation Manual. Do not connect other than in the way shown above, as it can result in failure.

Please download the Operation Manual via our website, http://www.smcworld.com



Series HRS Options

Note) Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.

Option symbol With Earth Leakage Breaker HRS R Earth leakage With earth leakage breaker breake In the event of a short circuit, overcurrent or overheating, the earth leakage breaker will automatically shut off the power supply. HRS050-00-20-B HRS012/018-□□-10-B HRS012/018/024/030-0-20-B HRS060-A -20-B Applicable model HRS060-W -20-B Rated current sensitivity [mA] 30 30 30 30 Rated shutdown current [A] 15 10 20 30 Short circuit display method Mechanical button Option symbol With Automatic Water Fill Function HRS Automatic fluid fill port With automatic water fill function Rc3/8 By installing this at the automatic water fill port, the circulating fluid can be automatically supplied to the product using a built-in solenoid valve for a water fill while the circulating fluid is decreasing. Applicable model HRS012/018/024/030/050/060-DD-JJ Fluid fill method Built-in solenoid valve for automatic water fill Fluid fill pressure [MPa] 0.2 to 0.5 * When the option, with automatic water fill function, is selected, the weight increases by 1 kg. Option symbol pplicable to DI Water (Deionized Water) Piping HRS -___M Applicable to DI water (deionized water) piping Contact material of the circulating fluid circuit is made from non-copper materials. Applicable model HRS012/018/024/030/050/060-DD-M Stainless steel (including heat exchanger brazing), Alumina ceramic, Contact material SiC, Carbon, PP, PE, POM, FKM, NBR, EPDM, PVC for circulating fluid * No change in external dimensions Option symbol High Pressure Pump Mounted HRS - - - - **- T** High pressure pump mounted Possible to choose a high pressure pump in accordance with user's piping resistance. Cooling capacity will decrease by heat generated in the pump. * The HRS050/060 cannot be selected. Applicable model Rated flow (50/60 Hz) Note 2) 3) L/min 7 (0.36 MPa)/10 (0.42 MPa) 10 (0.44 MPa)/14 (0.40 MPa) 10 (0.32 MPa)/14 (0.32 MPa) Maximum flow rate (50/60 Hz) L/min 18/22 Pump Maximum pump head (50/60 Hz) 55 70 60 m Output W 320 550 Circuit protector A 15 15 (10 A for standard) Recommended earth leakage breaker capacity 15 А Cooling capacity Note 4) w The cooling capacity reduces about 300 W from the value in the catalog. (due to an increase in the heat generation of the pump)

Note 1) -MT: Applicable to DI water (deionized water) piping + High pressure pump

Note 2) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.

Note 3) Required minimum flow rate for cooling capacity or maintaining the temperature stability.


Note 5) When the option, high pressure pump mounted, is selected, the weight increases by 4 kg for -10 type and 6 kg for -20 type.

* No change in external dimensions




Note 4) Cooling capacity will decrease as pump power increases.


Pump Capacity

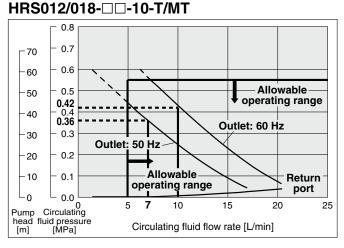


HRS012/018/024-DD-20-T

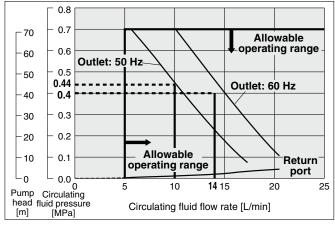


HRS030-00-20-T

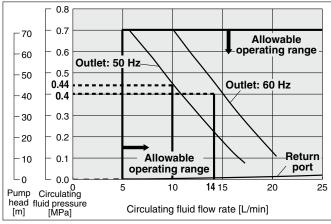

HRS012/018/024-0-20-MT

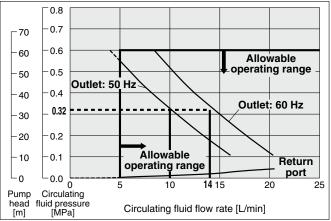


HRS030-0-20-MT

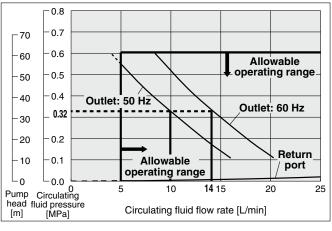

Series HRS

Note) Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.

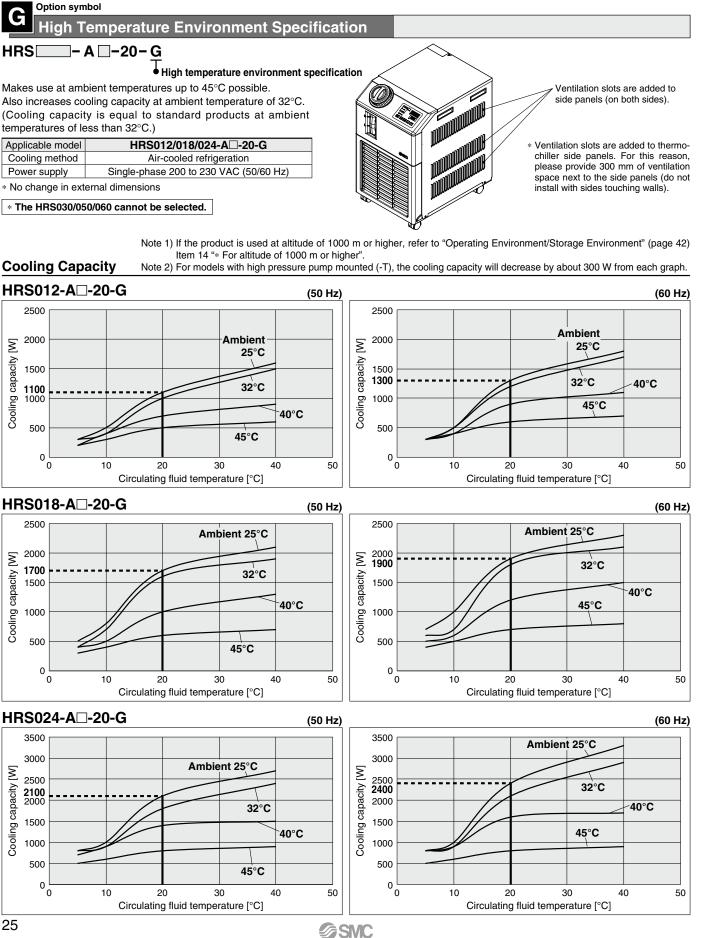



Series HRS **Optional Accessories**

Applicable Model List/Air-Cooled Refrigeration

No.	Description		Part no. HRS012-A HRS018-A HRS024-A-20 HRS030-A		HRS030-A-20	HRS050-A-20 HRS060-A-20	Ор	tion	Page			
				-10 -20				HN3000-A-20	(for -J)	(for -T)	_	
	Anti-muslus has shot		HRS-TK001	•	٠	•	•	—	_	-		
(1)	Anti-quake bracket		HRS-TK002	_	_	_	—	•	_	-	29	
		G thread conversion fitting set	HRS-EP001	•	•	•	•	—	-	-		
	Piping conversion fitting	NPT thread conversion fitting set	HRS-EP002	•	•	•	•	—	_	-		
2	(for air-cooled refrigeration)	G thread conversion fitting set	HRS-EP009	_	_	_	_	•	-	-	29	
		NPT thread conversion fitting set	HRS-EP010	_	_	—	—	•	_	-		
	Piping conversion fitting Note 1)	G thread conversion fitting set	HRS-EP005	—	_	—	—	—	٠	-		
(3)	(for automatic water fill port)	NPT thread conversion fitting set	HRS-EP006	_	_	—	—	—	٠	-		
3	Piping conversion fitting Note 2)	G thread conversion fitting set	HRS-EP007	_	_	_	_	_	_	•	30	
	(for drain outlet)	NPT thread conversion fitting set	HRS-EP008	—	_	_	_	_	_	•		
4	Concentration meter		HRZ-BR002	•	•	•	•	•	٠	•	31	
Ē	D		HRS-BP001	•	•	•	•	—	—	-		
(5)	Bypass piping set		HRS-BP004	—	—	_	_	•	_	-	31	
		For single-phase 100/115 VAC type	HRS-CA001	•	_	_	_	—	—	-		
		For single-phase 200 VAC type	HRS-CA002	—	•	•	•	Note 3)	_	-		
6	Power supply cable	Power supply cable	For single-phase 100/115 VAC type	HRS-CA003	•	_	_	_	_	_	-	32
		For single-phase 200 VAC type	HRS-CA004	—	_	_	_	Note 4)	—	-		
	Retaining clip		HRS-S0074	•	•	•	•	_	-	-		
			HRS-DP001	•	•	•	•	•	—			
7	DI filter set		HRS-DP002	•	•	• • •	•	•	—	-	33	
			HRS-DI001	•	•	•	•	•	_	_	- 34	
_	Electrical resistance	With control function/bypass	HRS-DI003	•	•	•	•	•	_	_		
8	sensor set	With bypass	HRS-DI004	•	•	•	•	•	_	_		
		With control function	HRS-DI005	•	•	•	•	•	_	_		
		(#5) OUT side	HRS-PF001	•	•	•	•	•	-	_		
_		(#10) OUT side	HRS-PF002	_	_	_	_	•	_	_	35	
9	Particle filter set	(#5) IN side	HRS-PF003	•	•	•	•	•	_	_		
		(#10) IN side	HRS-PF004	_	_	_	_	•	_	_		
_			HRS-WL001	•	•	•	•	_	_	_		
10	Drain pan set	With water leakage sensor	HRS-WL002	_	_	_	_	•	_	_	36	
~			HRS-BK001	•	•	•	•	_	_	_		
U	Connector cover		HRS-BK002	_	_	_	_	•	_	_	37	
12	Analog gateway unit		HRS-CV001	•	•	•	•	•	_	_	37	
~	Replacement type dustproof filter set		HRS-FL001	•	•	•	_	_	_	_		
13	Replacement type dustproof filter		HRS-FL002	•	•	•	_		_	_	37	
			IDF-TR1000-1	•	_	_	_		_	_		
			IDF-TR1000-2	•	_	_	_		_	-		
			IDF-TR1000-3	•	_	_	_		_	_	-	
14)	Separately installed		IDF-TR1000-4	•	_	_	_	Note 3)	_	_	38	
	power transformer		IDF-TR2000-9	_	•	•	•		_	_		
			IDF-TR2000-10	_	•	•	•		-	-		
			IDF-TR2000-11		•	•	•		<u> </u>	_		

Note 1) When option J is selected. Note 2) When option T or the HRS050/060 is selected. Note 3) For the HRS050/060 models: To be prepared by user. Note 4) Not applicable for the HRS060-A□-20. To be prepared by user.

Applicable Model List/Water-Cooled Refrigeration


No.	0. Description		ion Part no. HRS012-W HRS024-W-20			HRS024-W-20	HRS030-W-20	HRS050-W-20 HRS060-W-20			Page	
				-10	-20			1110000-11-20	(for -J)	(for -T)		
(1)	Anti guaka braakat		HRS-TK001	•	•	•	•	—	—	-	29	
0	Anti-quake bracket		HRS-TK002	-	—	—	—	•	—	-	29	
		G thread conversion fitting set	HRS-EP003			•	•	—	—	-		
2	Piping conversion fitting	NPT thread conversion fitting set	HRS-EP004	•	•	•	•	—	—	-	20	
	(for water-cooled refrigeration)	G thread conversion fitting set	HRS-EP011	-	—	—	—	•	—	-	30	
		NPT thread conversion fitting set	HRS-EP012	_	_	—	—	•	_	-		
	Piping conversion fitting Note 1)	G thread conversion fitting set	HRS-EP005		_	—	—	•	•	_		
(1)	(for automatic water fill port)	NPT thread conversion fitting set	HRS-EP006	_	_	—	—	•	•	-		
3	Piping conversion fitting Note 2)	G thread conversion fitting set	HRS-EP007	_	_	_	_	_	_	•	30	
	(for drain outlet)	NPT thread conversion fitting set	HRS-EP008	_	_	_	_	_	_	•		
4	Concentration meter		HRZ-BR002	•	•	•	•	•	•	•	31	
	D		HRS-BP001	•	•	•	•		—	_		
5	Bypass piping set		HRS-BP004	_	_	_	_	•	_		31	
		For single-phase 100/115 VAC type	HRS-CA001	•	—	_	_		—	_		
		For single-phase 200 VAC type	HRS-CA002	_	•	•	•	Note 3)	_	-		
6	Power supply cable	For single-phase 100/115 VAC type	HRS-CA003	•	_	_	_		_	-	32	
		For single-phase 200 VAC type	HRS-CA004	_	_	_	—	Note 4)	_	_		
	Retaining clip		HRS-S0074	•	•	•	•	•	_	-		
\sim			HRS-DP001	•	•	•	•	•	_	-		
7			HRS-DP002	•	•	•	•	•	_	_	33	
			HRS-DI001	•	•	•	•	•	_	-		
	Electrical resistance	With control function/bypass	HRS-DI003	•	•	•	•	•	_	_		
8		With bypass	HRS-DI004	•	•	•	•	•	_	_	34	
		With control function	HRS-DI005	•	•	•	•	•	_	_		
		(#5) OUT side	HRS-PF001	•	•	•	•	•	_	_		
_		(#10) OUT side	HRS-PF002	_			_	•		_		
9	Particle filter set	(#5) IN side	HRS-PF003	•	•	•	•	•		_	35	
		(#10) IN side	HRS-PF004	_	_		_	•		_		
_			HRS-WL001	•	•	•	•			_		
10	Drain pan set	With water leakage sensor	HRS-WL002	_	_			•	_	_	36	
_			HRS-BK001	•	•	•	•			_		
1	Connector cover		HRS-BK002	_	_	_	_	•		_	37	
(12)	Analog gateway unit		HRS-CV001	•	•	•	•	•		_	37	
	Replacement type dustproof filter set		_	_	_	_	_	_		_		
13	Replacement type dustproof filter			-		_	_	_		_	-	
	,		IDF-TR1000-1	•								
			IDF-TR1000-2	•		_				_		
			IDF-TR1000-3	•	_	_	_			-		
(14)	Separately installed		IDF-TR1000-4	•	_			Note 3)		-	38	
0	power transformer		IDF-TR2000-9	-	•	•	•			_		
			IDF-TR2000-10	<u> </u>	•	•	•		<u> </u>	_		
			IDF-TR2000-11		•	•	•	1				

Note 1) When option J is selected. Note 2) When option T or the HRS050/060 is selected. Note 3) For the HRS050/060 models: To be prepared by user. Note 4) Not applicable for the HRS060-A□-20. To be prepared by user.

Series HRS

1) Anti-quake Bracket

Bracket for earthquakes. Anchor bolt (M8) suitable for the flooring material should be prepared separately by user. (Anti-quake bracket thickness: 1.6 mm)

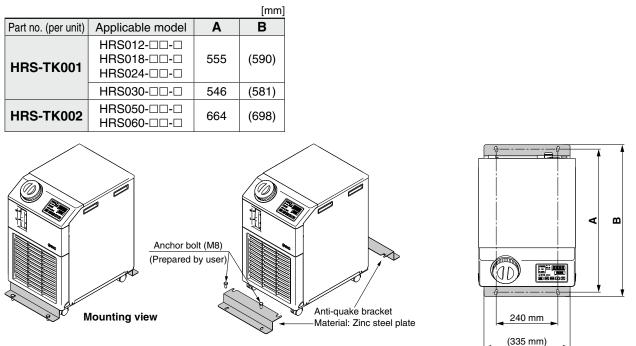

SMC

2 Piping Conversion Fitting (For Air-Cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for drain outlet HRS012-A□-□, HRS018-A□-□, HRS024-A□-□, HRS030-A□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Applicable model	
	G thread conversion fitting set	HRS012-A-□
	NPT thread conversion fitting set	HRS024-A-🗆
HKS-EPUU2	NPT thread conversion hung set	HRS030-A-🗆


When the options, with automatic water fill function "-J", or high pressure pump mounted "-T" are selected, purchase ③ piping conversion fitting (for option), too.


HRS050-A ..., HRS060-A ...

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Part no.			
HRS-EP009	HRS-EP009 G thread conversion fitting set			
HRS-EP010	NPT thread conversion fitting set	HRS060-A-□		

When the option, with automatic water fill function "-J", is selected, purchase 3 piping conversion fitting (for option), too.

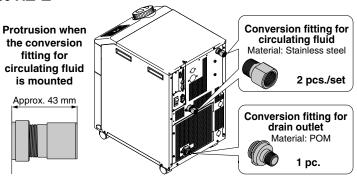

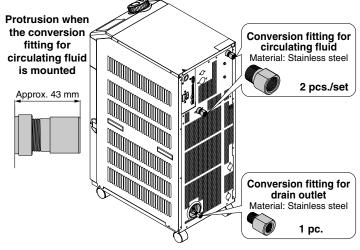

2 Piping Conversion Fitting (For Water-Cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for facility water + Conversion fitting for drain outlet HRS012-W□-□, HRS018-W□-□, HRS024-W□-□, HRS030-W□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, for facility water from Rc3/8 to G3/8 or NPT3/8, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Applicable model	
HRS-EP003	G thread conversion fitting set	HRS012-W-□ HRS018-W-□
HRS-EP004	NDT three discussions fitting and	

When the options, with automatic water fill function "-J", or high pressure pump mounted "-T" are selected, purchase ③ piping conversion fitting (for option), too.

HRS050-W□-□, HRS060-W□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, for facility water from Rc3/8 to G3/8 or NPT3/8, and for drain from Rc1/4 to G1/4 or NPT1/4.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Applicable model		
HRS-EP011	HRS-EP011 G thread conversion fitting set		
HRS-EP012	NPT thread conversion fitting set	HRS060-W-□	

When the option, with automatic water fill function "-J", is selected, purchase 3 piping conversion fitting (for option), too.

③ Piping Conversion Fitting (For Option)

Conversion fitting for automatic water fill port

This fitting changes the port size for the option, with automatic water fill function "-J" from Rc3/8, Rc3/4 to G3/8, G3/4 or NPT3/8, NPT3/4.


It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.


	Applicable model	
HRS-EP005	G thread conversion fitting	HRS012-□-□-J HRS018-□-□-J HRS024-□-□-J
HRS-EP006	NPT thread conversion fitting	HRS030-□-□-J HRS050-□-□-J HRS060-□-□-J

Conversion fitting for drain outlet

This fitting changes the port size for drain outlet for the option, high pressure pump mounted "-T" from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Applicable model	
HRS-EP007	G thread conversion fitting	HRS012-□-□-T HRS018-□-□-T HRS024-□-20-T
HRS-EP008	NPT thread conversion fitting	HRS030-□-20-T HRS050-□-20 Note) HRS060-□-20 Note)

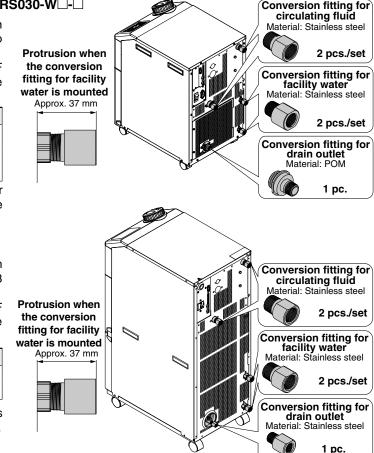

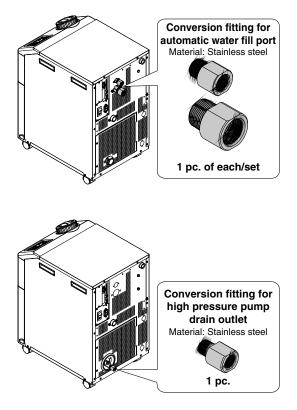

Note) It is not necessary to purchase this when you purchase the HRS-EP009 to 012 since it is included in the product.

Series HRS

(4) Concentration Meter

This meter can be used to control the concentration of ethylene glycol aqueous solution regularly.

Part no.	Applicable model	Approx. 170 mm
HRZ-BR002	HRS012-□-□ HRS018-□-□ HRS024-□-□ HRS030-□-□ HRS050-□-□ HRS060-□-□	Abbrov. Ho mini

(5) Bypass Piping Set

When the circulating fluid goes below the rated flow (7 L/min for the HRS012, 018, 024, 030 and 23/28 L/min for the HRS050, 060), cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set. A high pressure pump is also available.

Part no.	Applicable model
	HRS012-□□-□
HRS-BP001	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□


Parts List

No.	Description
	Bypass tube (700 mm)
(1)	(Part no.: TL0806)
2	Outlet piping (with ball valve)
3	Return port piping
(4)	Nipple (Size: 1/2) (2 pcs.)

Part no.	Applicable model		
HRS-BP004	HRS050-□□-□		
ППЭ-DF00 4	HRS060-□□-□		

Parts List

No.	Description			
1	Hose (Approx. 700 mm)			
2	Outlet piping (with ball valve)			
3	Return port piping			
(4)	Nipple (Size: 1/2) (2 pcs.)			
(5)	Hose band (2 pcs.)			

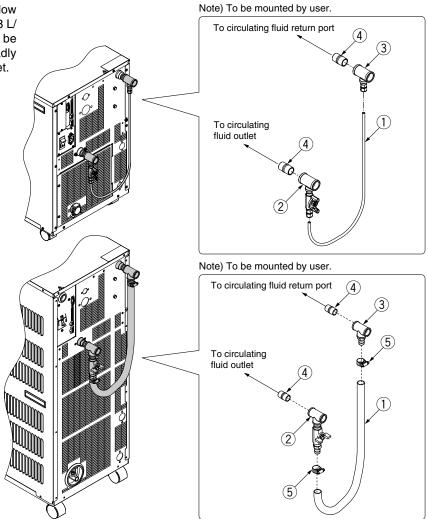

Approx. 3 m

Approx. 3 m

Approx. 100 mm


User's equipment side

Approx. 100 mm

User's equipment side

6 Power Supply Cable

For single-phase 100/115 VAC type

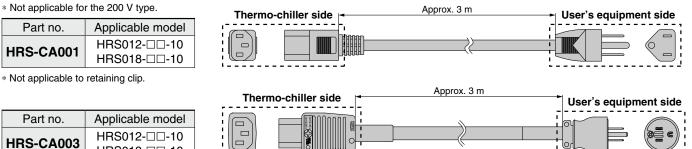

Thermo-chiller side

Thermo-chiller side

() G1

* Applicable to retaining clip.

For single-phase 200 VAC type

HRS018-□□-10

* Not applicable for the 100 V type.

Part no.	Applicable model
	HRS012-□□-20
HRS-CA002	HRS018-□□-20
	HRS024-□□-20
	HRS030-□□-20

* Applicable to retaining clip.

Part no.	Applicable model		
HRS-CA004	HRS050-□□-20		
пк5-СА004	HRS060-W□-20		

* Not available for the HRS060-A□-20.


To be prepared by user.

* Not applicable to retaining clip.

Retaining clip

Holds the connector on the thermo-chiller side in position.

Part no.	Applicable power supply cable			
	HRS-CA002			
HRS-S0074	HRS-CA003			
	Power supply connector for accessory			

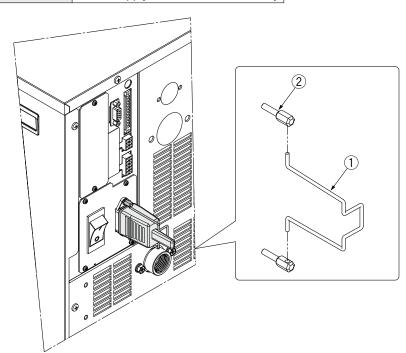

Parts List						
No.	Description					
1	Retaining clip					
2	Holding screw					




Series HRS

⑦ DI Filter Set

It is possible to keep electrical resistance by flowing the circulating fluid to the ion replacement resin (DI filter). The set parts are in order to install DI filter to bypass circuit and flow the fixed rate of the circulating fluid to DI filter. It is not to control the value of electrical resistance. (Replacement cartridge: HRS-DF001)


Stainless steel type

Suitable for locations with dusty atmospheres.

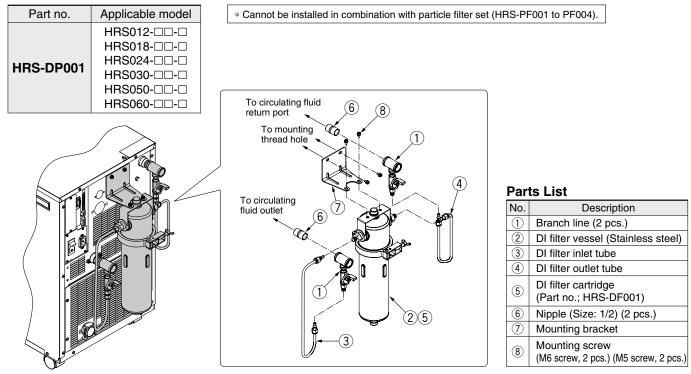

Resin type

Lightweight and compact Can be installed in combination with the HRS-PF001, PF002.

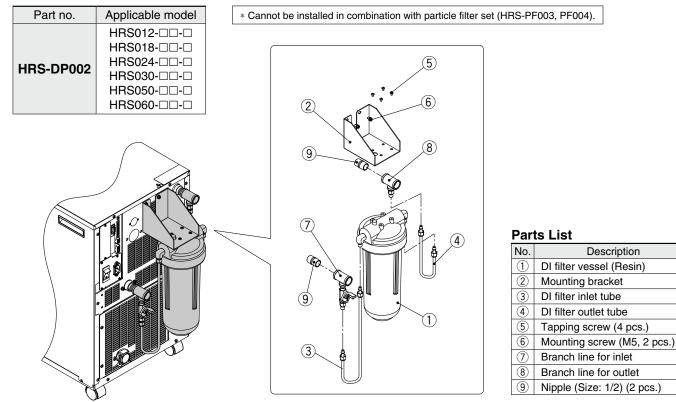



8 Electrical Resistance Sensor Set

Maintains, displays and controls electrical resistivity of the circulating fluid, DI water (deionized water). The function differs according to the model (Refer to Table 1). Refer to the Operation Manual for details.

Part no.	Applicable model	Tab	le 1: C	ombi	nation of Option a	nd Op	otional Ac	cessorie	s	
HRS-DI001	HRS012-□□-□ HRS018-□□-□		HRS model	Option M	Optional accessories	Feed- water *1	Electrical resistivity maintenance		Electrical resistivity control	Bypass
HRS-DI003	HRS024-00-0	1	Standard	No	—	0	× *4	×	×	Х
		2	Standard	Yes	—	0	× *5	×	×	×
HRS-DI004		3	Standard	Yes	HRS-DI001	0	×	0	×	Х
HRS-DI005	HRS050-□□-□	(4)	Standard	Yes	HRS-DP001	0	0	×	×	×
	HRS060-□□-□	5	Standard	Yes	HRS-DP001 + HRS-DI001 (DI filter set)	0	0	0	×	×
		6	Standard	Yes	HRS-DI003	0	0	0	0	0

*1: When only supplying or feeding DI water (deionized water) (at the start of use etc.)

*2: Display range is 0 to 4.5 MΩ·cm.

Yes

Yes

*3: Readout using serial communications (RS-485/RS-232C) can be performed.

HRS-DI004

HRS-DI005

*4: The DI water (deionized water) cannot flow continuously.

*5: The DI water (deionized water) can flow continuously. (electrical resistance 4.5 MΩ-cm or less) However, the electrical resistance cannot be kept, displayed or controlled.

 \cap

 \bigcirc

 \cap


 \bigcirc

 \bigcirc

 \bigcirc

 \cap

[③ Mounting example: HRS012-A-20 + HRS-DI001]

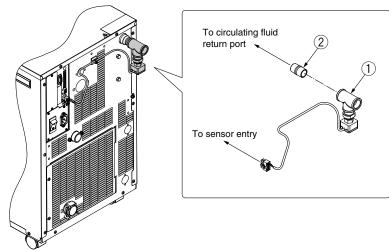

0


Standard


8 Standard

Dauta	Lint
Parts	List

No.	Description						
1	Electrical resistance sensor						
2	Nipple (Size: 1/2) (1 pc.)						

[6 Mounting example: HRS012-A-20-M + HRS-DI003]

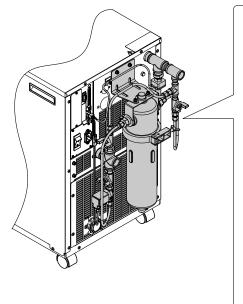

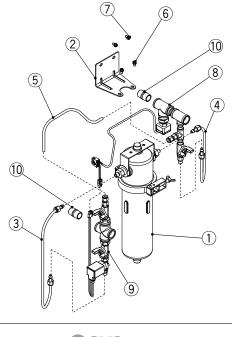

Parts List

No.	Description						
1	DI filter vessel (Stainless steel)						
2	Mounting bracket						
3	DI filter inlet tube						
4	DI filter outlet tube						
(5)	Bypass tube						
6	Mounting screw (M6, 2 pcs.)						
\bigcirc	Mounting screw (M5, 2 pcs.)						
8	Electrical resistance sensor						
9	Solenoid valve for control						
10	Nipple (Size: 1/2) (2 pcs.)						

Series HRS

9 Particle Filter Set

Removes foreign objects in the circulating fluid


Removes foreign obje	ects in the circu	lating flu	uid.				
HRS	-PF001-W	075 -	н				
	PF002					- Acces	sorv
	PF003	• Filtrati	ion			Symbol	Accessory
			Nominal filtration	Element part no. for PF001/	Element part no. for PE002/	Nil	None
	PF004	Symbol	accuracy [µm]	PF003 (individual part)	PF004 (individual part)	Н	With handle
		Nil	Without element	—	—		
		W005	5	EJ202S-005X11	EJ302S-005X11		
		W075	75	EJ202S-075X11	EJ302S-075X11		
■For circulating				For circulati	ng fluid return po		
Part no.	Applicable mo	del		Part no.	Applicable mode		
$\begin{array}{l} \textbf{HRS-PF001} \\ \left(\begin{array}{c} \text{Element length} \\ \text{L} = 125 \text{ mm} \end{array} \right) \end{array}$	HRS012-□□ HRS018-□□ HRS024-□□ HRS030-□□ HRS050-□□ HRS060-□□	- □ - □ - □		HRS-PF003 (Element length L = 125 mm	HRS012-□-□ HRS018-□-□ HRS024-□-□ HRS030-□-□ HRS050-□-□ HRS060-□-□		
$ \begin{array}{c} \textbf{HRS-PF002} \\ \left(\begin{array}{c} \text{Element length} \\ \text{L} = 250 \text{ mm} \end{array} \right) \end{array} $	HRS050-□□ HRS060-□□			HRS-PF004 (Element length L = 250 mm	HRS050-□□-□ HRS060-□□-□		
Mounting view Hereitans in the following reference drawing shows the HRS-PF001 mounted on the HRS012 to 024. For details, refer to the dimensions or the Operation Manual.			The second	shows the the HRS05	HRS-PF0 50/060. s, refer to	NPT1/2 Ro1/2	
Parts List							

I un					
No.	Model	Description	Material	Q'ty	Note
1	—	Body	PP	1	—
	EJ202S-005X11	Element (Longth L – 125 mm)		1	For HRS-PF001/003
2	EJ202S-075X11	Element (Length L = 125 mm)	PP/PE	1	FUI HIS-FFUU 1/003
@[EJ302S-005X11	Element (Length L = 250 mm)		1	For HRS-PF002/004
	EJ302S-075X11	Element (Length L = 250 mm)		1	
3	—	Particle filter bracket	SGCC	1	For HRS-PF001/002
4	—	Nipple	Stainless steel	1	Conversion from R to NPT
5	—	Extension piece	Stainless steel	1	Conversion from NPT to Rc
6	—	Tapping screw	_	4	—
\bigcirc		Handle	_	1	When -H is selected
8	_	Sealant tape	PTFE	1	


SMC

10 Drain Pan Set (With Water Leakage Sensor)

Drain pan for the thermo-chiller. Liquid leakage from the thermo-chiller can be detected by mounting the attached water leakage sensor. Anchor bolt (M8) suitable for the flooring material should be prepared separately by user.

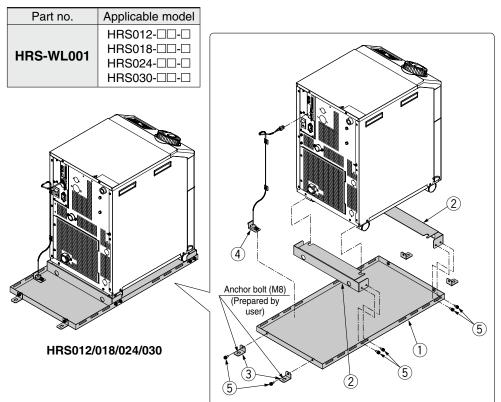

Par	Parts List							
No.	Description							
1	Drain pan							
2	Thermo-chiller fixing bracket (2 pcs.)							
3	Drain pan fixing bracket (4 pcs.)							
4	Water leakage sensor							
5	Bracket fixing screw (M6 screw, 12 pcs.)							

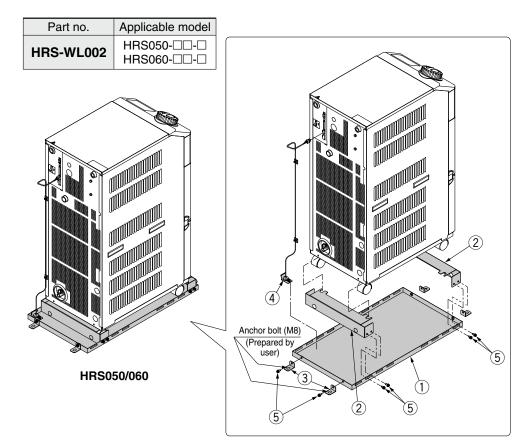

Parts	List
-------	------

No.	Description						
1	Drain pan						
2	Thermo-chiller fixing bracket (2 pcs.)						
3	Drain pan fixing bracket (4 pcs.)						
4	Water leakage sensor						
5	Bracket fixing screw (M6 screw, 12 pcs.)						

Series HRS

(1) Connector Cover

Protects the connector on the rear side.

Protects the connector on the rear side.						
Part no.	Applicable model		Part no.	Applicable model		
HRS-BK001	HRS012-□□-□ HRS018-□□-□		HRS-BK002	HRS050-□□-□ HRS060-□□-□		
THS-BROOT	HRS024-□□-□ HRS030-□□-□			/		
				9 ⁷		

12 Analog Gateway Unit

This is an expansion unit for adding analog communication functions. "Analog communication, contact input/output" functions can be used.

Analog communication

The set circulating fluid temperature can be changed by entering the analog voltage.


Converts the current circulating fluid temperature and current electrical resistance value (*1) to an analog voltage for output. *1: Displayed when optional "Electrical resistance sensor set/HRS-DI001, DI003, DI004 and DI005" are used.


Contact input/output

The Run/Stop of the thermo-chiller HRS series can be operated by a contact signal.

The contact signal of the operation status, alarm occurrence status and the TEMP READY status can also be output.

Part no.	Applicable model	Par	ts List	_
	HRS012-DD-D	No.	Description	
HRS-CV001	HRS018-00-0	2 Connec	Analog gateway box	When this product is used, the "contact input/output"
	HRS024-□□-□		Connection cable	and "serial communication" functions standardly
	HRS030-00-0		Mounting bracket	equipped in the thermo-chiller HRS series cannot be
	HRS050-□□-□	(4)	Mounting screw (M3, 2 pcs.)	used.
	HRS060-□□-□			

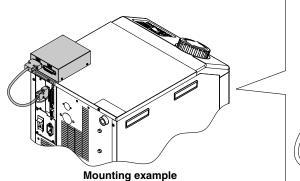

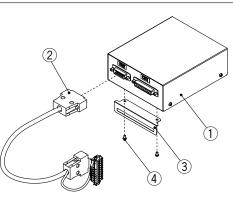


13 Replacement Type Dustproof Filter Set

A disposable dustproof filter is mounted instead of the dustproof net on the front panel.

Part no.	Applicable model		
	HRS012-A□-□		
HRS-FL001	HRS018-A□-□		
	HRS024-A□-□		

Parts List

No.	Description	Part no.	Note					
1	Replacement type dustproof filter set	HRS-FL001	Front panel with hook-and-loop fastener for holding filter 5 filters are included. (No dustproof net is included.)					
2	Replacement type dustproof filter	HRS-FL002	5 filters per set Size: 300 x 370					

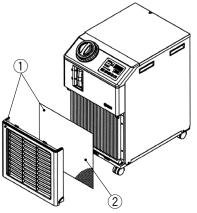




14 Separately Installed Power Transformer


Specifications

Dartes	Applicable model	Valuesa	Turne	Inlet	voltage	Outle	t voltage											
Part no.	Applicable model	Volume	Туре	50 Hz	60 Hz	50 Hz	60 Hz											
IDF-TR1000-1				110 VAC	120 VAC													
IDF-TR1000-2	HRS012-□-10 HRS018-□-10	4 13/4		240 VAC	240 to 260 VAC	100.1/4.0	100 110 110											
IDF-TR1000-3			380, 400,	380, 400, 415 VAC	380 to 420 VAC	- 100 VAC	100, 110 VAC											
IDF-TR1000-4			Single- phase	420, 440, 480 VAC	420 to 520 VAC													
IDF-TR2000-9	HRS012-□-20														_	240 VAC		
IDF-TR2000-10	HRS018-□-20 HRS024-□-20	2 kVA		380, 400, 415 VAC	380 to 400, 400 to 415, 415 to 440 VAC	200 VAC	200, 220 VAC											
IDF-TR2000-11	HRS030-□-20			440, 460 VAC	440 to 460, 460 to 500 VAC													


* For the HRS050/060 models: To be prepared by user.


IDF-TR1000-1

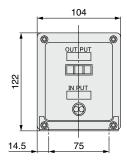

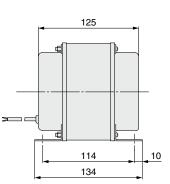



IDF-TR1000-2

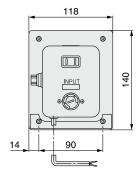

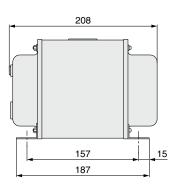



IDF-TR1000-3, 4

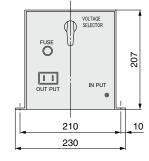

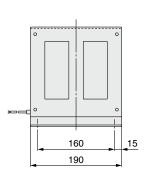




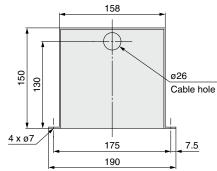

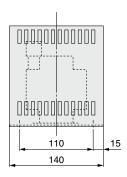

IDF-TR2000-10, 11

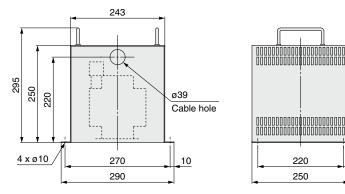



15

Series HRS Cooling Capacity Calculation

Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of the heat generating area — i.e. the area requiring cooling — within the user's equipment.*

① Derive the heat generation amount from the power consumption.

Power consumption P: 1000 [W]

Q = P = 1000 [W]

Cooling capacity = Considering a safety factor of 20%, 1000 [W] x 1.2 = 1200 [W]


② Derive the heat generation amount from the power supply output.
Power supply output VI: 1.0 [kVA]

 $Q = P = V \times I \times Power factor$

In this example, using a power factor of 0.85:

Cooling capacity = Considering a safety factor of 20%, **850** $[W] \times 1.2 = 1020$ [W]

850 [W] x 1.2 = 1020 [W]

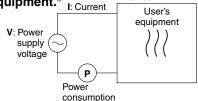

 $\ensuremath{\textcircled{3}}$ Derive the heat generation amount from the output.

Output (shaft power etc.) W: 800 [W]

$$Q = P = \frac{W}{Efficiency}$$

In this example, using an efficiency of 0.7:

Cooling capacity = Considering a safety factor of 20%, 1143 [W] x 1.2 = $\boxed{1372 [W]}$

* The above examples calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.


Example 2: When the heat generation amount in the user's equipment is not known.


Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment Q	: Unknown [W] ([J/s])	г·—·—
Circulating fluid	: Tap water*	Exam
Circulating fluid mass flow rate q_m Circulating fluid density ρ Circulating fluid (volume) flow rate q_v Circulating fluid specific heat C Circulating fluid outlet temperature T1 Circulating fluid return temperature T2 Circulating fluid temperature difference ΔT Conversion factor: minutes to seconds (SI units) * Refer to page 40 for the typical physical property valucirculating fluids.		Heat ge Circula Circula Circula Circula Circula Circula Circula
$\mathbf{Q} = \mathbf{q}_{\mathrm{m}} \mathbf{x} \mathbf{C} \mathbf{x} (\mathbf{T}_2 - \mathbf{T}_1)$		Conve

$$=\frac{\rho x q_{v} x C x \Delta T}{60} = \frac{1 x 10 x 4.2 x 10^{3} x 2.0}{60}$$

Cooling capacity = Considering a safety factor of 20%,

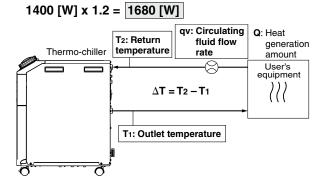

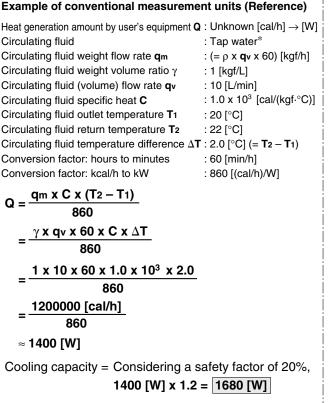

SMC SMC

Required Cooling Capacity Calculation

Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Heat quantity by cooled substance (per unit time) Q : U Cooled substance : W	nknown [W] ([J/s]) /ater	Example of conventional measureme	nt units (Reference)
	= ρ x V) [kg]	Heat quantity by cooled substance (per unit time)	$\mathbf{Q}: \text{Unknown [cal/h]} \rightarrow [W]$
	[kg/L]	Cooled substance	: Water
	0 [dm ³]	Cooled substance weight m	
	.2 x 10³ [J/(kg⋅K)]	Cooled substance weight volume ratio γ	,
Cooled substance temperature when cooling begins To: 3		Cooled substance total volume V	: 20 [L]
	93 [K] (20 [°C])	Cooled substance specific heat C	: 1.0 x 10 ³ [cal/(kgf·°C)]
•	/	Cooled substance temperature when	
	$2 [K] (= T_0 - T_t)$	cooling begins To	: 32 [°C]
Cooling time Δt : 9	00 [s] (= 15 [min])	Cooled substance temperature after t hour T	
* Refer to the following for the typical physical property values	by circulating fluid.	Cooling temperature difference ΔT	
		Cooling time Δt	: 15 [min]
$\mathbf{Q} = \frac{\mathbf{m} \mathbf{x} \mathbf{C} \mathbf{x} (\mathbf{T} 0 - \mathbf{T} \mathbf{t})}{\Delta \mathbf{t}} = \frac{\rho \mathbf{x} \mathbf{V} \mathbf{x} \mathbf{C} \mathbf{x} \Delta \mathbf{T}}{\Delta \mathbf{t}}$		Conversion factor: hours to minutes	: 60 [min/h]
		Conversion factor: kcal/h to kW	: 860 [(cal/h)/W]
1 x 20 x 4.2 x 10 ³ x 12			. 000 [(Cal/T)/W]
= $\frac{1 \text{ x } 20 \text{ x } 4.2 \text{ x } 10^3 \text{ x } 12}{900}$ = 1120 [J/s] ≈ 1	1120 [W]		
900		$-$ m x C x (To – Tt) $-\gamma$ x V x 60	x C x ΔT
Cooling capacity = Considering a safety fact	or of 20%,	$\mathbf{Q} = \frac{\mathbf{m} \mathbf{x} \mathbf{C} \mathbf{x} (\mathbf{T}_0 - \mathbf{T}_t)}{\Delta t \mathbf{x} 860} = \frac{\gamma \mathbf{x} \mathbf{V} \mathbf{x} 60}{\Delta t \mathbf{x} \mathbf{x}}$	860
1120 [W] x 1.2 = 1344 [W]		1 x 20 x 60 x 1.0 x 10 ³ x 12	
Thermo-chiller		=	
Q x Δt: Heat capacity [kJ]	ĺ	15 x 860	i i
<u>20°C</u> Water bath		≈ 1120 [W]	
	1		
		Cooling capacity = Considering a sa	afety factor of 20%.
\v			
	C down to 00%C	1120 [W] x 1.2 = 1344 [W]	1
After 15 minutes, cool 32°C	$\sim 00000 \text{ to } 20^{\circ}\text{C}$.		

Note) This is the calculated value by changing the fluid temperature only. Thus, it varies substantially depending on the water bath or piping shape.

Precautions on Cooling Capacity Calculation

1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity

<Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

1. This catalog uses the following values for density and specific heat in calculating the required cooling capacity.

- ρ : 1 [kg/L] (or, using conventional unit system, weight volume ratio $\gamma = 1$ [kg/L]) C: 4.19 x 10³ [J/(kg·K)] (or, using conventional unit system, 1 x 10³ [cal/(kgf·°C)]) Density
- Specific heat

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference. Water 15% Ethylene Glycol Aqueous Solution

Physical property value	Density ρ	Specific heat C	Conventiona	l unit system
Temperature	[kg/L]	[J/(kg⋅K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]
5°C	1.00	4.2 x 10 ³	1.00	1 x 10 ³
10°C	1.00	4.19 x 10 ³	1.00	1 x 10 ³
15°C	1.00	4.19 x 10 ³	1.00	1 x 10 ³
20°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
25°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
30°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
35°C	0.99	4.18 x 10 ³	0.99	1 x 10 ³
40°C	0.99	4.18 x 10 ³	0.99	1 x 10 ³

Physical property value	Density ρ	Specific heat C	Conventiona	l unit system
Temperature	[kg/L]	[J/(kg⋅K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]
5°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
10°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
15°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
20°C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³
25°C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³
30°C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³
35°C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³
40°C	1.01	3.92 x 10 ³	1.01	0.94 x 10 ³

Note) The above shown are reference values. Contact circulating fluid supplier for details.





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Design

\land Warning

1. This catalog shows the specifications of a single unit.

- 1) Check the specifications of the single unit (contents of this catalog) and thoroughly consider the adaptability between the user's system and this unit.
- 2) Although the protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating condition. Also, the user is requested to carry out the safety design for the whole system.

2. When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks, and to carry back the entire flow volume of circulating fluid that is released.

3. Use non-corrosive material for fluid contact parts of circulating fluid.

Using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Provide protection against corrosion when you use the product.

Selection

\land Warning

1. Model selection

For selecting a model of thermo-chiller, it is required to know the heat generation amount of the user's equipment. Obtain the heat generation amount, referring to "Cooling Capacity Calculation" on pages 39 and 40 before selecting a model.

Handling

\land Warning

1. Thoroughly read the Operation Manual.

Read the Operation Manual completely before operation, and keep this manual available whenever necessary.

Transportation/Carriage/Movement

\land Warning


- 1. This product is heavy. Pay attention to safety and position of the product when it is transported, carried and moved.
- 2. Read the Operation Manual carefully to move the product after unpacking.

Transportation/Carriage/Movement

▲ Caution

1. Never put the product down sideway as this may cause failure.

The product will be delivered in the packaging shown below.

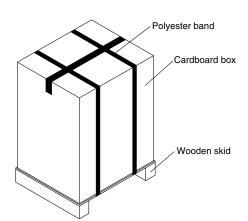

Model	Weight [kg] Note)	Dimensions [mm]
HRS012-□□-10 HRS018-□□-10	49	Height 790 x Width 470 x Depth 580
HRS012-□□-20 HRS018-□□-20 HRS024-□□-20	52	Height 790 x Width 470 x Depth 580
HRS030-A□-20	56	Height 830 x Width 470 x Depth 580
HRS030-W□-20	55	neight 630 x Width 470 x Depth 580
HRS050-A□-20	80	
HRS050-W□-20	78	Height 1160 x Width 450 x Depth 670
HRS060-A□-20	84	reight 1100 x Width 450 x Depth 670
HRS060-W□-20	78	

Note) For models with an option, the weights are increased as below.

,		
Option symbol	Description	Additional weight
-В	With earth leakage breaker No ac	
-J	With automatic water fill function	+1 kg
-M	Applicable to deionized water piping	No addition
-т	High pressure pump mounted (100 V type)	+4 kg
-1	High pressure pump mounted (200 V type)	+6 kg
-G	High temperature environment specification	No addition



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Operating Environment/Storage Environment

\land Warning

1. Do not use in the following environment as it will lead to a breakdown.

- 1) Outdoors
- 2) In locations where water, water vapor, salt water, and oil may splash on the product.
- 3) In locations where there are dust and particles.
- 4) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present. (This product is not explosion proof.)
- 5) In locations where the ambient temperature exceeds the limits as mentioned below.
 - During transportation/storage: 0 to 50°C (But as long as water or circulating fluid are not left inside the pipings)

During operation: 5 to 40°C (When option G, high temperature environment specification, is selected: 5 to 45°C)

 6) In locations where the ambient humidity is out of the following range or where condensation occurs. During transportation/storage: 15 to 85%

During operation: 30 to 70%

- 7) In locations which receive direct sunlight or radiated heat.
- 8) In locations where there is a heat source nearby and the ventilation is poor.
- 9) In locations where temperature substantially changes.
- 10) In locations where strong magnetic noise occurs. (In locations where strong electric fields, strong magnetic fields and surge voltage occur.)
- 11) In locations where static electricity occurs, or conditions which make the product discharge static electricity.
- 12) In locations where high frequency occurs.
- 13) In locations where damage is likely to occur due to lightning.
- 14) In locations at altitude of 3000 m or higher (Except during storage and transportation)
 - * For altitude of 1000 m or higher

Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at altitude of 1000 m or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below. Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

	①Upper lin	2 Cooling	
Altitude [m]	40°C products	45°C products (For high temperature environment specification, Option G)	capacity coefficient
Less than 1000 m	40	45	1.00
Less than 1500 m	38	42	0.85
Less than 2000 m	36	38	0.80
Less than 2500 m	34	35	0.75
Less than 3000 m	32	32	0.70

- 15) In locations where strong impacts or vibrations occur.
- 16) In locations where a massive force strong enough to deform the product is applied or a weight from a heavy object is applied.
- 17) In locations where there is not sufficient space for maintenance.

Warning

2. Install in an environment where the unit will not come into direct contact with rain or snow.

These models are for indoor use only.

Do not install outdoors where rain or snow may fall on them.

3. Conduct ventilation and cooling to discharge heat. (Air-cooled refrigeration)

The heat which is cooled down through air-cooled condenser is discharged.

When using in a room which is shut tightly, ambient temperature will exceed the specification range stipulated in this catalog, which will activate the safety detector and stop the operation. In order to avoid this situation, discharge the heat outside of a room by ventilation or cooling facilities.

4. The product is not designed for clean room usage. It generates particles internally.



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Mounting/Installation

MWarning

- 1. Do not use the product outdoors.
- 2. Do not place heavy objects on top of this product, or step on it. The external panel can be deformed and danger can result.

ACaution

- 1. Install on a rigid floor which can withstand this product's weight.
- 2. When installing without the casters, use the adjuster feet etc. to raise the chiller to the following heights or more.

This product cannot be directly installed on the floor as some screws come out from the bottom of the product.

- HRS012 to 030 10 mm
- HRS050/060 15 mm

Piping

ACaution

1. Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.

If the operating performance is not sufficient, the pipings may burst during operation. Also, using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid and facility water circuits. Provide protection against corrosion when you use the product.

- **2. Select the piping port size which can exceed the rated flow.** For the rated flow, refer to the pump capacity table.
- 3. When tightening at the circulating fluid inlet and outlet, drain port or overflow port of this product, use a pipe wrench to clamp the connection ports.
- 4. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
- 5. This product series are constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

Electrical Wiring

MWarning

1. Grounding should never be connected to a water line, gas line or lightning rod.

ACaution


1. Communication cable should be prepared by user. 43

Electrical Wiring

▲Caution

2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 $\mu sec.,$ it may result in malfunction.

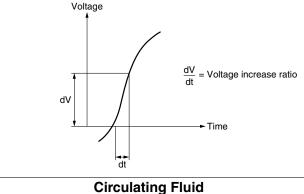

A Caution

1. Avoid oil or other foreign objects entering the circulating fluid.

2. When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards. Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

Tap Water (as Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

			Influ	ence
Item	Unit	Standard value	Corrosion	Scale generation
pH (at 25°C)	—	6.0 to 8.0	0	0
Electric conductivity (25°C)	[µS/cm]	100* to 300*	0	0
Chloride ion (CI⁻)	[mg/L]	50 or less	0	
Sulfuric acid ion (SO42-)	[mg/L]	50 or less	0	
Acid consumption amount (at pH4.8)	[mg/L]	50 or less		0
Total hardness	[mg/L]	70 or less		0
Calcium hardness (CaCO ₃)	[mg/L]	50 or less		0
Ionic state silica (SiO ₂)	[mg/L]	30 or less		0
Iron (Fe)	[mg/L]	0.3 or less	0	0
Copper (Cu)	[mg/L]	0.1 or less	0	
Sulfide ion (S2 ⁻)	[mg/L]	Should not be detected.	0	
Ammonium ion (NH ₄ ⁺)	[mg/L]	0.1 or less	0	
Residual chlorine (CI)	[mg/L]	0.3 or less	0	
Free carbon (CO ₂)	[mg/L]	4.0 or less	0	
	pH (at 25°C) Electric conductivity (25°C) Chloride ion (CI-) Sulfuric acid ion (SO ₄ ²⁻) Acid consumption amount (at pH4.8) Total hardness Calcium hardness (CaCO ₃) Ionic state silica (SiO ₂) Iron (Fe) Copper (Cu) Sulfide ion (S ₂ ⁻) Ammonium ion (NH ₄ +) Residual chlorine (CI)	pH (at 25°C)—Electric conductivity (25°C)[μ S/cm]Chloride ion (CI-)[mg/L]Sulfuric acid ion (SO42-)[mg/L]Acid consumption amount (at pH4.8)[mg/L]Total hardness[mg/L]Calcium hardness (CaCO3)[mg/L]Ionic state silica (SiO2)[mg/L]Iron (Fe)[mg/L]Copper (Cu)[mg/L]Sulfide ion (S2-)[mg/L]Ammonium ion (NH4+)[mg/L]Residual chlorine (Cl)[mg/L]	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	$\begin{tabular}{ c c c c } \hline Item & Unit & Standard value & \hline Corrosion \\ \hline pH (at 25°C) & & 6.0 to 8.0 & \bigcirc \\ \hline Electric conductivity (25°C) & [\muS/cm] & 100* to 300* & \bigcirc \\ \hline Chloride ion (CI^-) & [mg/L] & 50 or less & \bigcirc \\ \hline Chloride ion (CI^-) & [mg/L] & 50 or less & \bigcirc \\ \hline Sulfuric acid ion (SO4^{2^-}) & [mg/L] & 50 or less & \bigcirc \\ \hline Acid consumption amount (at pH4.8) & [mg/L] & 50 or less & \bigcirc \\ \hline Total hardness & [mg/L] & 70 or less & \hline \\ Total hardness (CaCO_3) & [mg/L] & 50 or less & \bigcirc \\ \hline Calcium hardness (CaCO_3) & [mg/L] & 30 or less & \bigcirc \\ Iron (Fe) & [mg/L] & 0.3 or less & \bigcirc \\ \hline Copper (Cu) & [mg/L] & 0.1 or less & \bigcirc \\ \hline Sulfide ion (S_2^-) & [mg/L] & Should not be detected. \\ \hline Ammonium ion (NH_4^+) & [mg/L] & 0.3 or less & \bigcirc \\ \hline Residual chlorine (Cl) & [mg/L] & 0.3 or less & \bigcirc \\ \hline \end{tabular}$

* In the case of [M Ω ·cm], it will be 0.003 to 0.01.

• O: Factors that have an effect on corrosion or scale generation.

• Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

- 3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.
- 4. When using ethylene glycol aqueous solution, maintain a maximum concentration of 15%.

Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10°C or lower and cause the thermo-chiller to break down.

5. A magnet pump is used as a circulating pump for circulating fluid.

It is particularly impossible to use liquid including metallic powder such as iron powder.





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Facility Water Supply

\land Warning

<Water-cooled refrigeration>

1. The water-cooled refrigeration type thermo-chiller radiates heat to the facility water. Prepare the facility water system that satisfies the

heat radiation and the facility water specifications below.

Required facility water system

<Heat radiation amount/Facility water specifications>

Model	Heat radiation [kW]	Facility water specifications
HRS012-W□-□	Approx. 2	
HRS018-W□-□	Approx. 4	
HRS024-W□-20	Approx. 5	Refer to
HRS030-W□-20	Approx. 6	"Facility water system" in the specifications.
HRS050-W□-20	Approx. 10	
HRS060-W□-20	Approx. 12	

2. When using tap water as facility water, use water that conforms to the appropriate water quality standards. Use water that conforms to the standards shown below.

<Tap Water (as Facility Water) Quality Standards>

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

	<u>v</u>		,,	<u> </u>	
	Item	Unit	Standard value	Influence	
	item	Office Standard Value		Corrosion	Scale generation
	pH (at 25°C)	—	6.5 to 8.2	0	0
E	Electric conductivity (25°C)	[µS/cm]	100* to 800*	0	0
item	Chloride ion (CI-)	[mg/L]	200 or less	0	
	Sulfuric acid ion (SO42-)	[mg/L]	200 or less	0	
Standard	Acid consumption amount (at pH4.8)	[mg/L]	100 or less		0
itar	Total hardness	[mg/L]	200 or less		0
0 0	Calcium hardness (CaCO ₃)	[mg/L]	150 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	50 or less		0
۲	Iron (Fe)	[mg/L]	1.0 or less	0	0
item	Copper (Cu)	[mg/L]	0.3 or less	0	
ce	Sulfide ion (S ₂ -)	[mg/L]	Should not be detected.	0	
eference	Ammonium ion (NH ₄ +)	[mg/L]	1.0 or less	0	
efe	Residual chlorine (Cl)	[mg/L]	0.3 or less	0	
Ť	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

* In the case of [M Ω ·cm], it will be 0.001 to 0.01.

O: Factors that have an effect on corrosion or scale generation.

• Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

3. Supply pressure of 0.5 MPa or less.

If the supply pressure is high, it will cause water leakage.

4. Be sure to prepare your utilities so that the pressure of the thermo-chiller facility water outlet is at 0 MPa (atmospheric pressure) or more.

If the facility water outlet pressure becomes negative, the internal facility water piping may collapse, and proper flow control of facility water will be impossible.

Using deionized water as facility water may cause problems such as clogging in the piping due to metal ion.

Operation

\land Warning

1. Confirmation before operation

1) The fluid level of a tank should be within the specified range of "HIGH" and "LOW".

When exceeding the specified level, the circulating fluid will overflow.

2) Remove the air.

Conduct a trial operation, looking at the fluid level.

Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed. Pump can be operated independently.

2. Confirmation during operation

• Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 5 and 40°C.

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

3. Emergency stop method

• When an abnormality is confirmed, stop the machine immediately. After pushing the [OFF] switch, be sure to turn off the power switch.

Operation Restart Time

A Caution

1. Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.

Protection Circuit

\land Caution

- 1. If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.
 - \bullet Power supply voltage is not within the rated voltage range of $\pm 10\%.$
 - In case the water level inside the tank is reduced abnormally.
 - Circulating fluid temperature is too high.
 - Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
 - Ambient temperature is too high. (40°C or more)
 - Refrigerant pressure is too high.
 - Ventilation hole is clogged with dust or dirt.



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Maintenance

A Caution

<Periodical inspection every one month>

1. Clean the ventilation hole.

If the dustproof filter becomes clogged with dust or debris, a decline in cooling performance can result.

In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

<Periodical inspection every three months>

1. Inspect the circulating fluid.

- 1) When using tap water
 - Replacement of tap water

Failure to replace the tap water can lead to the development of bacteria or algae. Replace it regularly depending on your usage conditions.

Tank cleaning

Consider whether dirt, slime or foreign objects may be present in the circulating fluid inside the tank, and carry out regular cleanings of the tank.

 When using ethylene glycol aqueous solution Use a concentration meter to confirm that the concentration does not exceed 15%.

Dilute or add as needed to adjust the concentration.

<Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid freezing when the product is stopped, release the circulating fluid in advance.

2. Consult a professional.

For additional methods to prevent freezing (such as commercially available tape heaters etc.), consult a professional for advice.

SMC

▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.

- Caution: indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

AWarning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

- *1) ISO 4414: Pneumatic fluid power General rules relating to systems.
 - ISO 4413: Hydraulic fluid power General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
 - ISO 10218-1: Manipulating industrial robots Safety. etc.

 The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand

and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Edition B	* Added water-cooled refrigeration.	Edition D	* Not available	
	 * Added cooling capacity 1100 W (50 Hz)/1300 W (60 Hz), 2100 W (50 Hz)/2400 W (60 Hz). * Added single phase 100 VAC (50/60 Hz), 115 VAC (60 Hz). * All models: CE marking and UL compliant NY 	Edition E	 * Added cooling capacity [W] 2600/3200, 4900/5900 (50/60 Hz). * Added optional accessories. * Number of pages from 32 to 48 	SP
	 * Added cooling capacity 4700 W (50 Hz)/5100 W (60 Hz). * Added separately installed power transformer to optional accessories. * Number of pages from 20 to 32 PZ 	Edition F	* HRS030/060: Obtained UL standard certification. * Added power supply cable (HRS-CA004) to optional accessories.	то