
# **3 Port Solenoid Valve**

# Series VT307


**Direct Operated Poppet Type** 



## A variety of valve options

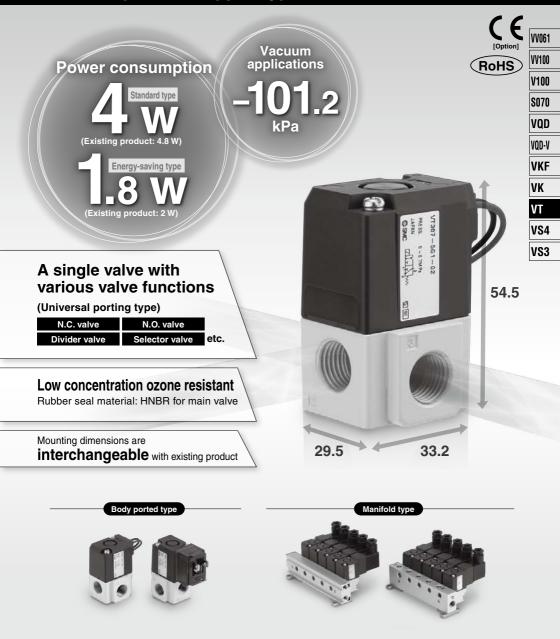


### Application examples

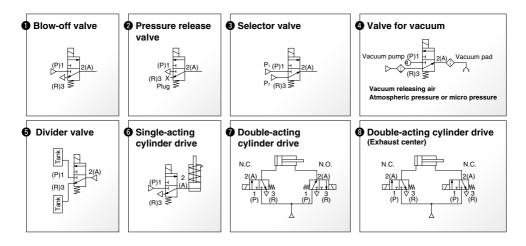

## **3 Port Solenoid Valve, Universal Porting Type Variations**

Poppet type	Dire	ect operated poppet t	Pilot poppet type			
Series	<b>III</b> VT307	🐺 VT307 🛛 🗼 VT317		VP300/500/700		
Cv (P↔A)	0.19 0.62 Page 2003 Page 2011		1.4	0.8 to 3.6		
Page			Page 2019	Page 1831		

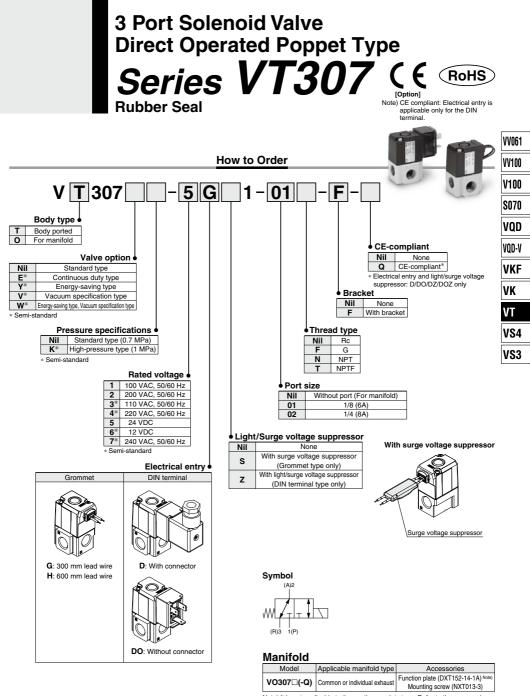

Note) It is not applicable to the continuous duty type. Refer to the accessories on page 2007.

#### Option

Description	Part no.
Bracket	DXT152-25-1A (With screw)

## Series VT307

### **∧** Caution

Make sure that dust and/or other foreign materials do not enter the valve from the unused port (e.g. exhaust port).

### Standard Specifications

Type of actuation		Direct operated type 2 position single solenoid				
Fluid		Air				
Operating pressure range	0 t	0 to 1 MPa (High-pressure type), 0 to 0.7 MPa (Standard type)				
Ambient and fluid temperature	e	-10 to 50°C (No freezing)				
Response time Note 1)			20 ms or less (at 0.5 MPa)			
Max. operating frequency			10 Hz			
Lubrication	No	ot required	d (Use turbine oil Class 1 ISO VG32, if lubricated.)			
Manual override			Non-locking push type			
Mounting orientation		Unrestricted				
Impact/Vibration resistance No	te 2)	150/50 m/s <sup>2</sup>				
Enclosure		Dustproof				
Electrical entry		Grommet, DIN terminal				
Coil rated voltage (V)	AC (5	0/60 Hz)	100, 200, 110*, 220*, 240*			
Con rated voltage (v)	DC		24, 12*			
Allowable voltage fluctuation			-15 to +10% of rated voltage			
Apparent power Note 3) Note 4)	AC	Inrush	12.7 VA (50 Hz), 10.7 VA (60 Hz)			
	AC	Holding	7.6 VA (50 Hz), 5.4 VA (60 Hz)			
Power consumption Note 3) Note 4)	DC		Without indicator light: 4 W, With indicator light: 4.2 W			
Light/Surge voltage suppressor		AC	Varistor, LED			
(DIN terminal type only)		DC	Diode, LED			

<sup>\*</sup> Semi-standard

Note 1) Based on dynamic performance test, JIS B 8374-1981. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor) Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction

and at the right angles to the main valve and armature in both energized and

de-energized states every once for each condition. (Values at the initial period) Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz. Test

was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial

period)

Note 3) At rated voltage period Note 4) The value is different for continuous duty type (VT307E), and energy-saving type (VT307Y/W). Refer to "Valve Options" shown below.

#### Flow-rate Characteristics/Weight

	_					Flow	-rate ch	aracteristic	s					
Valve model	Port	$1 \rightarrow 2 (P \rightarrow A)$		$2 \rightarrow 3 (A \rightarrow R)$		$3 \rightarrow 2 (R \rightarrow A)$		$2 \rightarrow 1 (A \rightarrow P)$		P)	Weight			
	size	C[dm3/(s·bar)]	b	Cv	C[dm3/(s·bar)]	b	Cv	C[dm3/(s·bar)]	b	Cv	C[dm3/(s-bar)]	b	Cv	Grommet
VT307		0.71	0.35	0.18	0.68	0.27	0.17	0.65	0.36	0.17	0.63	0.35	0.17	
VT307V (Vacuum spec. type)		0.71	0.35	0.16	0.00	0.27	0.17	0.65	0.36	0.17	0.63	0.35	0.17	
VT307E (Continuous duty type)	1/8													
VT307Y (Energy-saving type)		0.41	0.26	0.10	0.44	0.35	0.11	0.48	0.27	0.12	0.35	0.33	0.10	
VT307W (Energy-saving, Vacuum spec. type)														0.15 ka
VT307		0.71	0.31	0.19	0.71	0.25	0.17	0.68	0.33	0.17	0.71	0.26	0.18	0.15 Kg
VT307V (Vacuum spec. type)		0.71	0.31	0.19	0.71	0.25	0.17	0.00	0.33	0.17	0.71	0.20	0.10	
VT307E (Continuous duty type)	1/4													
VT307Y (Energy-saving type)		0.49	0.20	0.12	0.44	0.34	0.11	0.48	0.17	0.12	0.46	0.28	0.11	
VT307W (Energy-saving, Vacuum spec. type)														

Note) Values for a single valve unit. It is not applicable to the manifold. Refer to the manifold specifications on page 2007.

### Valve Options

#### Continuous duty type: VT307E

Exclusive use of VT307E is recommended for continuous duty with long time loading.

### ▲ Caution

- 1. This model is for continuous duty, not for high cycle rates. But even in low cycle rates, if energizing the valve more than once a day, please consult with SMC.
- 2. Energizing solenoid should be done at least once in 30 days.

Specifications different from standard are as follows.						
Apparent power/	Inrush	7.9 VA (50 Hz), 6.2 VA (60 Hz)				
AC	Holding	5.8 VA (50 Hz), 3.5 VA (60 Hz)				
Power consumption/DC	1.8 W, With indicator light: 2 W					
Response time Note) 30 ms or less (at 0.5 MPa)						
Note) Refer to Note 1) of the standard specifications.						

Energy-saving type: VT307Y (VT307W)

If low power consumption is required for electronic control, "VT307Y(W)" (1.8 W) is recommended.

Specifications different from standard are as follows. Power consumption/DC 1.8 W, With indicator light: 2 W Response time Note) 25 ms or less (at 0.5 MPa) Note) Refer to Note 1) of the standard specifications.

#### Vacuum spec. type: VT307V (VT307W)

This vacuum model has less air leakage than the standard model under low pressure. It is recommended for vacuum application.

#### ▲ Caution


Since this valve has slight air leakage, it can not be used for vacuum holding (including positive pressure holding) in the pressure container.

Specifications different from standard are as follows. Operating pressure range -101.2 kPa to 0.1 MPa



### 3 Port Solenoid Valve Direct Operated Poppet Type Series VT307

#### Construction

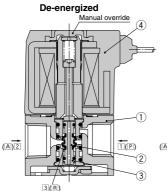



<De-energized>

Poppet valve 2 is pushed upward by the return spring 3, port 1 is closed. Then, port 2 and port 3 are connected. Air flow direction:

Port  $1 \leftrightarrow \text{Block}, 2 \leftrightarrow 3$ 

#### **Component Parts**

Energized
A)2 3(R)



When energizing the molded coil (4), the armature (5) is magnetically attracted to the core (6), and through the push rod (7), it pushes down the poppet valve 2 and port 3 is closed. Then, port 1 and port 2 are connected. At this time, there will be gaps between the armature (5) and the core 6, but the armature 5 will be magnetically firmly attracted to the core 6. Air flow direction:

Port 1  $\leftrightarrow$  Port 2, Port 3  $\leftrightarrow$  Block

#### No. Description Material Note 1 Body Aluminum die-casted Color: White Aluminum, HNBR 2 Poppet valve 3 Return spring Stainless steel 4 Molded coil Resin

### How to Use DIN Terminal

#### 1. Disassembly

- 1) After loosening the screw ①, then if the housing (2) is pulled in the direction of the screw (1), the connector will be removed from the body of equipment (solenoid, etc.).
- 2) Pull the screw (1) out of the housing (2). 3) On the bottom part of the terminal block 3, there's a cut-off part (9). If a small flat head screwdriver is inserted between the opening in the bottom, terminal block (3) will be removed from the housing ②
- 4) Remove the cable gland (4), plain washer (5) and rubber seal (6).

#### 2. Wiring

- 1) Pass the cable 7 through the cable gland 4, plain washer (5) and rubber seal (6) in this order. and then insert them into the housing 2.
- 2) Loosen the screw (1) attached to the terminal block 3. Then, pass the lead wire 10 through the terminal block (3) and tighten the screw (1) again. Note 1) Tighten within the tightening torgue of
- 0.5 N·m +15% Note 2) Cable 7 outside diameter: ø6 to ø8 mm
- Note 3) Crimped terminal like round-shape or Y-shape cannot be used.

#### Connector for DIN Terminal

Description	Part no.							
DIN connector	B1B09-2A (Standard)							
DIN CONNECTOR	GM209NJ-B17 (CE-compliant)							


#### 3. Assembly


- 1) Pass the cable 7 through the cable gland 4, plain washer (5) and rubber seal (6) in this order and connect to the terminal block (3). Then, mount the terminal block (3) on the housing (2). (Push it down until you hear the click sound.)
- 2) Put the rubber seal (6) and plain washer (5) in this order into the cable entry of the housing 2, and then tighten the cable gland (4) securely.
- 3) Insert the gasket (8) between the bottom part of terminal block  $\ensuremath{\textcircled{3}}$  and the plug attached to the equipment. Then, screw in 1) from the top of the housing (2) to tighten it.

Note 1) Tighten within the tightening torque of 0.5 N·m ±20%.

#### Changing the entry direction

The orientation of a connector can be changed 180°, depending on the combination of a housing (2) and a terminal block (3)

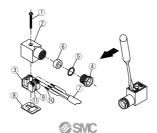

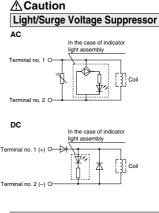

### **Electrical Connection**

DIN terminal is connected inside as in the figure below. Connect to the corresponding power supply.

#### **DIN terminal block**



Terminal no. 1 2 DIN terminal + ound

VV061

VV100

V100

S070

VOD

VOD-V

VKF

VK

VT

VS4

VS3


· Applicable cable O.D. ø6 to ø8

Lead Wire Color					
Voltage	Color				
100 VAC	Blue				
200 VAC	Red				
DC	Red (+), Black (-)				
Others	Gray				


## Series VT307

#### Dimensions

#### Grommet: VT307-DG1

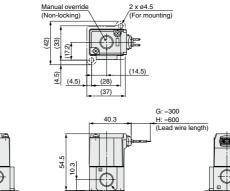

1/4", 1/8"

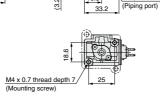


3.2)

16.5




Note) There is also "VT307-DH1" (lead wire length: 600 mm).

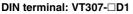

£.

25.6

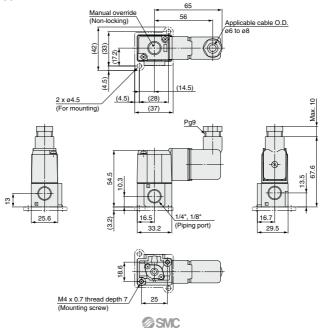

# Series VT307 Manifold Specifications

VT307 manifold is available both as a common exhaust and individual exhaust model.

Manifold valve can be easily converted from N.C. (Normally Closed) to N.O. (Normally Open) merely by turning over the function plate.





<u></u>	2-01-F
Dummy symbol	Mounting bracket
• VT307 manifold	•Thread type Nil Rc
Valve stations	F G N NPT
02 2 stations : :	T NPTF
20 20 stations	
ecify model number of the manifold e, applicable valves and blanking plates an ordering.	Exhaust port type
er to page 2003 for the model number he valves.	2 Common exhaust 3 Individual exhaust
ering example: VV307-01-052-01-F 1 pc. (5 station manifolds base) VO307-1G14 pcs. DXT060-51-13A1 pc.	
(Blanking plate)	
anifold Specifications	

How to Order Manifold Base

Manifold	Specifications
----------	----------------

Manifold ty	B mount						
Max. numb	er of stations	20 stations Note)					
Applicable	solenoid valve		VO307□-□□□□ (-Q)				
Exhaust port			Port location (Direction)/Port size				
Symbol	Туре	Р			A	R	
2	Common	Base (Side) 1/8		Ba	se (Side) 1/8	Base (Side) 1/8	
3	Individual	Base (	Base (Side) 1/4		se (Side) 1⁄8, 1⁄4	Base (Top) 1/8	

Note) For 6 stations or more, supply air both sides of P port. The common exhaust type should exhaust from both of the R port.

#### Option

Description	Part no.
Blanking plate (With gasket, screw) Note)	DXT060-51-13 <sup>A</sup> <sub>B</sub>

### Accessories for Applicable Solenoid Valve

Description	Part no.	Qty.
Function plate (With gasket) Note)	DXT152-14-1 B	1 pc.
Mounting screws	NXT013-3	2 pcs.

Note) DXT060-51-13B, DXT152-14-1B are for the continuous duty type.

#### Flow-rate Characteristics/Weight


Flow-rate characteristics							Weight						
Valve model	$1 \rightarrow 2 (P \rightarrow A)$		$2 \rightarrow 3 (A \rightarrow R)$			$3 \rightarrow 2 (R \rightarrow A)$			$2 \rightarrow 1 (A \rightarrow P)$			weight	
	C[dm3/(s·bar)]	b	Cv	C[dm3/(s·bar)]	b	Cv	C[dm3/(s·bar)]	b	Cv	C[dm3/(s·bar)]	b	Cv	Grommet
VO307	0.34	0.28	0.089	0.34	0.22	0.082	0.36	0.28	0.091	0.34	0.18	0.080	
VO307V (Vacuum spec. type)	0.34	0.26	0.069	0.34	0.22	0.062	0.30	0.26	0.091	0.34	0.16	0.060	
VO307E (Continuous duty type)													0.15 kg
VO307Y (Energy-saving type)	0.30	0.18	0.070	0.30	0.15	0.072	0.32	0.20	0.075	0.30	0.15	0.069	
VO307W (Energy-saving, Vacuum spec. type)													





## Series VT307


### **Dimensions: Common Exhaust**

### VV307-01-□2-01-F

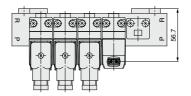

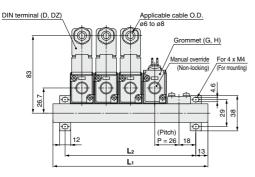

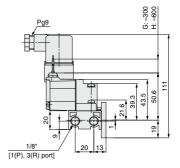

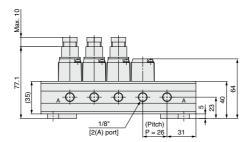



(Station n) ----- (Station 1)

L Dir	nens	sion								n: Stations
<u>_</u>	2	3	4	5	6	7	8	9	10	Formula
L1	88	114	140	166	192	218	244	270	296	L1 = 26 x n + 36
L2	62	88	114	140	166	192	218	244	270	L2 = 26 x n + 10


### **Dimensions: Individual Exhaust**

### VV307-01-□3-□-F

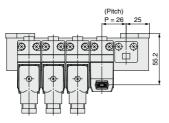

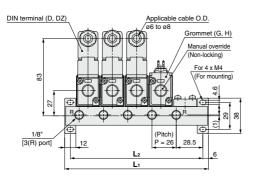



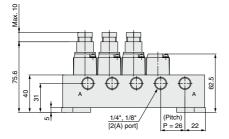

Pg9	ů Ť	
	21.6 39.3 50.6	E
1-1	╇╢-↑ ฅ	
1/4" [1(P) port]	18.5	

VV061
VV100
V100
S070
VQD
VQD-V
VKF
VK
VT
VS4
VS3

300

L Dir	nens	sion								n: Stations
/	2	3	4	5	6	7	8	9	10	Formula
Lı	76	102	128	154	180	206	232	258	284	L1 = 26 x n + 24
L2	64	90	116	142	168	194	220	246	272	L2 = 26 x n + 12




## Series VT307 Specific Product Precautions

Be sure to read before handling. Refer to front matter 53 for Safety Instructions and pages 3 to 8 for 3/4/5 Port Solenoid Valve Precautions.

#### Mounting

## **M**Warning

When mounting a valve on the manifold base, N.C. and N.O. can be reversed by the function plate orientation. Also, since the cylinder operates in reverse, confirm if the function plate is correctly mounted or not.

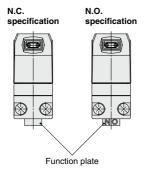

## 

- Each valve is fixed to the manifold base with two M4 mounting screws. Tighten the screws firmly when re-mounting.
- 2. For mounting, tighten M4 or equivalent screws evenly into the mounting holes of the manifold base.

Tightening torque of the mounting screw (M4): 1.4 N·m

#### Changing from N.C. to N.O.

## **≜**Caution

This product is delivered as N.C. valve.

If N.O. valve is required, remove mounting screws of the required valve and turn over the function plate. (Make sure that there are gaskets on both sides of the plate.) Then, tighten the mounting screws to fix the valve to the manifold base.

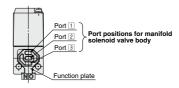


Figure: For N.C.

Specifications	Function plate
N.C.	No mark
N.O.	NO

Piping

## **≜**Caution

 For the common exhaust type, pressurization or evacuation of the 3(R) port can cause a malfunction.