

# Wireless System



## Noise resistance

Uses the 2.4 GHz ISM frequency band  
Frequency hopping: Every 2 ms (Fastest)

## Communication cables not required

Reduced wiring work, space, and cost  
Minimized disconnection risk

## Communication distance/speed, Response time\*1

	Communication distance	Communication speed	Response time
Compact Type EXW1	100 m	1 Mbps 250 kbps	2 ms 5 ms
Modular Type EX600-W	10 m	250 kbps	5 ms

\*1 For the EXW1 construction, it depends on the operating environment.

**New** Analog input, digital input/output, and valve manifold have been added to the compact type EXW1 series.

## Compact Type EXW1 Series p. 14

### Compact and lightweight

Compared with the EX600-W series (remote)

**Volume**  
Approx. **81%** reduction \*1

**Weight**  
Approx. **79%** reduction \*1

\*1 For the existing remote, M12 connector/8 digital outputs specification

### Compatible protocols

EtherNet/IP  
EtherCAT  
DeviceNet

PROFINET  
CC-Link

OPC UA  
IO-Link

Compact wireless base



Communication distance: 100 m

Compact wireless remote



## Modular Type EX600-W Series p. 56

### Modular connection is possible.

- Up to 9 stations can be connected to the digital/analog unit.
- Connector type: M12/ M8, D-sub, Spring type terminal block



Compact wireless base



Communication distance: 10 m



### For countries/regions in which wireless is supported

This product cannot be used in countries/regions where wireless is not supported. Refer to page 69 for details on countries/regions in which the product can be used.

# EXW1/EX600-W Series



CAT.E02-28H

Compact  
EXW1


Modular  
EX600-W

## Provides communication stability in FA environments

- Even if multiple wireless bases are in use in the same communication area, each wireless base is able to effectively communicate with the remotes they are paired with. Each wireless base is able to identify its wireless remotes by their P.I.D.
- \* P.I.D.: Product I.D.

### Stable communication is possible.


- Communication is possible in environments with various forms of propagation (transmission, reflection, etc.).
- Communication is also possible within the same area as existing wireless networks such as wireless LANs and AGVs.

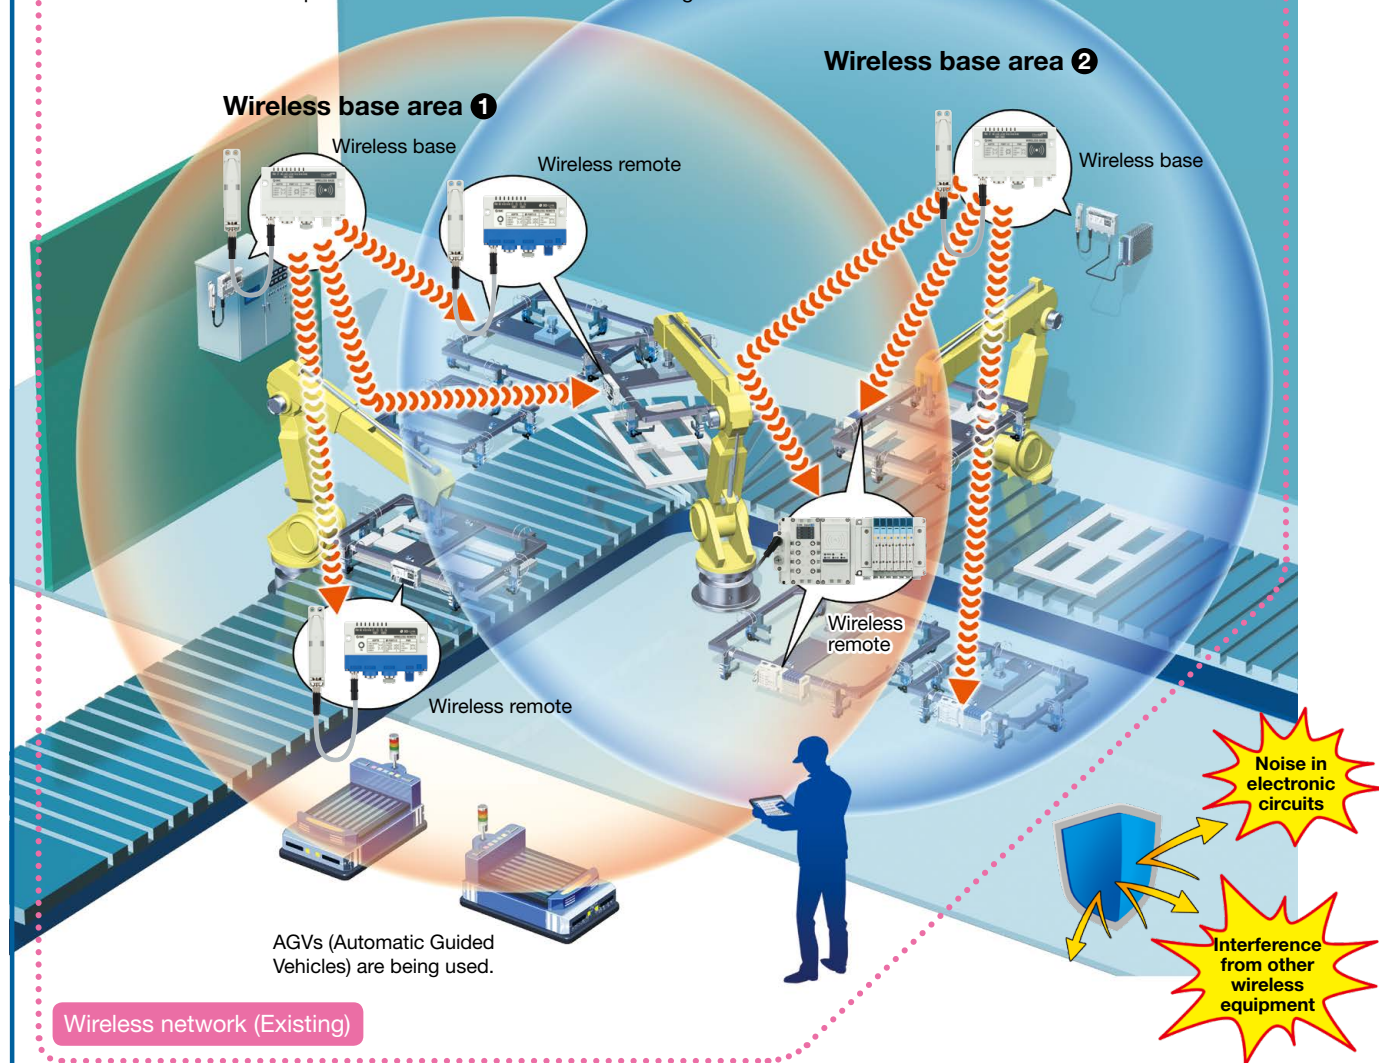

## Antenna support

Compact  
EXW1


Communication is possible with a wireless adapter or external antenna even when the wireless base/remote is installed in a metal-shielded location such as in a control panel/box.

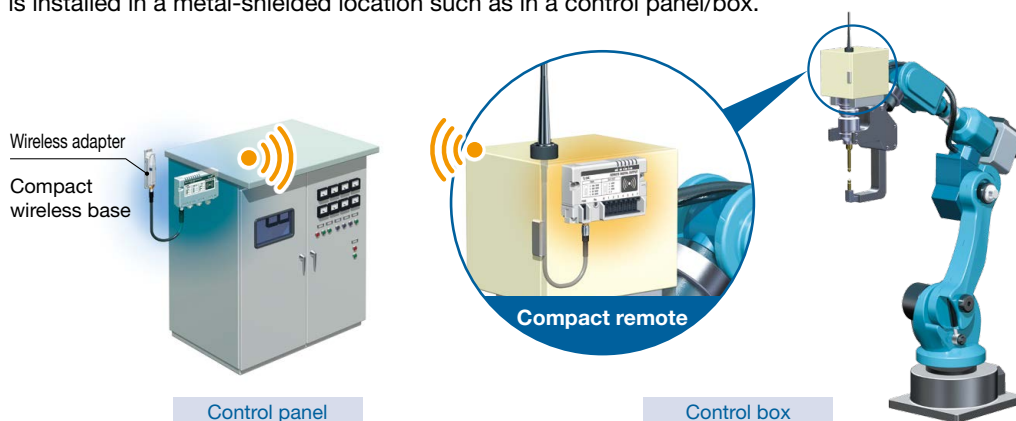

## Frequency hopping/Event communication system

Compact  
EXW1

Modular  
EX600-W

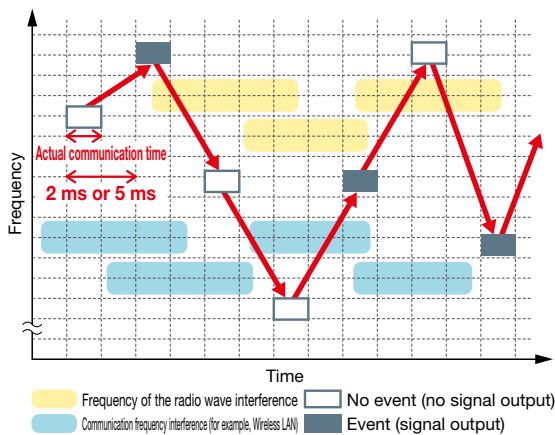

### Frequency hopping

A stable wireless environment is established using an original protocol which is not affected by interference. Interference from other wireless equipment is reduced.

Frequency hopping cycle

2 ms\*<sup>1</sup>  
or  
5 ms

### Event communication system

\*<sup>1</sup> For the EXW1 only

Wireless communication is performed only when there is a variation in the information, thereby suppressing the frequency of radio wave output in wireless communication and reducing interference with other wireless devices.


## F.C.S. (Frequency channel select) function supported

Compact  
EXW1

This is a function that allows for the selection of the frequency channel to be hopped to via frequency hopping. When the frequency used by wireless LANs, AGVs, or other wireless devices is known, selecting a different frequency channel will allow for hopping only to the selected frequency channel, thereby reducing communication collisions with other wireless devices and stabilizing communication. \* The number of selectable frequency channels varies depending on the country of use.

Symbol	Number of selectable frequency channels	Applicable countries
<b>E</b>	Min. 5/Max. 79 channels	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
<b>N</b>	Min. 15/Max. 79 channels	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

\* If not selected, the default setting (79 channels) is used for communication.

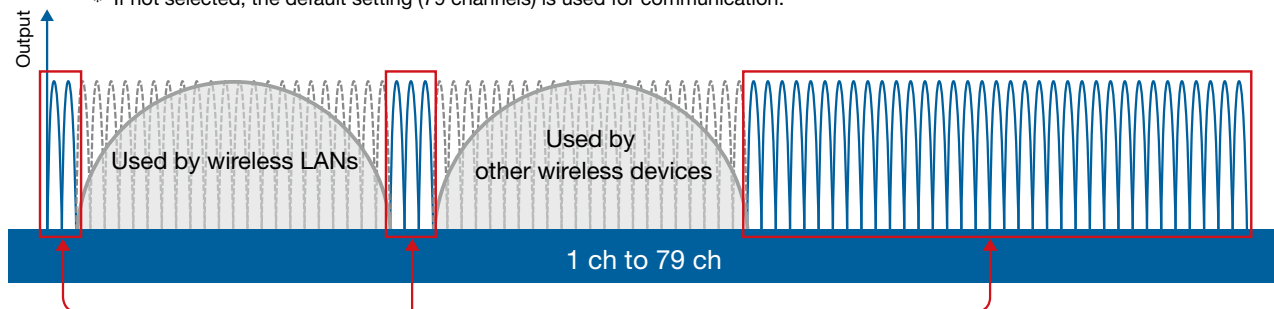


Hopping/communicating with the frequency channel within the selected red frame

## Frequency band used

Compact  
EXW1

Modular  
EX600-W

Uses the 2.4 GHz ISM frequency band

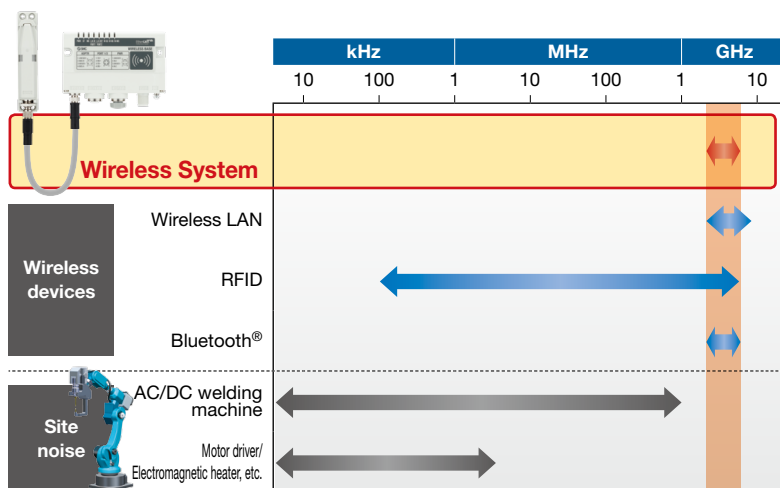


\* ISM (Industrial, Scientific, and Medical) radio bands: Frequency bands allocated for industrial, scientific, and medical applications

## High security using encryption

Compact  
EXW1

Modular  
EX600-W

Unauthorized access from outside is prevented by using data encryption.

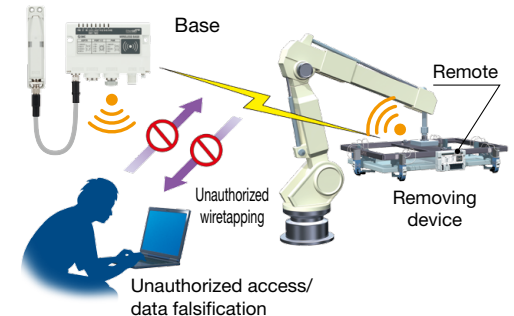

## Remote high-speed connection

Compact  
EXW1

Modular  
EX600-W

To start of communication: Min. 250 ms

\* Depends on the communication environment

### Trademark

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



## Product diagnosis


Compact EXW1    Modular EX600-W

Diagnostic signals, LEDs on the base/remote, Web function, and setting software (IO Configurator) can be used for product diagnostics.



### Wireless base

Compact Type EXW1

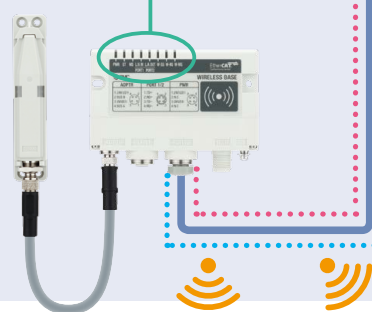

### LED display for bases


The LED display can be used to identify the installation location and communication status according to the received signal strength level.

W-SS (Radio wave receiving intensity (For communication from remote to base))	
Green LED is ON.	The received power level of all remotes is 3.
Green LED flashes. (1 Hz)	There are connected remotes with a received power level of 2.
Green LED flashes. (2 Hz)	There are connected remotes with a received power level of 1.
Red LED flashes.	All the remotes that support protocol V.1.0 are not connected.
Orange LED flashes.	All the remotes that support protocol V.2.0 are not connected.
OFF	The remote module is not registered.

### Wireless remote

Compact Type EXW1

Modular Type EX600-W

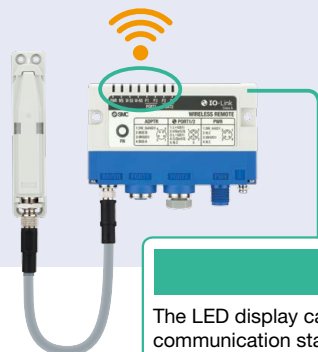


### LED display for remotes

The LED display can be used to identify the installation location and communication status according to the received signal strength level.

W-SS (Radio wave receiving intensity (For communication from base to remote))			
Green LED is ON.	The received power level is 3.	Red LED flashes.	The base that supports protocol V.1.0 is not connected.
Green LED flashes. (1 Hz)	The received power level is 2.	Orange LED flashes.	The base that supports protocol V.2.0 is not connected.
Green LED flashes. (2 Hz)	The received power level is 1.	OFF	The base module is not registered.

Solenoid valve

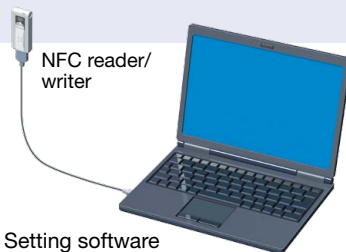

PC + Setting software

Setting software (IO Configurator)

### Diagnostic signal

The connection status of the wireless system can be judged by the PLC during operation by the diagnostic signal.

<Diagnostic signal output conditions>

- When an error occurs in the wireless system (base or remote)
- When communication from the remote cannot be received

### Web function (When the base and PC are connected)


Via the EXW1-BEN/BPN web screen, you can change the wireless communication protocol, OPC UA, and pairing settings. Wireless/diagnostic logs and wireless system configuration information can be checked, and the log data can be generated and then downloaded as a CSV file.

\* Refer to the logging function on page 4.



Web screen example

The log files showing the number of retries or the received radio wave intensity can be downloaded in the form of a CSV file.

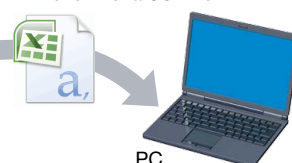

PC



## Compact EXW1

Modular  
**EX600-W**

## Setting software (IO Configurator)


The NFC reader/writer can be used with the setting software to perform various checks and setting without contact.  
(NFC: Near Field Communication)

- Base communication configuration
  - Setting of the I/O points for the system, base, and remote
  - Pairing of the base and remote
  - I/O monitoring
  - Monitoring of diagnostic data
- \* Refer to the logging function.



## Setting software

Download the setting software from the “configuration file.”

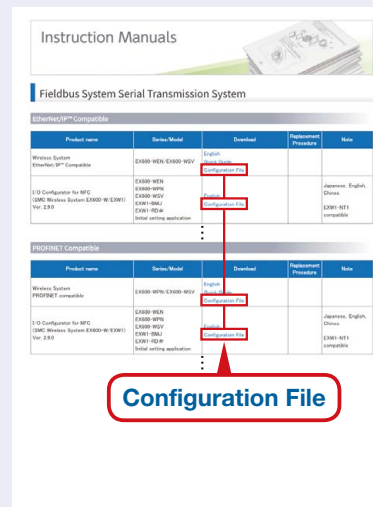

**From the SMC website**

## Product Information

**Documents/Download**

## Operation Manuals

**Fieldbus System**

## Serial Transmission System

**DeviceNet® Compatible**  
**or**

### CC-Link Compatible

**EtherNet/IP™ Compatible**

or  
EtherCAT Compatible

EtherCAT Compatible  
or

### PROFINET Compatible

### I/O Configurator for NFC

## Configuration File


## Compact EXW1

Modular  
**EX600-W**

The following information is saved in the internal memory of the product. It can be downloaded and visualized from the web function or the setting software (IO Configurator).

## Number of retries

The number of retries (communication attempts) can be checked.

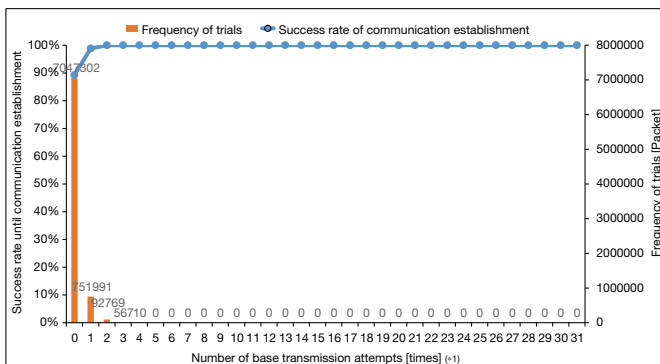


**Graph 1. Communication response characteristics**

## Received signal strength indicator

The communication trial rate and received signal strength indicator (RSSI) can be checked for every frequency channel.

Number of retries, Received signal strength indicator, Operation status

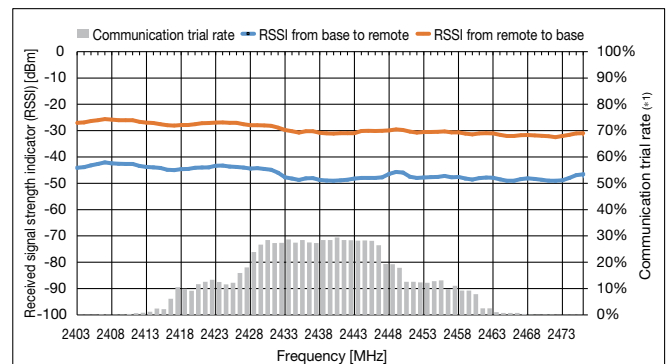

**Graph 2. Received signal strength indicator and communication trial rate characteristics with respect to frequency**

## Operation status

Error details, time information (timestamp), and remote numbers can be checked.

\* Up to 30 pieces can be displayed.

Information	I/O monitor	Properties	Event	Wireless
-------------	-------------	------------	-------	----------

ALL

CLEAR

Export

Refresh

Power on

R/W detected


  

Timestamp	WCh	TAG	Unit	Channel	Status
2020/12/28 10:26:25	5	EX600-WSV1	3	5	0x00000001
2020/12/26 8:00:00	3	LINE4-S5-R-HAND	1	2	0x00000002
2020/12/24 5:33:35	2	LINE4-S5-L-HAND	1	2	0x00000002
2020/12/22 3:07:10	3	LINE4-S5-R-HAND	1	4	0x00000003
2020/12/20 0:40:45	1	LINE4-S2-R-HAND	1	4	0x00000004
2020/12/17 22:14:20	5	EX600-WSV1	3	5	0x00000005
2020/12/15 19:47:55	4	LINE4-S3-R-HAND	3	5	0x00000006

## Reduced wiring of Digital-, analog-, and IO-Link components

## Air management system connection by wireless\*1

\*1 Using the compact type EXW1 base only

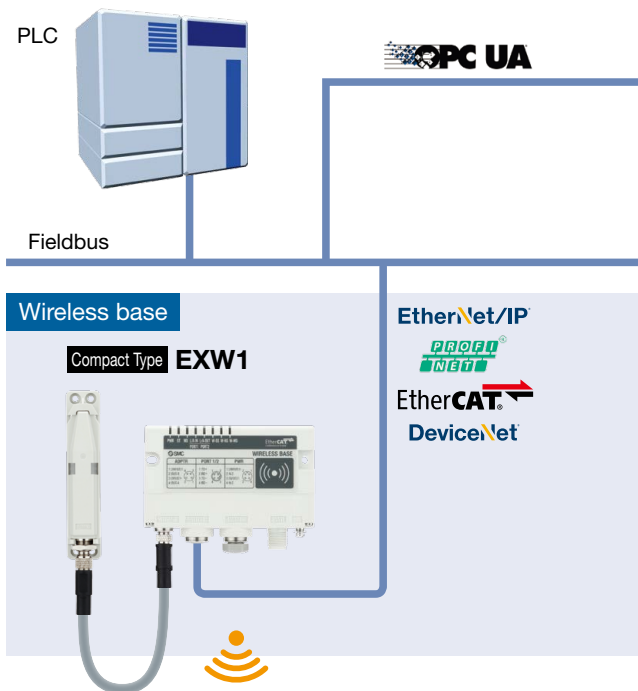

### Wireless remote

#### Compact Type **EXW1**

Digital input/output

IP20

New

IP67

New

#### Compact Type **EXW1**

Analog input

New

#### Compact Type **EXW1**

Valve manifold

#### Modular Type **EX600-W**

Digital/Analog input/output

EX600 I/O unit

Remote module

Solenoid valve

### Digital input devices

#### Auto switch



#### Pressure switch



#### Flow switch



#### Others

Proximity sensor  
Photoelectric switch  
Limit switch



### Digital output devices

#### Valve manifold (Plug lead)



#### Solenoid valve



#### Ionizer



#### Others

Indicator light  
Relay  
Buzzer




### Digital input/output devices

#### Vacuum unit




#### Electric actuator (e-Actuator)



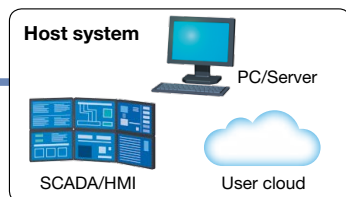

## The compact type EXW1 and modular type EX600-W can be used in combination.\*1

\*1 When used in combination, the communication speed and response time are limited to the specifications of the EX600-W.  
(See the sample system configuration.)

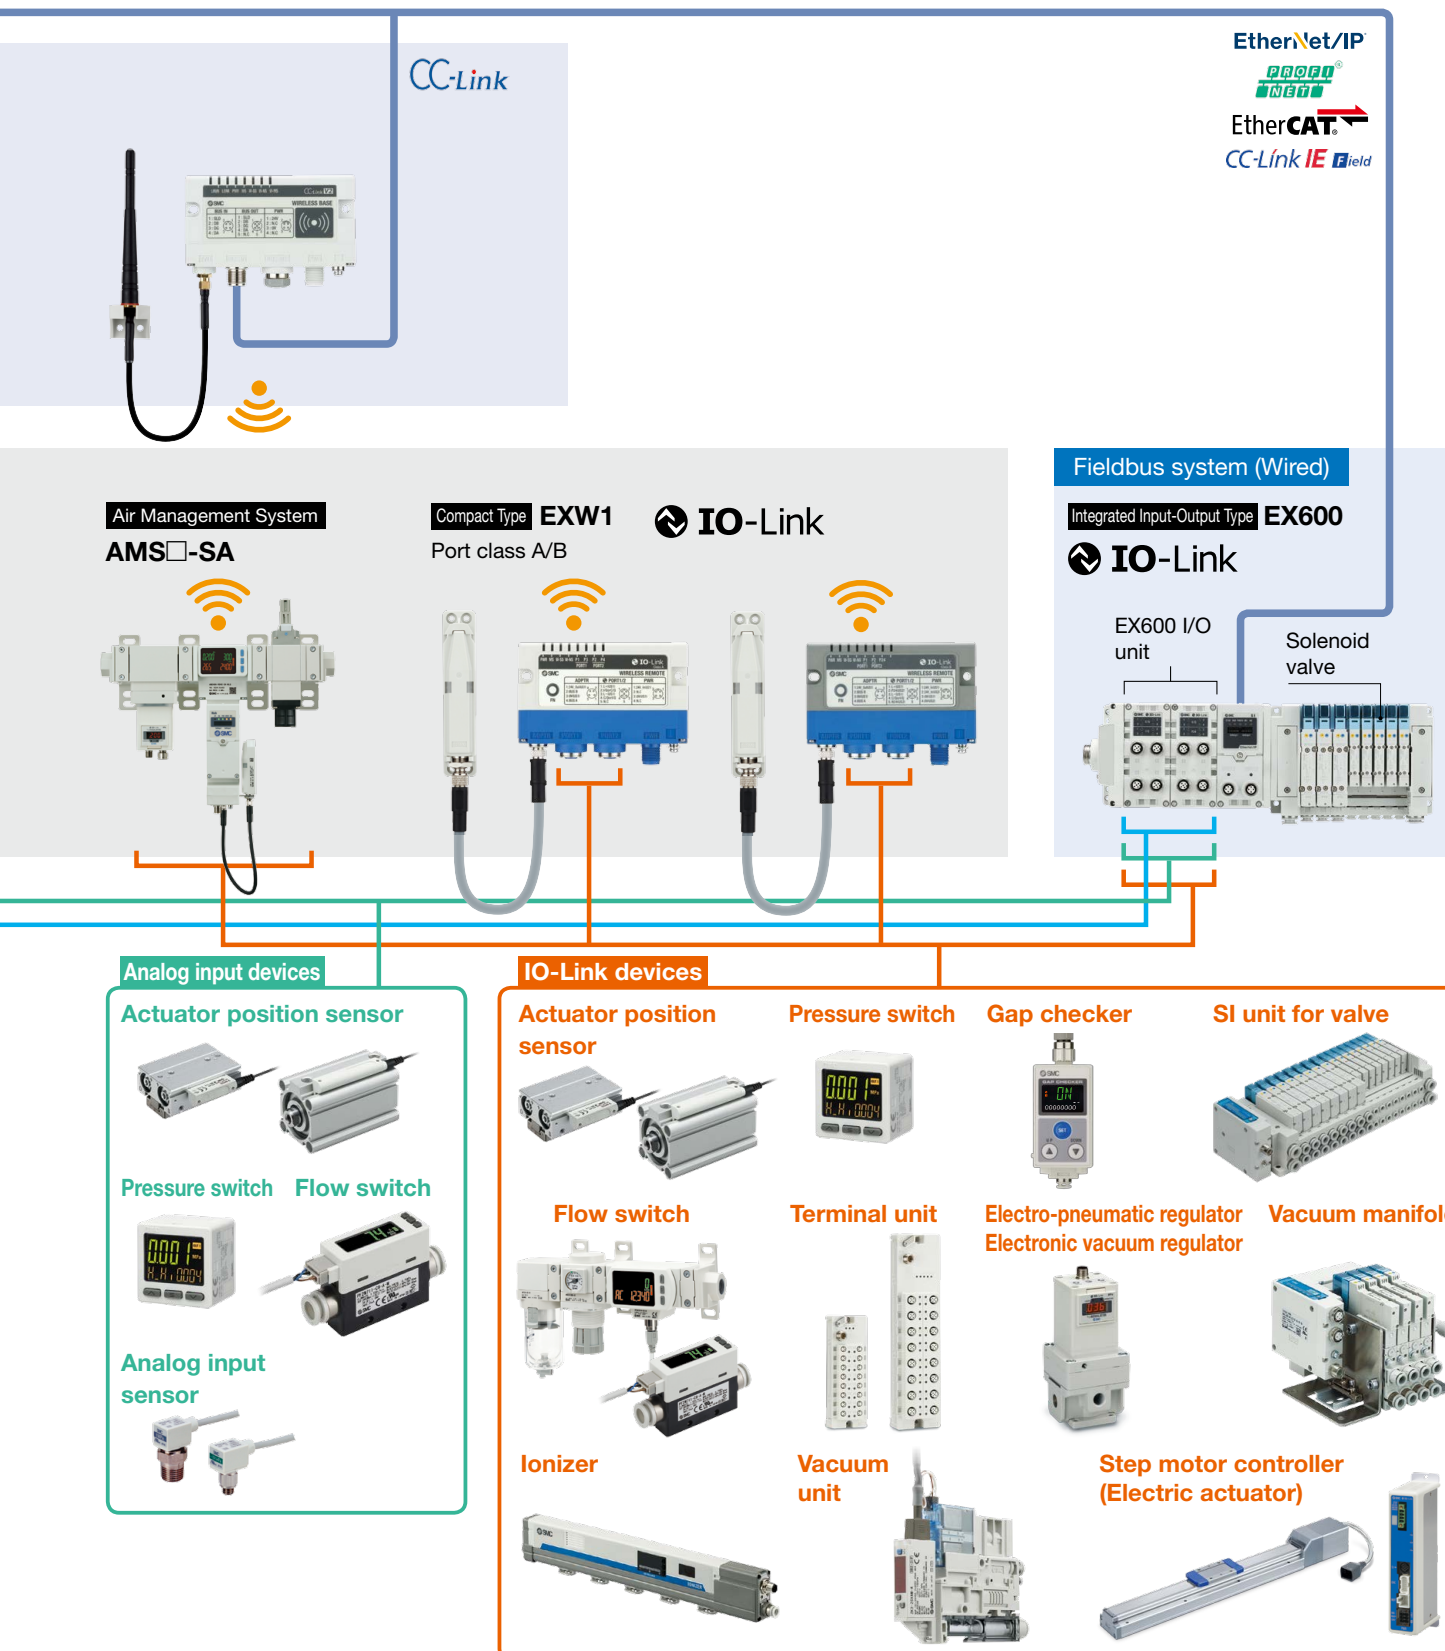



## **New** Compact Wireless Remote Digital Input/Output p. 16

Compact  
EXW1

**For preventive maintenance and increase productivity**

### ■ ON/OFF time & number of operations measurement function

Measure ON/OFF times (latest value, average, maximum, and minimum) between input and I/O signal.

In addition, the number of ON/OFF operations of I/O can be turned measurement. Measurement function can be determined when and where to perform maintenance. Supports preventive maintenance and increase of productivity to utilize data for solenoid valve operation frequency and cylinder operating time by auto switch.



### ■ Log function

A threshold is turned set-up setting, and data that is out of the threshold can be saved as a log in ON/OFF time measurement function. Data supports preventive maintenance and increase of productivity.

It can be saved up to 40 logs in Timer 0 to Timer 15, and the logs include the following data:

- Timer Ch No.
- Latest value
- Total number of measurements (the total number of times that the thresholds are in and out of range)
- Measurement count that the thresholds are out of range
- Time stamp

\* Log is saved to the memory element at 60 minutes interval from the moment when power supply is turned on.  
No storage from the last save to power supply OFF, so caution it.

## **New** Compact Wireless Remote Valve Manifold Compact EXW1

**Lightweight and compact—easy to mount on robot hands and moving parts**

**Installation area 63% reduction**

New product: 3,342 mm<sup>2</sup> Existing model: 9,052 mm<sup>2</sup>


**Weight 66% reduction**

New product: 200 g Existing model: 580 g

#### Comparison conditions

Excludes the valve manifold  
The existing model consists of a wireless remote and an end plate.

Existing model:  
**EX600-WSV+EX600-ED□**

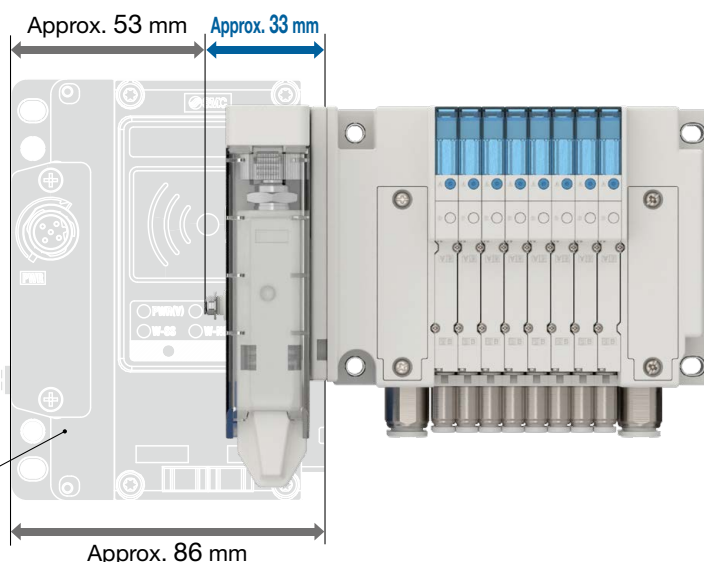

### Connectable Solenoid Valve Series




\*1 The JSY1000 is IP40.

## System Configuration Examples

### ■ Compact Type Configuration example when using the EXW1 series base ①

(When the remote configuration is for the EXW1 series or air management hub only)

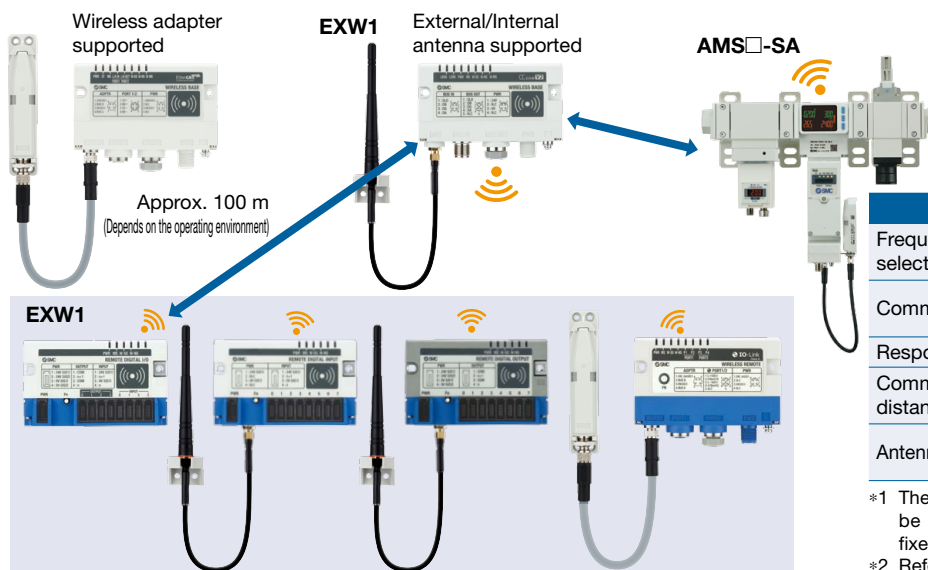


\*1 The communication speed and response speed cannot be selected for the Air Management Hub. They are fixed at 1 Mbps and 2 ms, respectively.

\*2 Refer to the "How to Order" section.

### ■ Compact Type Configuration example when using the EXW1 series base ②


(When the remote configuration is for the EX600-W and the EXW1 series)

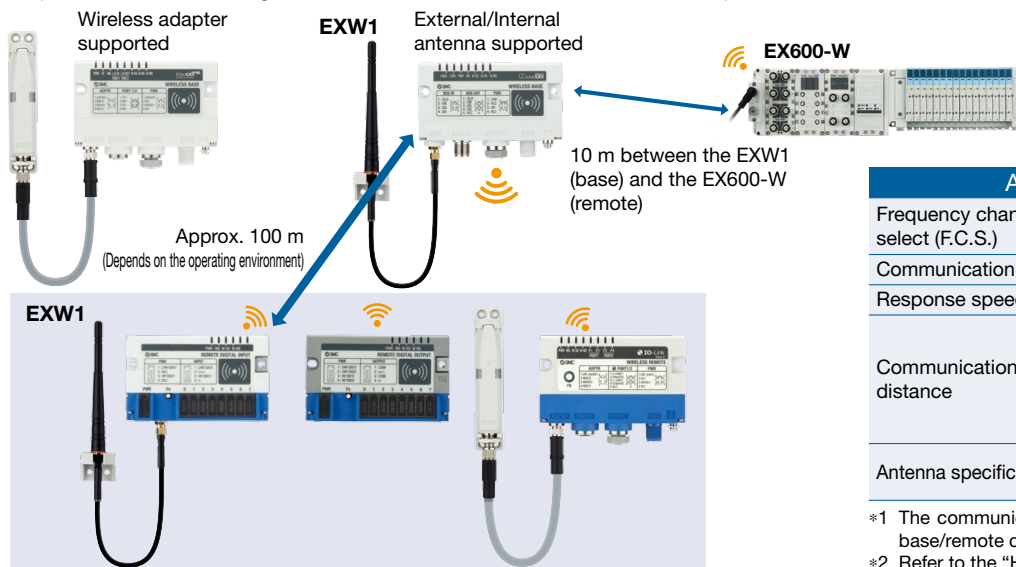

\*1 The communication distance varies depending on the base/remote combination.

\*2 Refer to the "How to Order" section.


## The data can be accessed from via PC (IO-Link setting tool).

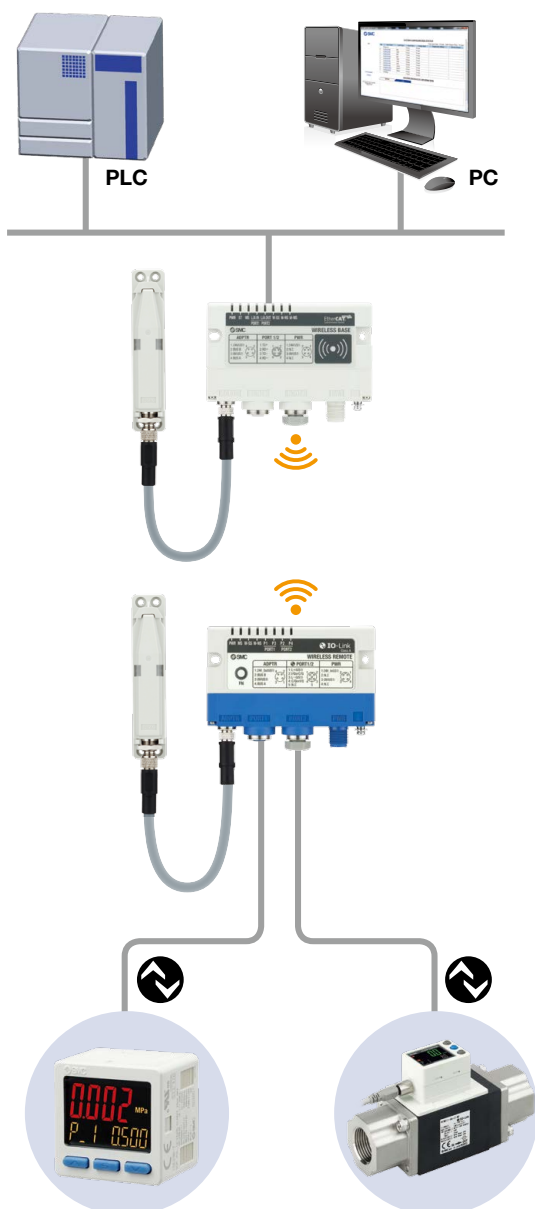Compact  
EXW1


Setting screen

Parameter	Value	Unit
Device ID	1	
Device Name	EXW1	
Device Type	EXW1	
Device Address	1	
Device Protocol	EXW1	
Device Version	1.0	
Device Manufacturer	SMC	
Device Model	EXW1	
Device Serial Number	123456789	
Device MAC Address	12:34:56:78:9A:BC	
Device IP Address	192.168.1.1	
Device Subnet Mask	255.255.255.0	
Device Gateway	192.168.1.1	
Device DNS Server	192.168.1.1	
Device DHCP	Enabled	
Device Baud Rate	115200	bps
Device Parity	Even	
Device Stop Bits	1	
Device Flow Control	None	
Device Error Handling	Warning	
Device Reset	Factory	
Device Update	Yes	
Device Backup	Yes	
Device Restore	Yes	
Device Save	Yes	
Device Load	Yes	
Device Delete	Yes	
Device Clear	Yes	
Device Help	Yes	
Device About	Yes	

Monitoring screen

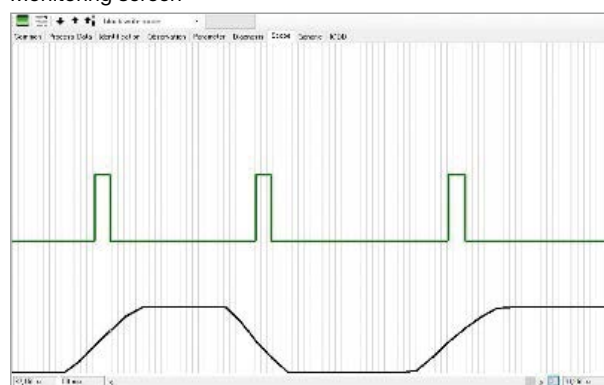

IO-Link devices can be set and monitored from a PC without going through a PLC.

- Process data
- Device parameters
- Device information
- Device diagnosis

- \* The IO-Link setting tool (IO-Link Device Tool) is a software used for the setting and monitoring of IO-Link unit/device.
- A setting tool compatible with the IO-Link units of every manufacturer is used for the SMC EXW1 series and EX600 series IO-Link unit. (IO-Link Device Tool V5-PE (V5 or later only) manufactured by TMG Technologie und Engineering GmbH (hereinafter referred to as TMG))
  - It can be downloaded for free from TMG's website. However, to use it for more than 30 days, a license key for the IO-Link Device Tool is required. (Refer to page 54 for details.)




## Wiring material cost and installation time can be reduced.\*1

Compact  
EXW1


Modular  
EX600-W

\*1 For the EX600-W modular type

### Wireless System

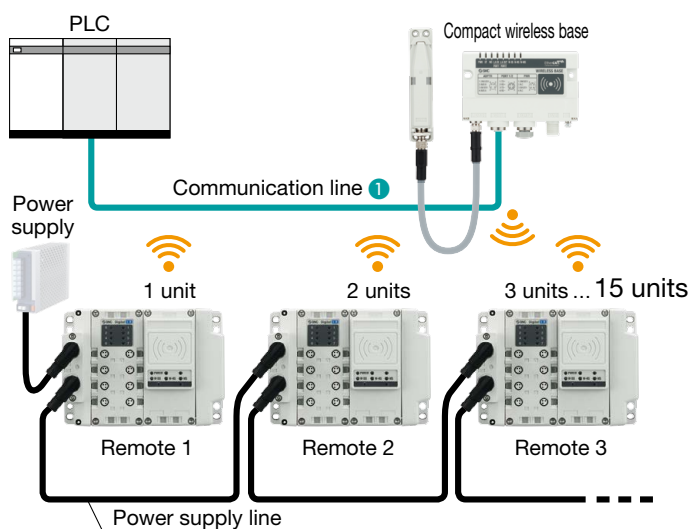

### Existing (Wired) System

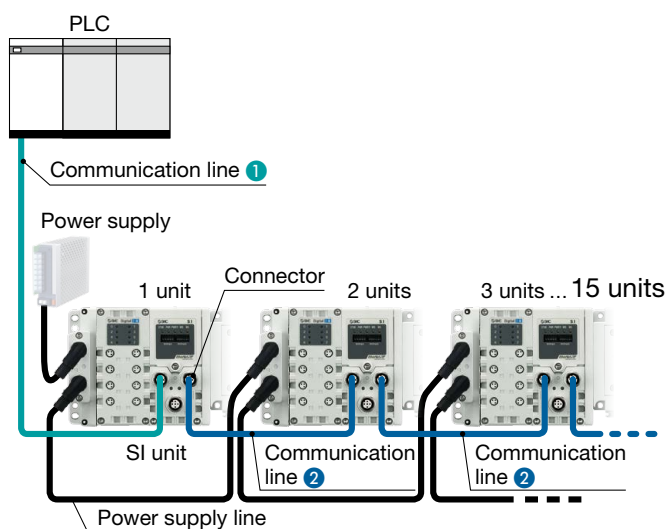

#### SI unit: Comparison when 15 units are connected

	Number of communication devices	Communication line		Communication connectors required
		①	②	
Wireless system	Base: 1 unit Remote: 15 units	1 line (Connector at one end)	—	1 location
Existing (Wired) system	SI unit: 15 units	1 line (Connector at one end)	14 lines (Connector at both ends)	29 locations

## Interchangeability maintained


Modular  
EX600-W

Connection interchangeability between EX600 series SI units is maintained.


### The replacement of wireless and wired systems is possible.

\* The max. I/O points of the remote module is limited to 128 points.

#### Wireless system

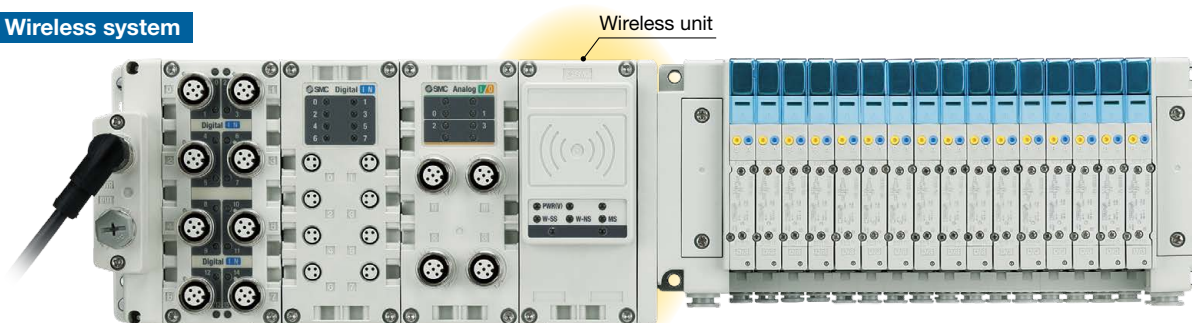


#### Wired system

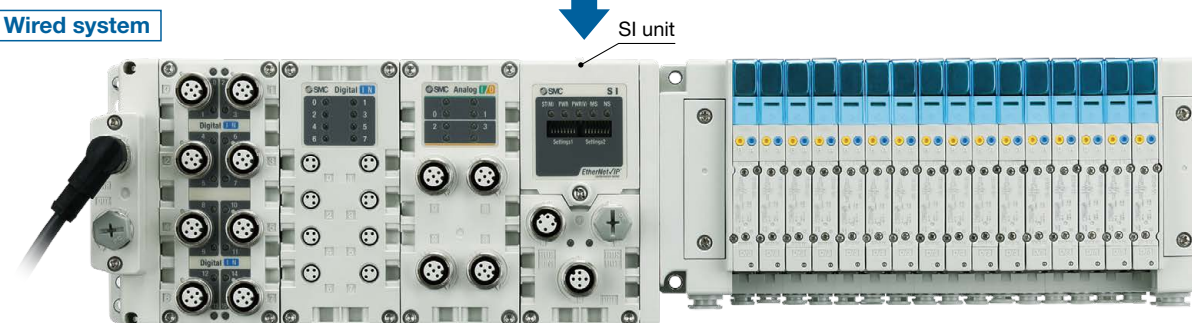

## Application Examples


### For tool changing

- A communication cable is not necessary for moving parts.
- Minimized disconnection risk
- Shorter time for establishing communication (startup time)

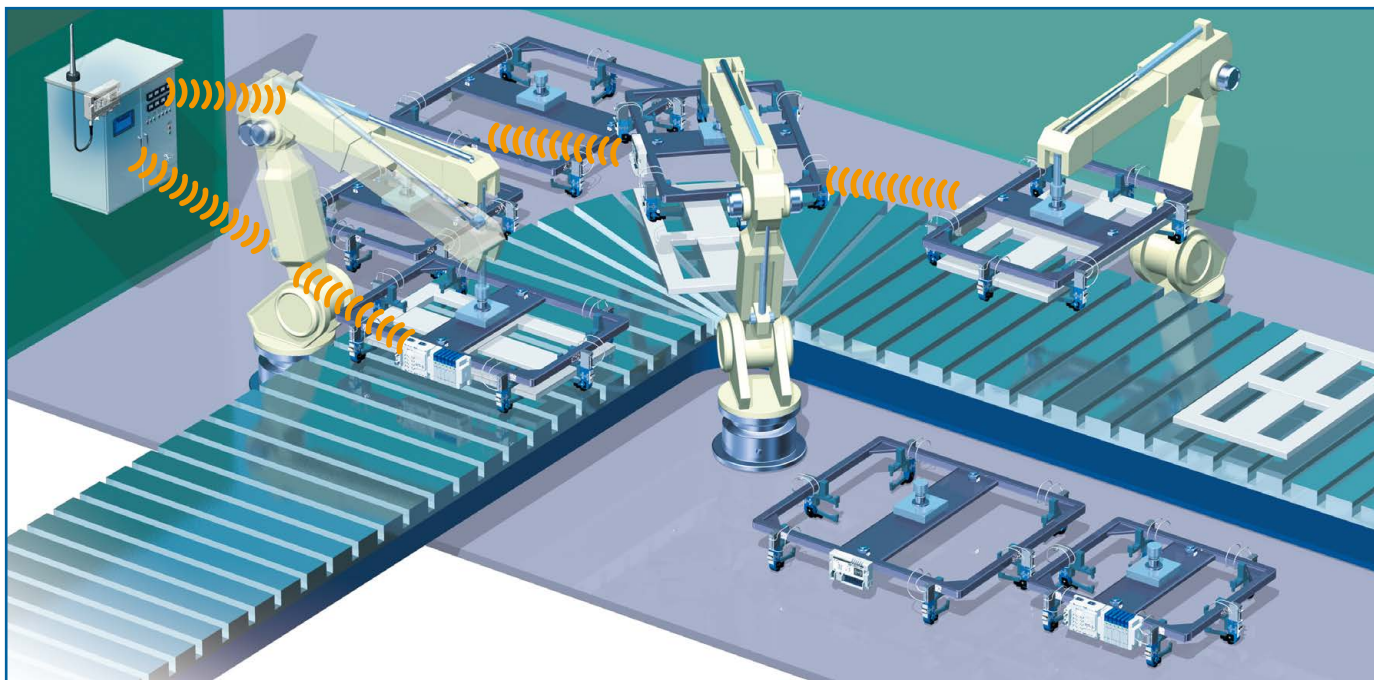


### For rotary tables

- Minimized disconnection risk
- Smaller diameter communication cable/tubing

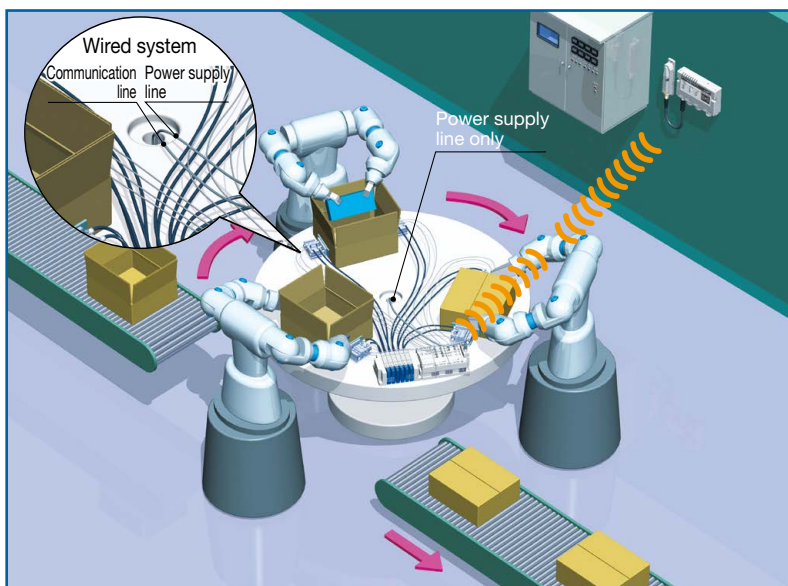


### For the blocking of radio waves

Communication is possible by placing the external antenna outside the control panel when the unit is installed in a metal box, etc.

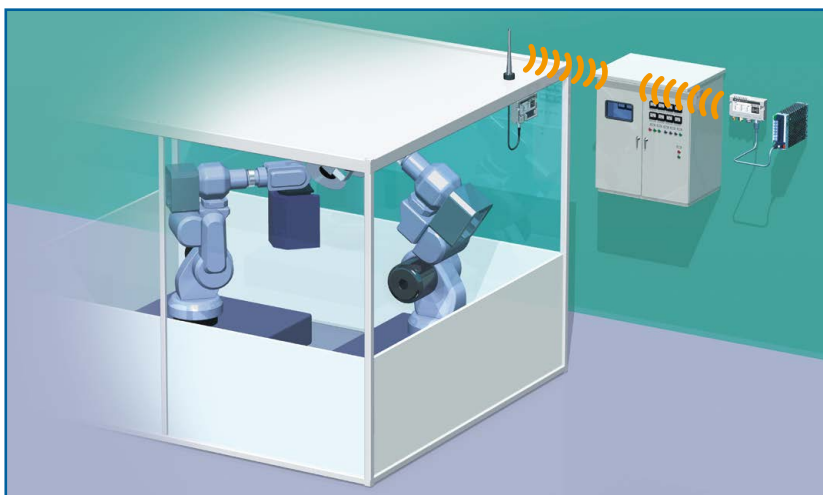

# CONTENTS

## Wireless System Compact Type **EXW1 Series**

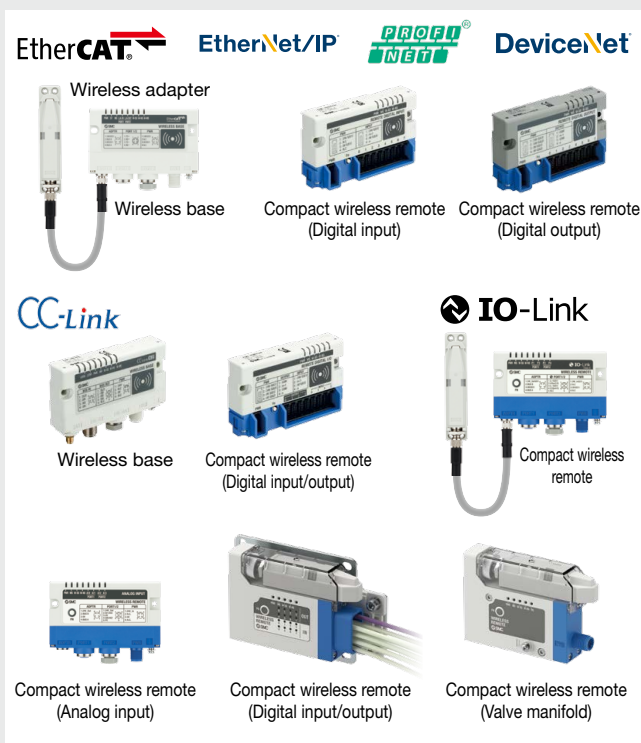

### How to Order

#### <Base>

EtherCAT, EtherNet/IP, PROFINET, DeviceNet	p. 14
Wireless Adapter	p. 14
Wireless Adapter Cable	p. 14
CC-Link	p. 15

#### <Remote>

Digital Input/Output/Input/Output (e-con)	p. 15
Digital Input/Output/Input/Output (M12 Grommet)	p. 16
Valve Manifold	p. 16
IO-Link	p. 17
Analog Input	p. 18

#### <NFC Reader/Writer>

### Specifications

Wireless Communication	p. 19
Wireless Adapter	p. 19

#### <Base>

EtherCAT, EtherNet/IP	p. 20
PROFINET, DeviceNet	p. 21
CC-Link	p. 22

#### <Remote>

Digital Input/Output/Input/Output (e-con)	p. 23
Digital Input/Output/Input/Output (M12 Grommet)	p. 24
Valve Manifold	p. 25
IO-Link	p. 26
Analog Input	p. 27

### Dimensions/Parts Description

#### <Base>

EtherCAT, EtherNet/IP, PROFINET	p. 28
DeviceNet	p. 29
Wireless Adapter	p. 30
Installation Plate	p. 30
Wireless Adapter Cable	p. 31
CC-Link	p. 32

#### <Remote>

Digital Input/Output/Input/Output (e-con)	p. 33
Digital Input/Output/Input/Output (M12 Grommet)	p. 36
Valve Manifold	p. 39
IO-Link	p. 40
Analog Input	p. 41

#### <NFC Reader/Writer Fixing Bracket>

### Accessories/Made to Order



① Power Supply Cable	p. 44
② Communication Cable	p. 46
③ Cable and Connector for Connection Component	p. 49
④ Field-wireable Communication Connector	p. 51
⑤ Wireless Adapter Cable	p. 52
⑥ Wireless Adapter	p. 52
⑦ Installation Plate	p. 52
⑧ External Antenna Set	p. 52
⑨ Power Supply Connector, Connector for Input/Output Device Connection (e-CON)	p. 53
⑩ Seal Cap (10 pcs.)	p. 54
⑪ IO-Link Device Tool License Key	p. 54

### Made to Order

① Communication Cable	p. 55
-----------------------	-------

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions



# CONTENTS

## Wireless System Modular Type *EX600-W Series*



Remote module

### How to Order

Wireless Unit .....	p. 56
Digital Input Unit .....	p. 56
Digital Output Unit .....	p. 56
Digital Input/Output Unit .....	p. 56
Analog Input Unit .....	p. 56
Analog Output Unit .....	p. 57
Analog Input/Output Unit .....	p. 57
End Plate (D side) .....	p. 57
End Plate (U side) .....	p. 57
NFC Reader/Writer .....	p. 57

### Ordering Example of the Remote Module .....

### Specifications

Remote Module .....	p. 59
End Plate (D side) .....	p. 59

### Dimensions

Remote Module .....	p. 60
End Plate (D side) .....	p. 61
End Plate (U side) .....	p. 62
NFC Reader/Writer .....	p. 62
Fixing Bracket .....	p. 62

## Accessories



End plate bracket



Valve plate



Power supply cable

① End Plate Bracket .....	p. 63
② Valve Plate .....	p. 63
③ End Plate (U side) .....	p. 64
④ Reinforcing Brace .....	p. 64
⑤ Seal Cap (10 pcs.) .....	p. 64
⑥ Marker (1 sheet, 88 pcs.) .....	p. 64
⑦ Power Supply Cable (7/8 inch connector, For EX600-ED3) .....	p. 65
⑧ Power Supply Field-wireable Connector (7/8 inch) .....	p. 65
⑨ Power Supply Cable (M12 connector, For EX600-ED2) .....	p. 65
⑩ Power Supply Cable (M12 connector, For EX600-ED4/5) .....	p. 66
⑪ I/O Cable with Connector, I/O Connector .....	p. 67

Technical Data/Important .....	p. 68
Country-specific Radio Law Compliance Table .....	p. 69
Specific Product Precautions .....	p. 70
Safety Instructions .....	Back cover


# Wireless System Compact Type **EXW1 Series**



## How to Order

### Compact Wireless Base

EtherCAT<sup>®</sup>  
EtherNet/IP<sup>™</sup>  
PROFINET<sup>®</sup>  
DeviceNet<sup>™</sup>

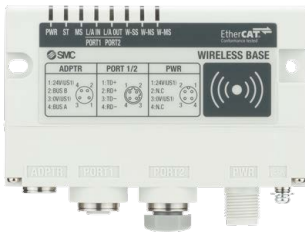

**EXW1 - B EC AC**

Base

Communication protocol

Symbol	Protocol
<b>EC</b>	EtherCAT
<b>EN</b>	EtherNet/IP <sup>™</sup>
<b>PN</b>	PROFINET
<b>DN</b>	DeviceNet <sup>®</sup>

Connector

Symbol	Connector interface
<b>A</b>	M12

Antenna specification for wireless communication\*1

Symbol	Antenna specification
<b>C</b>	Wireless adapter

• OPC UA Compliant


Symbol	OPC UA Compliant
<b>Nil</b>	X
<b>1*2</b>	○

\*2 Select "1" for communication protocol types "EN" and "PN."

\*1 A wireless system base used in combination with a wireless adapter  
When using this product, order the wireless adapter and wireless adapter cable separately.

\* 1 seal cap (for an M12 connector) is included with the product.

### Components

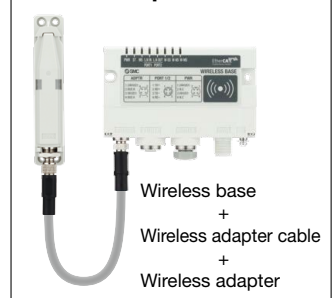

Wireless base  
+  
Wireless adapter cable  
+  
Wireless adapter

### Wireless Adapter



**EXW1 - A1 1 N**

Wireless adapter

Applicable model

Symbol	Applicable model
<b>1</b>	<ul style="list-style-type: none"> <li>Base                             <ul style="list-style-type: none"> <li>EtherCAT: EXW1-BECAC</li> <li>EtherNet/IP<sup>™</sup>: EXW1-BENAC1</li> <li>PROFINET: EXW1-BPNAC1</li> <li>DeviceNet<sup>®</sup>: EXW1-BDNAC</li> </ul> </li> <li>Air Management Hub (EXA1-□)</li> <li>Remote (IO-Link) (EXW1-RL□)</li> <li>Remote (Analog input) (EXW1-RAX□)</li> <li>Remote (Digital input/output) (EXW1-RD□G□)</li> <li>Remote (Valve manifold) (EXW1-RDY□□□□)</li> </ul>

• Frequency channel selection

Symbol	Number of selectable frequency channels	Applicable countries
<b>E</b>	Min. 5/Max. 79 channels	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
<b>N</b>	Min. 15/Max. 79 channels	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

\* Select this according to the country of use.

\* Applicable countries differ depending on the part number. Before purchasing, refer to the "Country-specific Radio Law Compliance Table" on page 69.

\* A dedicated cable is required to connect the wireless base/remote and wireless adapter.  
When using this product, order the wireless adapter cable separately.  
An installation plate (EXW1-AB4) is included as an accessory.

### Wireless Adapter Cable

**EXW1 - AC001-SAPU**

• Shape & cable length

Symbol	Mounting image	Cable length	Secondary battery compatible
<b>AC001-SAPU</b>		100 mm	Yes
<b>AC1-X1</b>		300 mm	—
<b>AC030-SSPS</b>		2950 mm	Yes

\* This cable is required to connect the wireless base/remote and wireless adapter.



EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions

## How to Order

### Compact Wireless Base (CC-Link)

CC-Link



Compact wireless

Base

Symbol	Protocol
<b>MJ</b>	CC-Link

Connector

Symbol	Connector interface
<b>A</b>	M12

External antenna set

\* 1 seal cap (for an M12 connector) is included with the product.

## EXW1 - BMJA B E

### Frequency channel selection

Symbol	Number of selectable frequency channels	Applicable countries
<b>E</b>	Min. 5/Max. 79 channels	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
<b>N</b>	Min. 15/Max. 79 channels	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

- \* Select this according to the country of use.
- \* Applicable countries differ depending on the part number. Before purchasing, refer to the "Country-specific Radio Law Compliance Table" on page 69.


### Antenna specification for wireless communication

Symbol	Antenna specification*3
<b>A</b> *4	Internal antenna
<b>B</b> *5, *6	External antenna


### Compact Wireless Remote (Digital Input/Output/e-con)



Input/Output

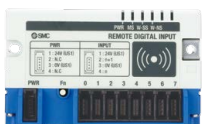

Input

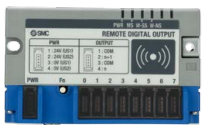

Output



External antenna set

Compact wireless

Remote

Type

Symbol	Description
<b>D</b>	Digital

Type

Symbol	Description
<b>X</b>	Input
<b>Y</b>	Output
<b>M</b>	Input/Output

Polarity

Symbol	Description
<b>P</b>	PNP
<b>N</b>	NPN

## EXW1 - RDMP E3 B E

### Frequency channel selection

Symbol	Number of selectable frequency channels	Applicable countries
<b>E</b>	Min. 5/Max. 79 channels	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
<b>N</b>	Min. 15/Max. 79 channels	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

- \* Select this according to the country of use.
- \* Applicable countries differ depending on the part number. Before purchasing, refer to the "Country-specific Radio Law Compliance Table" on page 69.

### Antenna specification for wireless communication

Symbol	Antenna specification*3
<b>A</b> *4	Internal antenna
<b>B</b> *5, *6	External antenna

### Connector and number of points/ports

Symbol	Connector	Description
<b>E3</b> *1	e-CON	Input: 8 inputs/ Output: 8 outputs
<b>E4</b> *2	e-CON	16 points


- \*1 Can be selected with type "M"
- \*2 Can be selected with types "X" and "Y"

- \*3 The antenna specification selected cannot be changed after purchase.
- \*4 The external antenna set cannot be used for the internal antenna specification.
- \*5 An external antenna set is included with the external antenna specification.
- \*6 It is not possible to use the external antenna set without connecting it with the external antenna specification.



## How to Order

### Compact Wireless Remote (Digital input/output/M12 Grommet)

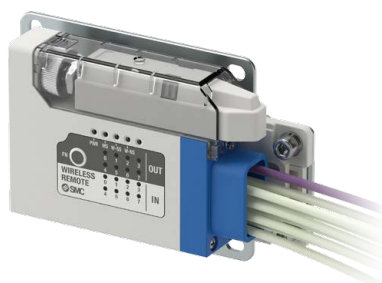

**EXW1 - R D X P G4 C 1 - E**

Wireless remote

Type

Symbol	Type
D	Digital

Type

Symbol	Type
X	Input
Y	Output
M	Input/Output

Polarity

Symbol	Polarity
P	PNP
N	NPN

Connector/Number of ports

Symbol	Connector/Number of points
G3	Grommet/8 points (For type M)
G4	Grommet/16 points (For types X and Y)

Option

Symbol	Option
Nil	Without wireless adapter
E	With wireless adapter ① (EXW1-A11E)
N	With wireless adapter ② (EXW1-A11N)

- \* If without wireless adapter is selected, a dedicated cable for wireless adapter and wireless adapter or wireless adapter and wireless adapter cover must be ordered separately.
- \* E, N is shipped with wireless adapter and wireless adapter cover assembled.

Bracket type

Symbol	Bracket type
1	Bracket ①
2	Bracket ② * EX600-WD□A1 interchangeable bracket

Antenna specification for communication

Symbol	Connector interface
C	Wireless adapter

- \* There is no seal cap (for an M12 connector) included with the product. However, a seal cap should be mounted on any unused connectors.

### Compact Wireless Remote (Valve manifold)



**EXW1 - R D Y P M5 C - E**

Wireless remote

Type

Symbol	Type
D	Digital

Type

Symbol	Type
Y	Output

Polarity

Symbol	Polarity
P	PNP
N	NPN

Connector/Number of ports

Symbol	Connector	Number of points
M5	Valve manifold	32 points

Option

Symbol	Option
Nil	Without wireless adapter
E	With wireless adapter ① (EXW1-A11E)
N	With wireless adapter ② (EXW1-A11N)

- \* If without wireless adapter is selected, a dedicated cable for wireless adapter and wireless adapter or wireless adapter and wireless adapter cover must be ordered separately.
- \* E, N is shipped with wireless adapter and wireless adapter cover assembled.

Antenna specification for wireless communication

Symbol	Connector interface
C	Wireless adapter

### Wireless Adapter Cover


## EXW1 - AB6

For direct mounting of wireless adapter, a wireless adapter cover is required.



## How to Order

### Compact Wireless Remote (IO-Link)

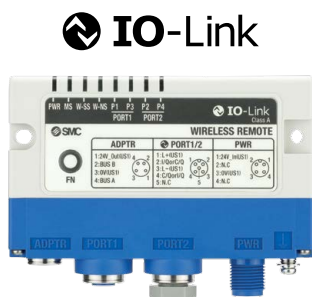

# EXW1 - R L A P A8 C

Remote

Type

Symbol	Description
L	IO-Link

Type

Symbol	Description
A	Port class A
B	Port class B

Antenna specification for wireless communication

Symbol	Connector interface
C	Wireless adapter

Connector and Number of IO-Link ports

Symbol	Connector/Number of IO-Link ports
A8*1	M12/4-port*2
A7*3	M12/2-port*4

\*1 Can be selected with type "A"

\*2 When using the IO-Link 4-port type, 2 Y branch connectors (EXW1-ACY3) are required.

\*3 Can be selected with type "B"

\*4 The Y branch connector (EXW1-ACY3) cannot be used with this option.

Polarity

Symbol	Description
P	PNP

- \* This wireless remote is to be used in combination with a wireless adapter. Order the wireless adapter and the cable for the wireless adapter separately. (For details ⇒ p. 14)
- \* 1 seal cap (for an M12 connector) is included with the product.

### Y branch connector (Option)


When selecting the IO-Link 4-port type for type "A," order the connectors using the part number shown below.

- \* When using the 4-port type, 2 Y branch connectors (EXW1-ACY3) are required.
- \* This cannot be used with type "B."

**EXW1-ACY3**



### Components

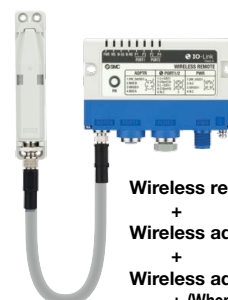


Wireless remote  
+  
Wireless adapter cable  
+  
Wireless adapter  
+ (When the port class A, 4-port type is used)  
Y branch connector (2 pcs.)



## How to Order

### Compact Wireless Remote (Analog input)

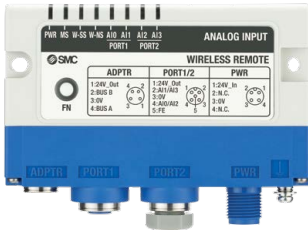

## EXW1 - RAXZA2C

Wireless remote

Type

Symbol	Description
A	Analog

Type

Symbol	Description
X	Input

Antenna specification for wireless communication

Symbol	Connector interface
C	Wireless adapter

Connector and Number of points

Symbol	Connector	Number of points
A2	M12	4 points*1

\*1 When using 4 points, use 2 Y-branch connectors (EXW1-ACY2).  
Or, use a terminal block, etc., to wire 2 devices to 1 analog device connector.

Polarity

Symbol	Description
Z	None

- \* This wireless remote is to be used in combination with a wireless adapter.  
Order the wireless adapter and the cable for the wireless adapter separately.  
(For details ⇒ p. 14)
- \* 1 seal cap (for an M12 connector) is included with the product.

#### Y branch connector (Option)

When branching 1 connector to use as 2 input points, order separately using the part number below.  
Note that when using the Y branch connector (EXW1-ACY2), the FE terminal of the input device connected to the remote cannot be used.

#### EXW1-ACY2



#### Components



Wireless remote  
+  
Wireless adapter cable  
+  
Wireless adapter  
+ (4 points type is used)  
Y branch connector (2 pcs.)



### NFC Reader/Writer

## EXW1 - NT1

- \* Order a fixing bracket.
- \* A USB cable (3 m) is also included.



#### Fixing bracket (Option)

When optional parts are required, order with the part number below.

#### EXW1-AB 2

#### Variations

Symbol	Description	Appearance	
		Single unit	Product mounting view
2	For the EXW1		

# EXW1 Series

## Specifications: Wireless Communication, Wireless Adapter

### Wireless Communication Specifications

Item		Specifications
Protocol		SMC original protocol (SMC encryption)
	Between compact EXW1 remote	V.2.0 or V.1.0 (Selectable)
	Between modular EX600-W remote	V.1.0
Radio wave type (spread)		Frequency Hopping Spread Spectrum (FHSS)
Frequency		2.4 GHz (2403 to 2481 MHz)
Number of frequency channels		5 to 79 ch or 15 to 79 ch (Refer to page 2.)
Frequency channel selection		Applicable (Refer to page 2.)
Channel bandwidth		1.0 MHz
Communication speed	V.2.0	1 Mbps
	V.1.0	250 kbps
Communication distance		Approx. 100 m (Depends on the operating environment)
Countries in which Radio Law certified		Refer to page 69 for the latest information regarding in which countries the product is certified.
Number of registered wireless remotes*1		Max. 127 units (15/31/63/127 units)

\*1 The number of registered units varies depending on the product.  
The recommended number of simultaneously operating units is 1 to 15 units.

### Wireless Adapter Specifications (EXW1-A11□)

#### Electrical Specifications

Item	Specifications
US1 (for control) power supply voltage range	12 VDC -10% to 24 VDC +10%
Internal current consumption	50 mA or less

### General Specifications

Item	Specifications
Enclosure	IP67
Vibration resistance	EN 61131-2 compliant $5 \leq f < 8.4 \text{ Hz}$ 3.5 mm $8.4 \leq f < 150 \text{ Hz}$ 9.8 m/s <sup>2</sup>
Impact resistance	EN 61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms
Standards	CE/UKCA marking, UL (CSA)*1
Weight	40 g (Body), 20 g (Installation plate)

\*1 UL (CSA) is applicable only when the product is connected to an air management hub system or an EXW1 series wireless base.

Be sure to confirm the specifications of the device to be connected in advance to see if it is UL (CSA) compliant.

\* Air bubbles may be visible on the exterior of the product, but this does not affect the product's performance.



**Specifications: Compact Wireless Base****Compact Wireless Base Specifications****Electrical Specifications**

Item	Specifications
US1 (for control) power supply voltage range	24 VDC $\pm 10\%$
Internal current consumption	150 mA or less

**EtherCAT Communication Specifications (EXW1-BECAC)**

Item	Specifications
Protocol	EtherCAT(Conformance Test Record V.2.3.0)
Communication speed	100 Mbps
Occupation area (Number of inputs/outputs)	Max. 11784 inputs/11784 outputs (1473 bytes/1473 bytes)
Configuration file	ESI (XML file)*1

\*1 The configuration file can be downloaded from the SMC website: <https://www.smcworld.com>

**General Specifications**

Item	Specifications
Enclosure	IP67
Vibration resistance	EN 61131-2 compliant $5 \leq f < 8.4 \text{ Hz}$ 3.5 mm $8.4 \leq f < 150 \text{ Hz}$ 9.8 m/s <sup>2</sup>
Impact resistance	EN 61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms
Standards	CE/UKCA marking, UL (CSA)
Weight	150 g

**EtherNet/IP Communication Specifications (EXW1-BENAC1)**

Item	Specifications
Protocol	EtherNet/IP™ (Conformance version: Composite 19.1)
Communication cable	Standard Ethernet cable (CAT5 or higher, 100BASE-TX)
Communication speed	10/100 Mbps
Communication method	Full duplex/Half duplex
Configuration file	EDS file
Occupation area (Number of inputs/outputs)	Max. 11552 inputs/11552 outputs (1444 bytes)
IP address setting range	Manual, Through DHCP server: Optional address
Device information	Vendor ID: 7 (SMC Corporation) Device type: 12 (Communication Adapter) Product code: 266
QuickConnect™ function	Supported
Web server	Supported
OPC UA	Supported

**General Specifications**

Item	Specifications
Enclosure	IP67
Ambient temperature	Operating: $-10$ to $50^{\circ}\text{C}$ Storage/Shipping: $-20$ to $60^{\circ}\text{C}$
Ambient humidity	35 to 85%RH (No condensation)
Vibration resistance	EN61131-2 compliant $5 \leq f < 8.4 \text{ Hz}$ 3.5 mm $8.4 \leq f < 150 \text{ Hz}$ 9.8 m/s <sup>2</sup>
Impact resistance	EN61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms
Standards	CE/UKCA marking, UL (CSA)
Weight	160 g

# EXW1 Series

## Specifications: Compact Wireless Base

### Compact Wireless Base Specifications

#### PROFINET Communication Specifications (EXW1-BPNAC1)

Item	Specifications
Protocol	PROFINET IO (Conformance Class B)
Communication speed	100 Mbps
Configuration file	GSDML file
Occupation area (Number of inputs/outputs)	Max. 10464 inputs/10464 outputs (1308 bytes)
FSU (Fast start up)	Supported
MRP (Media Redundancy Protocol)	Supported
System redundancy S.2	Supported
Web server	Supported
OPC UA	Supported

### General Specifications

Item	Specifications
Enclosure	IP67
Ambient temperature	Operating: -10 to 50 °C Storage/Shipping: -20 to 60 °C
Ambient humidity	35 to 85%RH (No condensation)
Vibration resistance	EN 61131-2 compliant $5 \leq f < 8.4 \text{ Hz}$ 3.5 mm $8.4 \leq f < 150 \text{ Hz}$ 9.8 m/s <sup>2</sup>
Impact resistance	EN 61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms
Standards	CE/UKCA marking, UL (CSA)
Weight	160 g

#### DeviceNet Communication Specifications (EXW1-BDNAC)

Item	Specifications
Protocol	DeviceNet® Volume 1 (Edition 2.1) Volume 3 (Edition 1.1)
Device type	Communication adapter
Communication speed	125/250/500 kbps
Configuration file	EDS file
Occupation area (Number of inputs/outputs)	Max. 4096 inputs/4096 outputs (512 bytes)
Applicable messages	Duplicate MAC ID Check Message Group 2 Only Unconnected Explicit Message Explicit Message (Group 2) Poll I/O Message (Predefined M/S Connection set)

### Electrical Specifications

Item	Specifications
V+ (US1) power supply voltage range	DeviceNet® specification compliant (11 to 25 VDC)
Internal current consumption	100 mA or less

### General Specifications

Item	Specifications
Enclosure	IP67
Ambient temperature	Operating: -10 to 50°C Storage/Shipping: -20 to 60°C
Ambient humidity	35 to 85%RH (No condensation)
Vibration resistance	EN 61131-2 compliant $5 \leq f < 8.4 \text{ Hz}$ 3.5 mm $8.4 \leq f < 150 \text{ Hz}$ 9.8 m/s <sup>2</sup>
Impact resistance	EN 61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms
Standards	CE/UKCA marking, UL (CSA)
Weight	150 g

## Specifications: Compact Wireless Base

### Compact Wireless Base Specifications

#### CC-Link Communication Specifications (EXW1-BMJA□)

Item	Specifications
Protocol	CC-Link (Ver. 1.10, Ver. 2.00)
Station type	Remote device station
Device type	Wireless equipment (Code 0x4B)
Station number	1 to 64
Communication speed	156/625 kbps 2.5/5/10 Mbps
Configuration file	CSP+ file*1
Occupation area (Number of inputs/outputs)	Max. (896 inputs/896 outputs)
Max. number of occupied stations	4 stations
Supported functions	Cyclic transmission Extended cyclic transmission (Only when Ver. 2.00 is specified) Longer cable between stations

\*1 The configuration file can be downloaded from the SMC website: <https://www.smcworld.com>

### Electrical Specifications

Item	Specifications
US1 (for control) power supply voltage range	24 VDC ±10%
Internal current consumption	100 mA or less

### General Specifications

Item	Specifications
Enclosure	IP67
Ambient temperature	Operating: -10 to 50°C Storage/Shipping: -20 to 60°C
Ambient humidity	35 to 85%RH (No condensation)
Vibration resistance	EN 61131-2 compliant 5 ≤ f < 8.4 Hz 3.5 mm 8.4 ≤ f < 150 Hz 9.8 m/s <sup>2</sup>
Impact resistance	EN 61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms
Standards	CE/UKCA marking
Weight	150 g (Body), 100 g (External antenna set)

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions

# EXW1 Series

## Specifications: Compact Wireless Remote (EXW1-RD□□E□) Digital Input/Output/e-con

### Communication Specifications (Common)

Item	Specifications
Protocol	SMC original protocol (SMC encryption)
Between compact EXW1 bases	V.2.0 or V.1.0 (Selectable)
Between modular EX600-W bases	V.1.0
Radio wave type (spread)	Frequency Hopping Spread Spectrum (FHSS)
Frequency	2.4 GHz (2403 to 2481 MHz)
Number of frequency channels	5 to 79 ch or 15 to 79 ch (Refer to page 2.)
Frequency channel selection	Applicable (Refer to page 2.)
Channel bandwidth	1.0 MHz
Communication speed	V.2.0 1 Mbps V.1.0 250 kbps
Communication distance	Approx. 100 m (Depends on the operating environment)
Countries in which Radio Law certified	Refer to page 69 for the latest information regarding in which countries the product is certified.

### Electrical Specifications (Input/Output Type)

Item	Specifications
	EXW1-RDMPE3□□ EXW1-RDMNE3□□
US1 (for control/input) power supply voltage range	24 VDC $\pm 10\%$
US2 (for output) power supply voltage range	24 VDC $\pm 10\%$
Internal current consumption	100 mA or less
Isolation	Yes (between US1 and US2)
Number of points	8 points (2 points/connector)
Type	PNP (-COM) NPN (+COM)
Max. sensor supply current	0.3 A/connector, 1 A/unit
ON current	Typ. 5 mA
OFF current	2 mA or less
ON voltage	11 V or more
OFF voltage	5 V or less
Over current protection/detection function	Applicable
Number of points	8 points (2 points/connector)
Type	PNP (-COM) NPN (+COM)
Max. output current	0.3 A/point, 2 A/unit
Over current protection/detection function	Applicable

### Electrical Specifications (Input Type)

Item	Specifications
	EXW1-RDXPE4□□ EXW1-RDXNE4□□
US1 (for control/input) power supply voltage range	24 VDC $\pm 10\%$
Internal current consumption	100 mA or less
Number of points	16 points (2 points/connector)
Type	PNP (-COM) NPN (+COM)
Max. sensor supply current	0.3 A/connector, 2 A/unit
ON current	Typ. 5 mA
OFF current	2 mA or less
ON voltage	11 V or more
OFF voltage	5 V or less
Over current protection/detection function	Applicable

### Electrical Specifications (Output Type)

Item	Specifications
	EXW1-RDYPE4□□ EXW1-RDYNE4□□
US1 (for control/input) power supply voltage range	24 VDC $\pm 10\%$
US2 (for output) power supply voltage range	24 VDC $\pm 10\%$
Internal current consumption	100 mA or less
Isolation	Yes (between US1 and US2)
Number of points	16 points (2 points/connector)
Type	PNP (-COM) NPN (+COM)
Max. output current	0.3 A/point, 2 A/unit
Over current protection/detection function	Applicable

### General Specifications (Common)

Item	Specifications
Connector type	e-CON (4-pin, Socket)
Enclosure	IP20
Ambient temperature	Operating: $-10$ to $50^{\circ}\text{C}$ Storage/Shipping: $-20$ to $60^{\circ}\text{C}$
Ambient humidity	35 to 85%RH (No condensation)
Standards	CE/UKCA marking
Vibration resistance	EN 61131-2 compliant $5 \leq f < 8.4$ Hz 3.5 mm $8.4 \leq f < 150$ Hz 9.8 m/s <sup>2</sup>
Impact resistance	EN 61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms
Weight	130 g (Body), 100 g (External antenna set)



**Specifications: Compact Wireless Remote (EXW1-RD□□G□) Digital Input/Output/M12 Grommet****Communication Specifications (Common)**

Item	Specifications
Protocol	SMC original protocol (SMC encryption)
Between compact EXW1 bases	V.2.0 or V.1.0 (Selectable)
Between modular EX600-W bases	V.1.0
Radio wave type (spread)	Frequency Hopping Spread Spectrum (FHSS)
Frequency	2.4 GHz (2403 to 2481 MHz)
Number of frequency channels	5 to 79 ch or 15 to 79 ch (Refer to page 2.)
Frequency channel selection	Applicable (Refer to page 2.)
Channel bandwidth	1.0 MHz
Communication speed	V.2.0 1 Mbps V.1.0 250 kbps
Communication distance	Approx. 100 m (Depends on the operating environment)
Countries in which Radio Law certified	Refer to page 69 for the latest information regarding in which countries the product is certified.

**Electrical Specifications (Input/Output Type)**

Item	Specifications
Model	EXW1-RDMPG3C□ EXW1-RDMNG3C□
US1 power supply voltage range (for control/input)	24 VDC ±10%
US2 power supply voltage range (for driving)	24 VDC ±10%
Internal current consumption	100 mA or less
Isolation	Yes (between US1 and US2)
Number of points	2 points/connector, 8 points/unit
Type	PNP NPN
Max. sensor supply current	0.5 A/connector, 2 A/unit*1
ON current	Typ.3 mA
ON voltage	11 V or more
OFF voltage	5 V or less
Protection	Short-circuit protection
Number of points	2 points/connector, 8 points/unit
Type	PNP NPN
Max. output current	0.5 A/point, 2 A/unit*1
Protection	Short-circuit protection

**Electrical Specifications (Input Type)**

Item	Specifications
Model	EXW1-RDXPG4C□ EXW1-RDXNG4C□
US1 power supply voltage range (for control/input)	24 VDC ±10%
Internal current consumption	100 mA or less
Number of points	2 points/connector, 16 points/unit
Type	PNP NPN
Max. sensor supply current	0.5 A/connector, 2 A/unit*1
ON current	Typ.3 mA
ON voltage	11 V or more
OFF voltage	5 V or less
Protection	Short-circuit protection

**Electrical Specifications (Output Type)**

Item	Specifications
Model	EXW1-RDYPG4C□ EXW1-RDMNG4C□
US1 power supply voltage range (for control/input)	24 VDC ±10%
US2 power supply voltage range (for driving)	24 VDC ±10%
Internal current consumption	100 mA or less
Isolation	Yes (between US1 and US2)
Number of points	2 points/connector, 16 points/unit
Type	PNP NPN
Max. output current	0.5 A/point, 2 A/unit*1
Protection	Short-circuit protection

**General Specifications (Common)**

Item	Specifications
Enclosure	IP67*2
Ambient temperature	Operating: -10 to 55°C Storage/Shipping: -20 to 60°C
Ambient humidity	35 to 85%RH (No condensation)
Standards	CE/UKCA marking
Vibration resistance	EN 61131-2 compliant 5 ≤ f < 8.4 Hz 3.5 mm 8.4 ≤ f < 150 Hz 9.8 m/s <sup>2</sup>
Impact resistance	EN 61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms
Weight	Min. 350 g (Bracket 1, Without wireless adapter) Max. 550 g (Bracket 2, With wireless adapter)

\*1 At an ambient operating temperature of 55°C, the maximum current is 1A.

\*2 Be sure to fit a seal cap on any unused connectors. (For details ⇒ p. 54)

# EXW1 Series

## Specifications: Compact Wireless Remote (EXW1-RD□□M□) Valve Manifold

### Electrical Specifications

Item	Specifications
US1 (for control) power supply voltage range	24 VDC $\pm 10\%$
US2 (for output) power supply voltage range	24 VDC $\pm 10\%$
US1 (for control) current consumption	70 mA or less
US2 (for output) max. supply current	2 A
Valve output connected load	Solenoid valve with surge voltage suppressor of 24 VDC and 1.5 W or less (manufactured by SMC)

### General Specifications

Item	Specifications
Enclosure	IP67
Ambient temperature	Operating: $-10$ to $55^{\circ}\text{C}$ Storage/Shipping: $-20$ to $60^{\circ}\text{C}$
Ambient humidity	35 to 85%RH (No condensation)
Standards	CE/UKCA marking
Vibration resistance	EN 61131-2 compliant $5 \leq f < 8.4 \text{ Hz}$ 3.5 mm $8.4 \leq f < 150 \text{ Hz}$ 9.8m/s <sup>2</sup> (Excludes the valve)
Impact resistance	EN 61131-2 compliant, 147 m/s <sup>2</sup> , 11 ms (Excludes the valve)
Weight	200 g (With wireless adapter), 140 g (Without wireless adapter)
Accessory (Mounting screw)	2 pcs.

## Specifications: Compact Wireless Remote (EXW1-RL□) IO-Link

### Communication Specifications (Common)

Item	Specifications
Protocol	SMC original protocol (SMC encryption)
Between compact EXW1 bases	V.2.0 or V.1.0 (Selectable)
Between modular EX600-W bases	V.1.0
Radio wave type (spread)	Frequency Hopping Spread Spectrum (FHSS)
Frequency	2.4 GHz (2403 to 2481 MHz)
Number of frequency channels	5 to 79 ch or 15 to 79 ch (Refer to page 2.)
Frequency channel selection	Applicable (Refer to page 2.)
Channel bandwidth	1.0 MHz
Communication speed	V.2.0 1 Mbps V.1.0 250 kbps
Communication distance	Approx. 100 m (Depends on the operating environment)
Countries in which Radio Law certified	Refer to page 69 for the latest information regarding in which countries the product is certified.

### IO-Link Specifications

Item	Specifications
Model	EXW1-RLAPA8C EXW1-RLBPA7C
IO-Link port class	Class A Class B
Communication speed	COM1 (4.8 kbps) COM2 (38.4 kbps) COM3 (230.4 kbps) Changes automatically according to the connected device
IO-Link version	Ver.1.1
Number of IO-Link ports	Max. 4 (32 bytes/IO-Link port) Max. 2 (32 bytes/IO-Link port)

### Electrical Specifications

Item	Specifications
Model	EXW1-RLAPA8C EXW1-RLBPA7C
US1 power supply voltage range (for control)	24 VDC $\pm 10\%$
US2 power supply voltage range (for driving)	24 VDC $\pm 10\%$
Current consumption	100 mA or less
Device power supply (L+)	0.5 A/Connector (1 A/Unit)
External power supply (P24)	0.3 A/Connector (0.6 A/Unit) 1.6 A/Connector (2 A/Unit) (Supplied from the power supply for US2)
Input	
Pin no.	2 4 4
Input type	PNP
Protection	Short-circuit protection
Rated input current	Typ. 2.5 mA Typ. 5.8 mA Typ. 5.8 mA
ON voltage	13 V or more
OFF voltage	8 V or less
Output	
Pin no.	2, 4 4
Output type	PNP
Max. load current (C/Q line)	0.25 A/1 output (Supplied from the power supply for US1)
Protection	Short-circuit protection

### General

Item	Specifications
Enclosure	IP67
Ambient temperature	Operating: $-10^{\circ}\text{C}$ to $+50^{\circ}\text{C}$ Storage/Shipping: $-20^{\circ}\text{C}$ to $+60^{\circ}\text{C}$
Vibration resistance (Conforming to EN61131-2)	$5 \leq f < 8.4 \text{ Hz}$ 3.5 mm $8.4 \leq f \leq 150 \text{ Hz}$ 9.8 m/s <sup>2</sup>
Impact (Conforming to EN61131-2)	147 m/s <sup>2</sup> , 11 ms
Mounting	M4, 2 locations
Ambient humidity	35% to 85% RH (No condensation)
Standards	CE/UKCA marking, UL (CSA)
Weight	150 g

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions

# EXW1 Series

## Specifications: Compact Wireless Remote (EXW1-RAX□) Analog Input

### Electrical Specifications

Item	Specifications	
Input type	Voltage input	Current input
Power supply voltage range	24 VDC±10%	
Current consumption	50 mA or less	
Input connector	M12 connector (5-pin) socket*1	
Number of inputs	4 inputs (2 inputs/Connector)	
Max. sensor supply current	0.5 A/Connector (1 A/Unit)	
Protection	Short-circuit protection	
Input signal range	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA
Resolution	16 bits	
Max. rated input signal	+15 V	+40 mA
Input impedance	220 kΩ	240 Ω
Linearity (25°C)	±0.05% F.S. or less	
Repeatability (25°C)	±0.15% F.S. or less	
Accuracy (25°C)	±0.5% F.S. or less	±0.6% F.S. or less

\*1 An M12 connector (4-pin) can be used as well.

### General Specifications

Item	Specifications
Enclosure	IP67*2
Ambient temperature (Operating temperature)	-10 to +55°C
Ambient temperature (Storage temperature)	-20 to +60°C
Ambient humidity	35 to 85%RH (No condensation)
Withstand voltage	1000 VAC 1.0 min. External terminals (including the FE terminal) and enclosure screws
Insulation resistance	10 MΩ or more 500 VDC External terminals (including the FE terminal) and enclosure screws
Vibration resistance	Conforms to EN 61131-2 5 ≤ f < 8.4 Hz 3.5 mm 8.4 ≤ f < 150 Hz 9.8 m/s <sup>2</sup>
Impact resistance	Conforms to EN 61131-2, 147 m/s <sup>2</sup> , 11 ms
Mounting	Through hole for M4 screw (2 pcs.)
Standards	CE/UKCA marking, UL/(CSA)
Weight	150 g (Body)


\*2 Be sure to fit a seal cap on any unused connectors. (For details ⇒ p. 54)




## Dimensions/Parts Description

## Compact Wireless Base (EtherCAT, EtherNet/IP™, PROFINET)


EXW1-BECAC  
EXW1-BENAC1  
EXW1-BPNAC1

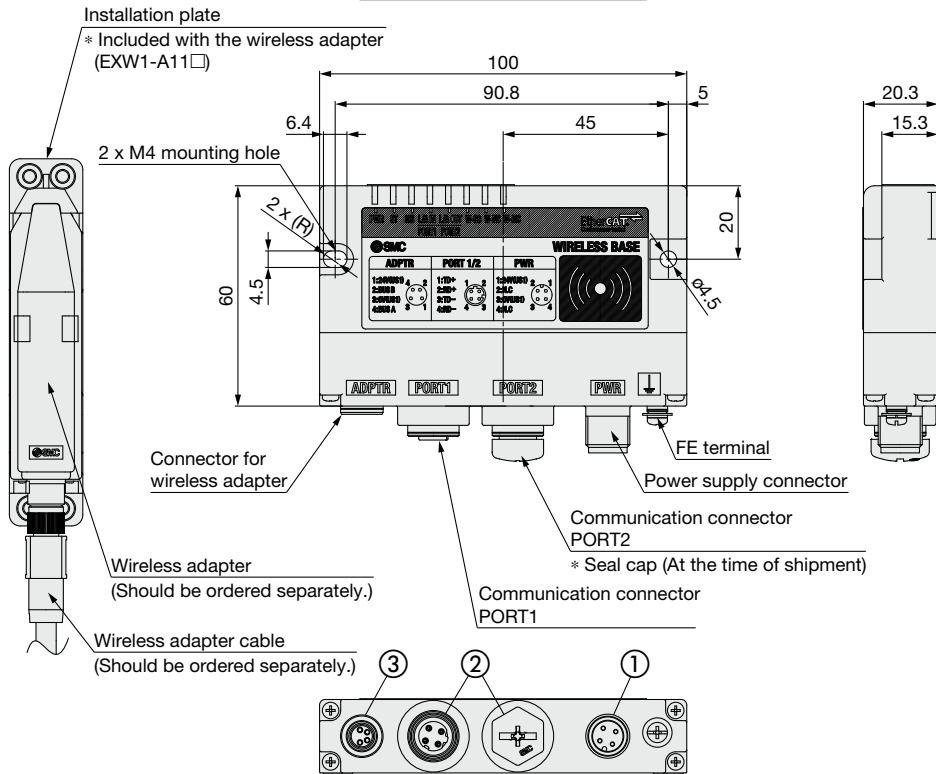


### ① Power supply connector

No.	Signal	M12, 4-pin, plug
		A-coded
<b>1</b>	24 V	
<b>2</b>	N.C.	
<b>3</b>	0 V	
<b>4</b>	N.C.	


## ② EtherCAT, PROFINET communication connector

No.	Signal	M12, 4-pin, D-coded, socket
1	TD+	
2	RD-	
3	TD+	
4	RD-	

## ② EtherNet/IP communication connector

No.	Signal	M12, 4-pin, D-coded, socket
1	TX+	
2	RX-	
3	TX+	
4	RX-	

### ③ Connector for wireless adapter

No.	Signal	M8, 4-pin, socket
1	24 V (US1)	
2	Internal BUS B	
3	0 V (US1)	
4	Internal BUS A	

\* The compact wireless base (EtherCAT<sup>®</sup>, EtherNet/IP<sup>™</sup>, PROFINET, DeviceNet<sup>®</sup>) is a wireless system base used in combination with a wireless adapter that has wireless communication capabilities.

When using this product, it is necessary to order the wireless adapter and wireless adapter cable separately. (For details ⇒ p. 14)


\* Use the EXW1-NT1 for pairing with the wireless remote.



## Dimensions/Parts Description

### Wireless Adapter

#### EXW1-A11□

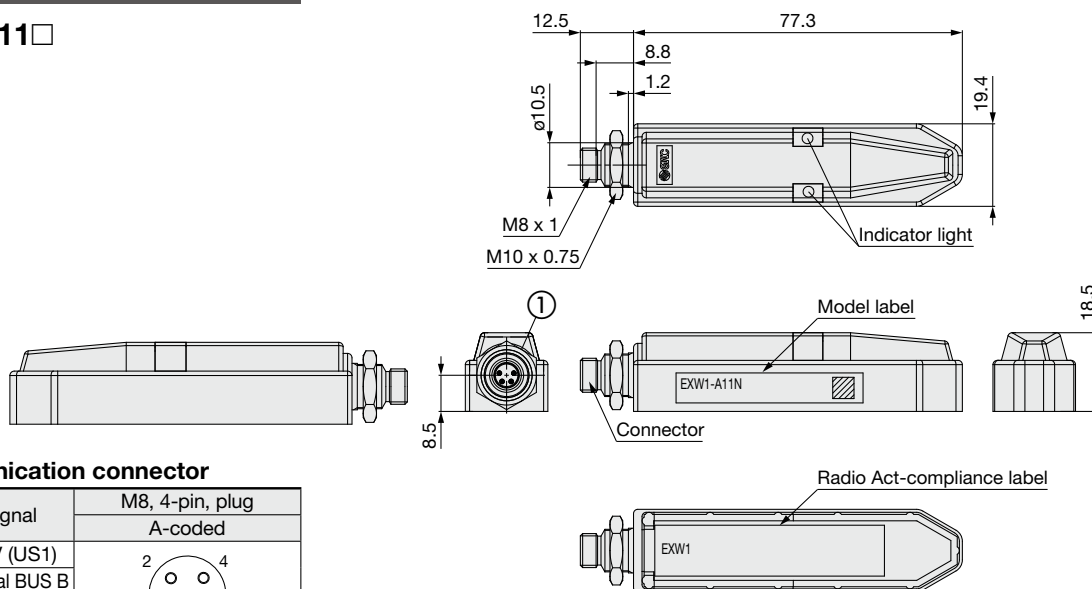


#### ① Communication connector

No.	Signal	M8, 4-pin, plug A-coded
1	24 V (US1)	
2	Internal BUS B	
3	0 V (US1)	
4	Internal BUS A	


### Installation Plate

#### EXW1-AB4 (Option for wireless adapter)

\* Included with the EXW1-A11□

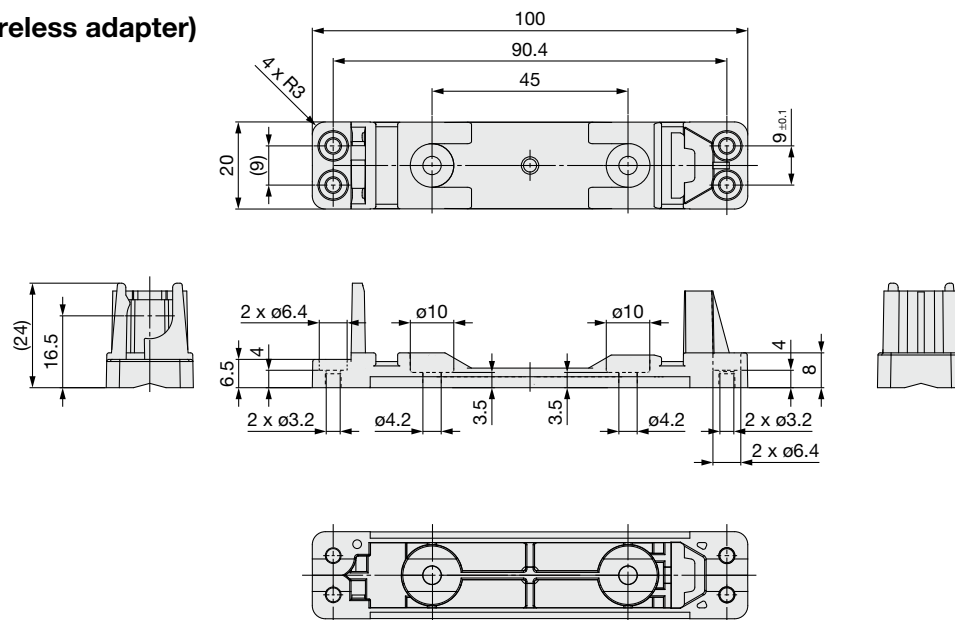

#### ■ Dimensions when the wireless adapter and installation plate are combined

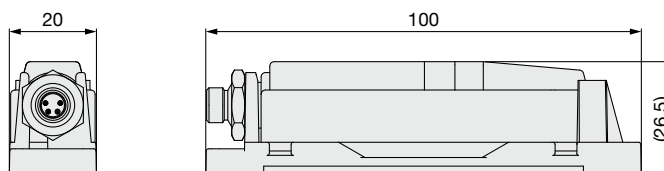

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table


Specific Product Precautions

# EXW1 Series

## Dimensions/Parts Description


### Wireless Adapter Cable

#### EXW1-AC1-X1

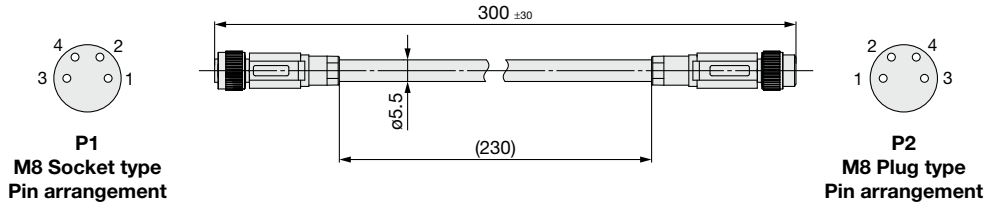


#### EXW1-AC001-SAPU

Mounting diagram

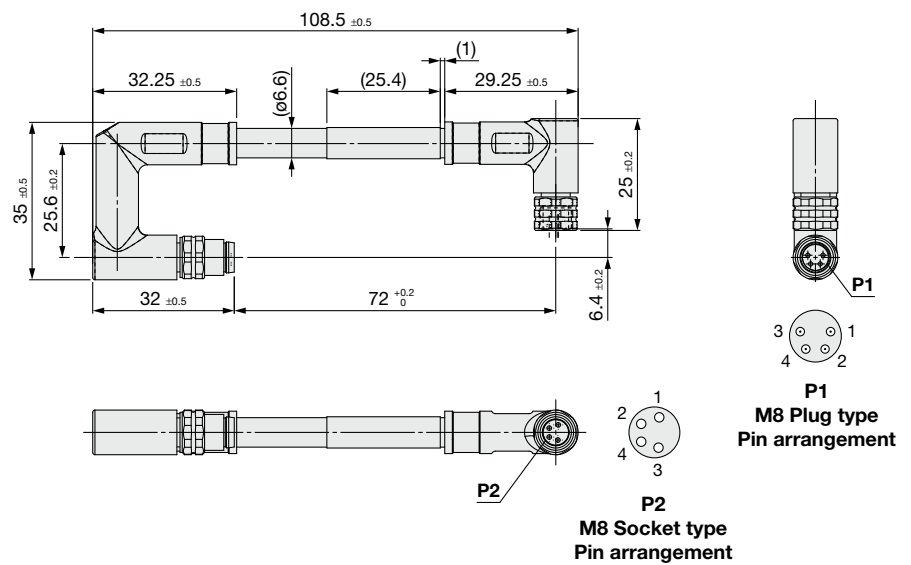

#### EXW1-AC030-SSPS


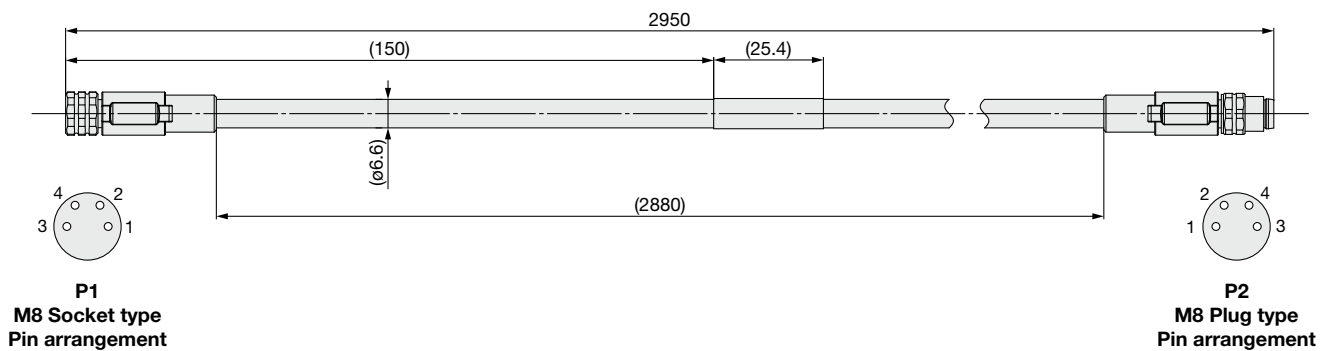





## Dimensions/Parts Description

### Compact Wireless Base (CC-Link)


EXW1-BMJA□

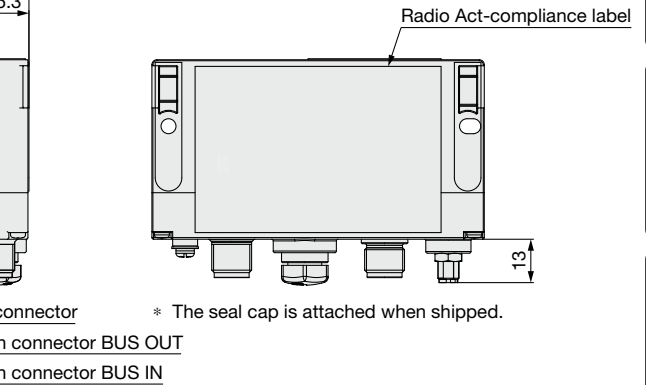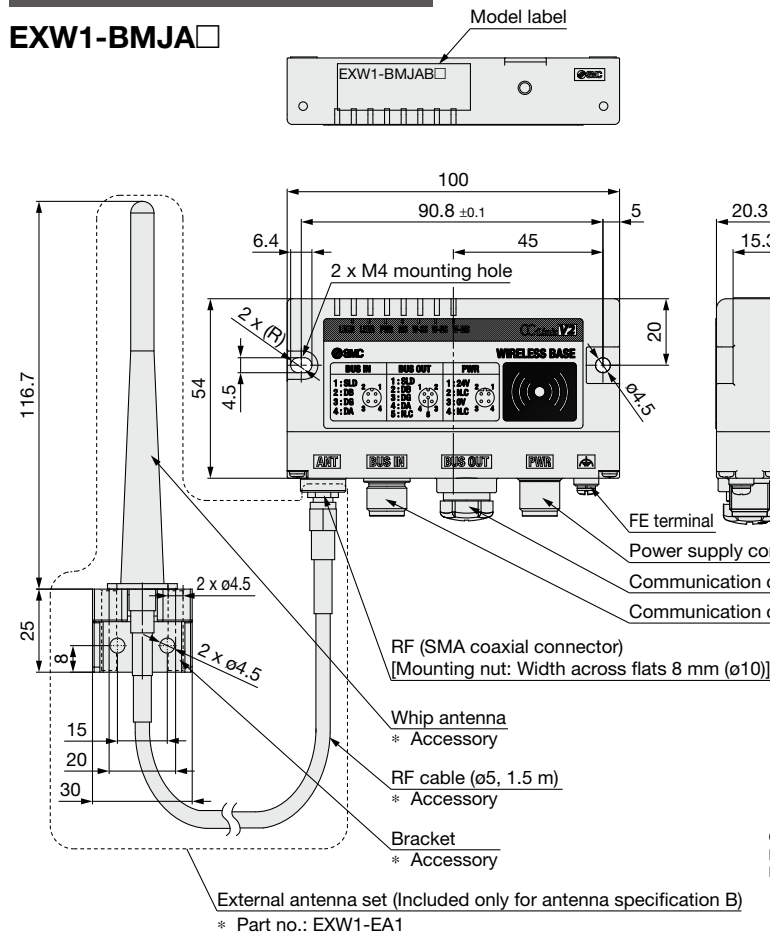


#### Internal circuit

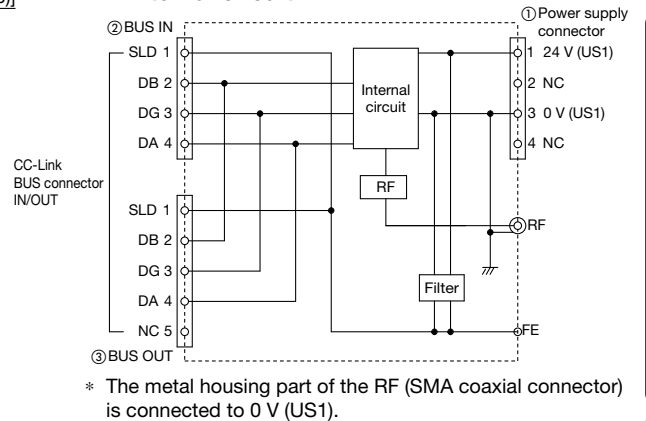


#### ① Power supply connector

No.	Signal	M12, 4-pin, plug B-coded
1	24 V (US1)	
2	N.C.	
3	0 V (US1)	
4	N.C.	

#### ②③ CC-Link BUS connector

No.	Signal	② BUS IN M12, 4-pin, plug A-coded
1	SLD	
2	DB	
3	DG	
4	DA	

No.	Signal	③ BUS OUT M12, 5-pin, socket A-coded
1	SLD	
2	DB	
3	DG	
4	DA	
5	N.C.	

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions


# EXW1 Series

## Dimensions/Parts Description

### Compact Wireless Remote (Digital Input/Output/e-con)

EXW1-RDM□□□□

Model label




Internal antenna




External antenna



External antenna set

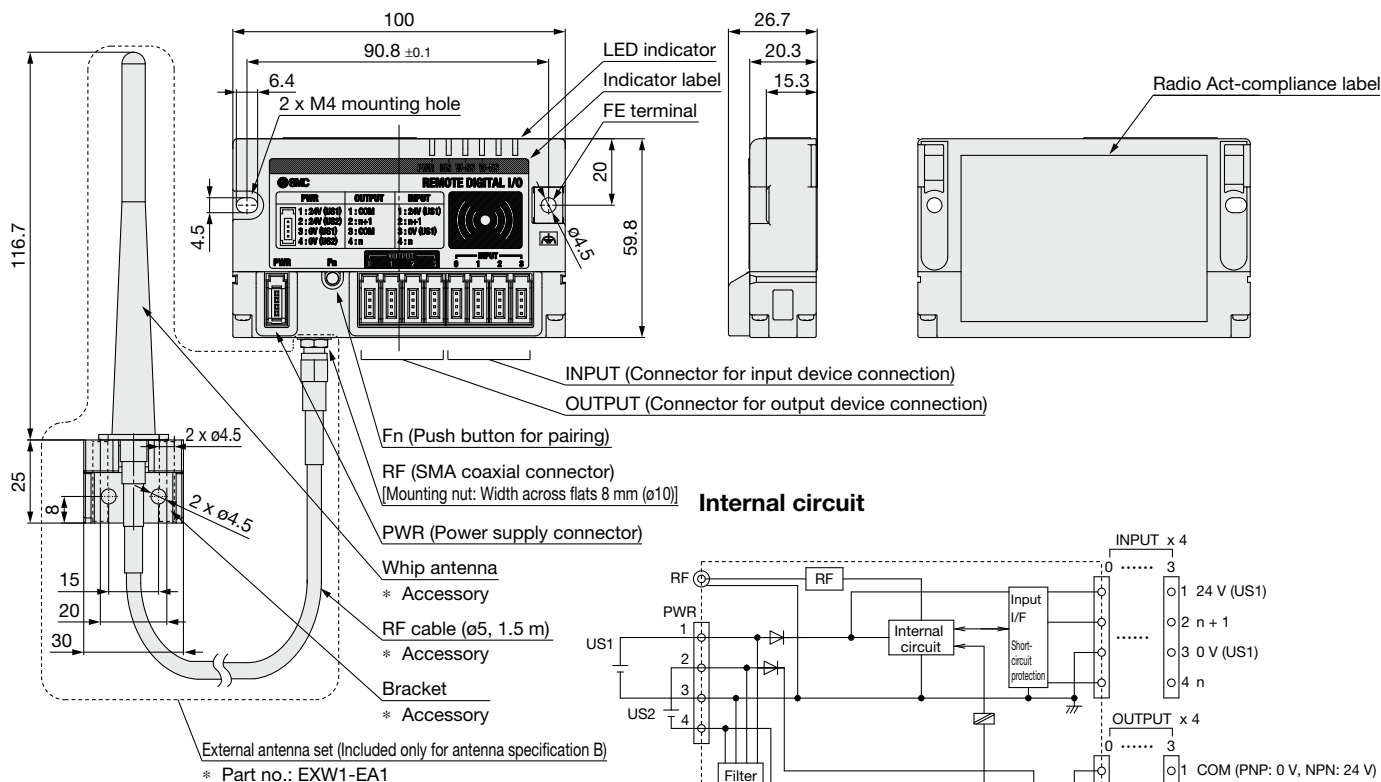

#### Internal circuit

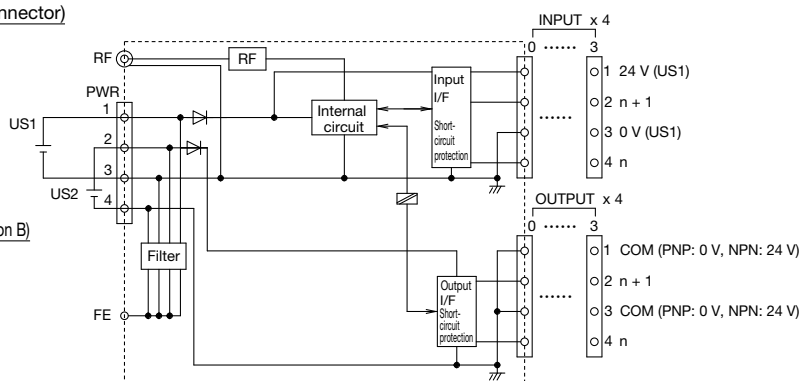

\* The metal housing part of the RF (SMA coaxial connector) is connected to 0 V (US1).

#### PWR (Power supply connector)

Pin no.	Description
① 1	24 V (US1)
② 2	24 V (US2)
③ 3	0 V (US1)
④ 4	0 V (US2)

#### INPUT (Connector for input device connection)

Pin no.	Description
① 1	24 V (US1)
② 2	n + 1
③ 3	0 V (US1)
④ 4	n

#### OUTPUT (Connector for output device connection, EXW1-RDMPE3□□)\*1

Pin no.	Description
① 1	-COM (US2_0 V)
② 2	n + 1
③ 3	-COM (US2_0 V)
④ 4	n

#### OUTPUT (Connector for output device connection, EXW1-RDMNE3□□)\*1

Pin no.	Description
① 1	+COM (US2_24 V)
② 2	n + 1
③ 3	+COM (US2_24 V)
④ 4	n


\*1 The specifications of pin numbers ① and ③ differ depending on the part number system.

## Dimensions/Parts Description

### Compact Wireless Remote (Digital Input/e-con)

EXW1-RDX□□□□

Model label




Internal antenna




External antenna



External antenna set

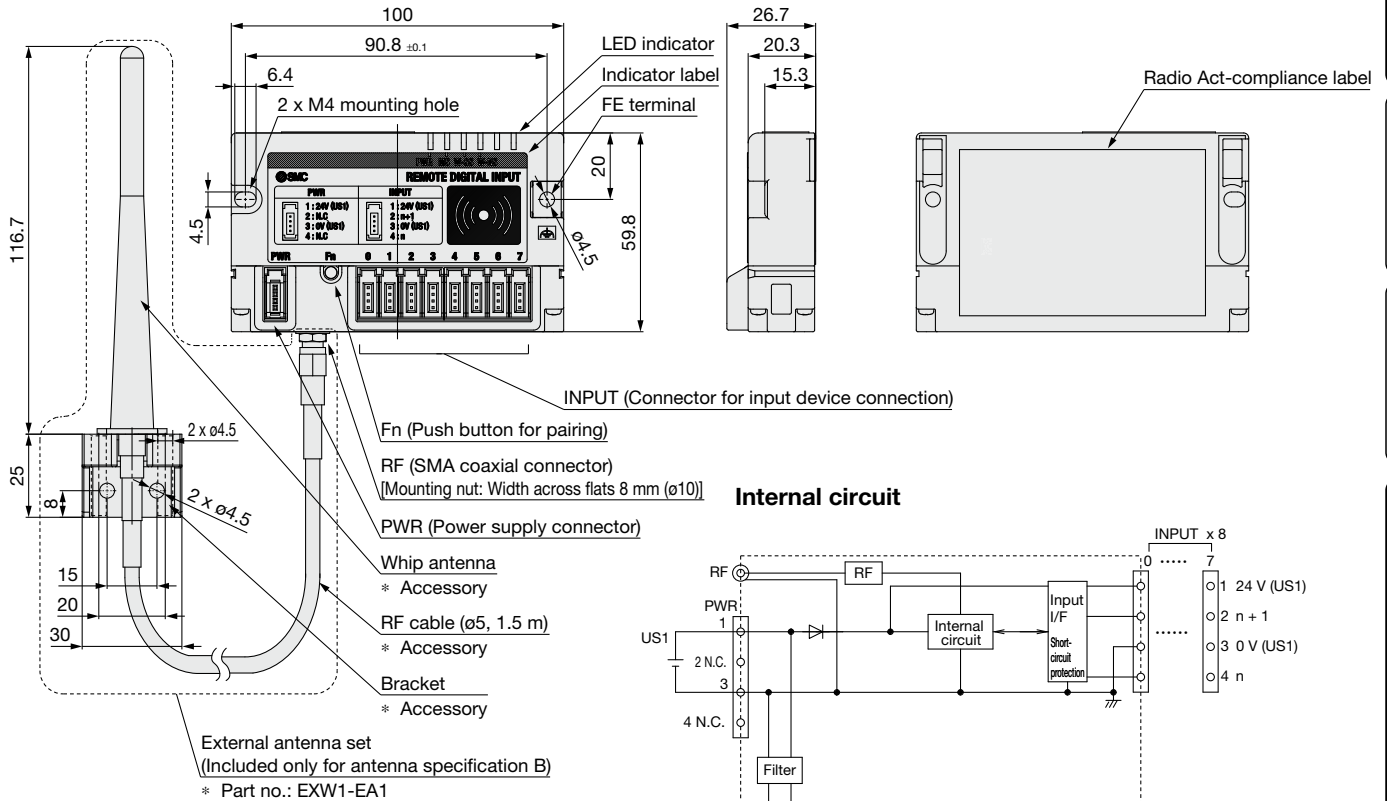

#### Internal circuit

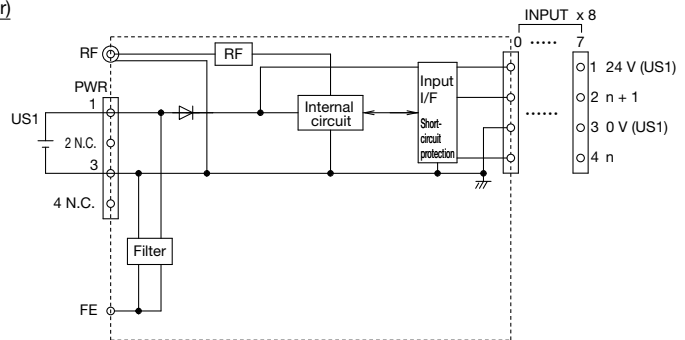

\* The metal housing part of the RF (SMA coaxial connector) is connected to 0 V (US1).

#### PWR (Power supply connector)

Pin no.	Description
1	24 V (US1)
2	N.C.
3	0 V (US1)
4	N.C.

#### INPUT (Connector for input device connection)

Pin no.	Description
1	24 V (US1)
2	n + 1
3	0 V (US1)
4	n

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table


Specific Product Precautions

## ***EXW1 Series***

### Dimensions/Parts Description

## Compact Wireless Remote (Digital Output/e-con)

**EXW1-RDY**□□□□

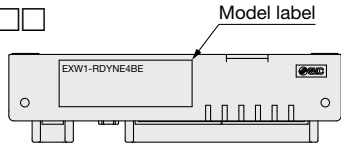


### Internal antenna



### External antenna



### External antenna set

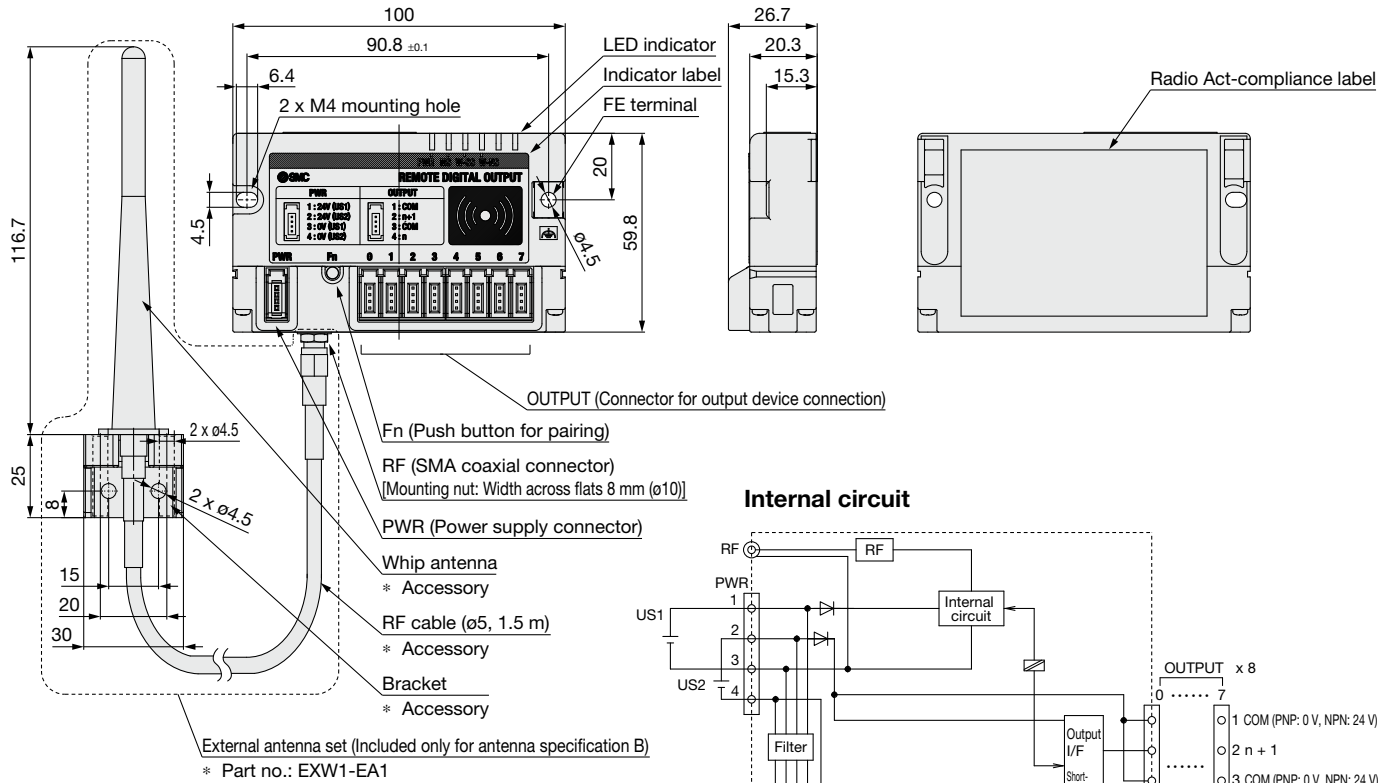


**PWR**

**(Power supply connector)**

	Pin no.	Description
	<b>1</b>	24 V (US1)
	<b>2</b>	24 V (US2)
	<b>3</b>	0 V (US1)
	<b>4</b>	0 V (US2)


## OUTPUT

(Connector for output device connection, EXW1-RDYPE4□□)


	Pin no.	Description
	<b>1</b>	-COM (US2_0 V)
	<b>2</b>	n + 1
	<b>3</b>	-COM (US2_0 V)
	<b>4</b>	n

## OUTPUT

**(Connector for output device connection, EXW1-RDYNE4□□)**

	Pin no.	Description
	<b>1</b>	+COM (US2_24 V)
	<b>2</b>	n + 1
	<b>3</b>	+COM (US2_24 V)
	<b>4</b>	n

### Internal circuit


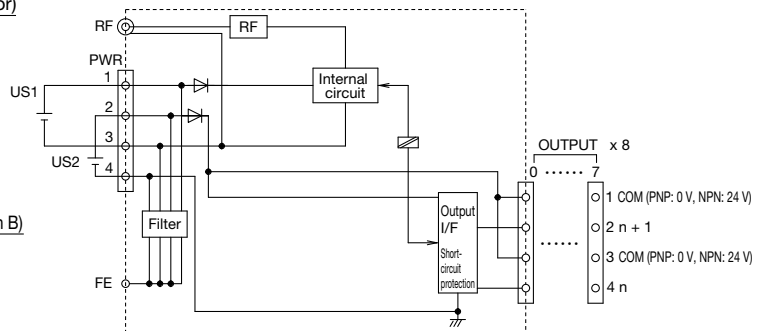


\* The metal housing part of the RF (SMA coaxial connector) is connected to 0 V (US1).

## Dimensions/Parts Description

### Compact Wireless Remote (Digital Input/Output/M12 Grommet)

EXW1-RDM□G3C□-□

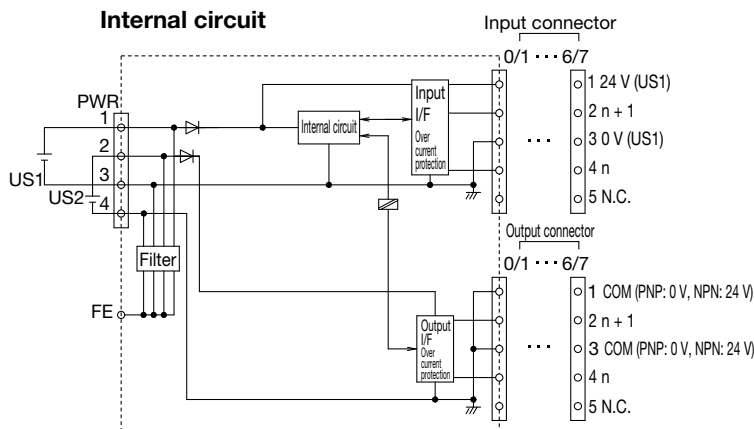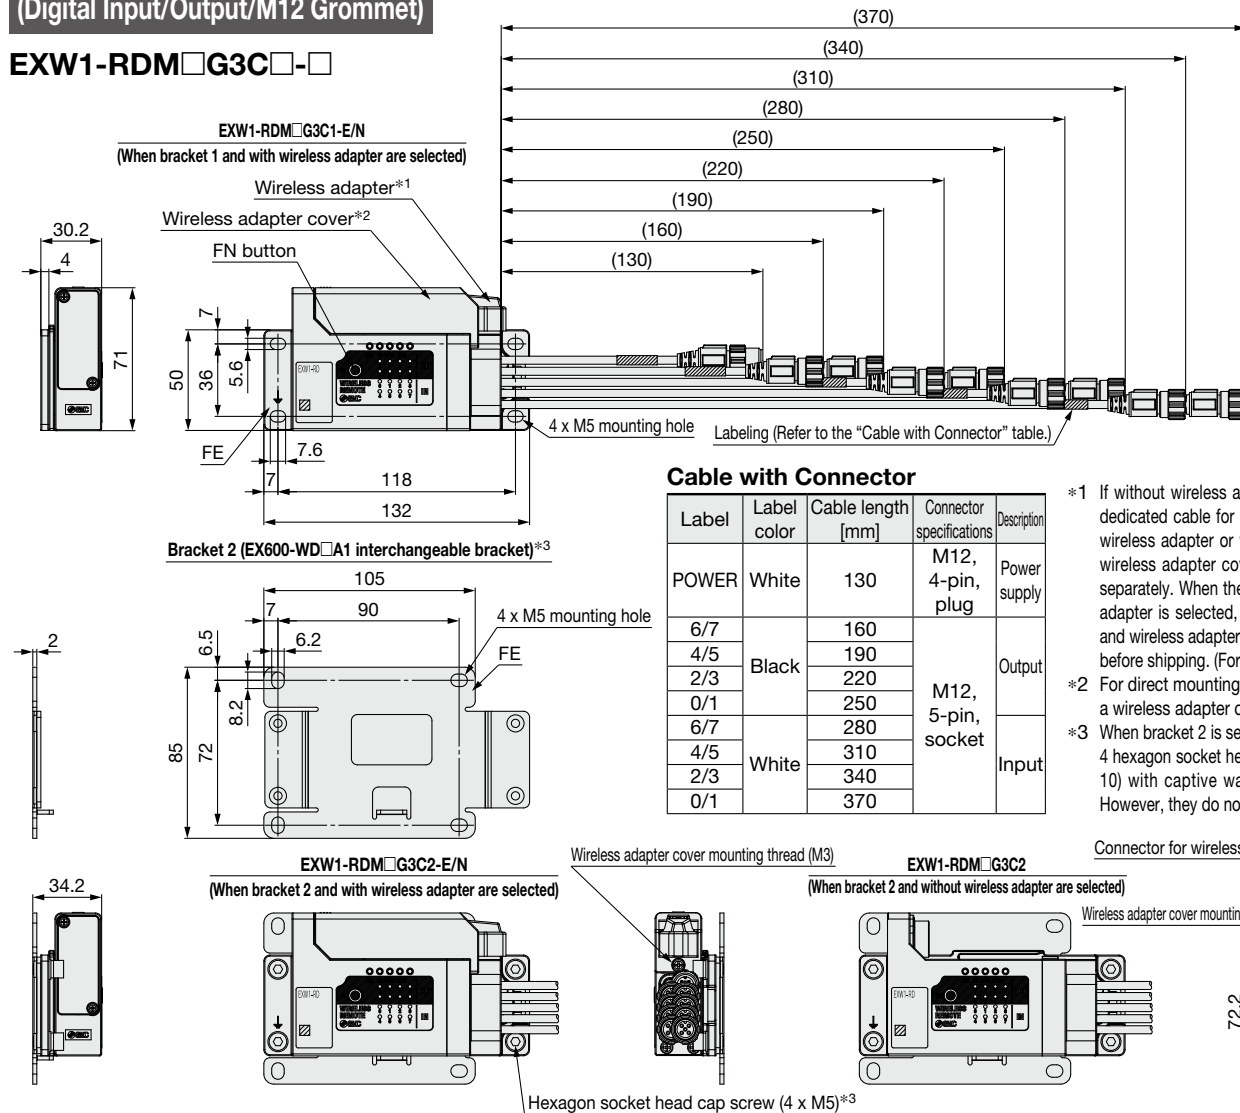

#### Connector for Wireless Adapter

Pin no.	Signal	Description	M8, 4-pin, socket
1	24 V (US1)	24 VDC (US1): Output*1	1
2	Internal BUS B	For wireless adapter communication	3
3	0 V (US1)	0 VDC (US1)	4
4	Internal BUS A	For wireless adapter communication	2

\*1 Do not input power.

#### Power Supply Connector (POWER)

Pin no.	Signal	Description	M12, 4-pin, plug A-coded
1	24 V (US1)	24 VDC (US1): Input*1	2
2	24 V (US2)	24 VDC (US2): Input*1	1
3	0 V (US1)	0 VDC (US1)	3
4	0 V (US2)	0 VDC (US2)	4

\*1 Input 24 VDC ±20%.

#### Input Connector (0/1 to 6/7)

Pin no.	Signal	Description	M12, 5-pin, socket A-coded
1	24 V (US1)	24 VDC (US1): Output*1	1
2	n+1	Digital input: n+1	2
3	0 V (US1)	0 VDC (US1)	5
4	n	Digital input: n	3
5	N.C.	N.C.	4

\*1 Do not input power.

#### Output Connector (0/1 to 6/7)

Pin no.	Signal	Description	M12, 5-pin, socket A-coded
1	COM	Common*2	1
2	n+1	Digital output: n+1*3	2
3	COM	Common*2	5
4	n	Digital output: n*3	3
5	N.C.	N.C.	4

\*2 0 VDC (US2) for PNP type and 24 VDC (US2) for NPN type.



\*3 24 VDC (US2) for PNP type and 0 VDC (US2) for NPN type are output.



### Dimensions/Parts Description


## Compact Wireless Remote (Digital Input/M12 Grommet)

**EXW1-RDX□G4C□-□**

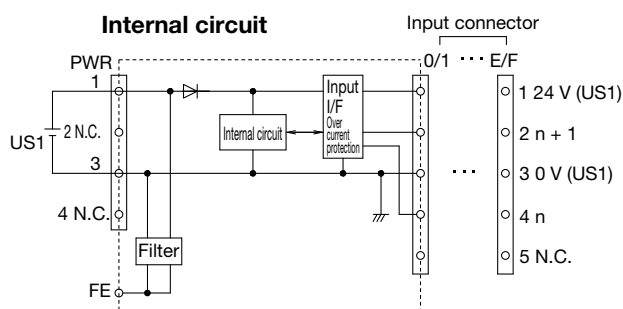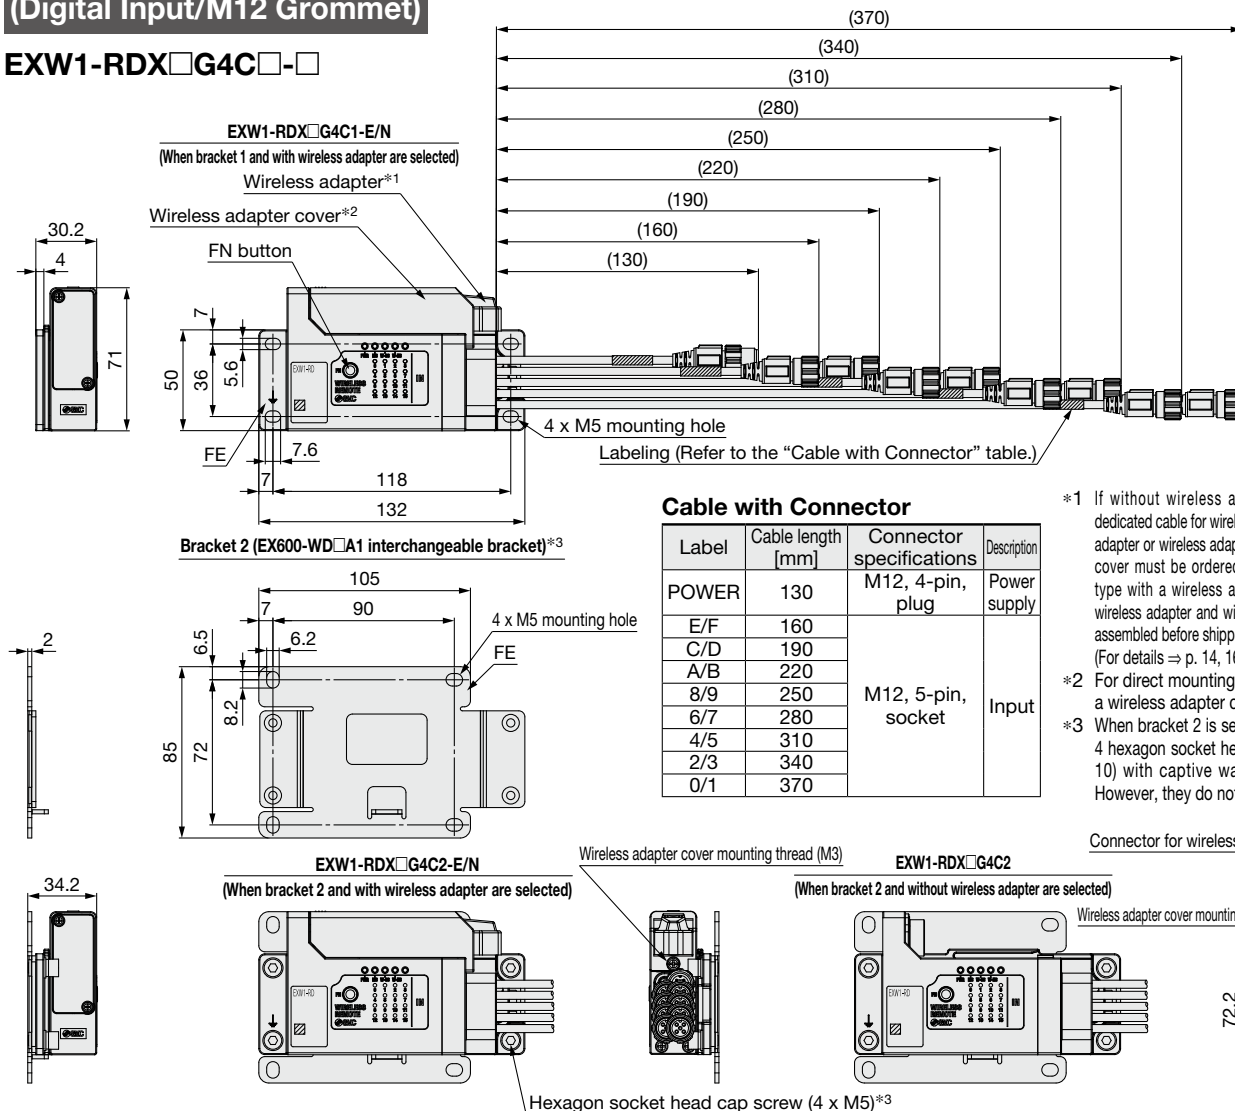

\* Bracket 1 and 2 are FE.

### Power Supply Connector (POWER)

Pin no.	Signal	Description	M12, 4-pin, plug A-coded
<b>1</b>	24 V (US1)	24V DC (US1): Input*1	
<b>2</b>	N.C.	N.C.	
<b>3</b>	0 V (US1)	0 VDC (US1)	
<b>4</b>	N.C.	N.C.	

\*1 Input 24 VDC  $\pm 10\%$ .

### Input Connector (0/1 to E/F)

Pin no.	Signal	Description	M12, 5-pin, socket A-coded
1	24V (US1)	24 VDC (US1): Output*2	
2	n + 1	Digital input: n + 1	
3	0 V (US1)	0 VDC (US1)	
4	n	Digital input: n	
5	N.C.	N.C.	

\*2 Do not input power.

### Connector for Wireless Adapter


Pin no.	Signal	Description	M8, 4-pin, socket
1	24 V (US1)	24 VDC (US1): Output* <sup>1</sup>	
2	Internal BUS B	For wireless adapter communication	
3	0 V (US1)	0 VDC (US1)	
4	Internal BUS A	For wireless adapter communication	

\*1 Do not input power.

## Dimensions/Parts Description

### Compact Wireless Remote (Digital Output/M12 Grommet)

EXW1-RDY□G4C□-□

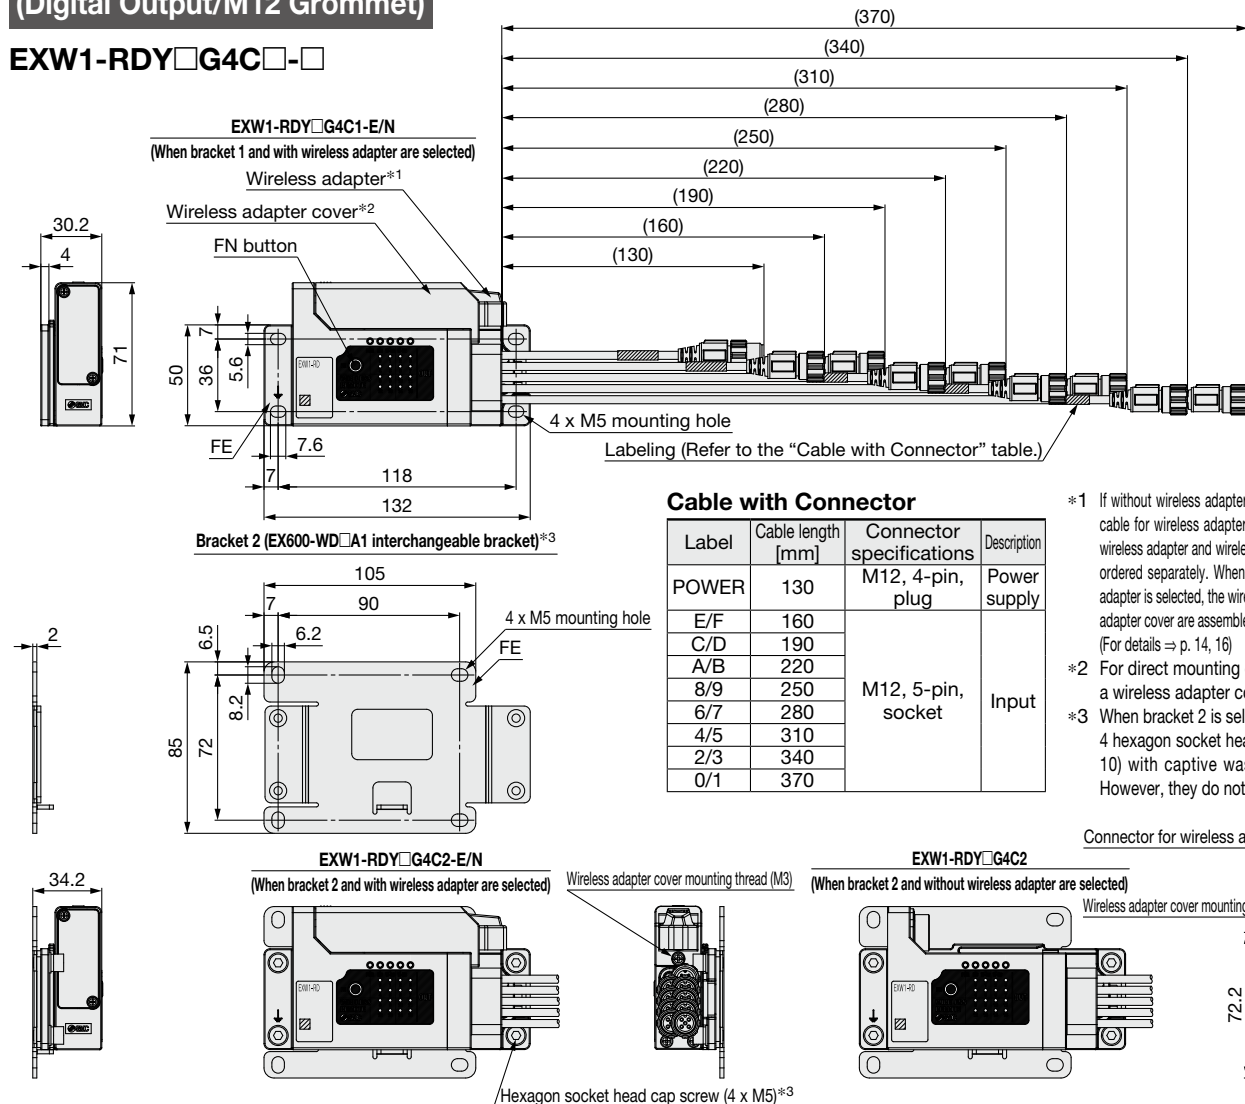

#### Cable with Connector

Label	Cable length [mm]	Connector specifications	Description
POWER	130	M12, 4-pin, plug	Power supply
E/F	160	M12, 5-pin, socket	Input
C/D	190		
A/B	220		
8/9	250		
6/7	280		
4/5	310		
2/3	340		
0/1	370		

\*<sup>1</sup> If without wireless adapter is selected, a dedicated cable for wireless adapter and wireless adapter or wireless adapter and wireless adapter cover must be ordered separately. When the type with a wireless adapter is selected, the wireless adapter and wireless adapter cover are assembled before shipping.  
(For details → p. 14, 16)

\*<sup>2</sup> For direct mounting of wireless adapter, a wireless adapter cover is required.

\*<sup>3</sup> When bracket 2 is selected, bracket 2 and 4 hexagon socket head cap screws (M5 x 10) with captive washers are included. However, they do not come assembled.

#### Power Supply Connector (POWER)

Pin no.	Signal	Description	M12, 4-pin, plug A-coded
1	24 V (US1)	24 VDC (US1): Input* <sup>1</sup>	
2	24 V (US2)	24 VDC (US2): Input* <sup>1</sup>	
3	0 V (US1)	0 VDC (US1)	
4	0 V (US2)	0 VDC (US2)	

\*<sup>1</sup> Input 24 VDC ±10%.

#### Output Connector (0/1 to E/F)

Pin no.	Signal	Description	M12, 5-pin, socket A-coded
1	COM	Common* <sup>2</sup>	
2	n + 1	Digital output: n + 1* <sup>3</sup>	
3	COM	Common* <sup>2</sup>	
4	n	Digital output: n* <sup>3</sup>	
5	N.C.	N.C.	

\*<sup>2</sup> 0 VDC (US2) for PNP type and 24 VDC (US2) for NPN type.


\*<sup>3</sup> 24 VDC (US2) for PNP type and 0 VDC (US2) for NPN type are output.

#### Connector for Wireless Adapter

Pin no.	Signal	Description	M8, 4-pin, socket
1	24 V (US1)	24 VDC (US1): Output* <sup>1</sup>	
2	Internal BUS B	For wireless adapter communication	
3	0 V (US1)	0 VDC (US1)	
4	Internal BUS A	For wireless adapter communication	

\*<sup>1</sup> Do not input power.

#### Internal circuit

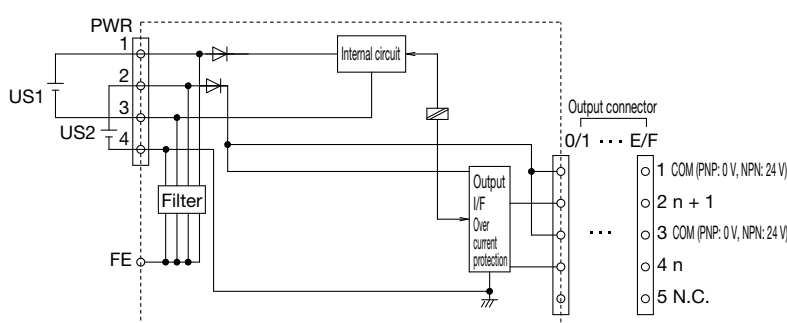

\* Bracket 1 and 2 are FE.

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions







## EXW1 Series


### Dimensions/Parts Description

## Compact Wireless Remote (Analog Input)

**EXW1-RAXZA2C**

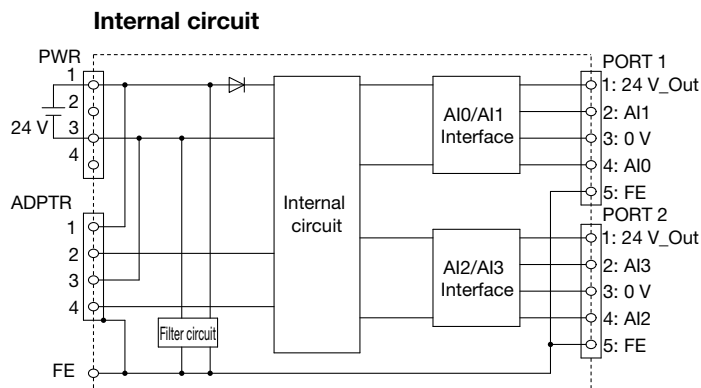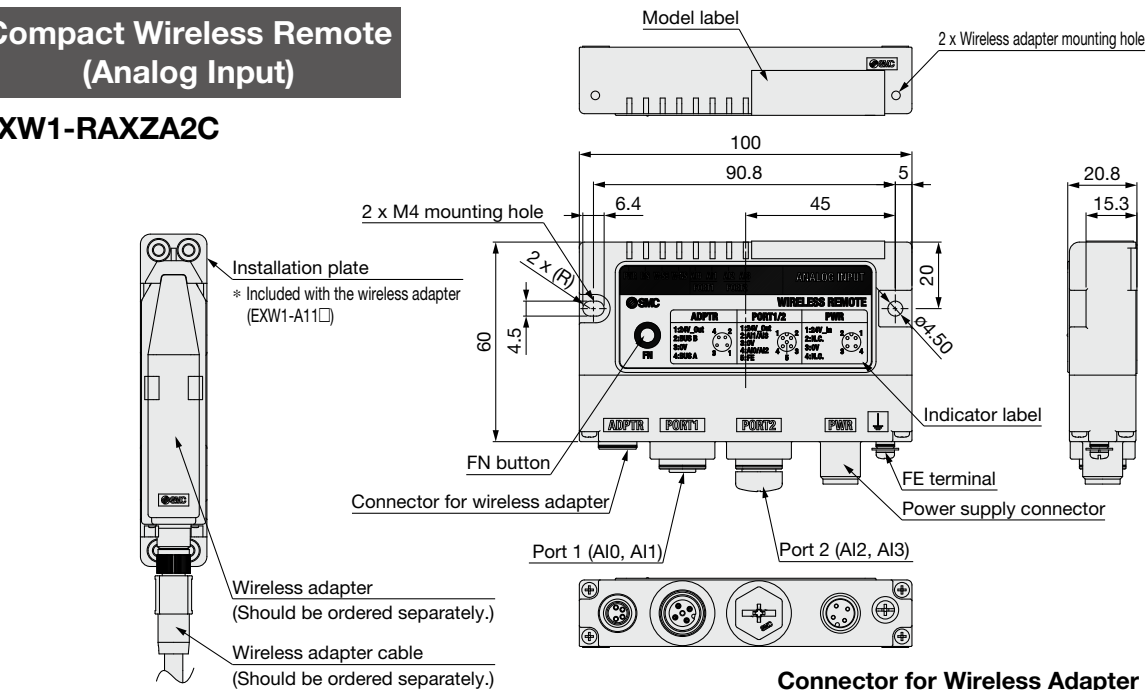

### Connector for Wireless Adapter


Pin no.	Description	M8, 4-pin, socket
<b>1</b>	24 V	
<b>2</b>	Internal BUS B	
<b>3</b>	0 V	
<b>4</b>	Internal BUS A	

### Power supply connector

No.	Signal	Description	M12, 4-pin, plug A-coded
1	24 V	24 VDC: Input*1	
2	N.C.	N.C.	
3	0 V	0 VDC	
4	N.C.	N.C.	

\*1 Input 24 V  $\pm$ 10%.

**Analog device connector PORT 1/PORT 2**


No.	Signal	Description	M12, 5-pin, socket A-coded
1	24 V	24 V: Output <sup>+2</sup>	
2	A11/A13	Analog input <sup>+3</sup>	
3	0 V	0 V	
4	A10/A12	Analog input <sup>+3</sup>	
5	FE	FE	

\*2 Do not input power.

- \*3 Uses a Y-branch connector to distribute and extract each signal

■ Dimensions when the wireless adapter, cable for the wireless adapter (EXW1-AC001-SAPU), installation plate, and Y-branch connector (EXW1-ACY2) are combined

### Combination image

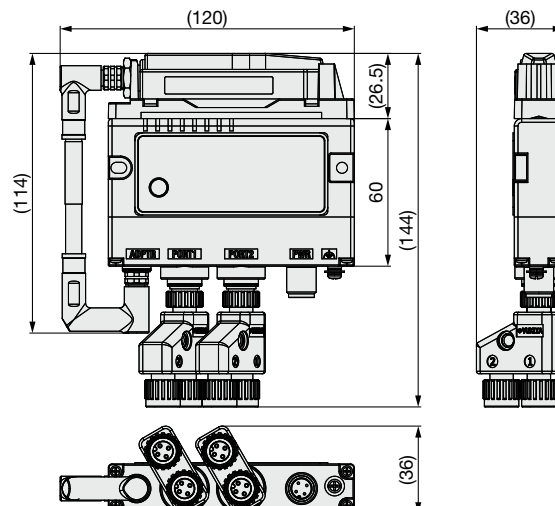




Dimensions/Parts Description



NFC Reader/Writer

EXW1-NT1

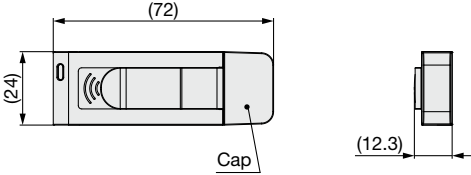

Fixing Bracket

EXW1-AB2 (Option, For EXW1)

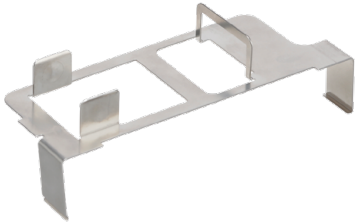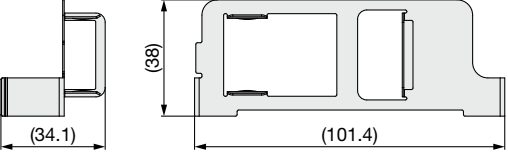

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table


Specific Product Precautions

## EXW1 Series

# Accessories (Optional Parts)


### Compact Wireless Base

EtherCAT<sup>®</sup>  
EtherNet/IP<sup>®</sup>  
PROFINET<sup>®</sup>  
DeviceNet<sup>®</sup>

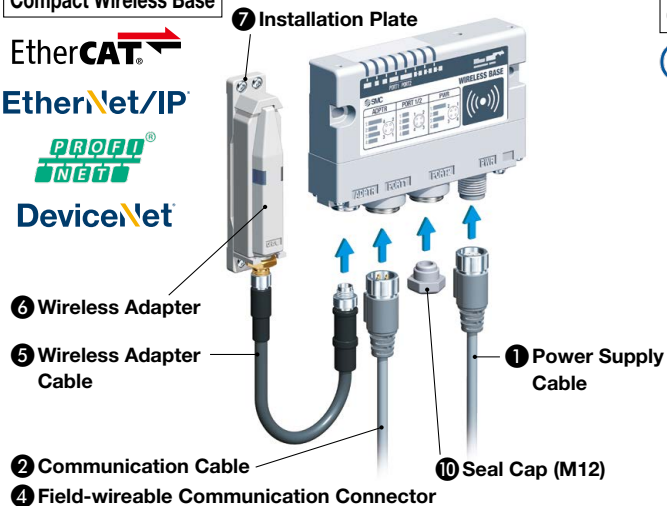


### Compact Wireless Base

CC-Link

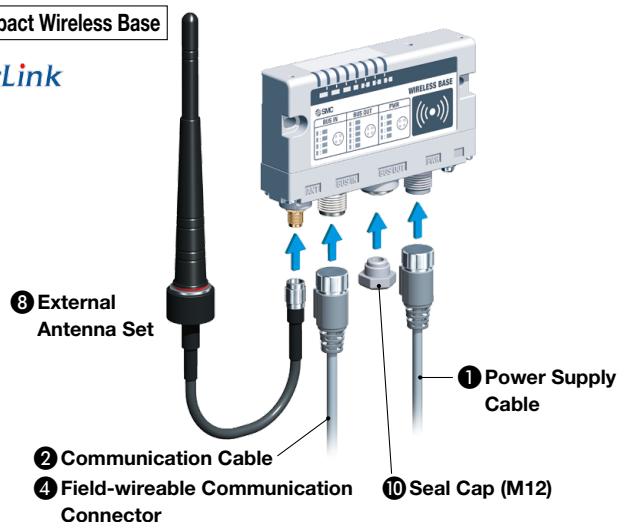


### Compact Wireless Remote

Digital Input/Output  
(e-con)

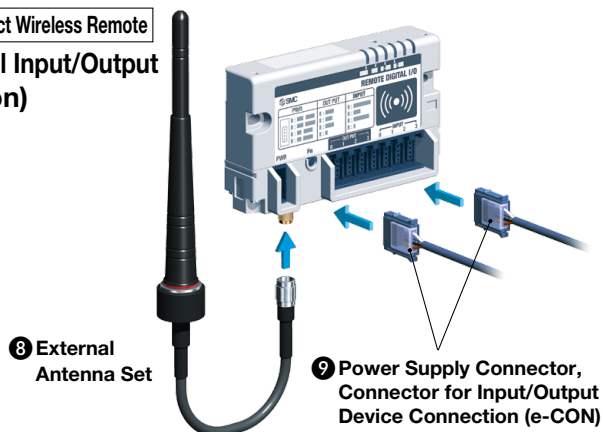


### Compact Wireless Remote

Digital Input/Output  
(M12 grommet)

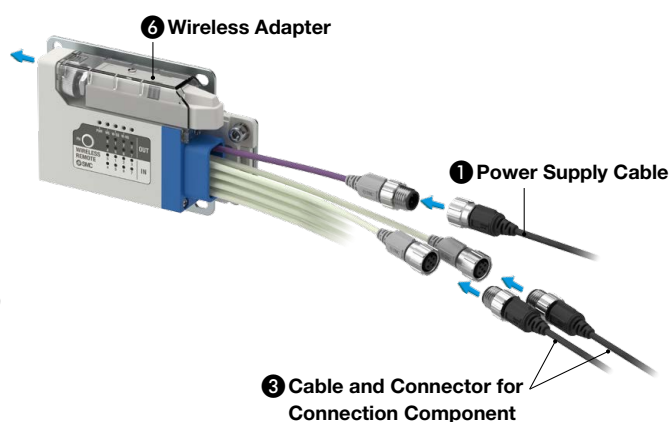

### Compact Wireless Remote

IO-Link  
Analog input

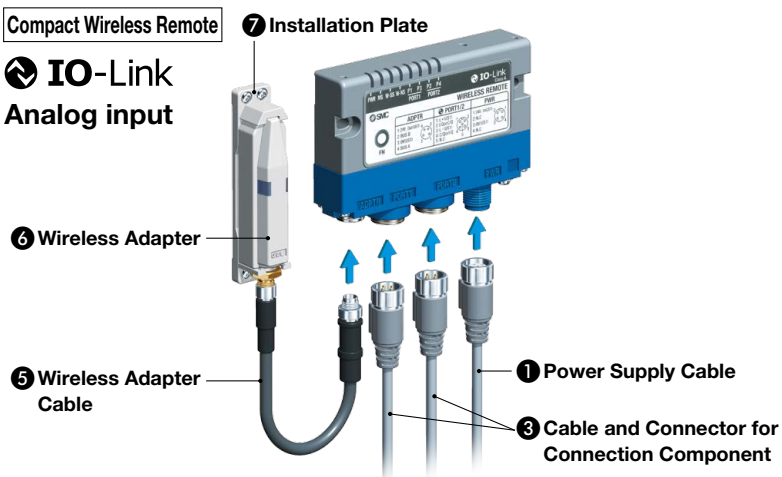

**① Power Supply Cable (For DeviceNet, power is supplied via the communication cable.)**

For EtherCAT   For PROFINET   For EtherNet/IP™   For Digital Input/Output (M12 grommet)  
 For IO-Link   For Analog Input   For Valve Manifold


**EX500-AP 050 - S**

Cable length (L)


010	1000 mm
050	5000 mm

Connector specification


S	Straight
A	Angled

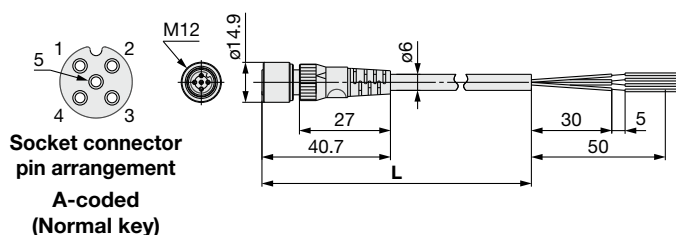**Straight connector type**


Item	Specifications
Cable O.D.	ø6 mm
Conductor nominal cross section	0.3 mm²/AWG22
Wire O.D. (Including insulator)	1.5 mm
Min. bending radius (Fixed)	40 mm

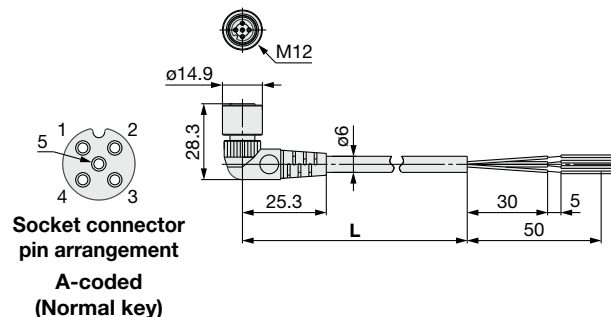**Angled connector type**


Item	Specifications
Cable O.D.	ø6 mm
Conductor nominal cross section	0.3 mm²/AWG22
Wire O.D. (Including insulator)	1.5 mm
Min. bending radius (Fixed)	40 mm


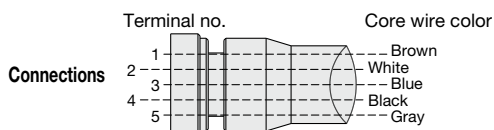

**① Power Supply Cable**

For EtherCAT   For PROFINET   For EtherNet/IP™   For Digital Input/Output (M12 grommet)  
 For IO-Link   For Analog Input   For Valve Manifold


**PCA- 1401804**

Cable length (L)

1401804	1500 mm
1401805	3000 mm
1401806	5000 mm

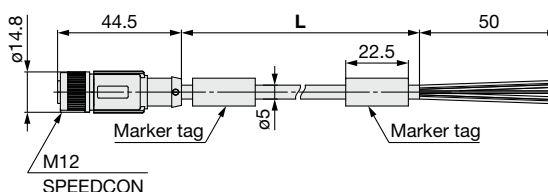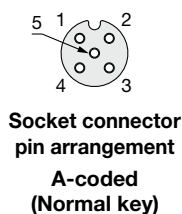

Item	Specifications
Cable O.D.	ø5 mm
Conductor nominal cross section	0.34 mm²/AWG22
Wire O.D. (Including insulator)	1.27 mm
Min. bending radius (Fixed)	21.7 mm

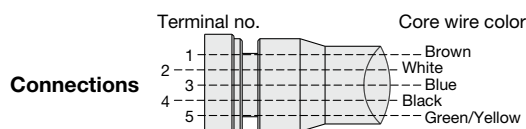

# EXW1 Series

## ① Power Supply Cable


For CC-Link

Straight connector type

EX9-AC 050 - 1


• Cable length (L)

010	1000 mm
030	3000 mm
050	5000 mm

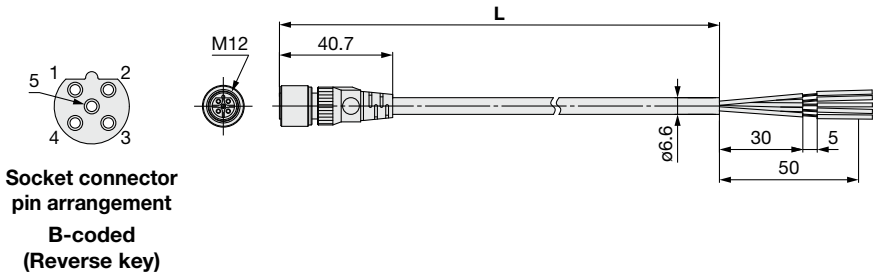

Socket connector  
pin arrangement  
B-coded  
(Reverse key)


Item	Specifications
Cable O.D.	ø6.6 mm
Conductor nominal cross section	0.3 mm <sup>2</sup> /AWG22
Wire O.D. (Including insulator)	1.65 mm
Min. bending radius (Fixed)	40 mm

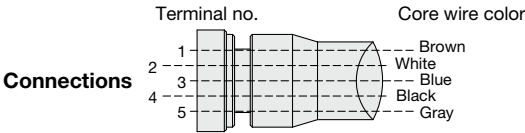

PCA- 1401807


• Cable length (L)

1401807	1500 mm
1401808	3000 mm
1401809	5000 mm

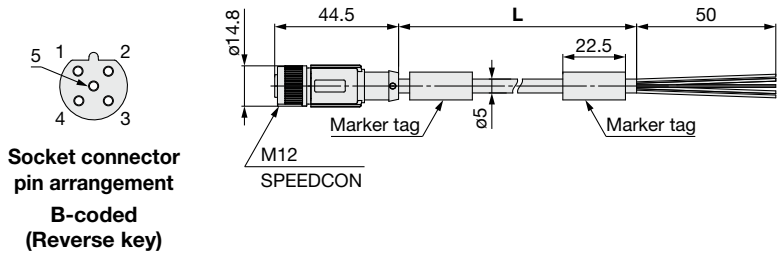

Socket connector  
pin arrangement  
B-coded  
(Reverse key)

Item	Specifications
Cable O.D.	ø5 mm
Conductor nominal cross section	0.34 mm <sup>2</sup> /AWG22
Wire O.D. (Including insulator)	1.27 mm
Min. bending radius (Fixed)	21.7 mm

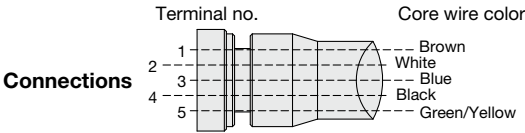

## ② Communication Cable

For EtherCAT


For PROFINET

For EtherNet/IP™


### EX9-AC 020 EN-PSRJ (Plug/RJ-45 connector)

#### • Cable length (L)

010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

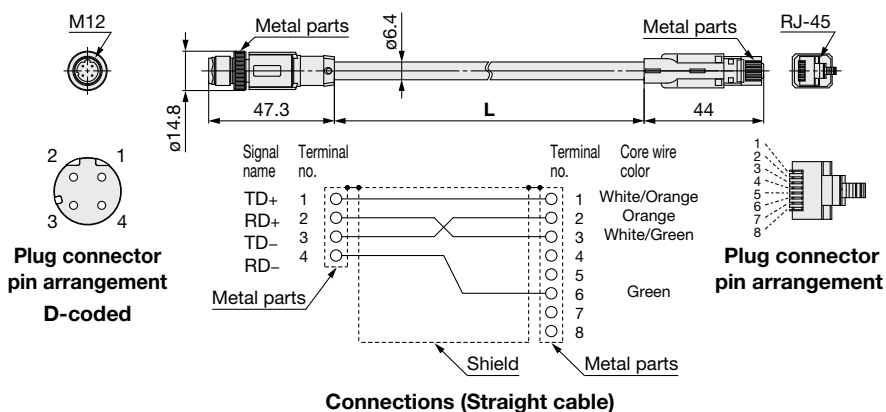

### PCA-1446566 (Plug)

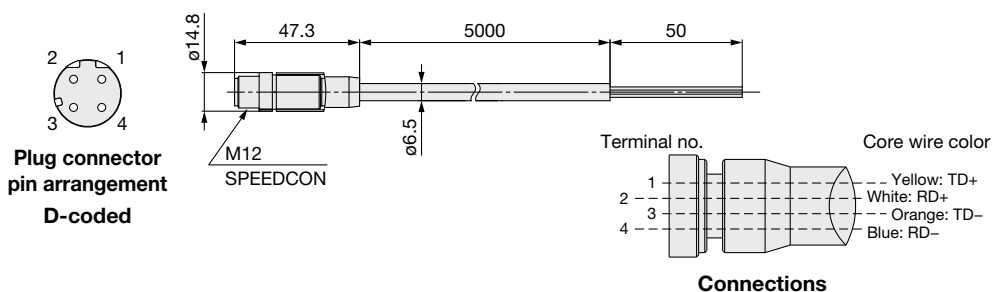


#### Straight connector type

### EX9-AC 005 EN-PSPS (With connector on both sides (Plug/Plug))

#### • Cable length (L)

005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

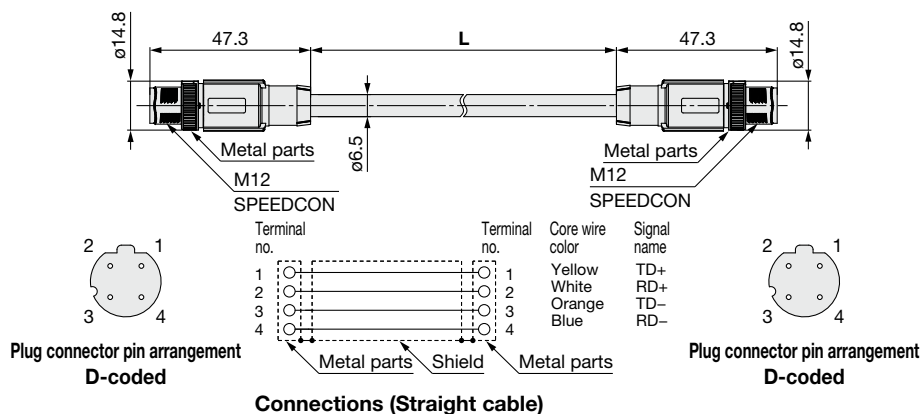


#### Angled connector type

### EX9-AC 005 EN-PAPA (With angled connector on both sides (Plug/Plug))

#### • Cable length (L)

005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

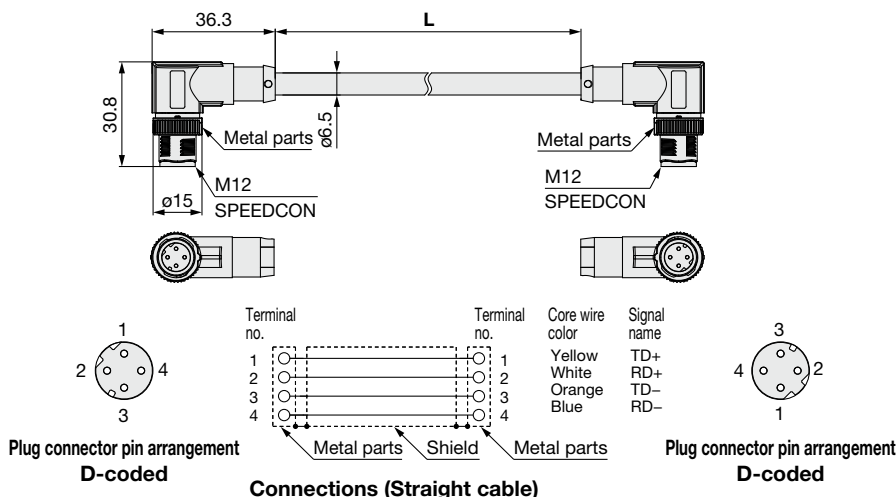

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions




# EXW1 Series

## ② Communication Cable


For DeviceNet®

**PCA-1557633**  
(Socket)



Socket connector  
pin arrangement  
A-coded (Normal key)

**PCA-1557646**  
(Plug)






Plug connector  
pin arrangement  
A-coded (Normal key)



Made to Order

Cable length	10000 mm	Refer to page 55.
--------------	----------	-------------------

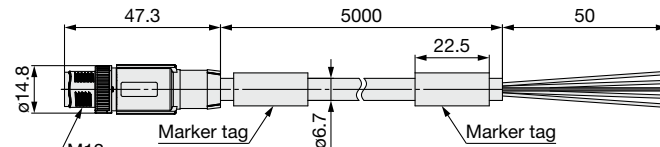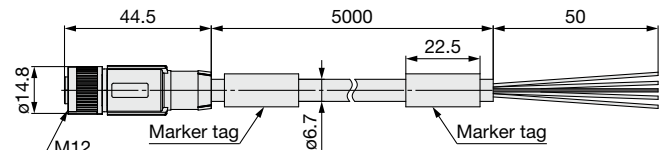

Connections



Item	Specifications
Cable O.D.	ø6.7 mm
Conductor nominal cross section	Power pair 0.34 mm <sup>2</sup> /AWG22
	Data pair 0.25 mm <sup>2</sup> /AWG24
Wire O.D. (Including insulator)	Power pair 1.4 mm
	Data pair 2.05 mm
Min. bending radius (Fixed)	67 mm

### Straight connector type


**EX9-AC 005 DN-SSPS** (With connector on both sides (Socket/Plug))

• Cable length (L)


005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

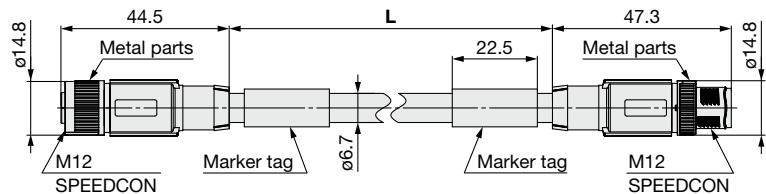

Socket connector  
pin arrangement  
A-coded (Normal key)

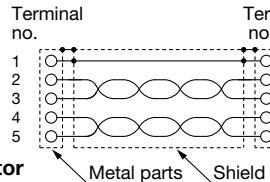

Connections

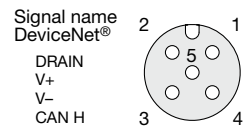

Plug connector  
pin arrangement  
A-coded (Normal key)



Item	Specifications
Cable O.D.	ø6.7 mm
Conductor nominal cross section	Power pair 0.34 mm <sup>2</sup> /AWG22
	Data pair 0.25 mm <sup>2</sup> /AWG24
Wire O.D. (Including insulator)	Power pair 1.4 mm
	Data pair 2.05 mm
Min. bending radius (Fixed)	67 mm

### Angled connector type


**EX9-AC 005 DN-SAPA** (With angled connector on both sides (Socket/Plug))

• Cable length (L)


005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

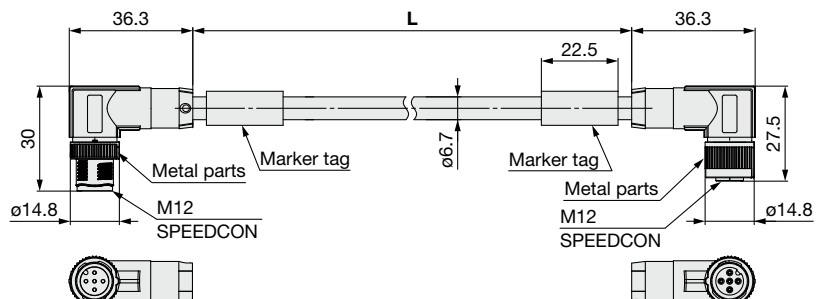

Plug connector  
pin arrangement  
A-coded (Normal key)

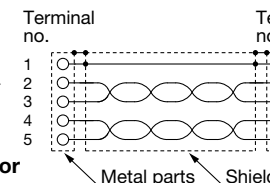

Connections

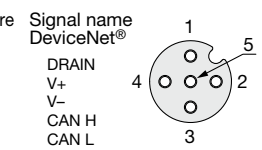

Socket connector  
pin arrangement  
A-coded (Normal key)

Item	Specifications
Cable O.D.	ø6.7 mm
Conductor nominal cross section	Power pair 0.34 mm <sup>2</sup> /AWG22
	Data pair 0.25 mm <sup>2</sup> /AWG24
Wire O.D. (Including insulator)	Power pair 1.4 mm
	Data pair 2.05 mm
Min. bending radius (Fixed)	67 mm

## ② Communication Cable

### For CC-Link




**PCA-1567720**  
(Socket)

**PCA-1567717**  
(Plug)



**Made to Order**

Cable length	10000 mm	Refer to page 55.
--------------	----------	-------------------

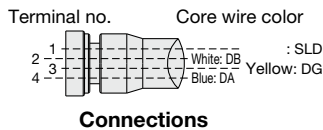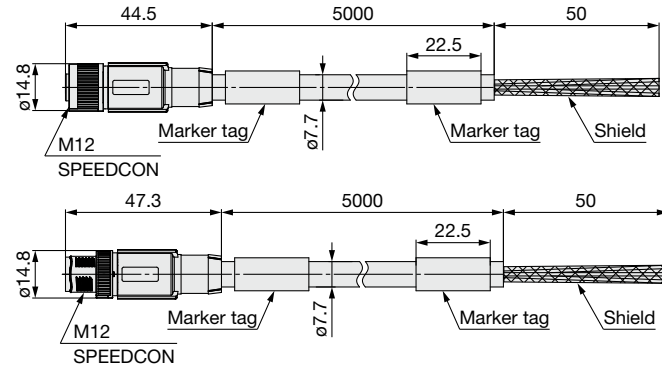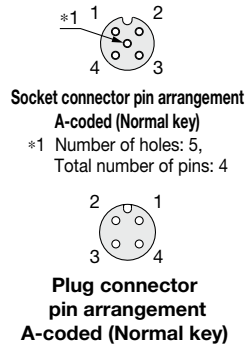

Item	Specifications
<b>Cable O.D.</b>	ø7.7 mm
<b>Conductor nominal cross section</b>	<b>Data pair</b> 0.5 mm <sup>2</sup> /AWG20 <b>Drain</b> 0.34 mm <sup>2</sup> /AWG22
<b>Wire O.D. (Including insulator)</b>	2.55 mm
<b>Min. bending radius (Fixed)</b>	77 mm



### Straight connector type

**EX9-AC 005 MJ-SSPS** (With connector on both sides (Socket/Plug))

#### • Cable length (L)


<b>005</b>	500 mm
<b>010</b>	1000 mm
<b>020</b>	2000 mm
<b>030</b>	3000 mm
<b>050</b>	5000 mm
<b>100</b>	10000 mm

Item	Specifications
<b>Cable O.D.</b>	ø7.7 mm
<b>Conductor nominal cross section</b>	<b>Data pair</b> 0.5 mm <sup>2</sup> /AWG20 <b>Drain</b> 0.34 mm <sup>2</sup> /AWG22
<b>Wire O.D. (Including insulator)</b>	2.55 mm
<b>Min. bending radius (Fixed)</b>	77 mm

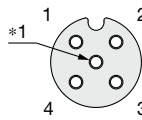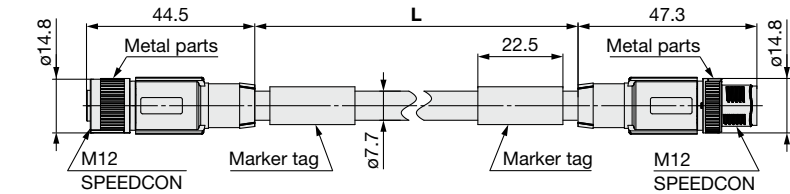

**Socket connector pin arrangement**  
A-coded (Normal key)

\*1 Number of holes: 5,  
Total number of pins: 4

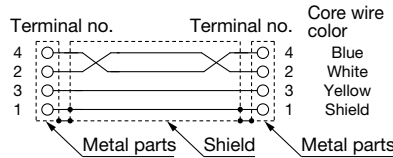

**Plug connector pin arrangement**  
A-coded (Normal key)



### Angled connector type

**EX9-AC 005 MJ-SAPA** (With angled connector on both sides (Socket/Plug))



#### • Cable length (L)

<b>005</b>	500 mm
<b>010</b>	1000 mm
<b>020</b>	2000 mm
<b>030</b>	3000 mm
<b>050</b>	5000 mm
<b>100</b>	10000 mm

Item	Specifications
<b>Cable O.D.</b>	ø7.7 mm
<b>Conductor nominal cross section</b>	<b>Data pair</b> 0.5 mm <sup>2</sup> /AWG20 <b>Drain</b> 0.34 mm <sup>2</sup> /AWG22
<b>Wire O.D. (Including insulator)</b>	2.55 mm
<b>Min. bending radius (Fixed)</b>	77 mm

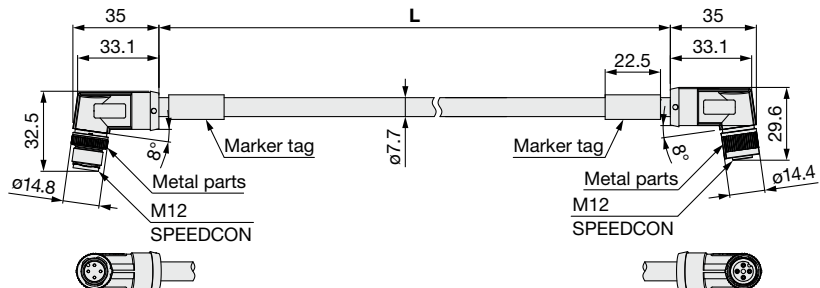

**Plug connector pin arrangement**  
A-coded (Normal key)

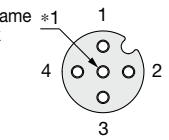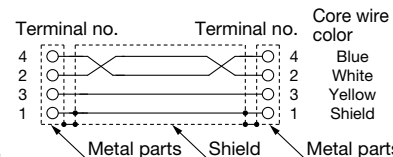

**Socket connector pin arrangement**  
A-coded (Normal key)

\*1 Number of holes: 5,  
Total number of pins: 4

# EXW1 Series


## ③ Cable and Connector for Connection Component

For IO-Link For Analog Input For Digital Input/Output (M12 grommet)

### EX9-AC 005 -SSPS (With connector on both sides (Socket/Plug))

#### • Cable length (L)

005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

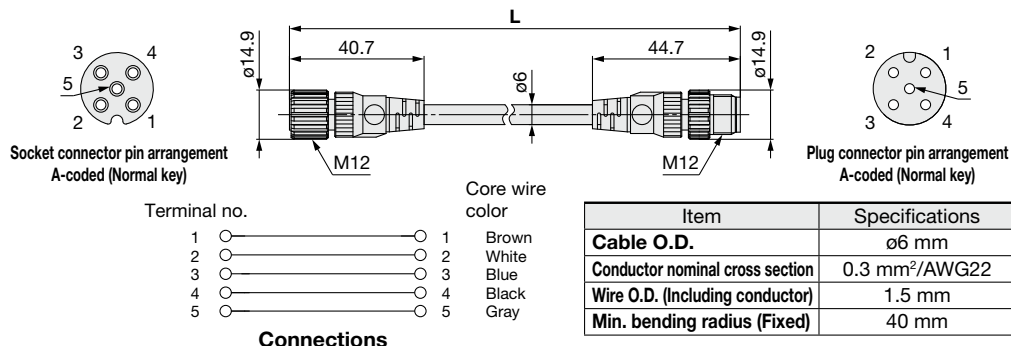


#### Angled connector type

### EX9-AC 005 -SAPA (With connector on both sides (Socket/Plug))

#### • Cable length (L)

005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

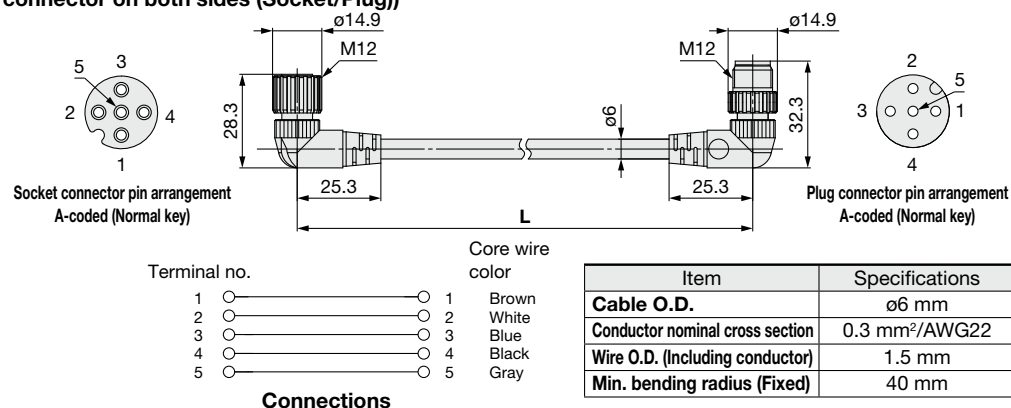


#### Straight connector type

### EX9-AC 030 -7

#### • Cable length (L)

010	1000 mm
030	3000 mm

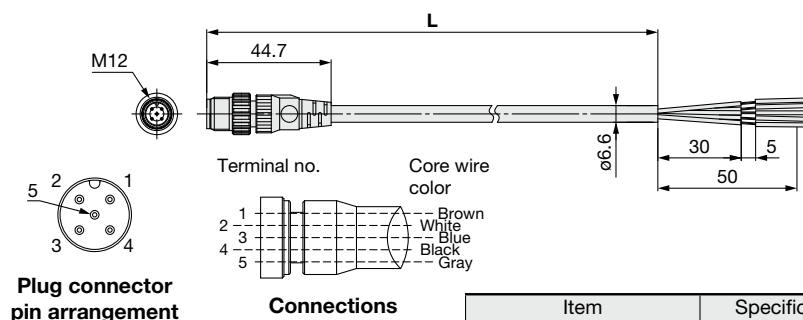



## ④ Field-wireable Communication Connector


### Plug

For EtherCAT    For PROFINET    For EtherNet/IP™

PCA-1446553



D-coded

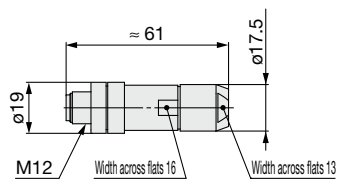

### Applicable Cable

Item	Specifications
<b>Cable O.D.</b>	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.34 mm <sup>2</sup> /AWG26 to 22

\* The table above shows the specifications for the applicable cable. Adaptation for the connector may vary on account of the conductor construction of the electric wire.


### Plug

For DeviceNet®

PCA-1075528



A-coded  
(Normal key)

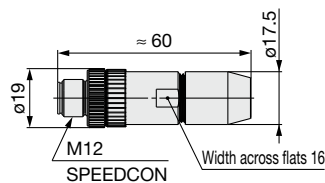

### Applicable Cable

Item	Specifications
<b>Cable O.D.</b>	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.75 mm <sup>2</sup> / AWG26 to 18 (Solid cable/Flexible cable)


### Plug

For CC-Link

PCA-1075526



A-coded  
(Normal key)

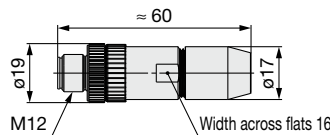

### Applicable Cable

Item	Specifications
<b>Cable O.D.</b>	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.5 mm <sup>2</sup> /AWG26 to 20


### Socket

For DeviceNet®

PCA-1075529



A-coded  
(Normal key)

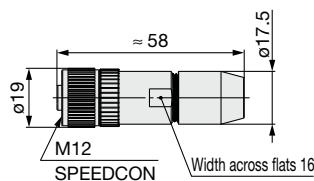

### Applicable Cable

Item	Specifications
<b>Cable O.D.</b>	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.75 mm <sup>2</sup> / AWG26 to 18 (Solid cable/Flexible cable)


### Socket

For CC-Link

PCA-1075527



A-coded  
(Normal key)

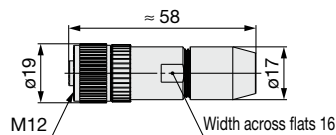

### Applicable Cable

Item	Specifications
<b>Cable O.D.</b>	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.5 mm <sup>2</sup> /AWG26 to 20



**5 Wireless Adapter Cable**

**EXW1-AC1-X1**

● **Secondary battery compatible**

**EXW1-AC001-SAPU**

**EXW1-AC030-SSPS**

- \* Refer to page 31 for the dimensions and parts description.
- \* This cable is required to connect the wireless base and wireless adapter.



**6 Wireless Adapter**

**EXW1-A11□**

A wireless adapter cable is required to connect the wireless base and wireless adapter.  
An installation plate (EXW1-AB4) is included as an accessory.

\* Refer to page 30 for the dimensions and parts description.




**7 Installation Plate**

**EXW1-AB4**

Included as an accessory with the wireless adapter (EXW1-A11□)

\* Refer to page 30 for the dimensions.

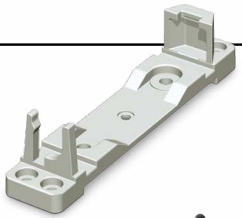


**8 External Antenna Set**


**EXW1-EA1**

(A set containing a whip antenna, coaxial cable, and bracket)


- \*1 The set is included with the external antenna specification. Only the included whip antenna and coaxial cable can be used with the product. Be sure to use them as a set.
- \*2 The external antenna set cannot be used for the internal antenna specification.
- \*3 It is not possible to use the external antenna set without connecting it with the external antenna specification.



① Whip antenna

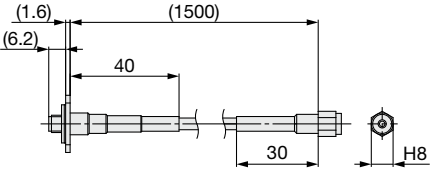

② Coaxial cable

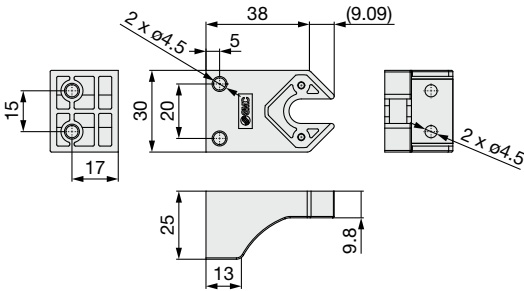

③ Bracket

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions


## ⑨ Power Supply Connector, Connector for Input/Output Device Connection (e-CON)

Select the applicable e-CON connectors based on the lead wire specifications of the components to be connected.

Both the power supply and I/O connectors have the same shape as the e-CON (4-pin, socket).

The lead wire specifications of each of our I/O devices are shown below for reference.

### Connecting the remote and I/O devices

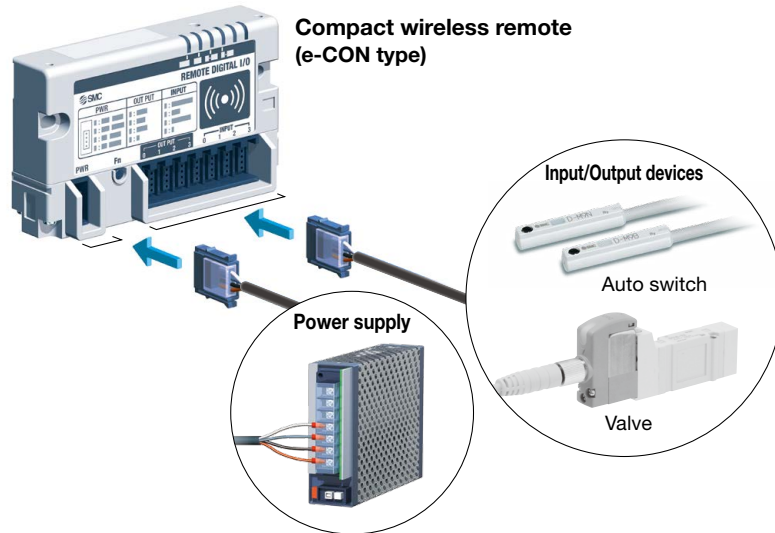

### e-CON Part Nos. List

Part no.	AWG No.	Conductor cross section [mm SQ]	Finished outside diameter [mm]	Cover color
ZS-28-C-1	24 to 26	0.14 to 0.2	ø1.0 to ø1.2	Yellow
ZS-28-C-2			ø1.2 to ø1.6	Orange
ZS-28-C-3	22 to 20	0.3 to 0.5	ø1.0 to ø1.2	Green
ZS-28-C-4			ø1.2 to ø1.6	Blue
ZS-28-C-5			ø1.6 to ø2.0	Gray
ZS-28-CA-1	—	0.1 to 0.5	ø0.6 to ø0.9	Orange
ZS-28-CA-2			ø0.9 to ø1.0	Red
ZS-28-CA-3			ø1.0 to ø1.15	Yellow
ZS-28-CA-4			ø1.15 to ø1.35	Blue
ZS-28-CA-5			ø1.35 to ø1.6	Green

Input/Output	Product	Series	Appearance	Conductor cross section [mm <sup>2</sup> ]	Insulator O.D. [mm]	Applicable e-CON part no.
Output	Valve	JSY1000 Plug lead (V050-30-4A-□)		0.3	ø1.55	ZS-28-C-4 ZS-28-CA-5
		JSY3000, 5000/SY/SYJ/SJ Plug lead (SY100-30-4A-□)		0.3	ø1.55	ZS-28-C-4 ZS-28-CA-5
		SY/SYJ M8 connector (V100-49-1-□)		0.16 (AWG25)	ø1.2	ZS-28-C-1 ZS-28-CA-4
	Ejector	ZB (AXT661-13A/14A-□)		AWG24	ø1.4	ZS-28-C-2 ZS-28-CA-5
		ZL/ZM (SY100-30-4A-□)		0.3	ø1.55	ZS-28-C-4 ZS-28-CA-5
		ZK2 (ZK2-LV□□-A)		0.2 (AWG24)	ø1.4	ZS-28-C-2 ZS-28-CA-5
Input	Pressure	Z/ISE10, 20		0.15 (AWG26)	ø1.0	ZS-28-C-1 ZS-28-CA-2
		PS1000		0.18	ø0.96	ZS-28-CA-2
	Auto switch	D-M9		0.15	ø0.88	ZS-28-CA-1
	Flow	PF2M		AWG26 (0.13)	ø1	ZS-28-CA-2

**⑩ Seal Cap (10 pcs.)**



Be sure to mount a seal cap on any unused communication connectors and I/O connectors.  
Otherwise, the specified enclosure cannot be maintained.  
\* 1 cap is included with the wireless base (EXW1-B□) and the wireless remote (EXW1-RL□).



**EX9-AWTS**  
For M12

**⑪ IO-Link Device Tool License Key**

USB dongle  
**EX9-ZSW-LDT1**

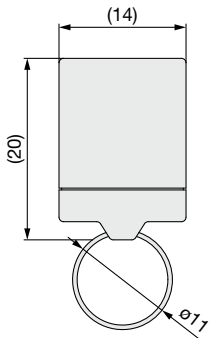

\* The IO-Link Device Tool V5-PE (V5 or later only) manufactured by TMG is required for setting IO-Link devices.  
The IO-Link Device Tool can be downloaded for free from TMG's website. However, to use it for more than 30 days, a license key for the IO-Link Device Tool is required.

# EXW1 Series

## Made to Order

Please contact SMC for detailed specifications and lead times.



### ① Communication Cable

With connector on one side (Socket)  
Cable length: 10000 mm

#### For CC-Link

#### For CC-Link

#### For DeviceNet®




EX9-AC100 **MJ** -X12

● Applicable protocol

<b>MJ</b>	CC-Link
<b>DN</b>	DeviceNet®

Socket connector pin arrangement  
A-coded (Normal key)

\*1 Number of holes: 5, Total number of pins: 4


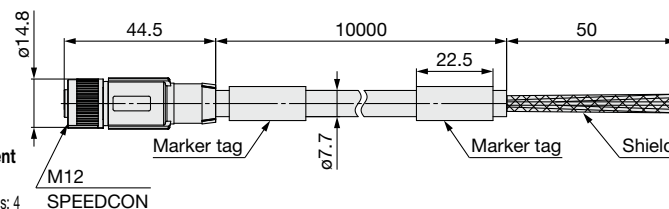



Connections

Item		Specifications
<b>Cable O.D.</b>		ø7.7 mm
<b>Conductor nominal cross section</b>	<b>Data pair</b>	0.5 mm <sup>2</sup> /AWG20
	<b>Drain</b>	0.34 mm <sup>2</sup> /AWG22
<b>Wire O.D. (Including insulator)</b>		2.55 mm
<b>Min. bending radius (Fixed)</b>		77 mm

#### For DeviceNet®

Socket connector pin arrangement  
A-coded (Normal key)

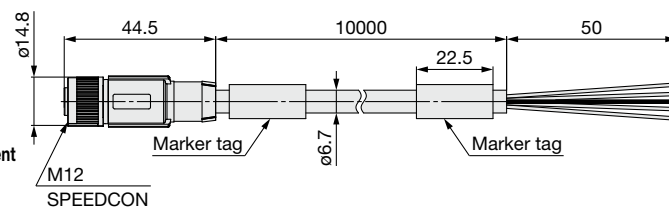

Connections

Item		Specifications
<b>Cable O.D.</b>		ø6.7 mm
<b>Conductor nominal cross section</b>	<b>Power pair</b>	0.34 mm <sup>2</sup> /AWG22
	<b>Data pair</b>	0.25 mm <sup>2</sup> /AWG24
<b>Wire O.D. (Including insulator)</b>	<b>Power pair</b>	1.4 mm
	<b>Data pair</b>	2.05 mm
<b>Min. bending radius (Fixed)</b>		67 mm

# Wireless System

## Modular Type

# EX600-W Series



### How to Order

#### Wireless Unit

**EX600-W SV 1**

Wireless compatible

Remote module

Output type

Symbol	Specifications
1	PNP
2	NPN



Remote module

EXW1 Series

Accessories

Made to Order

EX600-W Series


Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions

#### Digital Input Unit\*1

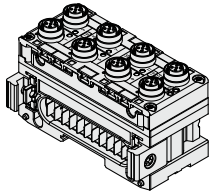

**EX600-DX P D**

Digital input


Input type

Symbol	Description
P	PNP
N	NPN

Number of inputs and connector

Symbol	Number of inputs	Connector
B	8 inputs	M12 connector (5 pins) 4 pcs.
C	8 inputs	M8 connector (3 pins) 8 pcs.
C1	8 inputs	M8 connector (3 pins) 8 pcs., With open-circuit detection
D	16 inputs	M12 connector (5 pins) 8 pcs.
E	16 inputs	D-sub connector (25 pins)
F	16 inputs	Spring type terminal block (32 pins)

#### Digital Output Unit\*1

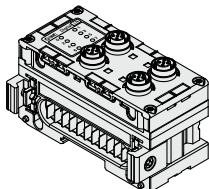

**EX600-DY P B**

Digital output


Output type

Symbol	Description
P	PNP
N	NPN

Number of outputs and connector

Symbol	Number of outputs	Connector
B	8 outputs	M12 connector (5 pins) 4 pcs.
E	16 outputs	D-sub connector (25 pins)
F	16 outputs	Spring type terminal block (32 pins)

#### Digital Input/Output Unit\*1

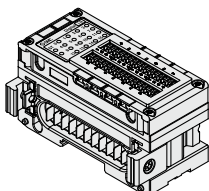

**EX600-DM P F**

Digital input/output


Input/Output type

Symbol	Description
P	PNP
N	NPN

Number of inputs/outputs and connector

Symbol	Number of inputs	Number of outputs	Connector
E	8 inputs	8 outputs	D-sub connector (25 pins)
F	8 inputs	8 outputs	Spring type terminal block (32 pins)

#### Analog Input Unit\*1

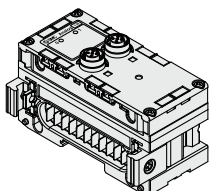

**EX600-AX A**

Analog input

Number of input channels and connector


Symbol	Number of input channels	Connector
A	2 channels	M12 connector (5 pins) 2 pcs.

\*1 For specifications, refer to the Fieldbus system EX600 series in the Web Catalog.

# EX600-W Series

## How to Order

### Analog Output Unit\*1

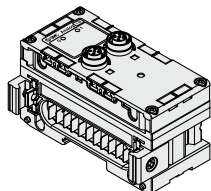


### EX600-AY A

Analog output

Number of output channels and connector

Symbol	Number of output channels	Connector
A	2 channels	M12 connector (5 pins) 2 pcs.

### Analog Input/Output Unit\*1

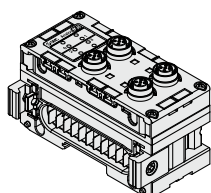

### EX600-AM B


Analog input/output

Number of input/output channels and connector


Symbol	Number of input channels	Number of output channels	Connector
B	2 channels	2 channels	M12 connector (5 pins) 4 pcs.

\*1 For specifications, refer to the Fieldbus system EX600 series in the Web Catalog.

### End Plate (D side)

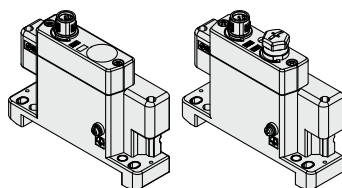

For M12

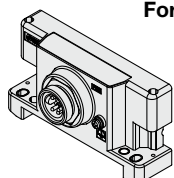

For 7/8 inch

### EX600-ED 2-2

End plate

End plate mounting position: D side

Power supply connector

Symbol	Power supply connector	Specifications
2	M12 (5 pins) B-coded	IN
3	7/8 inch (5 pins)	IN
4	M12 (4/5 pins) A-coded*1	IN/OUT
5	M12 (4/5 pins) A-coded*1	IN/OUT


\*1 The pin layout for "4" and "5" pin connector is different.  
Refer to the dimensions on page 61.

Mounting method

Symbol	Description	Note
Nil	Without DIN rail mounting bracket	—
2	With DIN rail mounting bracket	For SV, S0700, VQC series
3	With DIN rail mounting bracket	For SY series

\* When the end plate (U side) is used, the symbol for the mounting method must be the same as the D side.

### End Plate (U side)

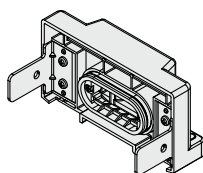

### EX600-EU 1-2

End plate

End plate mounting position: U side

Specifications

Symbol	Specifications
1	Waterproof cover

Mounting method

Symbol	Description	Note
Nil	Without DIN rail mounting bracket	—
2	With DIN rail mounting bracket	For EX600-ED□-2
3	With DIN rail mounting bracket	For EX600-ED□-3

\* When the end plate (D side) is used, the symbol for the mounting method must be the same as the U side.

### NFC Reader/Writer

### EXW1-NT1

\* Order a fixing bracket.  
\* A USB cable (3 m) is also included.



#### Fixing bracket (Option)

When optional parts are required, order with the part number below.

### EXW1-AB 1


Variations

Symbol	Description	Appearance	
		Single unit	Product mounting view
1	For EX600-W		



## Ordering Example of the Remote Module


### Remote module: Without valve manifold and with input/output unit

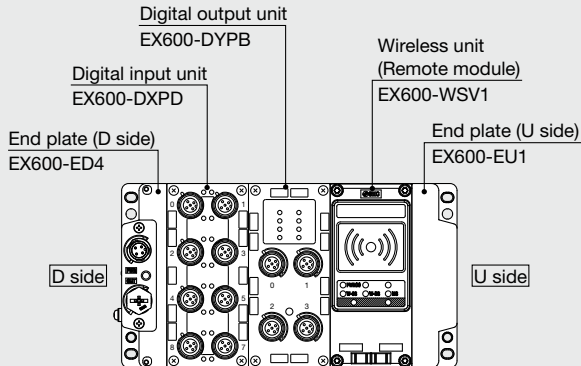

EX600-ED4	1 set
EX600-DXPD	1 set
EX600-DYPB	1 set
EX600-WSV1	1 set
EX600-EU1	1 set

· Products should be ordered separately and assembled by the customer.

### Manifold with remote module: With input/output unit

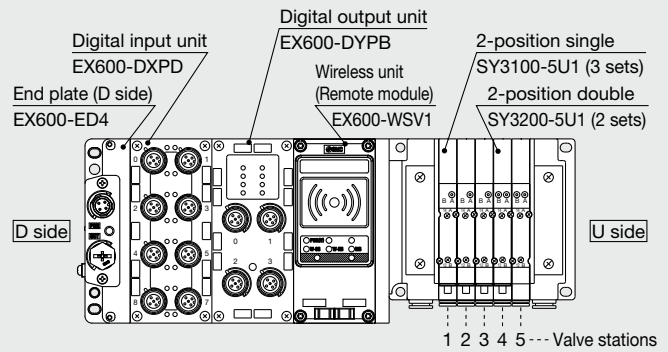

#### SS5Y3-10S6WS72-05B-C6

(Type 10 5-station manifold base, remote)

Negative common, M12 connector IN/OUT pin arrangement 1, I/O unit: 2 stations

- \* SY3100-5U1 ..... 3 sets (2-position single part no.)
- \* SY3200-5U1 ..... 2 sets (2-position double part no.)
- \* EX600-DXPD ..... 1 set I/O unit part no. (Stations 1)
- \* EX600-DYPB ..... 1 set I/O unit part no. (Stations 2)

→ The asterisk denotes the symbol for the assembly.  
Prefix it to the part numbers of the valve, etc.

- For details, refer to the catalog of each valve series.
- The manifold part number cannot be selected when ordering from Malaysia according to Malaysian laws. The wireless unit (remote module) needs to be ordered separately.

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions

# EX600-W Series

## Specifications

### Remote Module: EX600-WSV□

Item			Specifications
Electrical	For control/input (US1)	Power supply voltage	24 VDC ±10%
		Current consumption	70 mA or less
	For output (US2)	Power supply voltage	24 VDC ±10%
		Max. supply current	4 A
Input/Output	Number of inputs	Input size	Max. 128 points (increase or decrease by 16 points)
	Number of outputs	Output size	Max. 128 points (increase or decrease by 16 points)
	AD/DA refresh time		0.1/0.2/0.5/1/2/5/10/30/60 s*1
	Number of connected EX600 I/O units		Max. 9 EX600 I/O units (I/O = 128. I/O above 128 cannot be recognized.)
	Valve output	Output type	EX600-WSV1: Source/PNP (–COM) EX600-WSV2: Sink/NPN (+COM)
		Number of outputs	Max. 32 points (0/8/16/24/32 points)
		Connected load	Solenoid valve with surge voltage suppressor of 24 VDC and 1.5 W or less (manufactured by SMC)
Wireless communication	Protocol		SMC original protocol (SMC encryption) V.1.0
	Radio wave type (spread)		Frequency Hopping Spread Spectrum (FHSS)
	Frequency		2.4 GHz (2403 to 2481 MHz)
	Number of frequency channels		79 ch (Bandwidth: 1.0 MHz)
	Communication speed		250 kbps
	Communication distance		10 m (Depending on the operating environment)
	Radio Law certificate		Refer to the SMC website for the latest information regarding in which countries the product is certified.
General	Enclosure		Conforms to IP67 (with manifold assembled)
	Ambient temperature (Operating temperature)		–10 to +50°C
	Ambient temperature (Storage temperature)		–20 to +60°C
	Ambient humidity		35 to 85% RH (No condensation)
	Withstand voltage		500 VAC for 1 minute between external terminals and metallic parts
	Insulation resistance		10 MΩ or more (500 VDC between external terminals and metallic parts)
	Vibration resistance		Conforms to EN 61131-2 5 ≤ f < 8.4 Hz 3.5 mm 8.4 ≤ f < 150 Hz 9.8 m/s² (Excludes valve manifold)
	Impact resistance		Conforms to EN 61131-2 147 m/s², 11 ms (Excludes valve manifold)
	Standards		CE/UKCA marking
	Weight		280 g
	NFC communication*2	Communication standard	
Frequency		13.56 MHz	
Communication speed		20 to 100 kHz (I2C)	
Communication distance		Up to 1 cm	

\*1 Varies depending on the wireless communication status and the surrounding environment

\*2 The NFC communication RFID tag of the 13.56 MHz passive type

### End Plate (D side)


Model			EX600-ED2-□	EX600-ED3-□	EX600-ED4/5-□
Electrical	Power supply connector	PWR IN	M12 (5-pin) plug	7/8 inch (5-pin) plug	M12 (4-pin) plug
		PWR OUT	—	—	M12 (5-pin) socket
	Rated voltage	Power supply for control/input	24 VDC ±10%		
		Power supply for output	24 VDC +10/−5%		
	Rated current	Power supply for control/input	Max. 2 A	Max. 8 A	Max. 4 A
		Power supply for output			
Enclosure			IP67 (with manifold assembled)		
Standards*1			CE/UKCA marking, UL (CSA)		
Weight			170 g	175 g	170 g

\*1 The EX600-ED4/5-□ is not compliant with UL (CSA) standards.

## Dimensions

### Remote Module

EX600-WSV□

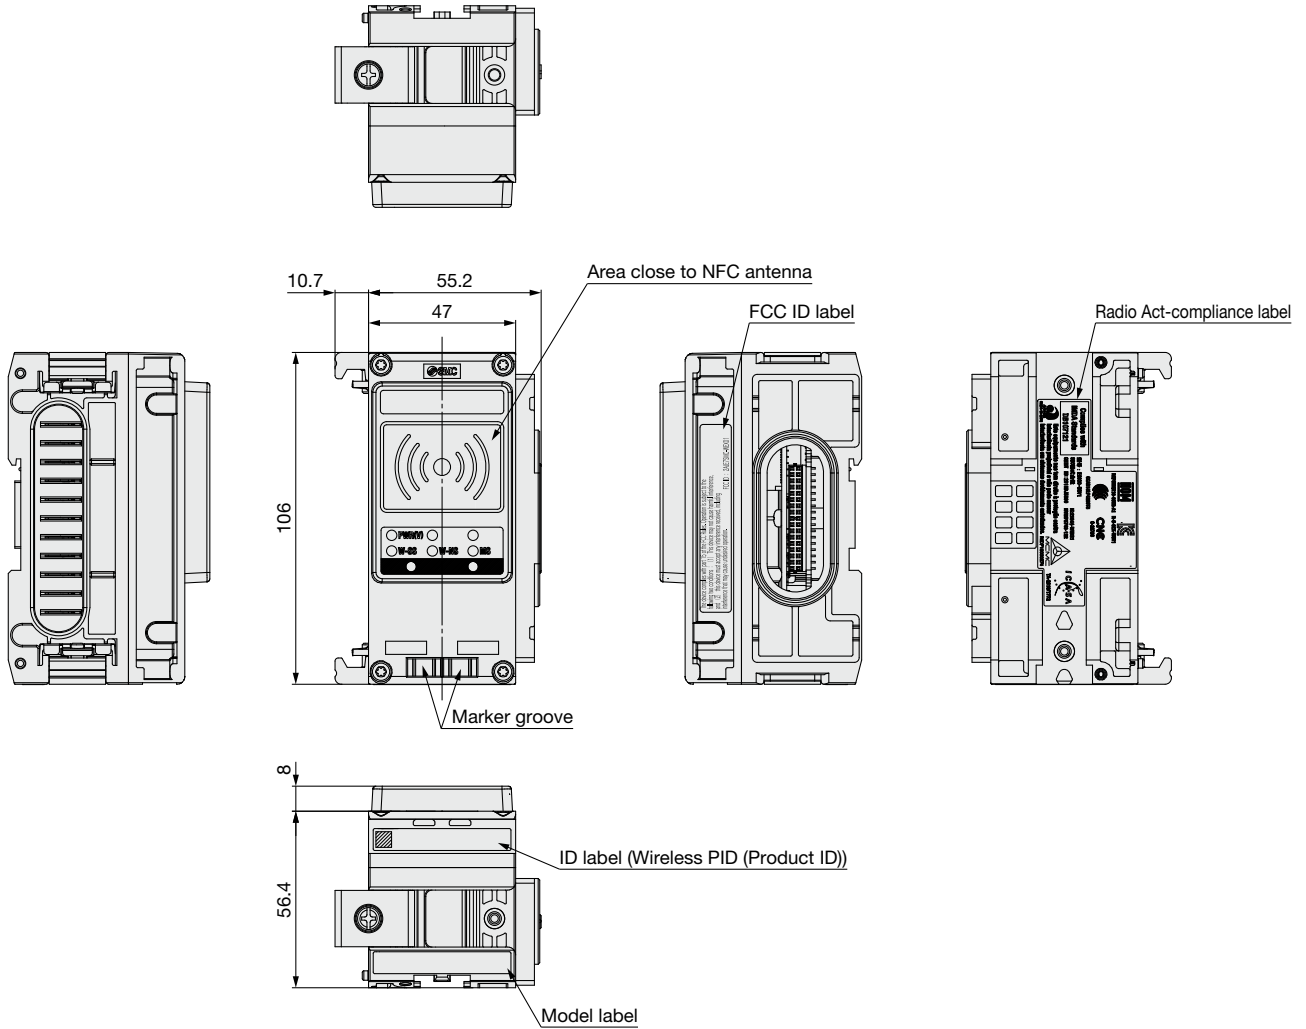

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table


Specific Product Precautions

# EX600-W Series

## Dimensions

### End Plate (D side)


#### EX600-ED2

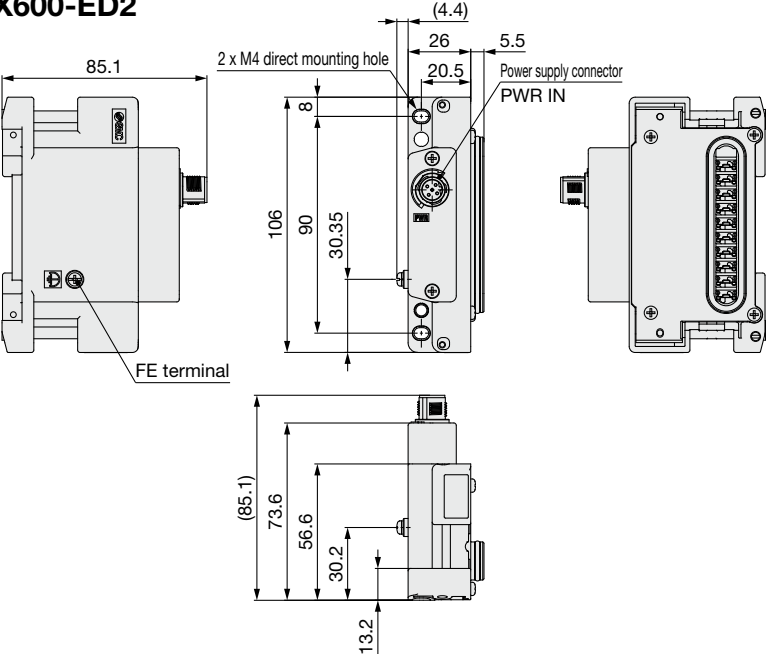


Power supply connector PWR IN: M12 5-pin plug, B-coded

Configuration	Pin no.	Description
	1	24 V (for output)
	2	0 V (for output)
	3	24 V (for control/input)
	4	0 V (for control/input)
	5	FE


#### EX600-ED4/ED5

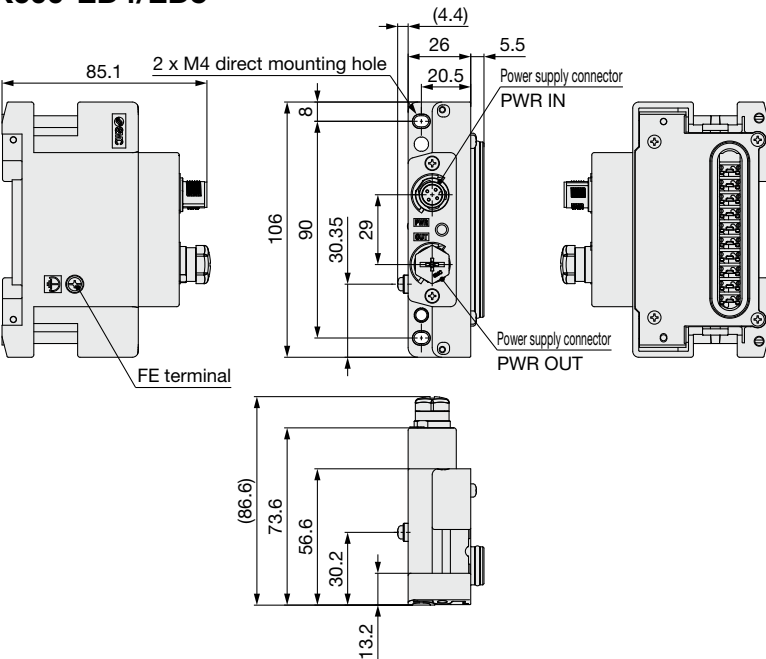

Power supply connector PWR IN: M12 4-pin plug, A-coded

Configuration	EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2)	
	Pin no.	Description	Pin no.	Description
	<b>1</b>	24 V (for control/input)	<b>1</b>	24 V (for output)
	<b>2</b>	24 V (for output)	<b>2</b>	0 V (for output)
	<b>3</b>	0 V (for control/input)	<b>3</b>	24 V (for control/input)
	<b>4</b>	0 V (for output)	<b>4</b>	0 V (for control/input)


Power supply connector PWR OUT: M12 5-pin socket, A-coded

Configuration	EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2)	
	Pin no.	Description	Pin no.	Description
	<b>1</b>	24 V (for control/input)	<b>1</b>	24 V (for output)
	<b>2</b>	24 V (for output)	<b>2</b>	0 V (for output)
	<b>3</b>	0 V (for control/input)	<b>3</b>	24 V (for control/input)
	<b>4</b>	0 V (for output)	<b>4</b>	0 V (for control/input)
	<b>5</b>	Unused	<b>5</b>	Unused

## Dimensions

### End Plate (D side)

#### EX600-ED3

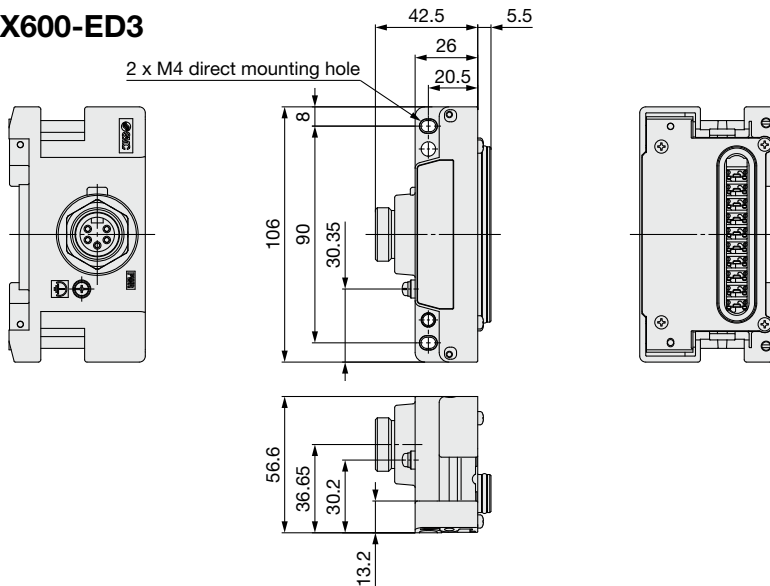


Power supply connector PWR: 7/8 inch 5-pin plug

Configuration	Pin no.	Description
	1	0 V (for output)
	2	0 V (for control/input)
	3	FE
	4	24 V (for control/input)
	5	24 V (for output)


### End Plate (U side)

#### EX600-EU1

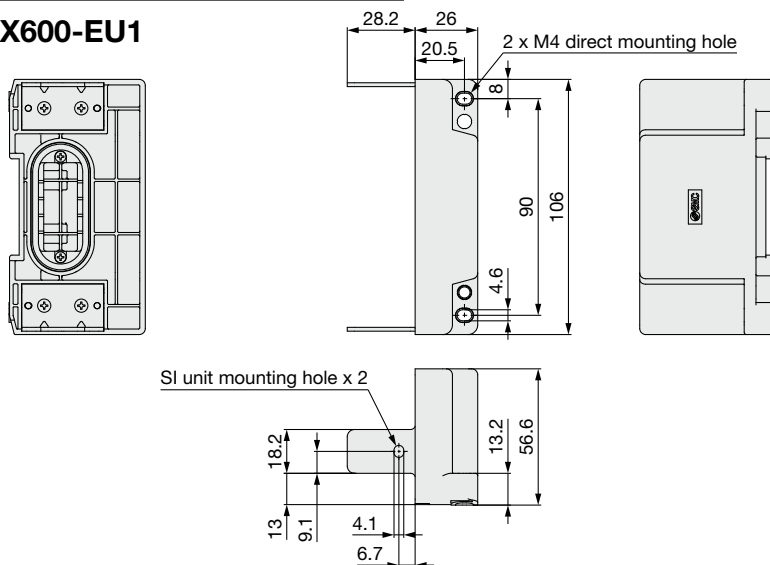


### NFC Reader/Writer

#### EXW1-NT1

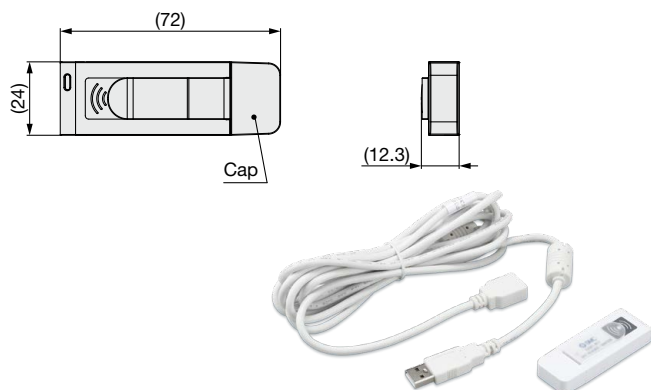

### Fixing Bracket


#### EXW1-AB1 (Option, For EX600-W)

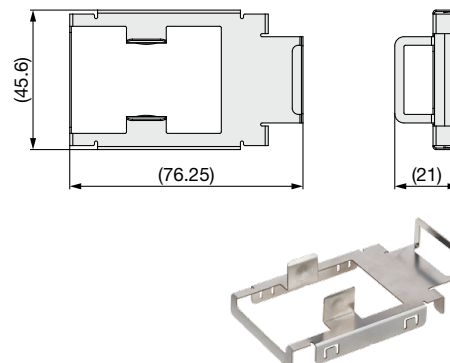

\* Order a fixing bracket.

# EX600-W Series

## Accessories (Optional Parts)

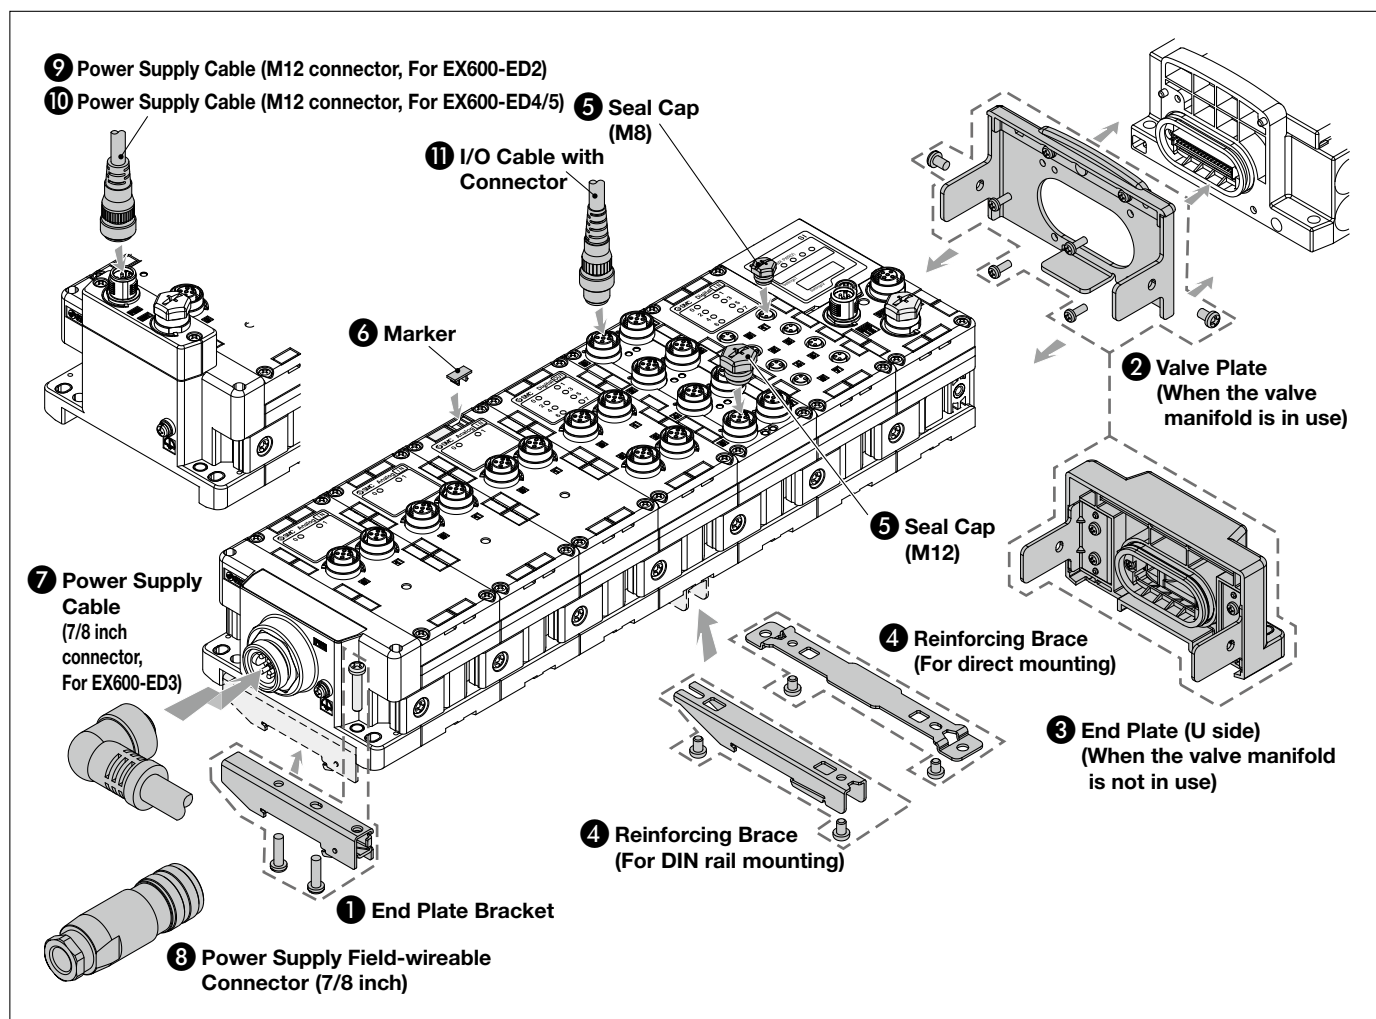

### ① End Plate Bracket

This bracket is used for the end plate of DIN rail mounting.



**EX600-ZMA2**  
(For the SV, S0700, and VQC series)

#### Enclosed parts

Round head screw (M4 x 20) 1 pc.  
P-tight screw (4 x 14) 2 pcs.

**EX600-ZMA3**  
(For the SY and JSY series)

#### Enclosed parts

Round head screw with washer (M4 x 20) 1 pc.  
P-tight screw (4 x 14) 2 pcs.

### ② Valve Plate

**EX600-ZMV1**  
(For the SV, S0700, and VQC series)

#### Enclosed parts


Round head screw (M4 x 6) 2 pcs.  
Round head screw (M3 x 8) 4 pcs.



**EX600-ZMV2**  
(For the SY and JSY series)

#### Enclosed parts

Round head screw (M4 x 6) 2 pcs.  
Round head screw (M3 x 8) 2 pcs.

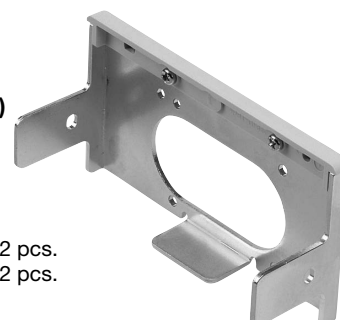



### ③ End Plate (U side)

The end plate is for use when the manifold valve is not connected.

EX600- E U 1 - 2

#### ● Mounting method

Symbol	Description	Note
Nil	Without DIN rail mounting bracket	—
2	With DIN rail mounting bracket	For EX600-ED□-2
3	With DIN rail mounting bracket	For EX600-ED□-3


\* Select in accordance with the symbol for the end plate (D side) mounting method.

#### ● Specification



Symbol	Specification
1	Waterproof cover

● End plate mounting position: U side

● End plate

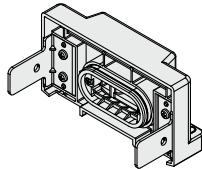

EX600-EU1

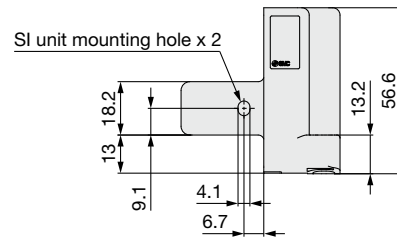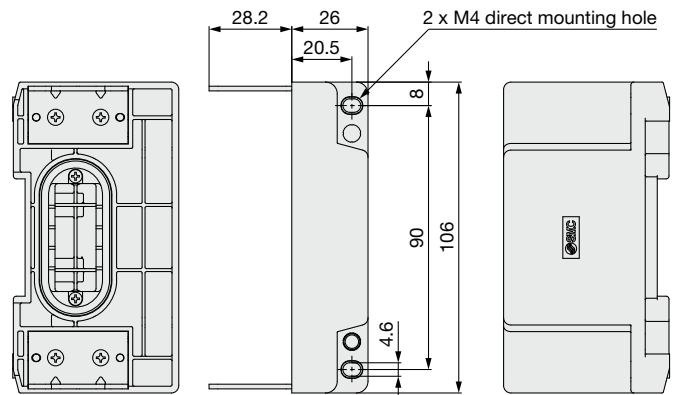

#### Enclosed parts

Round head screw (M4 x 6) 2 pcs.

### ④ Reinforcing Brace

This bracket is used on the bottom of the unit at the intermediate position for connecting 6 units or more.

\* Be sure to attach this bracket to prevent connection failure between the units caused by deflection.


For direct mounting  
**EX600-ZMB1**



#### Enclosed parts

Round head screw (M4 x 5) 2 pcs.

For DIN rail mounting  
**EX600-ZMB2**

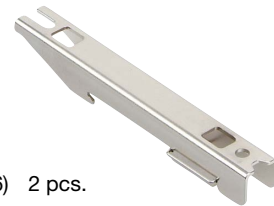

#### Enclosed parts

Round head screw (M4 x 6) 2 pcs.

### ⑤ Seal Cap (10 pcs.)

Be sure to mount a seal cap on any unused I/O connectors. Otherwise, the specified enclosure cannot be maintained.

**EX9-AWES**  
For M8




**EX9-AWTS**  
For M12



### ⑥ Marker (1 sheet, 88 pcs.)

The signal name of I/O device and each unit address can be entered and mounted on each unit.

**EX600-ZT1**

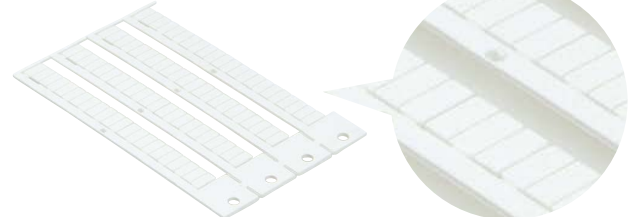

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories

Technical Data

Country-specific Radio Law Compliance Table

Specific Product Precautions


# EX600-W Series

## ⑦ Power Supply Cable (7/8 inch connector, For EX600-ED3)


PCA-1558810	Straight 2 m
PCA-1558823	Straight 6 m
PCA-1558836	Right angled 2 m
PCA-1558849	Right angled 6 m



### Straight connector type

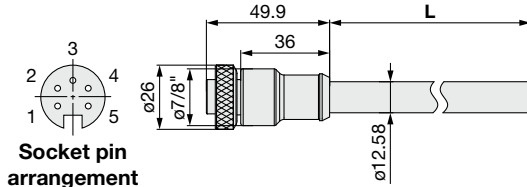


Socket pin arrangement

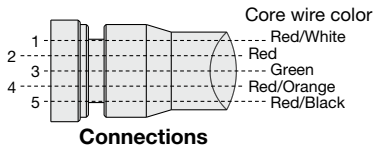


Connections

### Angled connector type

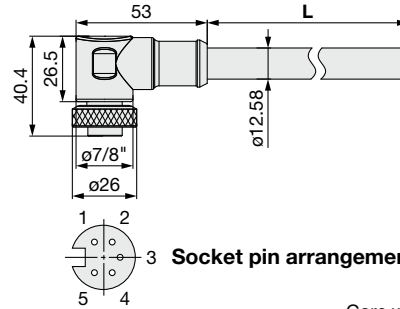

Socket pin arrangement

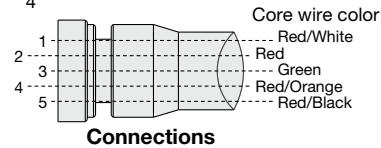

Connections

Item	Specifications
<b>Cable O.D.</b>	12.58 mm
<b>Conductor nominal cross section</b>	1.5 mm <sup>2</sup> /AWG16
<b>Wire O.D. (Including insulator)</b>	2.35 mm
<b>Min. bending radius (Fixed)</b>	110 mm

## ⑧ Power Supply Field-wireable Connector (7/8 inch)

PCA-1578081	Socket [compatible with AWG22-16]
-------------	-----------------------------------



### Applicable Cable

Item	Specifications
<b>Cable O.D.</b>	12.0 to 14.0 mm
<b>Wire gauge (Stranded wire cross section)</b>	0.34 to 1.5 mm <sup>2</sup> AWG22 to 16


## ⑨ Power Supply Cable (M12 connector, For EX600-ED2) \* The shape of the M12 connector is B-coded (Reverse key).

PCA-1564927	Straight 2 m
PCA-1564930	Straight 6 m
PCA-1564943	Right angled 2 m
PCA-1564969	Right angled 6 m




**SPEEDCON**

### Straight connector type

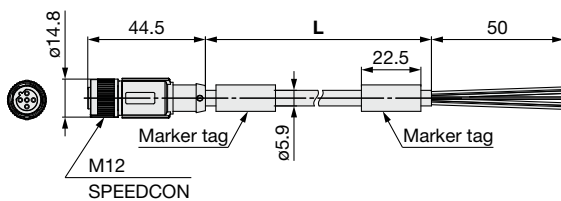


M12 SPEEDCON

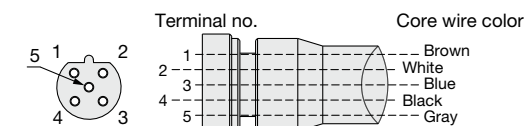


Socket connector pin arrangement B-coded (Reverse key)

Connections

### Angled connector type

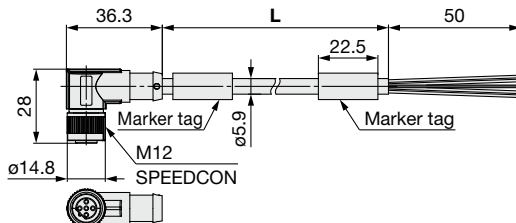

M12 SPEEDCON

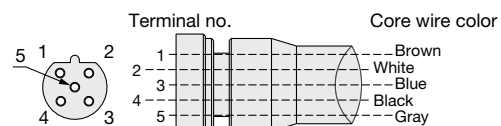

Socket connector pin arrangement B-coded (Reverse key)

Connections

Item	Specifications
<b>Cable O.D.</b>	14.8 mm
<b>Conductor nominal cross section</b>	0.34 mm <sup>2</sup> /AWG22
<b>Wire O.D. (Including insulator)</b>	1.27 mm
<b>Min. bending radius (Fixed)</b>	59 mm

## ⑩ Power Supply Cable (M12 connector, For EX600-ED4/5)

\* The shape of the M12 connector is A-coded (Normal key).

**EX500-AP 050 - S**

● Cable length (L)


010	1000 mm
050	5000 mm

● Connector specification

S	Straight
A	Angled




### Straight connector type

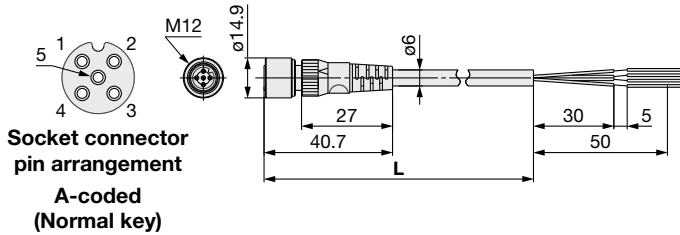


Item	Specifications
Cable O.D.	ø6 mm
Nominal cross section	0.3 mm <sup>2</sup> /AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)

### Angled connector type

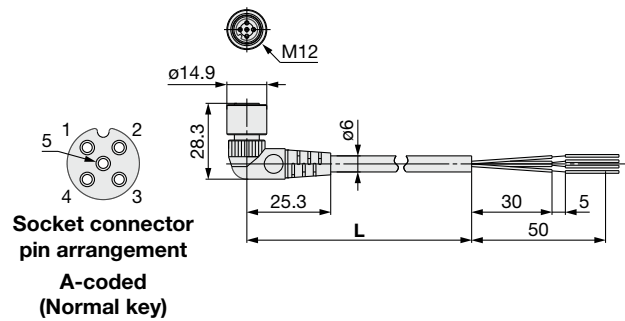

Item	Specifications
Cable O.D.	ø6 mm
Nominal cross section	0.3 mm <sup>2</sup> /AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)

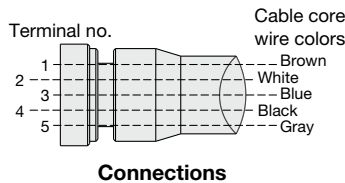


### SPEEDCON


**PCA- 1401804**

● Cable length (L)

1401804	1500 mm
1401805	3000 mm
1401806	5000 mm

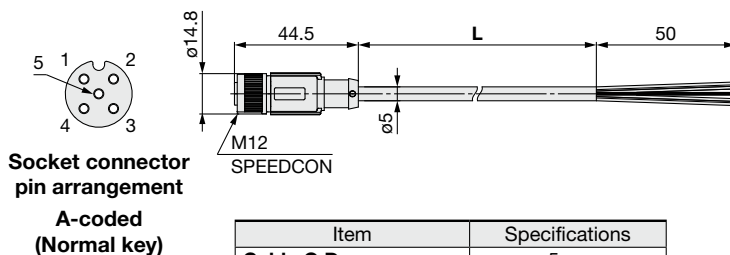


Item	Specifications
Cable O.D.	ø5 mm
Nominal cross section	0.3 mm <sup>2</sup> /AWG22
Wire diameter (Including insulator)	1.27 mm
Min. bending radius	21.7 mm (Fixed)

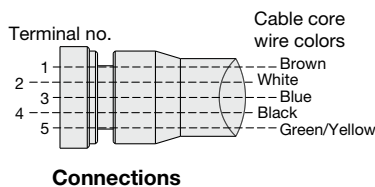

**PCA- 1557769**

● Cable length (L)

1557769	3000 mm
---------	---------

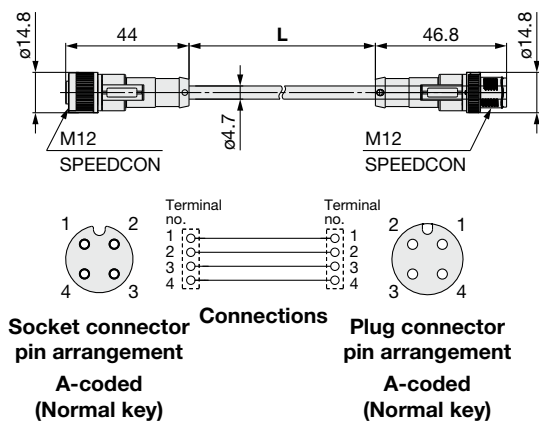

Socket connector pin arrangement  
A-coded  
(Normal key)

Plug connector pin arrangement  
A-coded  
(Normal key)

EXW1 Series

Accessories

Made to Order

EX600-W Series

Accessories




Technical Data

Country-specific Radio Law Compliance Table


Specific Product Precautions

# EX600-W Series
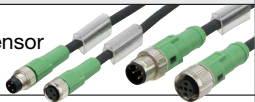
## ⑪ I/O Cable with Connector, I/O Connector

Name	Use	Part no.	Description
Cable with connector		PCA-1557769	Cable with M12 connector (4 pins/3 m)
		PCA-1557772	Cable with M8 connector (3 pins/3 m)
Field-wireable connector		PCA-1557730	Field-wireable connector (M8/3 pins/Plug/Piercecon® connection)
		PCA-1557743	Field-wireable connector
		PCA-1557756	(M12/4 pins/Plug/QUICKON-ONE connection/SPEEDCON)
Y connector		PCA-1557785	Y connector (2 x M12 (5 pins)-M12 (5 pins)/SPEEDCON)
		PCA-1557798	Y connector (2 x M8 (3 pins)-M12 (4 pins)/SPEEDCON)



- \* For further information, refer to the M8/M12 connector PCA series in the **Web Catalog**.
- \* When using the Y connector, connect it to the connector on the I/O unit through the sensor cable (PCA-1557769) with the M12 connector.

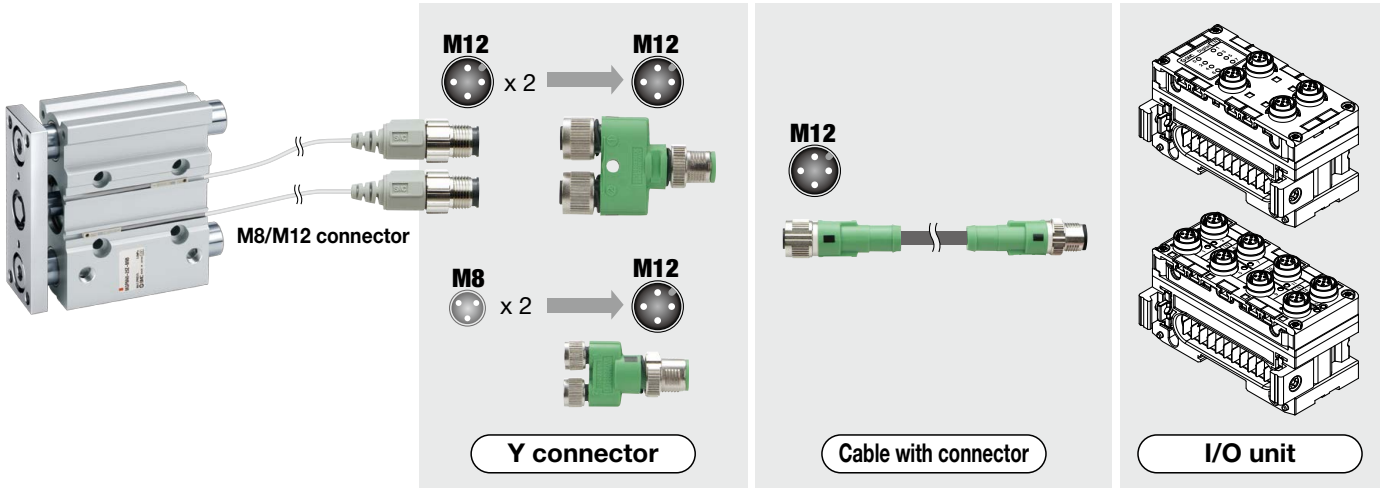

# Technical Data

## Frequency Hopping (FHSS: Frequency Hopping Spread Spectrum)

This communication technology uses spread spectrum transmission with frequency hopping to rapidly switch between frequencies. Because the frequency is constantly changing, this communication method is resistant to radio wave interference due to reflections or noise from other wireless equipment. It also allows for a high level of data security. Multiple systems can be installed in the same area, and it is a suitable technology for point-to-multipoint communication.

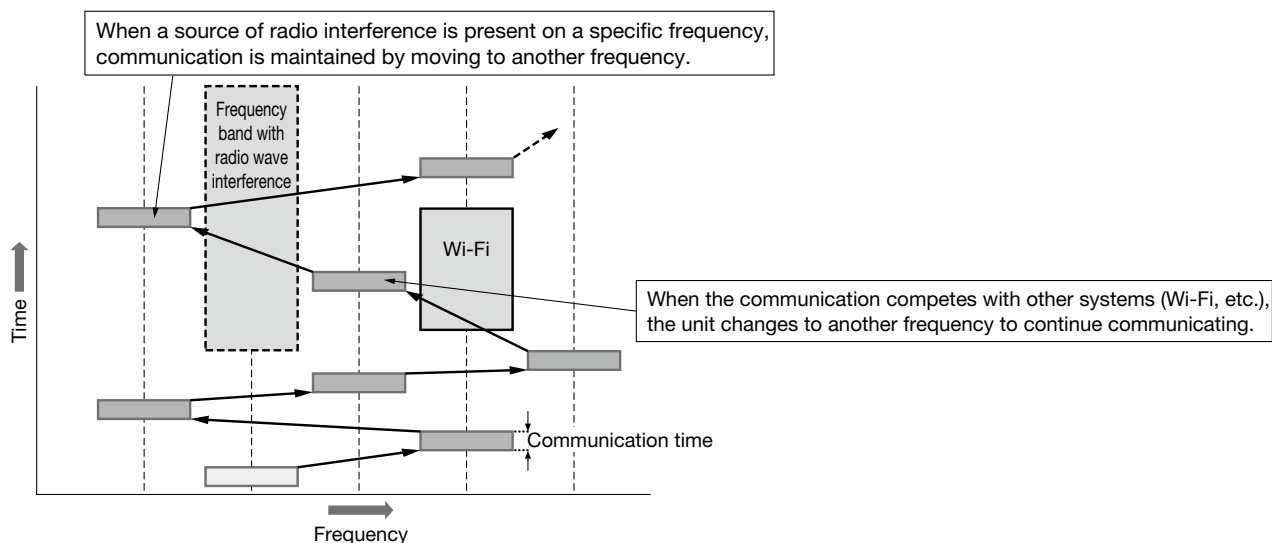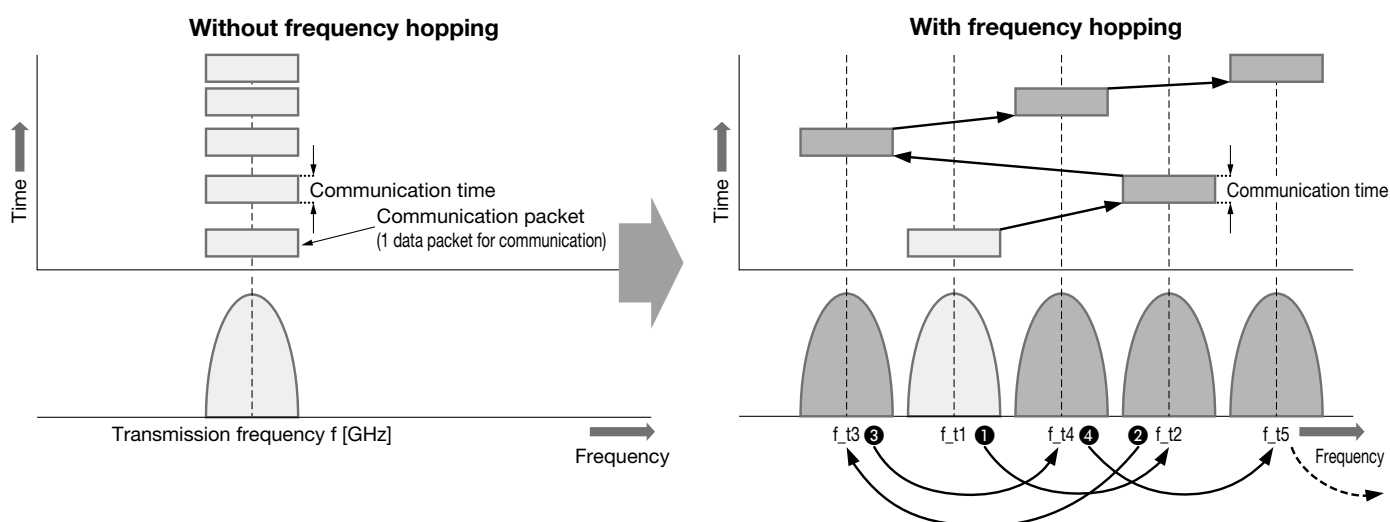





### ⚠ Warning <Important>

- This product is already certified in accordance with the Radio Act and the Japanese Radio Law, so customers do not need to apply for a license to use this product.  
However, be sure to comply with the following.
  - Do not disassemble or modify the product. Disassembly and modification are prohibited by law.
  - Customers in countries that comply with the Radio Law should refer to the "Country-specific Radio Law Compliance Table."
- As this product communicates by radio waves, communication may stop temporarily due to the ambient environment and/or operating method. SMC will not be held responsible for any secondary failure which may cause personal injury or damage to other devices or equipment.
- When several units are installed in close proximity to each other, slight interference may occur due to the characteristics of the wireless product.
- The electromagnetic waves emitted from this product may interfere with implantable medical devices such as cardiac pacemakers and cardioverter defibrillators, resulting in the malfunction of the medical device or other adverse effects.  
Please use extreme caution when operating equipment which may have an adverse effect on your implantable medical device. Be sure to thoroughly read the precautions stated in the catalog, operation manual, etc., of your implantable medical device, or contact the manufacturer directly for further details on what types of equipment need to be avoided.
- The communication performance is affected by the ambient environment, so be sure to perform communication testing before use.

# EXW1/EX600-W Series

## Country-specific Radio Law Compliance Table

As of June 2024

		Wireless system					
		Compact type <b>EXW1</b>				Modular type <b>EX600-W</b>	NFC reader/writer
		Wireless adapter <b>EXW1-A1</b> 	Compact base/remote CC-Link/e-CON				
			 External antenna External antenna set 	 Internal antenna			
Area	Country/Region	Part number suffix: <b>E</b> type	Part number suffix: <b>N</b> type	Part number suffix: <b>E</b> type	Part number suffix: <b>N</b> type	<b>EX600-W</b>	<b>EXW1-NT1</b>
Europe CE	Ireland	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Italy	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Estonia	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Austria	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Netherlands	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Cyprus	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Greece	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Croatia	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Sweden	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Spain	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Slovakia	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Slovenia	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Czech Republic	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Denmark	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Germany	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Hungary	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Finland	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	France	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Bulgaria	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Belgium	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Poland	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Portugal	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Malta	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Latvia	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Lithuania	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
Romania	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
Other Europe	Luxembourg	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Iceland	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Liechtenstein	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Switzerland	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Norway	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Turkey	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	U.K.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Ukraine	—	—	—	—	<input type="radio"/>	<input type="radio"/>
	Israel	<input type="radio"/>	<input type="radio"/>	—	—	—	—
	Saudi Arabia	<input type="radio"/>	<input type="radio"/>	—	—	—	—
	United Arab Emirates	<input type="radio"/>	<input type="radio"/>	—	—	—	—
Africa	Serbia	<input type="radio"/>	<input type="radio"/>	—	—	—	—
	South Africa	<input type="radio"/>	<input type="radio"/>	—	—	<input type="radio"/>	<input type="radio"/>
	Egypt	<input type="radio"/>	<input type="radio"/>	—	—	—	—
North, Central, and South America	Morocco	—	—	—	—	<input type="radio"/>	<input type="radio"/>
	U.S.	—	<input type="radio"/>	—	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Argentina	—	<input type="radio"/>	—	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Canada	—	<input type="radio"/>	—	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Chile	<input type="radio"/>	<input type="radio"/>	—	—	—	<input type="radio"/>
	Colombia	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Peru	<input type="radio"/>	<input type="radio"/>	—	—	—	<input type="radio"/>
	Brazil	—	<input type="radio"/>	—	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Mexico	—	<input type="radio"/>	—	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Asia	India	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Pakistan	<input type="radio"/>	<input type="radio"/>	—	—	—	—
	Indonesia	<input type="radio"/>	<input type="radio"/>	—	—	—	<input type="radio"/>
	Australia	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	South Korea	—	<input type="radio"/>	—	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Singapore	<input type="radio"/>	<input type="radio"/>	—	—	<input type="radio"/>	<input type="radio"/>
	Thailand	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	China	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Japan	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	New Zealand	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Philippines	<input type="radio"/>	<input type="radio"/>	—	—	<input type="radio"/>	<input type="radio"/>
	Myanmar	<input type="radio"/>	<input type="radio"/>	—	—	—	<input type="radio"/>
	Vietnam	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Bangladesh	<input type="radio"/>	<input type="radio"/>	—	—	—	<input type="radio"/>
	Hong Kong	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	—	<input type="radio"/>
	Malaysia*1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Taiwan	—	<input type="radio"/>	—	—	<input type="radio"/>	<input type="radio"/>

\*1 If this product is to be imported into Malaysia (including if the product is integrated into other equipment), an SMC Wireless System Certificate of Compliance and a test report may be required in some cases. Please contact SMC for further details.





## EXW1/EX600-W Series

# Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For fieldbus system precautions, refer to the "Operation Manual" on the SMC website: <https://www.smcworld.com>

### Notice

#### Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### Handling Precautions

#### Caution

1. This equipment complies with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the operation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
2. This device complies with Industry Canada's license-exempt RSSs.  
Operation is subject to the following two conditions:
  - (1) This device may not cause interference; and
  - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
3. When operating the product, please be sure to maintain a separation distance of at least 20 cm between your body (excluding fingers, hands, wrists, ankles, and feet) and the product to meet RF exposure safety requirements as determined by FCC and Innovation, Science and Economic Development Canada. Installation of this device must ensure that at 20 cm separation distance is maintained between the device and end users.

#### ■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc.

EtherNet/IP® is a registered trademark of ODVA, Inc.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

QuickConnect™ is a trademark of ODVA.

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

**⚠ Danger :** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

**⚠ Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

**⚠ Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

\*1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components  
ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components  
IEC 60204-1: Safety of machinery - Electrical equipment of machines - Part 1: General requirements  
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots etc.

### Warning

#### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

#### 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

#### 4. SMC products cannot be used beyond their specifications. They are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not allowed.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, combustion equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogs and operation manuals.
3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

### Caution

**SMC develops, designs, and manufactures products to be used for automatic control equipment, and provides them for peaceful use in manufacturing industries.**

**Use in non-manufacturing industries is not allowed.**

Products SMC manufactures and sells cannot be used for the purpose of transactions or certification specified in the Measurement Act of each country. The new Measurement Act prohibits use of any unit other than SI units in Japan.

## Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

### Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)  
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.  
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

\*2) **Suction cups (Vacuum pads) are excluded from this 1 year warranty.**

A suction cup (vacuum pad) is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the suction cup (vacuum pad) or failure due to the deterioration of rubber material are not allowed by the limited warranty.

### Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

### Revision History

**Edition B** \* A U-side end plate (for the SY) has been added.

**Edition C** \* The EXW1 series compact wireless system has been added.

**Edition D** \* UKCA compliance has been added.

\* Countries in which the product is Radio Law certified have been added.

**Edition E** \* EtherCAT (protocol) has been added to the EXW1 series (compact type).

\* The number of pages has been increased from 48 to 52.

**Edition F** \* IO-Link has been added as a protocol for the compact type EXW1 series wireless remote.  
\* The number of pages has been increased from 52 to 60.

**Edition G** \* DeviceNet has been added to the EXW1 series (compact type).  
\* The number of pages has been increased from 60 to 67.

**Edition H** \* Analog input, digital input/output, and valve manifold have been added to the compact type EXW1 series.  
\* The number of pages has been increased from 67 to 72.

**⚠ Safety Instructions** Be sure to read the “Handling Precautions for SMC Products” (M-E03-3) and “Operation Manual” before use.