### INFORMATION


RoHS

# Magnet Gripper/ 3-Position Type

### ø**32**


## Allows for high-speed transfer

Prevents the accidental attraction of a second workpiece and allows for high-speed transfer. Improved cycle time

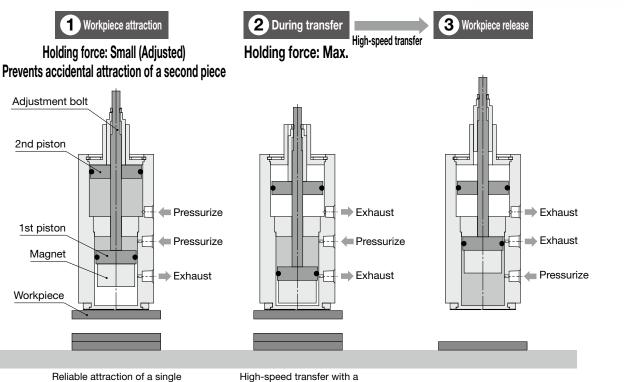

workpiece with a small holding force large holding force

Gripper mountable on 3 surfaces (Excludes the port side)

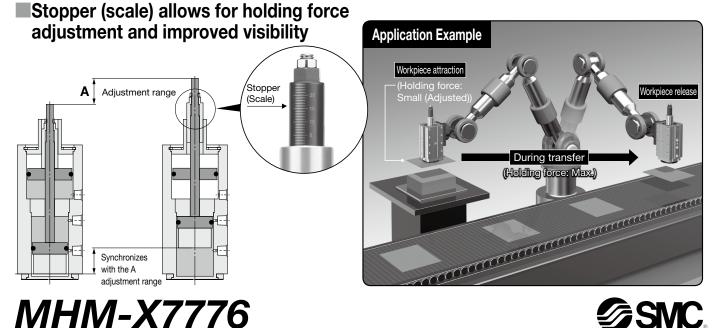



## Magnet Gripper/3-Position Type MHM-X7776 Ø32

How to Order MHM-32 M9BW -X7776 D1-3-position type Bore size 32 32 mm Number of auto switches Nil Port thread type 2 Nil Rc1/8 S 1 TF G1/8 n n Action: Double acting Auto switch Nil Without auto switch Body type For applicable auto 1 Adjustable holding force type switches, refer to the table below.

#### Applicable Auto Switches / Refer to the Web Catalog for further information on auto switches. Small Auto Switches

		Els states al	light		L	oad voltag	е	Auto swite	ch model	Lead v	vire le	ength	[m]	Durand	A	
Туре	e Special function	Electrical entry	Indicator light	Wiring (Output)	DC	AC	Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	Pre-wired connector	Applicable load		
_				3-wire (NPN)		5 V. 12 V		M9NV	M9N	•	•	•	0	0	IC	
switch	-			3-wire (PNP)		5 V, 12 V		M9PV	M9P	•			0	0 0	circuit	
SW				2-wire		12 V		M9BV	M9B	$\bullet$			0	0	_	
auto	Diagnostic indication (2-color indicator)	ication Grommet Ye		3-wire (NPN)		5 V. 12 V	M9NWV	M9NW	•	•	•	0	0	IC	Datas	
al				3-wire (PNP)	24 V	5 V, 12 V		M9PWV	M9PW				0	0	circuit	Relay, PLC
state				2-wire		12 V		M9BWV	M9BW	•			0	0		1 20
id s				3-wire (NPN)		5 V. 12 V		M9NAV*1	<b>M9NA</b> *1	0		0	0	IC		
Solid	Water resistant (2-color indicator)			3-wire (PNP)		5 V, 12 V		M9PAV*1	<b>M9PA</b> *1	0	0		0	0	circuit	
				2-wire		12 V		M9BAV*1	<b>M9BA</b> *1	0	0		0	0	-	

\*1 Water-resistant type auto switches can be mounted on the above models, but SMC cannot guarantee water resistance. Please contact SMC for water-resistant products.

\* Lead wire length symbols: 0.5 m...... Nil (Example) M9NW

- 1 m..... M (Example) M9NWM
- 3 m..... L (Example) M9NWL
- 5 m...... Z (Example) M9NWZ

\* Solid state auto switches marked with a "○" are produced upon receipt of order.
\* Auto switches are shipped together with the product but do not come

**RoHS** 

Auto switches are shipped together with the product but do not co assembled.

#### **Magnetic Field Resistant Auto Switches**

Туре	Auto switch model	Applicable magnetic field	Electrical entry	Indicator light	Wiring (Pin no. in use)	Load voltage	Lead wire length	Applicable load
	P3DWA						0.5 m	
	P3DWAL	AC magnetic field	Grommet	2-color	2-wire 24 VDC	24 VDC	3 m	Datas
Solid state auto switch	P3DWAZ	(Single-phase AC welding magnetic					5 m	Relay, PLC
SWITCH	P3DWASC	field)	Pre-wired connector			0.3 m		
	P3DWASE				2-wire (1–4)	]	0.5 11	

### Magnet Gripper/3-Position Type MHM-X7776



	Bore size [mm]	32				
Pilot port		Rc1/8, G1/8				
Fluid		Air				
Action		3-position				
Operating p	ressure	0.35 to 0.6 MPa				
Proof pressure		0.9 MPa				
Ambient and fluid temperatures		-10 to 60°C (No freezing)				
Holding force <sup>*1</sup>	Workpiece thickness: 2 mm	250 N				
	Workpiece thickness: 6 mm	500 N				
Residual ho	ding force	0.3 N or less				
Adjustment amount		0 to 24 mm				
Lubrication		Non-lube				
Weight		985 g				

\*1 The theoretical holding force (reference value) when the entire attraction surface of a low carbon steel plate is covered


#### **Replacement Parts**

Part no.


Pad




#### Model Selection / Selection Procedure

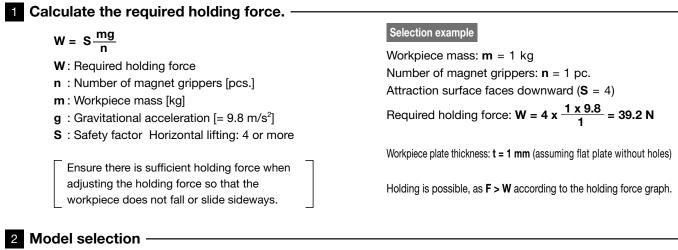

Referring to the theoretical holding force graph, select the models where F is larger than W. The holding force graph shows the theoretical value for low carbon steel plate. Holding forces vary depending on the material and shape of the workpiece. Please perform a holding test referring to the value selected based on the graph.

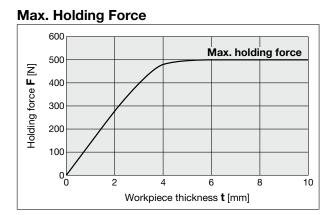

When Adjusting the Holding Force t: Workpiece thickness

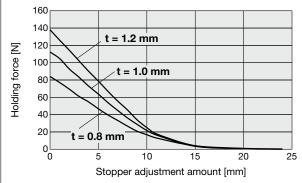


The model selection holding conditions, auto switch mounting position and mounting method, and specific product precautions are the same as those of the MHM series magnet gripper. Refer to the Web Catalog.



### MHM-X7776


**Dimensions** 

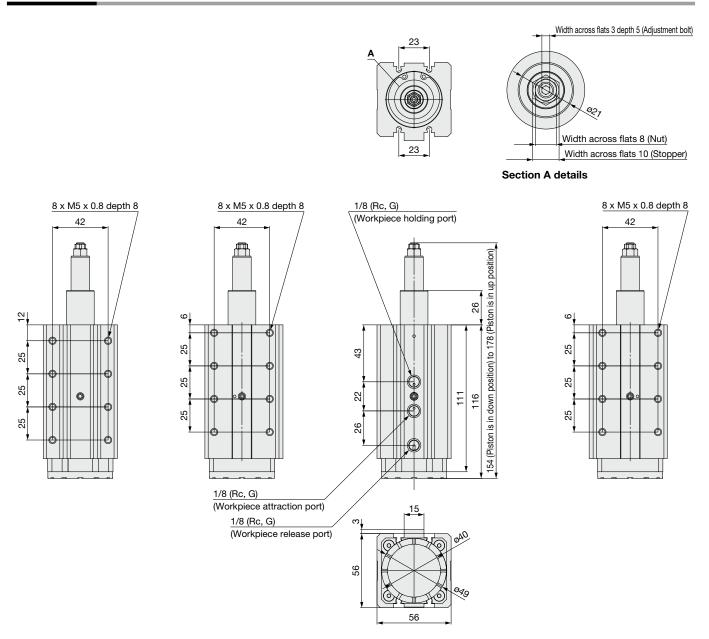

\* Refer to page 4 for the holding force adjustment method.

## **MHM-X7776 Holding Force Adjustment**

### Holding Force Adjustment

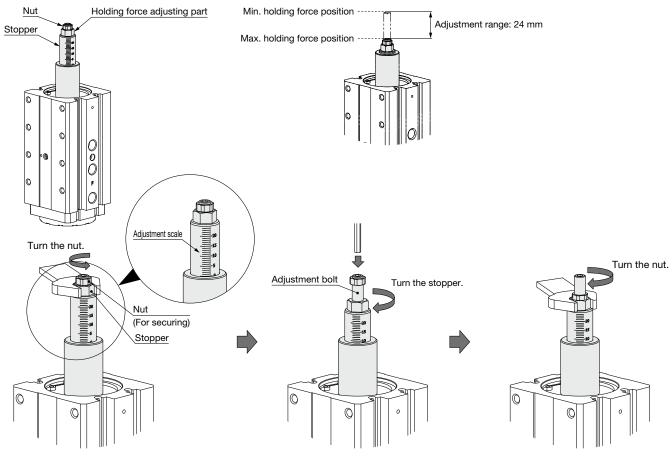


1. Secure the stopper with a wrench, etc., and rotate the nut to loosen it. (At the time of factory shipment, it is tightened to the specified torque of around adjustment scale 0 (max. holding force position).)

#### Max. Holding Force



#### When Adjusting the Holding Force

t: Workpiece thickness

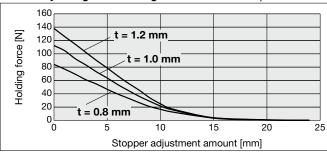


2. With the workpiece released,
secure the adjustment bolt,
rotate the stopper, and
adjust the holding force.

- 3. Secure the stopper with a wrench, etc., rotate the nut, and tighten to the specified torque.

Widt	h across flats	Nut tightening	Holding force adjustment range		
Adjustment bolt	Stopper	Nut	torque [N·m]	[mm]	
3	10	8	5.2	0 to 24	


### **∧**Caution

- 1. Do not apply external forces to the holding force adjusting part other than for the purpose of holding force adjustment. Do not fix the holding force adjusting part to the outside or attempt to rotate it.
- 2. Take safety measures during the adjustment of the holding force. The workpiece may drop.

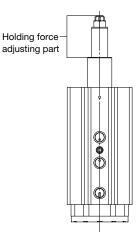

## MHM-X7776 Auto Switch Mounting

### Auto Switch Mounting Position Setting

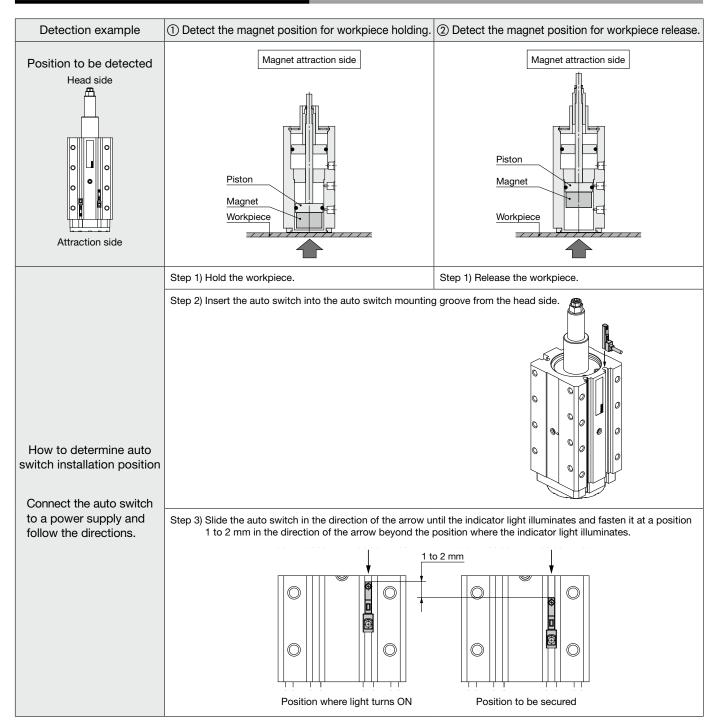

### Auto Switch Mounting MHM-X7776


### Auto Switch Use


- The auto switch reacts at 2 places when the magnet is at the head side (workpiece release).
  At C3 in the waveform chart, the magnet position cannot be detected.
  - C1: Detection area of the magnet position for workpiece release
  - C2: Detection area of the magnet position for workpiece holding
  - C3: Area where the magnet position cannot be detected
- In sections smaller than A1, the workpiece holding auto switch will respond.
  In sections larger than B1, the workpiece release auto switch will respond.
  Keep this in mind when detecting the magnet


position at the holding force adjustment position.

D-M9 D-M9 D-M9	₩U	D-M	19□ 9□W 9□A	D-P3DWA			
Perpendic	cular entry	In-line	entry	In-line entry			
A1 B1		A1	B1	A1	B1		
21	48	21	36	16.5	31.5		

\* Dimensions above are for reference.

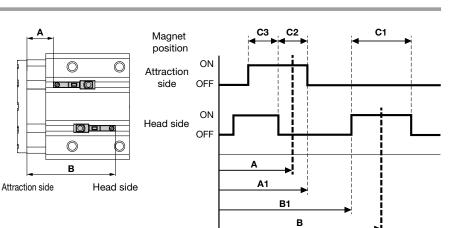

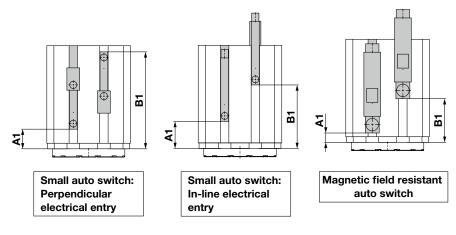

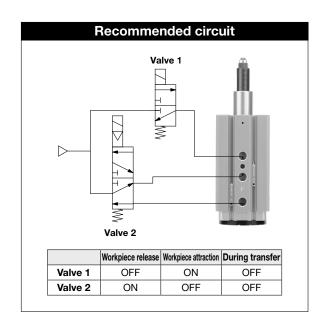

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation https://www.smcworld.com