# **Circulating Fluid Temperature Controller**


# Thermo-chiler Small Basic Type



# Large energy saving by triple control!



**Triple control** 

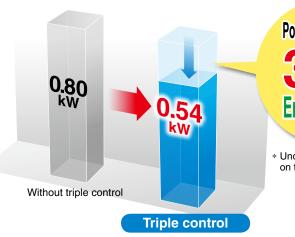

**Power consumption** 33% **Energy saving** 

\* Under the conditions shown on the "Features 1" page







Cooling capacity **1.2**, **1.6**, **2.2** kW

Max. ambient temperature 40°C (200 VAC)

Set temperature range 10 to 30°C

Temperature stability  $\pm 2.0^{\circ}$ C

Maintenance free Magnet pump

Low-noise design 55 dB (A)

Power supply 100/200 VAC 50/60 Hz

Compact/Lightweight 32 kg (100 VAC)



CAT.ES40-58A

Series HRSE

# Simple function and performance.

**Cooling capacity** 

1.2, 1.6, 2.2 kW (60 Hz)

**Power supply** 

100/200 VAC (50/60 Hz)

# **Triple control**

Compressor, fan and electronic control valve can be controlled Compressor Fan Val


Triple control

Power consumption

reduced by 33%

depending on the heat load from the user's equipment.

• 100 VAC • Frequency: 60 Hz • Circulating fluid temperature in the rated operation: 20°C • Ambient temperature: 25°C • Load: 1200 W • Flow rate: 7 L/min

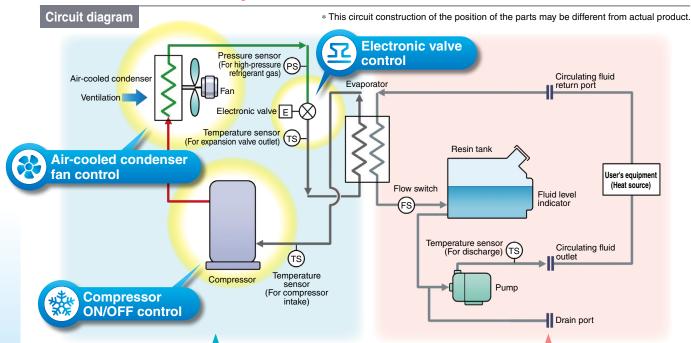

# Refrigeration circuit

- The compressor compresses the refrigerant gas, and discharges the high temperature and high pressure refrigerant gas.
- The high temperature and high pressure refrigerant gas is cooled down by an air-cooled condenser with the ventilation of the fan, and becomes a liquid.
- The liquefied high pressure refrigerant gas expands and its temperature lowers when it passes through the electronic valve and vaporizes by taking heat from the circulating fluid in the evaporator.
- The vaporized refrigerant gas is sucked into the compressor and compressed again.

# Point Refrigeration circuit control system requires the minimum basic essential function.

According to the amount of heat generated from user's equipment, the system turns power ON/OFF to the compressor and controls the electronic valve. By combining the above function, the system also controls the number of rotations of the fan that is appropriate to the amount of heat and ambient temperature, to provide the performance of temperature control of  $\pm 2^{\circ}\text{C}$ .


## Circulating fluid circuit

- The circulating fluid discharged from the pump, is heated by the user's equipment and returns to the tank.
- The circulating fluid is sent to the evaporator by the pump, and is controlled to a set temperature by the refrigeration circuit, to be discharged to the user's equipment side again by the thermo-chiller.

Temperature control system requires the minimum basic essential function.

Signal of temperature sensor for pump discharging controls the refrigeration circuit. Circulating fluid is heated by the pump heat and the amount of heat generated from user's equipment.

# Thermo-chiller of the basic type

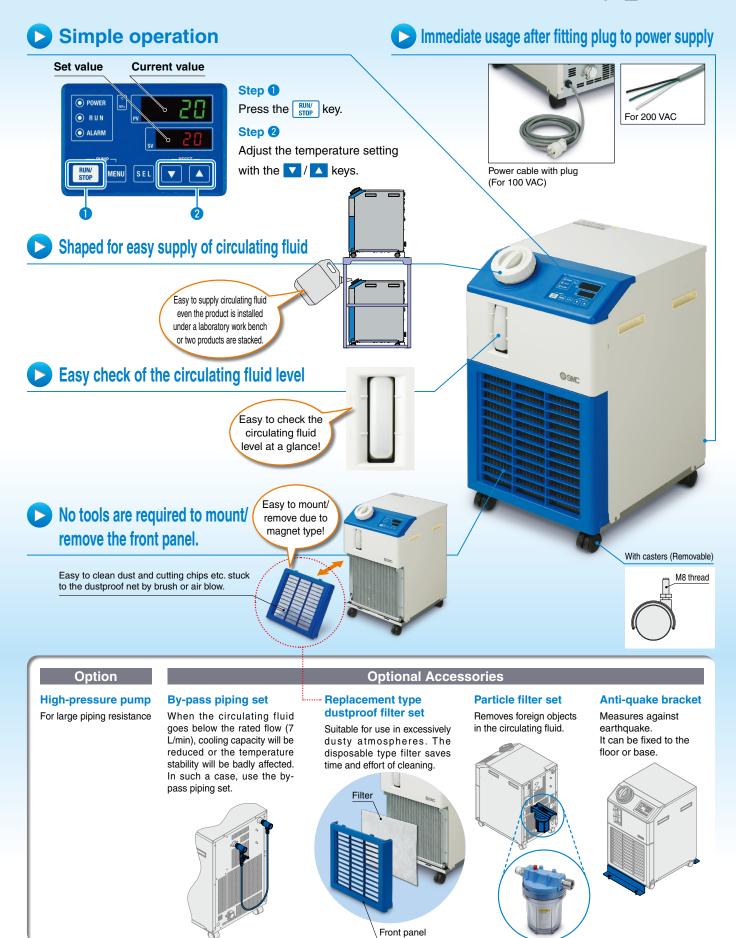


# **Application Examples**

	Heat source	Automotive	Light electrical appliance	Food	Machinery	Medical	Semicondu
Arc welding machine	Torch	•	аррианов		•		
Resistance welding machine	Tip	•	•		•		
Laser welding machine	Oscillator	•	•		•		•
JV curing device	Lamp	•	•	•		•	
K-ray instrument			•			•	•
Electronic microscope	Lens		•			•	•
Laser marker	Oscillator	•	•	•		•	•
Ultra sonic wave inspection machine		•	•		•		
Atomizing device/ Crushing equipment	Blade			•			
Linear motor	Motor	•			•		
Packaging machines (food products)	Dies/ Welded portions			•			
Mold cooling	Mold	•	•	•		•	
Temperature control of adhesive and paint material	Paint material/ Welding materials	•	•	•			
Cooling of vacuum pump	Pump	•					•
Shrink fit machine	Workpiece	•			•		
Gas cylinder cabinet							•
Concentrating equipment	Test liquid			•		•	
Reagent cooling equipment	Reagent			•		•	•
Cleaning machine hydrocarbon-based)	Cleaning tank	•	•		•		
Printing machine	Roller		•	•	•		
Chamber electrode	Electrode						•
High frequency induction heating equipment	Power supply/ Heating coil	•			•		

# Circulating Fluid Temperature Controller Thermo-chiller Small Basic Type

# Circulating Fluid Line Equipment

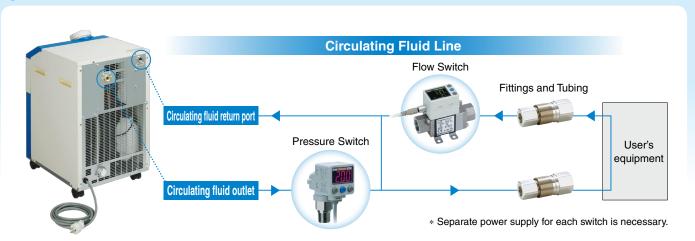

## **Pressure Switch**

2-Color Display High-Precision Digital Pressure Switch

Series ISE80



## Flow Switch

3-Color Display
Digital Flow Switch for Water
Series PF3W



3-Color Display Electromagnetic Type Digital Flow Switch

Series LFE



# **Fittings and Tubing**

## S Coupler Series KK







Metal One-touch Fittings Series KQB2



**Stainless Steel 316 One-touch Fittings** 

Series KQG2



Stainless Steel 316 Insert Fittings Series KFG2



Tubing Series T□




Series	Material		
T	Nylon		
TU	Polyurethane		
TH	FEP (Fluoropolymer)		
TD	Modified PTFE (Soft fluoropolymer)		
TL	Super PFA		

For details of these products, refer to  ${\it the WEB \ catalog}$  or the Best Pneumatics No. 6 and 7.



# Thermo-chiller Small Basic Type Series HRSE



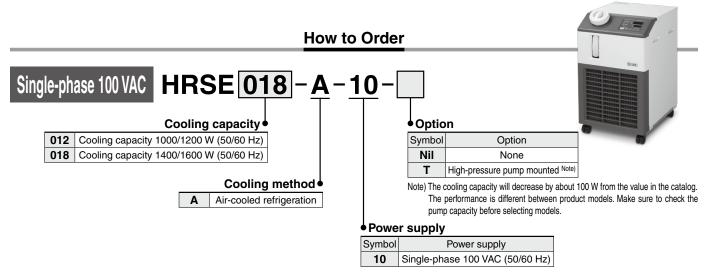


# **Specifications** \* There are different values from standard specifications.

	Model	HRSE012-A-10-(T)	HRSE018-A-10-(T)	
Cooling meth	od	Air-cooled refrigeration		
Refrigerant		R407C (HFC)		
Control meth	od	Compressor ON/OFF		
Ambient temp	perature/Humidity/Altitude Note 1), Note 11)	Temperature: 5 to 35°C, Humidity: 30 to 70%, Altitude: less than 3000 m		
	Circulating fluid Note 2)	Tap water, 15% ethylene glycol aqueous solution		
	Set temperature range Note 1) °C	10 t	o 30	
	Cooling capacity Note 3), Note 11) (50/60 Hz)	1000/1200 For option -T: 900/1100	1400/1600 For option -T: 1300/1500	
0:	Temperature stability Note 4) °C	±	2	
Circulating fluid system	Pump capacity Note 5) (50/60 Hz) MPa		/0.11 (at 7 L/min) L/min)/0.18 (at 7 L/min)	
	Rated flow Note 6) (50/60 Hz) L/min	7/7		
	Tank capacity L	Approx. 5		
	Port size	Rc1/2		
	Fluid contact material	Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass, Ceramic, Carbon, PP, PE, PC		
	Power supply	Single-phase 100 VAC 50/60 Hz Allowable voltage range $\pm 10\%$		
	Fuse A	1	5	
Electrical	Power cable size Note 10) —	3 cores x 14 AWG (2.0 mm <sup>2</sup> ), 3 m		
system	Applicable earth leakage breaker capacity Note 7) A	1	5	
0,0.0	Rated operating current Note 3) (50/60 Hz)	7.1/7.8 For option -T: 7.8/8.4	7.1/7.8 For option -T: 7.8/8.4	
	Rated power consumption Note 3) VA (50/60 Hz)	0.53/0.54 For option -T: 0.62/0.62	0.63/0.63 For option -T: 0.72/0.72	
Dimensions Note 8) mm		W377 x D435 x H615 For option -T: W377 x D500 x H615		
Accessories		Fitting (for drain outlet) 1 pc., Operation Manual (for installation/operation) 1		
Weight Note 9)	kg	32 For option -T: 39		

- Note 1) It should have no condensation. During seasons or in locations where the ambient temperature is likely to fall below freezing point, please contact SMC for that case.
- Note 2) If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system circulating type make-up water).
- Note 3) ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water
- Note 4) Temperature at the thermo-chiller outlet when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.
- Note 5) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.
- Note 6) Required flow rate for cooling capacity or maintaining the temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow.
- Note 7) Purchase an earth leakage breaker with current sensitivity of 15 mA or 30 mA/power supply 100 VAC separately.
- Note 8) Dimensions between panels, not including the dimensions of protrusion.
- Note 9) Weight in the dry state without circulating fluids.
- Note 10) Cable terminal is provided with a plug with ground terminal (JIS C 8303 Plug for the receptacle with dipoles grounding electrode).
- Note 11) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 12) Item 14 "\* For altitude of 1000 m or higher.

# Thermo-chiller/Small Basic Type Series HRSE

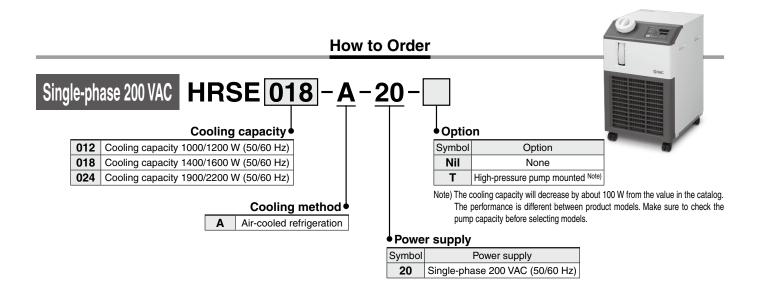

# **Specifications** \* There are different values from standard specifications.

Model		HRSE012-A-20-(T)	HRSE018-A-20-(T)	HRSE024-A-20-(T)			
Cooling meth	od	Air-cooled refrigeration					
Refrigerant R407C (HFC)			R407C (HFC)				
Control meth	od	Compressor ON/OFF					
Ambient temp	perature/Humidity/Altitude Note 1), Note 11)	Temperature 5 to 40°C, Humidity: 30 to 70%, Altitude: less than 3000 m					
	Circulating fluid Note 2)	Tap water, 15% ethylene glycol aqueous solution					
	Set temperature range Note 1) °C	10 to 30					
	Cooling capacity Note 3), Note 11) (50/60 Hz)	1000/1200 For option -T: 900/1100	1400/1600 For option -T: 1300/1500	1900/2200 For option -T: 1800/2100			
Circulating fluid system	Temperature stability Note 4) °C	·	±2	·			
	Pump capacity Note 5) (50/60 Hz) MPa	11	0.08 (at 7 L/min)/0.11 (at 7 L/min) For option -T: 0.13 (at 7 L/min)/0.18 (at 7 L/min)				
	Rated flow Note 6) (50/60 Hz) L/min	1	7/7				
	Tank capacity L		Approx. 5				
	Port size		Rc1/2				
	Fluid contact material	Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass, Ceramic, Carbon, PP, PE, POM, EPDM, PVC					
	Power supply	Single-phase 200 VAC 50/60 Hz Allowable voltage range ±10%					
	Fuse A		15				
	Power cable size Note 10) —		3 cores x 14 AWG (2.0 mm <sup>2</sup> ), 3 m	1			
Electrical system	Applicable earth leakage breaker capacity Note 7)		15				
system	Rated operating current Note 3) (50/60 Hz)	4.1/5.0 For option -T: 4.5/5.4	4.2/5.3 For option -T: 4.6/5.7	4.3/5.4 For option -T: 4.7/5.8			
	Rated power consumption Note 3) VA (50/60 Hz)	0.58/0.74 For option -T: 0.66/0.82	51.5.51.55				
Dimensions N	ote 8) mm	W377 x D435 x H615 For option -T: W377 x D500 x H615					
Accessories		Fitting (for drain outlet) 1 pc., Operation Manual (for installation/operation) 1					
Weight Note 9)	kg	35 For option -T: 42					


- Note 1) It should have no condensation. During seasons or in locations where the ambient temperature is likely to fall below freezing point, please contact SMC for that case.
- Note 2) If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system circulating type make-up water).
- Note 3) ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water
- Note 4) Temperature at the thermo-chiller outlet when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.
- Note 5) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.
- Note 6) Required flow rate for cooling capacity or maintaining the temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow.
- Note 7) Purchase an earth leakage breaker with current sensitivity of 30 mA/power supply 200 VAC separately.
- Note 8) Dimensions between panels, not including the dimensions of protrusion.
- Note 9) Weight in the dry state without circulating fluids.
- Note 10) The end parts of all three lead wires of the cable terminal are untreated (bare cut).
- Note 11) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 12) Item 14 "\* For altitude of 1000 m or higher."





Note 1) If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 12) Item 14 "\* For altitude of 1000 m or higher".


# **Cooling Capacity**


Note 2) For a product with high-pressure pump option (-T), the cooling capacity will decrease by about 100 W from each graph.

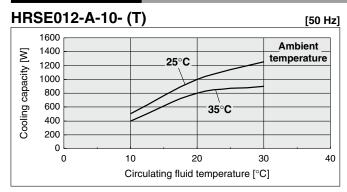


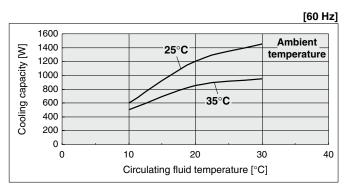


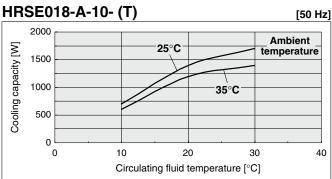


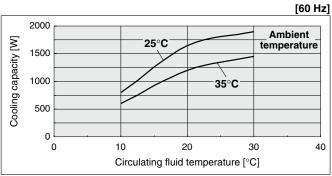


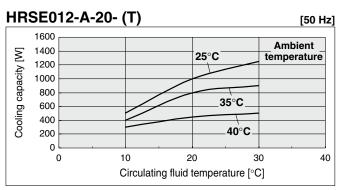


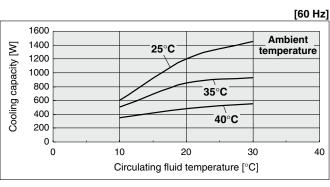

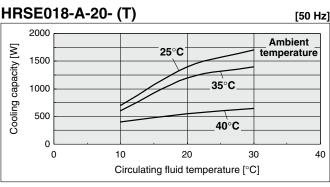

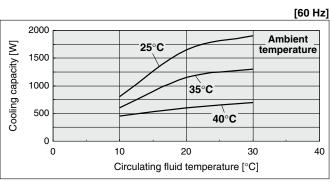

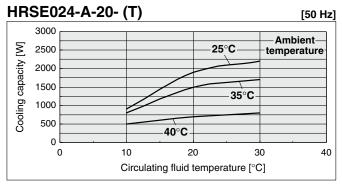

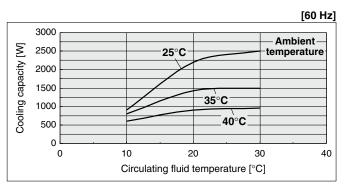





# Thermo-chiller/Small Basic Type Series HRSE

# **Pump Capacity**


# HRSE 012 - A-10

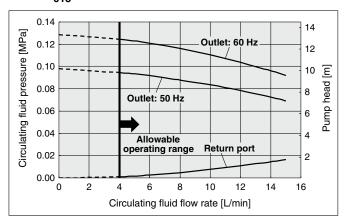


 $\mathsf{HRSE}_{018}^{012}\text{-}\text{A--20}$ 

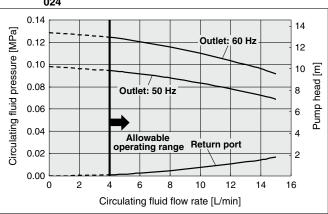


Option (-T): High-pressure Pump Mounted HRSE  $^{012}_{018}$ -A-10-T

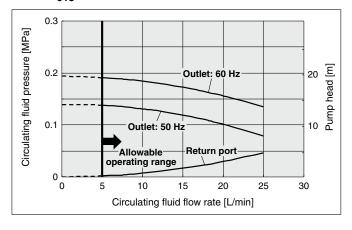


Option (-T): High-pressure Pump Mounted HRSE 018 -A-20-T

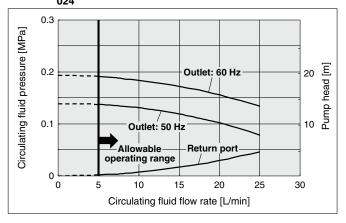

# **Dimensions**

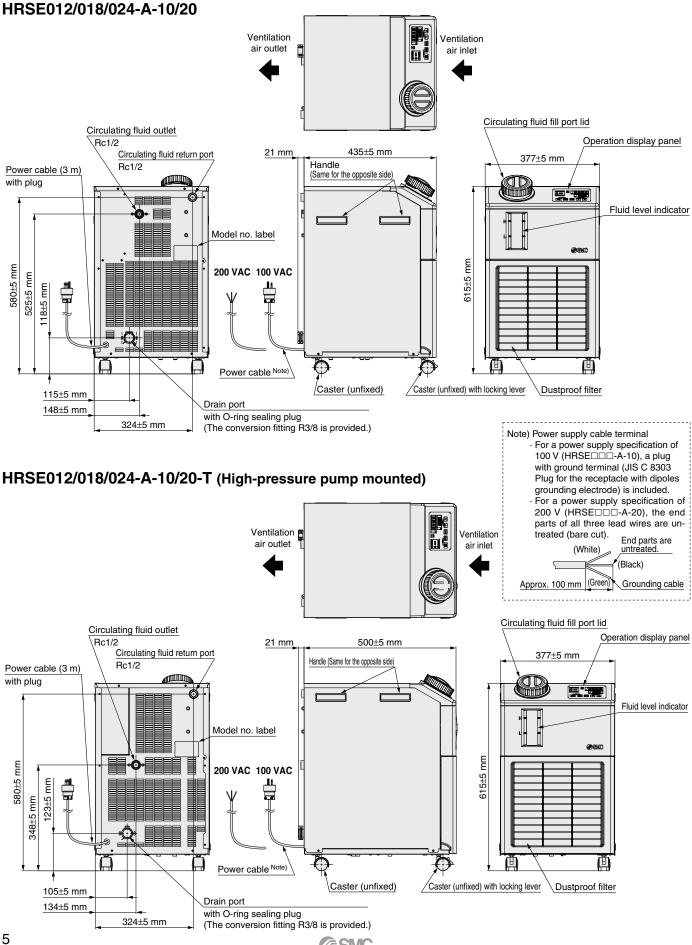

# Operation Display Panel

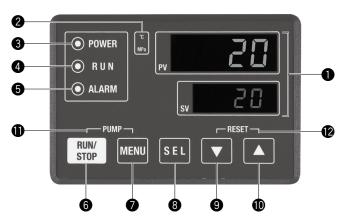

No.	Description	Function			
•	Digital display	PV Displays the current circulating fluid temperature, pressure, alarm codes and other menu items (codes).			
0	(7-segment and 4 digits)	SV Displays the set values of the circulating fluid discharge temperature and other menus.			
2	[°C] [MPa] lamp	[°C]   lamp is turned on when temperature is displayed on the digital display.  [MPa] lamp is turned on when pressure is displayed on the digital display.			
3	[POWER] lamp	Lights up when the power is being supplied to the unit.			
4	[RUN] lamp	Lights up during operation, and goes off when it is stopped. Flashes during stand-by for stop or independent operation of the pump.			
6	[ALARM] lamp	Flashes with buzzer when alarm occurs.			
6	[RUN/STOP] key	Makes the product run or stop.			
7	[MENU] key	Shifts the main menu (display screen of circulating fluid discharge temperature and pressure, etc.) and other menus (for monitoring and entry of set values).			
8	[SEL] key	Changes the item in menu and enters the set value.			
9	[ <b>▼</b> ] key	Decreases the set value.			
•	[ <b>▲</b> ] key	Increases the set value.			
•	[PUMP] key	Press the [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air).			
12	[RESET] key	Press the [▼] and [▲] keys simultaneously. The alarm buzzer is stopped and the [ALARM] lamp is reset.			

# Alarm

Code	Alarm message	Operation status
AL02	High circulating fluid discharge temp.	Stop
AL03	Circulating fluid discharge temp. rise	Continue*
AL04	Circulating fluid discharge temp. drop	Continue*
AL07	Abnormal pump operation	Stop
AL20	Memory error	Stop
AL22	Circulating fluid discharge temp. sensor failure	Stop
AL24	Compressor intake temp. sensor failure	Stop
AL26	Compressor discharge pressure sensor failure	Stop
AL27	Compressor intake pressure sensor failure	Stop
AL28	Pump maintenance	Continue
AL29	Fan motor maintenance	Continue
AL30	Compressor maintenance	Continue

<sup>\*</sup> "Stop" or "Continue" are default settings. Customers can change them to "Continue" and "Stop". For details, read the Operation Manual.



# **Options/Optional Accessories**

# **Options**

Note) Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.



Option symbol

High-pressure Pump Mounted

High-pressure pump


Possible to choose a high-pressure pump in accordance with user's piping resistance. Cooling capacity will decrease by heat generated in the pump.

# **Optional Accessories**

## 1 Anti-quake bracket

Bracket for earthquakes. Anchor bolt (M8) suitable for the flooring material should be prepared separately by user. (Anti-quake bracket thickness: 1.6 mm)

Part no. (per unit) Applicable model		Α	В	С	D
HRS-TK003	HRSE012-A-□ HRSE018-A-□ HRSE024-A-□	240	(335)	505	(540)
HN3-1K003	HRSE012-A-□-T HRSE018-A-□-T HRSE024-A-□-T	240	(335)	555	(590)

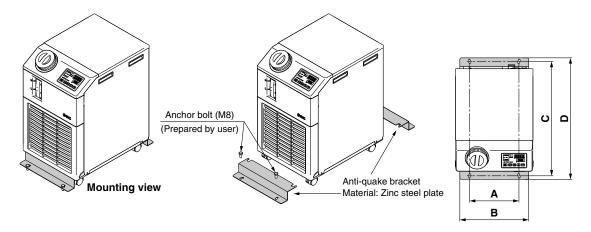

## 2 By-pass piping set


When the circulating fluid goes below the rated flow (7 L/min), cooling capacity will be reduced or the temperature stability will be badly affected. In such a case, use the by-pass piping set.

A high-pressure pump is also available.

Part no.	Applicable model
HRS-BP001	HRSE012-A-□(-T) HRSE018-A-□(-T) HRSE024-A-□(-T)

### **Parts List**

No.	Description			
(1)	By-pass tube (700 mm)			
	(Part no.: TL0806)			
2	Outlet piping (with ball valve)			
3	Return port piping			
4	Nipple (Size: 1/2) (2 pcs.)			

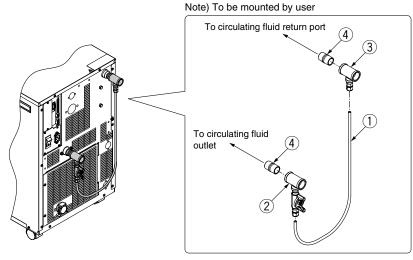



# **Optional Accessories**


# 3 Replacement type dustproof filter set

A disposable dustproof filter is mounted instead of the dustproof net on the front panel.

Part no.	Applicable model		
HRS-FL001	HRSE□-A-□-(T)		


## **Parts List**


No.	Description	Part no.	Note		
1	dustroof filter set HRS-FL001		Front panel with hook-and-loop fastener for holding filter 5 filters are included. (No dustproof net is included.)		
2	Replacement type dustproof filter	HRS-FL002	5 filters per set Size: 300 x 370		

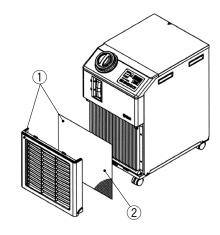



## 4 Particle filter set

Removes foreign objects in the circulating fluid.

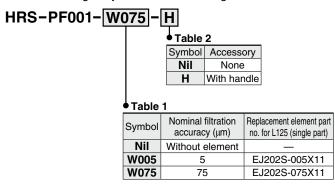

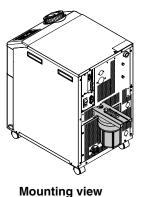

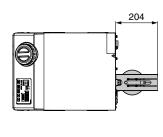

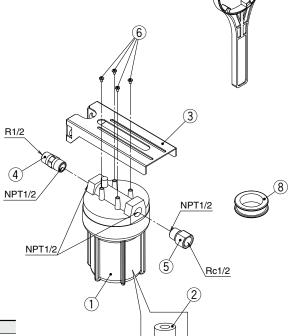

## **Parts List**

No.	Model	Description	Material	Q'ty	Note
1	_	Body	PP	1	_
2	EJ202S-005X11	Element	PP/PE	1	
(2)	EJ202S-075X11	Element			_
3	_	Particle filter bracket	SGCC	1	_
4	_	Nipple	Stainless steel	1	Conversion from R to NPT
(5)	_	Extension piece	Stainless steel	1	Conversion from NPT to Rc
6	_	Tapping screw	_	4	_
7	_	Handle	_	1	When -H is selected
8	_	Pipe tape	PTFE	1	_



# **Cooling Capacity Calculation**

# **Required Cooling Capacity Calculation**

# Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of

the heat generating area — i.e. the area requiring cooling — within the user's equipment.\* I: Current 1 Derive the heat generation amount from the power consumption.

Q: Heat generation User's equipment

Power consumption P: 1000 [W]

$$Q = P = 1000 [W]$$

Cooling capacity = Considering a safety factor of 20%,

② Derive the heat generation amount from the power supply output.

Power supply output VI: 1.0 [kVA]

 $Q = P = V \times I \times Power factor$ 

In this example, using a power factor of 0.85:

$$= 1.0 [kVA] \times 0.85 = 0.85 [kW] = 850 [W]$$

Cooling capacity = Considering a safety factor of 20%,

3 Derive the heat generation amount from the output.

V: Power

supply voltage

P

Power consumption

Output (shaft power etc.) W: 800 [W]

$$Q = P = \frac{W}{Efficiency}$$

In this example, using an efficiency of 0.7:

$$=\frac{800}{0.7}=1143$$
 [W]

Cooling capacity = Considering a safety factor of 20%,

\* The above examples calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully

# Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment Q: Unknown [W] ([J/s]) Circulating fluid : Tap water\* Circulating fluid mass flow rate qm :  $(= \rho \times qv \div 60) [kg/s]$ Circulating fluid density of : 1 [kg/dm<sup>3</sup>] : 10 [dm<sup>3</sup>/min] Circulating fluid (volume) flow rate qv Circulating fluid specific heat C : 4.2 x 10<sup>3</sup> [J/(kg·K)] Circulating fluid outlet temperature T1 : 293 [K] (20 [°C]) Circulating fluid return temperature T2 : 295 [K] (22 [°C]) Circulating fluid temperature difference  $\Delta T$  $: 2.0 [K] (= T_2 - T_1)$ Conversion factor: minutes to seconds (SI units): 60 [s/min]


\* Refer to page 10 for the typical physical property value of tap water or other circulating fluids.

$$Q = q_m \times C \times (T_2 - T_1)$$

$$= \frac{\rho \times q_{V} \times C \times \Delta T}{60} = \frac{1 \times 10 \times 4.2 \times 10^{3} \times 2.0}{60}$$

 $= 1400 [J/s] \approx 1400 [W]$ 

Cooling capacity = Considering a safety factor of 20%,

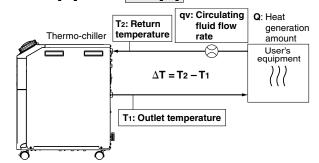

### Heat generation amount by user's equipment $\mathbf{Q}$ : Unknown [cal/h] $\rightarrow$ [W] Circulating fluid : Tap water\* Circulating fluid weight flow rate qm : $(= \rho \times q_v \times 60)$ [kgf/h] Circulating fluid weight volume ratio $\gamma$ : 1 [kgf/L] Circulating fluid (volume) flow rate qv : 10 [L/min] Circulating fluid specific heat C : 1.0 x 10<sup>3</sup> [cal/(kgf.°C)] Circulating fluid outlet temperature T1 : 20 [°C] Circulating fluid return temperature T2 : 22 [°C] Circulating fluid temperature difference $\Delta T$ : 2.0 [°C] (= T<sub>2</sub> - T<sub>1</sub>) Conversion factor: hours to minutes : 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W] qm x C x (T2 - T1) 860 $\gamma$ x qv x 60 x C x $\Delta T$ 860 $1 \times 10 \times 60 \times 1.0 \times 10^3 \times 2.0$ 1200000 [cal/h] 860 ≈ 1400 [W] Cooling capacity = Considering a safety factor of 20%, 1400 [W] x 1.2 = 1680 [W]

Example of conventional measurement units (Reference)

# **Required Cooling Capacity Calculation**

# Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

: 20 [dm<sup>3</sup>]

Heat quantity by cooled substance (per unit time) Q: Unknown [W] ([J/s])

: Water Cooled substance :  $(= \rho \times V)$  [kg] Cooled substance mass m Cooled substance density p : 1 [kg/L]

Cooled substance total volume V


: 4.2 x 10<sup>3</sup> [J/(kg·K)] Cooled substance specific heat C Cooled substance temperature when cooling begins To: 305 [K] (32 [°C])

Cooled substance temperature after t hour Tt : 293 [K] (20 [°C]) Cooling temperature difference  $\Delta T$ :  $12 [K] (= T_0 - T_t)$ Cooling time  $\Delta t$ : 900 [s] (= 15 [min])

\* Refer to the following for the typical physical property values by circulating fluid.

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t} = \frac{\rho \times V \times C \times \Delta T}{\Delta t}$$
$$= \frac{1 \times 20 \times 4.2 \times 10^3 \times 12}{900} = 1120 \text{ [J/s]} \approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

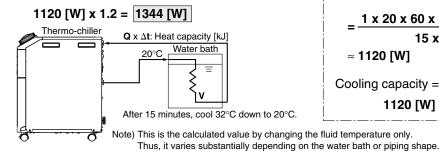

Example of conventional measurement units (Reference) Heat quantity by cooled substance (per unit time)  $\textbf{Q}\colon Unknown\ [cal/h] \to [W]$ 

Cooled substance Cooled substance weight m :  $(= \rho \times V)$  [kgf] Cooled substance weight volume ratio  $\gamma$ : 1 [kgf/L]

Cooled substance total volume V : 20 [L] Cooled substance specific heat C : 1.0 x 10<sup>3</sup> [cal/(kgf.°C)]

Cooled substance temperature when

cooling begins To : 32 [°C] Cooled substance temperature after t hour Tt: 20 [°C]

Cooling temperature difference  $\Delta T$ : 12 [ $^{\circ}$ C] (= To - Tt)

Cooling time  $\Delta t$ : 15 [min] Conversion factor: hours to minutes : 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t \times 860} = \frac{\gamma \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 20 \times 60 \times 1.0 \times 10^{3} \times 12}{15 \times 860}$$

$$\approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

1120 [W] x 1.2 = 1344 [W]

# Precautions on Cooling Capacity Calculation

# 1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

## 2. Pump capacity

### <Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

## <Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

# Circulating Fluid Typical Physical Property Values

### 1. This catalog uses the following values for density and specific heat in calculating the required cooling capacity.

 $\rho$ : 1 [kg/L] (or, using conventional unit system, weight volume ratio  $\gamma$  = 1 [kgf/L]) C: 4.19 x 10³ [J/(kg·K)] (or, using conventional unit system, 1 x 10³ [cal/(kgf·°C)]) Density

#### 2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference. Water 15% Ethylene Glycol Aqueous Solution

Physical property value	<b>Density</b> ρ	Specific heat C	Conventional unit system		
Temperature	[kg/L]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf⋅°C)]	
5°C	1.00	4.2 x 10 <sup>3</sup>	1.00	1 x 10 <sup>3</sup>	
10°C	1.00	4.19 x 10 <sup>3</sup>	1.00	1 x 10 <sup>3</sup>	
15°C	1.00	4.19 x 10 <sup>3</sup>	1.00	1 x 10 <sup>3</sup>	
20°C	1.00	4.18 x 10 <sup>3</sup>	1.00	1 x 10 <sup>3</sup>	
25°C	1.00	4.18 x 10 <sup>3</sup>	1.00	1 x 10 <sup>3</sup>	
30°C	1.00	4.18 x 10 <sup>3</sup>	1.00	1 x 10 <sup>3</sup>	
35°C	0.99	4.18 x 10 <sup>3</sup>	0.99	1 x 10 <sup>3</sup>	
40°C	0.99	4.18 x 10 <sup>3</sup>	0.99	1 x 10 <sup>3</sup>	

Physical property value	Density ρ	Specific heat C	Conventional unit system		
Temperature	[kg/L]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]	
5°C	1.02	3.91 x 10 <sup>3</sup>	1.02	0.93 x 10 <sup>3</sup>	
10°C	1.02	3.91 x 10 <sup>3</sup>	1.02	0.93 x 10 <sup>3</sup>	
15°C	1.02	3.91 x 10 <sup>3</sup>	1.02	0.93 x 10 <sup>3</sup>	
20°C	1.01	3.91 x 10 <sup>3</sup>	1.01	0.93 x 10 <sup>3</sup>	
25°C	1.01	3.91 x 10 <sup>3</sup>	1.01	0.93 x 10 <sup>3</sup>	
30°C	1.01	3.91 x 10 <sup>3</sup>	1.01	0.94 x 10 <sup>3</sup>	
35°C	1.01	3.91 x 10 <sup>3</sup>	1.01	0.94 x 10 <sup>3</sup>	
40°C	1.01	3.92 x 10 <sup>3</sup>	1.01	0.94 x 10 <sup>3</sup>	

Note) The above shown are reference values. Contact circulating fluid supplier





Be sure to read this before handling. Refer to back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

## Design

# **⚠** Warning

- This catalog shows the specifications of a single unit.
  - Confirm the specifications of the single unit (contents of this catalog) and thoroughly consider the adaptability between the user's system and this unit.
  - 2) Although the protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating condition. Also, the user is requested to carry out the safety design for the whole system.
- 2. When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks, and to carry back the entire flow volume of circulating fluid that is released.

3. Use non-corrosive material for fluid contact parts of circulating fluid.

Using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Provide protection against corrosion when you use the product.

## Selection

# **⚠** Warning

1. Model selection

For selecting a model of thermo-chiller, it is required to know the heat generation amount of the user's equipment. Obtain the heat generation amount, referring to "Cooling Capacity Calculation" on pages 9 and 10 before selecting a model.

## Handling

# ⚠ Warning

1. Thoroughly read the Operation Manual.

Read the Operation Manual completely before operation, and keep this manual available whenever necessary.

## Transportation/Transfer/Movement


# **⚠** Warning

- 1. This product is heavy. Pay attention to safety and position of the product when it is shipped, carried and moved.
- 2. Read the Operation Manual carefully to move the product after unpacking.


# **⚠** Caution

1. Never put the product down sideway as this may cause failure.

The product will be delivered in the packaging shown below.

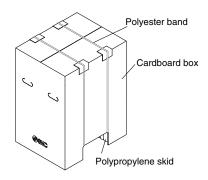

Model	Weight (kg)	Dimensions (mm)
HRSE012-A-10 HRSE018-A-10	35	Height 745 x Width 465 x Depth 575
HRSE012-A-10-T HRSE018-A-10-T	42	Height 745 x Width 465 x Depth 620
HRSE012-A-20 HRSE018-A-20 HRSE024-A-20	38	Height 745 x Width 465 x Depth 575
HRSE012-A-20-T HRSE018-A-20-T HRSE024-A-20-T	45	Height 745 x Width 465 x Depth 620

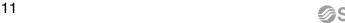



Be sure to read this before handling. Refer to back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

## **Operating Environment/Storage Environment**

# **⚠** Warning

- 1. Do not use in the following environment as it will lead to a breakdown.
  - 1) Outdoors
  - 2) In locations where water, water steam, salt water, and oil may splash on the product.
  - 3) In locations where there are dust and particles.
  - 4) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present. (This product is not explosion proof.)
  - 5) In locations where the ambient temperature exceeds the limits as mentioned below.

During transportation/storage: 0 to 50°C (But as long as water or circulating fluid are not left inside the pipings)

During operation: • Power supply 100 V type: 5 to 35°C

• Power supply 200 V type: 5 to 40°C

6) In locations where the ambient humidity is out of the following range or where condensation occurs.

During transportation/storage: 15 to 85% During operation: 30 to 70%

- 7) In locations which receive direct sunlight or radiated heat.
- 8) In locations where there is a heat source nearby and the ventilation is poor.
- 9) In locations where temperature substantially changes.
- 10) In locations where strong magnetic noise occurs. (In locations where strong electric fields, strong magnetic fields and surge voltage occur.)
- 11) In locations where static electricity occurs, or conditions which make the product discharge static electricity.
- 12) In locations where high frequency occurs.
- 13) In locations where damage is likely to occur due to lightning.
- 14) In locations at altitude of 3000 m or higher (Except during storage and transportation)
  - \* For altitude of 1000 m or higher

Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at altitude of 1000 m or higher.

Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below.

Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

Altitude [m]	1Upper limit of amb	2Cooling capacity	
Allitude [III]	Power supply 100 V type	Power supply 200 V type	coefficient
Less than 1000 m	35	40	1.00
Less than 1500 m	34	38	0.85
Less than 2000 m	33	36	0.80
Less than 2500 m	32	34	0.75
Less than 3000 m	32	32	0.70

## **Operating Environment/Storage Environment**

# **Marning**

- 15) In locations where strong impacts or vibrations occur.
- 16) In locations where a massive force strong enough to deform the product is applied or a weight from a heavy object is applied.
- 17) In locations where there is not sufficient space for maintenance.
- 2. Install in an environment where the unit will not come into direct contact with rain or snow.

These models are for indoor use only.

Do not install outdoors where rain or snow may fall on them.

Conduct ventilation and cooling to discharge heat. (Air-cooled refrigeration)

The heat which is cooled down through air-cooled condenser is discharged.

When using in a room which is shut tightly, ambient temperature will exceed the specification range stipulated in this catalog, which will activate the safety detector and stop the operation.

In order to avoid this situation, discharge the heat outside of a room by ventilation or cooling facilities.

4. The product is not designed for clean room usage. It generates particles internally.

## Mounting/Installation

# **Marning**

- 1. Do not use the product outdoors.
- 2. Do not place heavy objects on top of this product, or step on it.

The external panel can be deformed and danger can result.

# **∧** Caution

- Install on a rigid floor which can withstand this product's weight.
- 2. When you remove casters to install the product, lift the product at least 10 mm by using adjuster foot etc.

This product cannot be directly installed on the floor as some screws come out from the bottom of the product.





Be sure to read this before handling. Refer to back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

**Piping** 

# **⚠** Caution

1. Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.

If the operating performance is not sufficient, the pipings may burst during operation.

2. Select the piping port size which can exceed the rated flow.

For the rated flow, refer to the pump capacity table.

- 3. When tightening at the circulating fluid inlet and outlet, drain port or overflow port of this product, use a pipe wrench to clamp the connection ports.
- 4. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
- 5. This product series are constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

## **Electrical Wiring**


# **Marning**

 Grounding should never be connected to a water line, gas line or lightning rod.

# **∧** Caution

- 1. Communication cable should be prepared by user.
- 2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200  $\mu$ sec., it may result in malfunction.

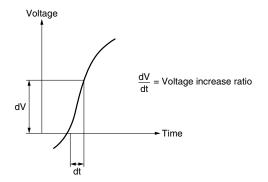

## **Circulating Fluid**

# 

- 1. Avoid oil or other foreign objects entering the circulating fluid.
- When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

## Tap Water (as Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association

JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

				Influence	
	Item	Unit	Standard value	Corrosion	Scale generation
	pH (at 25°C)	_	6.0 to 8.0	0	0
_	Electric conductivity (25°C)	[µS/cm]	100* to 300*	0	0
lte.	Chloride ion (CI-)	[mg/L]	50 or less	0	
Sulfuric acid ion (SO <sub>4</sub> <sup>2</sup> -		[mg/L]	50 or less	0	
g	Chloride ion (CI-)  Sulfuric acid ion (SO <sub>4</sub> <sup>2</sup> -)  Acid consumption amount (at pH4.8)  Total hardness		50 or less		0
्रेंच्य Total hardness		[mg/L]	70 or less		0
0)	Calcium hardness (CaCO <sub>3</sub> )	[mg/L]	50 or less		0
	Ionic state silica (SiO <sub>2</sub> )	[mg/L]	30 or less		0
8	Iron (Fe)	[mg/L]	0.3 or less	0	0
item	Copper (Cu)	[mg/L]	0.1 or less	0	
<u>6</u>	Sulfide ion (S <sub>2</sub> -)	[mg/L]	Should not be detected.	0	
Reference	Ammonium ion (NH <sub>4</sub> +)	[mg/L]	0.1 or less	0	
efe	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
۳	Free carbon (CO <sub>2</sub> )	[mg/L]	4.0 or less	0	

- \* In the case of [M $\Omega$ ·cm], it will be 0.003 to 0.01.
- O: Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.
- 4. When using ethylene glycol aqueous solution, maintain a maximum concentration of 15%.

Overly high concentrations can cause a pump overload.

5. A magnet pump is used as a circulating pump for circulating fluid.

It is particularly impossible to use liquid including metallic powder such as iron powder.





Be sure to read this before handling. Refer to back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

## Operation



## 1. Confirmation before operation

 The fluid level of a tank should be within the specified range of "HIGH" and "LOW".

When exceeding the specified level, the circulating fluid will overflow.

2) Remove the air.

Conduct a trial operation, looking at the fluid level.

Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed.

Pump can be operated independently.

## 2. Confirmation during operation

· Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 10 and  $30^{\circ}\text{C}$ .

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

## 3. Emergency stop method

When an abnormality is confirmed, stop the machine immediately. After stopping operation, disconnect the power supply from the user's equipment.

# **Operation Restart Time**

# **⚠** Caution

 Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.

## **Protection Circuit**

# **⚠** Caution

- 1. If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.
  - $\bullet$  Power supply voltage is not within the rated voltage range of  $\pm 10\%.$
  - In case the water level inside the tank is reduced abnormally.
  - Circulating fluid temperature is too high.
  - Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
  - Ambient temperature is too high. (Check the ambient temperature in the specifications.)
  - Ventilation hole is clogged with dust or dirt.

### Maintenance

# 

## <Periodical inspection every one month>

### 1. Clean the ventilation hole.

If the dustproof filter becomes clogged with dust or debris, a decline in cooling performance can result.

In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

## <Periodical inspection every three months>

- 1. Inspect the circulating fluid.
- 1) When using tap water
  - · Replacement of tap water

Failure to replace the tap water can lead to the development of bacteria or algae. Replace it regularly depending on your usage conditions.

· Tank cleaning

Consider whether dirt, slime or foreign objects may be present in the circulating fluid inside the tank, and carry out regular cleanings of the tank.

2) When using ethylene glycol aqueous solution

Use a concentration meter to confirm that the concentration does not exceed 15%.

Dilute or add as needed to adjust the concentration.

## <Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid freezing when the product is stopped, release the circulating fluid in advance.

## 2. Consult a professional.

For additional methods to prevent freezing (such as commercially available tape heaters etc.), consult a professional for advice.



# **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

**⚠** Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

\*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

# **⚠** Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

# **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary

If anything is unclear, contact your nearest sales branch.

# Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

## **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)
  - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - \*2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

## **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.