

Static neutralization is possible even when air is not being supplied.

- (Periodic transmission of set values and status for up to 4 channels)
- Reading of the device information and parameter batch settings are possible.
- *1 Wiring with an auxiliary power line is required separately.

	Series Type Application		IO-Link	
	IZT42 Dual AC For reducing the potential amp		For reducing the potential amplitude	•
Bar	IZT41	AC	For maintaining a constant offset voltage	•
	IZT40	Standard	Simple operation by just turning the power on	_
Nozzle	IZT43	AC	For maintaining a constant offset voltage	•

SMC

*1 IZT42 installation height: 300 mm

*2 IZT40, 41

Conditions: Discharge time from 1000 V to 100 V

Installation distance: 100 mm (High speed static neutralization cartridge, Tungsten emitter with air purge) Bar length: 1120 mm

48

ZD10/IZE1

ZH10

Antistatic Equipment

Object to be neutralized: Charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF)

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series Nozzle Type Ionizer IZT43(-L) Series

Dual AC Type IZT42 Series (Potential amplitude reduction specification)


Potential amplitude: 25 V or less* Rapid static neutralization: **0.1** s^{*2}

*1 IZT42 installation height: 300 mm *2 IZT40, 41


Conditions: Discharge time from 1000 V to 100 V Object to be neutralized: Charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) Installation distance: 100 mm (High speed static neutralization cartridge, Tungsten emitter with air purge) Bar length: 1120 mm

The potential amplitude can be reduced with SMC's original dual AC type sensor.

Static neutralization in consideration of damage to a device which is sensitive to electrostatic discharge (ESD) can be achieved. The potential amplitude applied to the applicable workpiece is reduced even if the workpiece is mounted within close proximity of the ionizer.

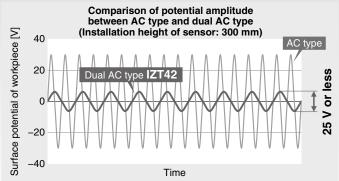


Application Examples For the static neutralization of glass substrates

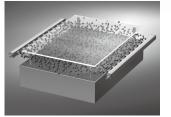

Prevents the breakage of glass substrates by the static electricity generated when the substrate is lifted from the surface plate

For the static neutralization of electric substrates

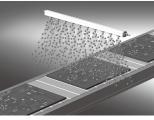


· Prevents element disruption due to discharge · Prevents the adhesion of dust

Dual AC type IZT42


+ ions and - ions are discharged at the same time to allow the + and - ions to reach the workpiece evenly, thereby reducing the potential amplitude.

Bar

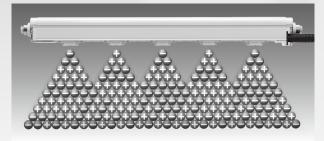


AC type IZT40, 41, 43


+ ion and - ion layers reach the workpiece alternately, which increases the potential amplitude.

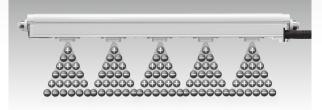




SMC

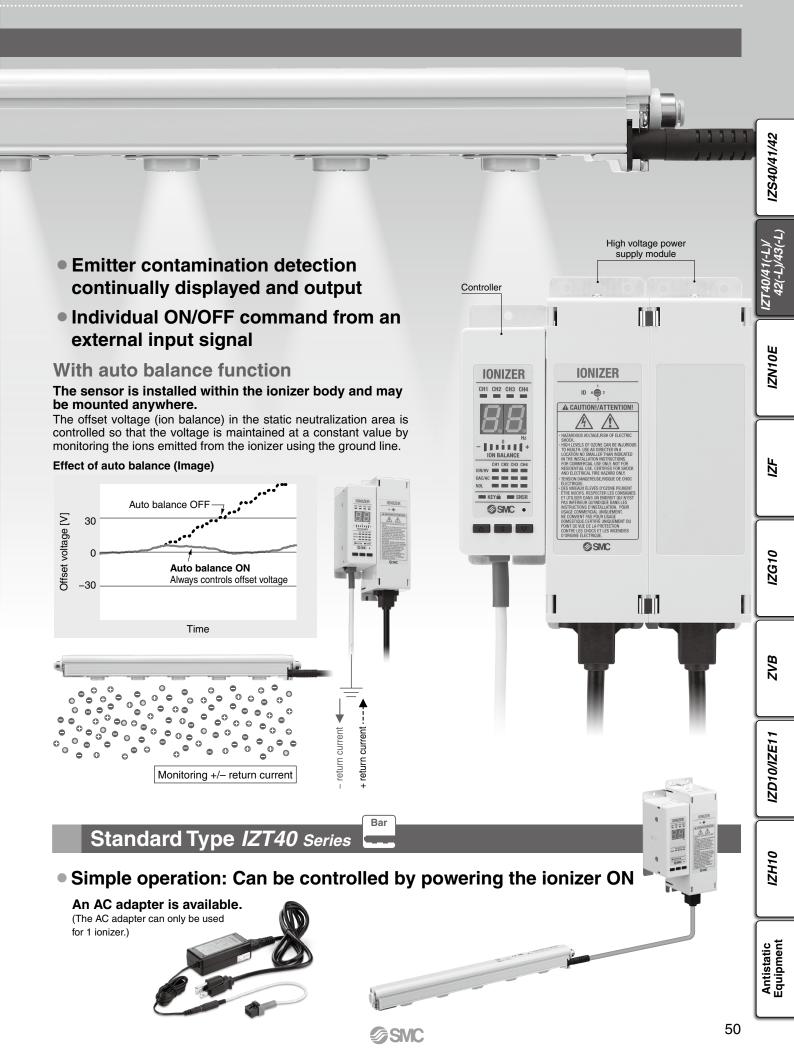

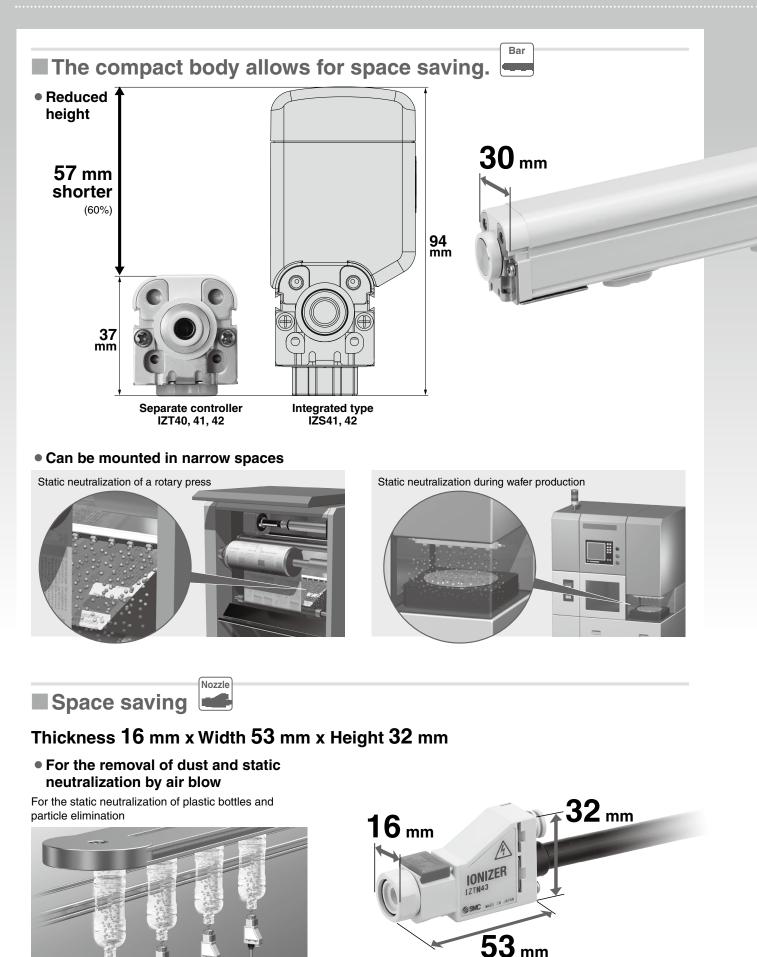


SMC

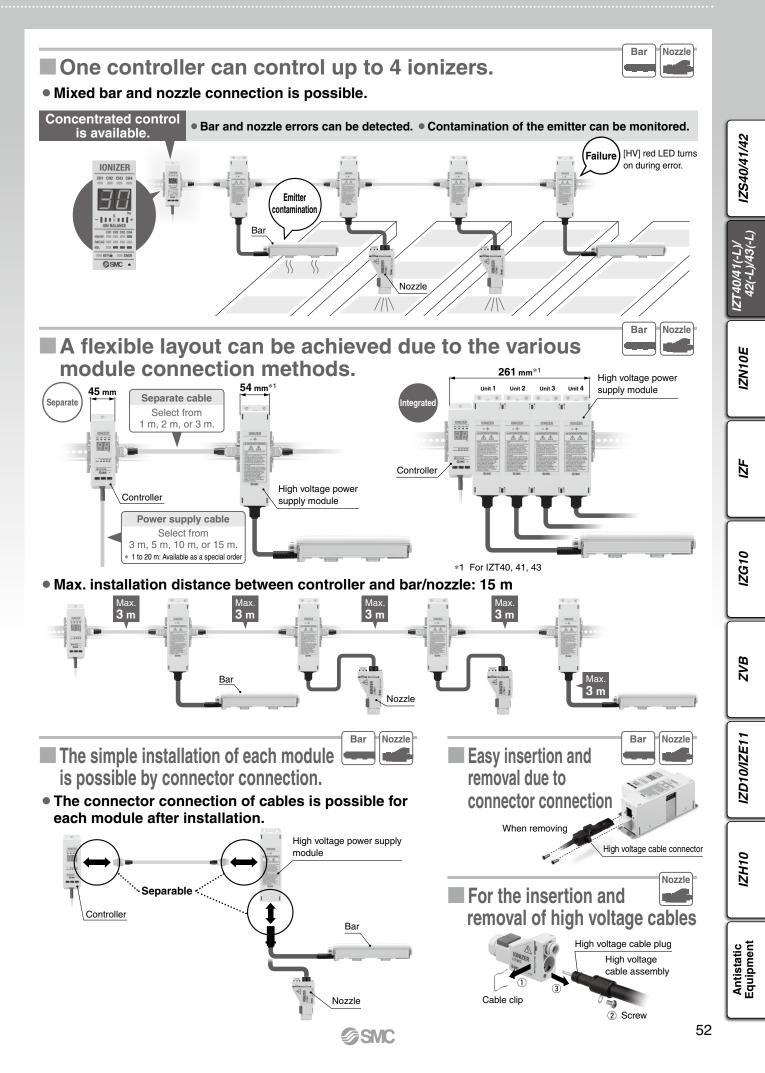


Various low maintenance cartridges can be selected according to the application.



• Minimizes the contamination of emitters by discharging compressed air at the surface of the emitters

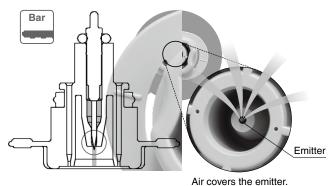

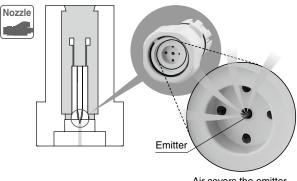


Air covers the emitter.

Emitter cartridge type

High speed static neutralization cartridge

Long range static neutralization and dust removal


1 cartridge equipped with 2 assist air nozzles allows for high speed static neutralization by transferring ionized air produced in the emitter to the workpiece.

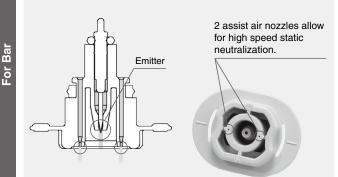

Energy saving static neutralization cartridge

Short range static neutralization


Reducing the number of assist nozzles by half for static neutralization, which does not require a high volume of assist air due to the close distance to the object to be neutralized, allows for energy savings by reducing air consumption.

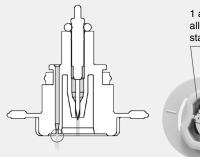


1 assist air nozzle allows for energy saving static neutralization.





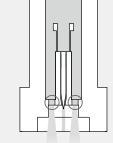



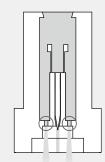



< For Nozzle> The external shape of the high speed static neutralization cartridge and that of the energy saving static neutralization cartridge is the same. However, as shown in the image above, the diameter of the holes differs.



Emitter material type

Tungsten/Single crystal silicon (for silicon wafers)



Tungsten (Emitter cartridge color: White)




Silicon (Emitter cartridge color: Gray)




Tungsten (Emitter cartridge color: White)

Energy saving high-efficiency cartridge


Assist air amplified by the sucking in of ambient air (the ejector effect) allows for highly efficient static neutralization through the efficient transfer of the produced ionized air.

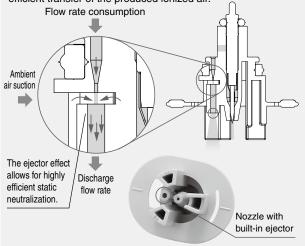

Flow rate for installation distance of each cartridge Conditions: IZT41-112□ (Number of cartridges: 18 pcs.), Discharge time 1 s

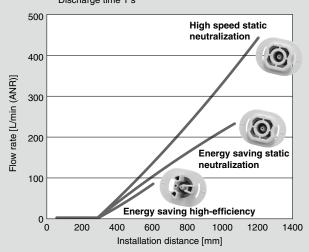





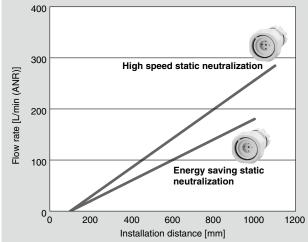


IZH10

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series Nozzle Type Ionizer IZT43(-L) Series

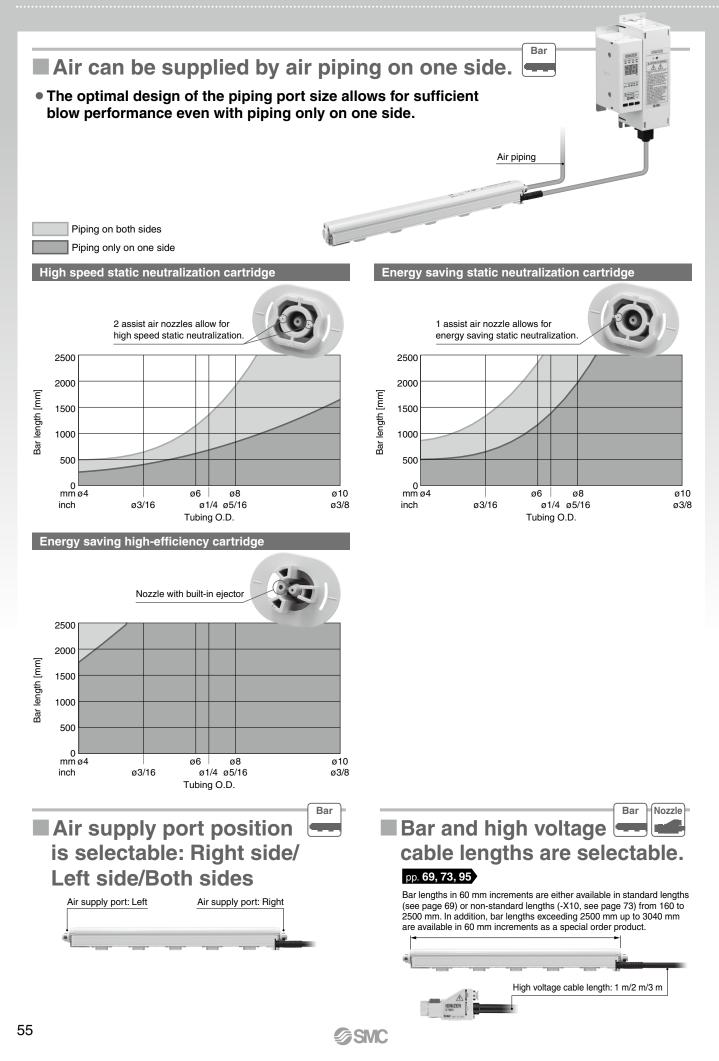

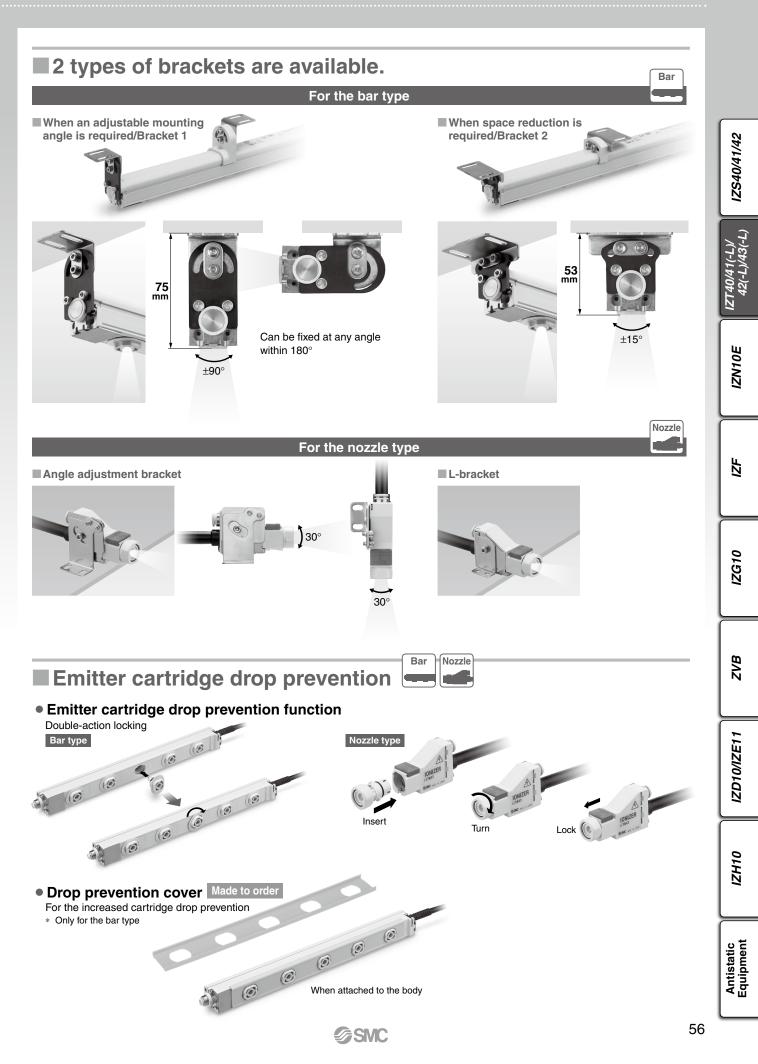

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series Nozzle Type Ionizer IZT43(-L) Series

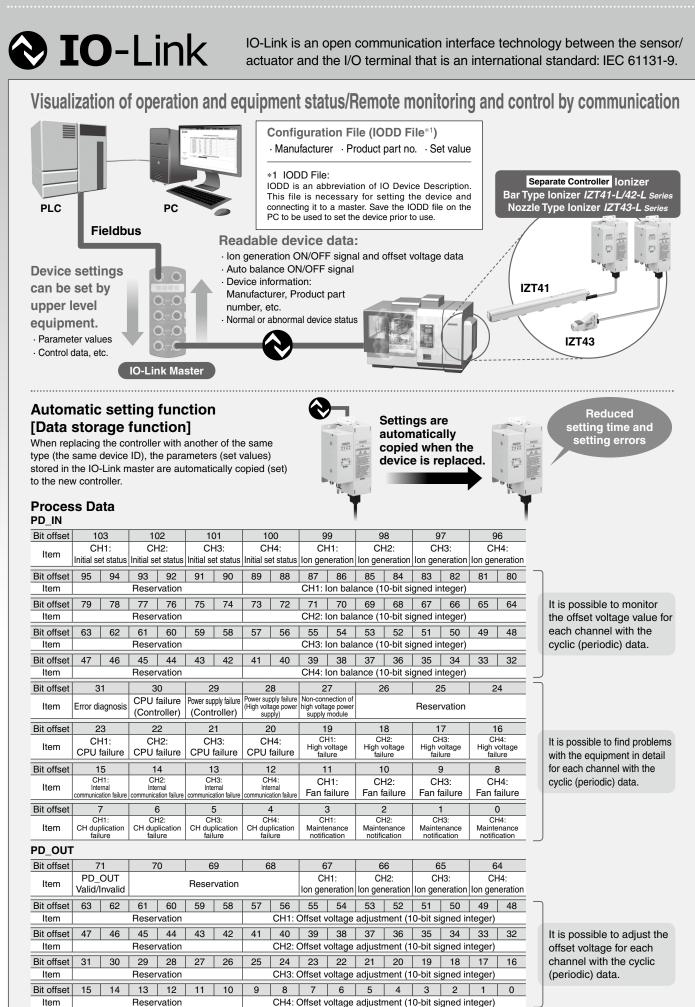

<mode< th=""><th>els and</th><th>Functions></th><th>IZT42(-L)</th><th>IZT41(-L)</th><th>IZT40</th><th>IZT43(-L)</th><th></th></mode<>	els and	Functions>	IZT42(-L)	IZT41(-L)	IZT40	IZT43(-L)	
	Ser	ies					42
Method of a	applying voltage)	Dual AC	AC, DC ^{*1}	AC, DC ^{*1}	AC, DC*1	IZS40/41/42
Auto baland	ce		•	•	_	•	(-T)/ (-T)/
I/O			NPN/PNP (IZT42)	NPN/PNP (IZT41)		NPN/PNP (IZT43)	IZT40/41(42(-L)/
1/0	10	NIZER	IO-Link (IZT42-L)	IO-Link (IZT41-L)		IO-Link (IZT43-L)	
lon balance display				•	_	•	IZN10E
High voltag abnormality detection				•	•	•	
Maintenand detection		YA SNSR	•	•	_	•	IZF
Low mainte	enance emitter	ĴSMC ●	•	•	•	•	
	High speed	For Bar	•	•	•	_	IZG10
	static neutralization	For Nozzle) -	_	_	•	
Emitter cartridge	Energy saving	For Bar	•	•	•	_	ZVB
	static neutralization	For Nozzle)*	_	_	•	
	Energy saving high-efficiency	For Bar	•	•	•	_	ZE11
Metric size One-touch		ø4, ø6, ø8, ø10	ø4, ø6, ø8, ø10	ø4, ø6, ø8, ø10	ø6	IZD10/IZE11	
fitting Inch size		ø3/16", ø1/4", ø5/16", ø3/8"	ø3/16", ø1/4", ø5/16", ø3/8"	ø3/16", ø1/4", ø5/16", ø3/8"	ø1/4"	IZH10	
Bracket mo	ounting		•	•	•	•	
	dard bar length	(-X10) drop prevention cover (-X14)	•	•	•	_	Antistatic Equipment

 $\ast 1~$ Apply cathode or anode to DC.


<access (for Indiv</access 	sories vidual Parts)>	IZT42(-L)	IZT41(-L)	IZT40	IZT43(-L)
	Series				
Emitter cartridge	For Bar High speed static neutralization Energy saving static neutralization Energy saving high-efficiency Image: Cartridge color Emitter material White Tungsten Gray Silicon	•	•	•	_
pp. 77, 99	For Nozzle Tungsten (Color: White)	_	_	_	•
Bracket	For Bar Intermediate 2 End 2	•	٠	•	_
pp. 77, 99	Angle adjustment L-bracket	_	_	_	•
Power supply ca (For transistor in		(IZT42)	(IZT41)	•	(IZT43)
Power supply cab	le (For IO-Link)	• (IZT42-L)	• (IZT41-L)	_	• (IZT43-L)
Communication cable	e (For IO-Link) pp. 77, 99	• (IZT42-L)	• (IZT41-L)	_	• (IZT43-L)
DIN rail mounting bracket for controller and high voltage power supply module pp. 77, 99	For Controller For High voltage power supply module For IZT40/41/43 For IZT42	an a	٠	•	•
High voltage cable holder pp. 77, 99	Straight Elbow	•	٠	•	•
Drop prevention (Only for the ba		•	•	•	_
AC adapter*1, **	2	(IZT42)	(IZT41)	(IZT40)	(IZT43)
Separate cable		•	•	•	•
pp. 78, 100 Cleaning kit	For Bar	•	•	•	
pp. 78, 100	For Nozzle		_		•
	ble assembly (For Nozzle)	-	_		•
Body assembly p. 100	(For Nozzle)	_	_	_	•

SMC


*1 Only for use with 1 ionizer bar/nozzle *2 Cannot be used when the input/output specification is IO-Link

<Application Examples: Bar Type>


For the static neutralization of resin frames

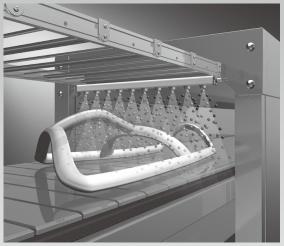



For the static neutralization of film-molded goods
Prevents goods from adhering to the conveyer
Prevents the dispersion of finished goods

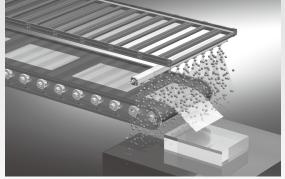


For the static neutralization of packing films • Prevents the filled substances from adhering to packing films • Reduces packing mistakes

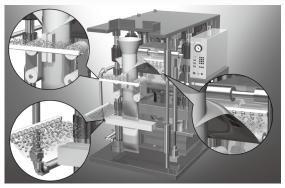

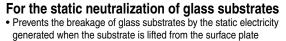


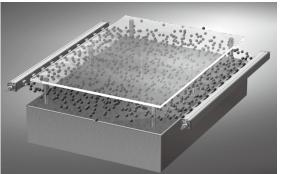

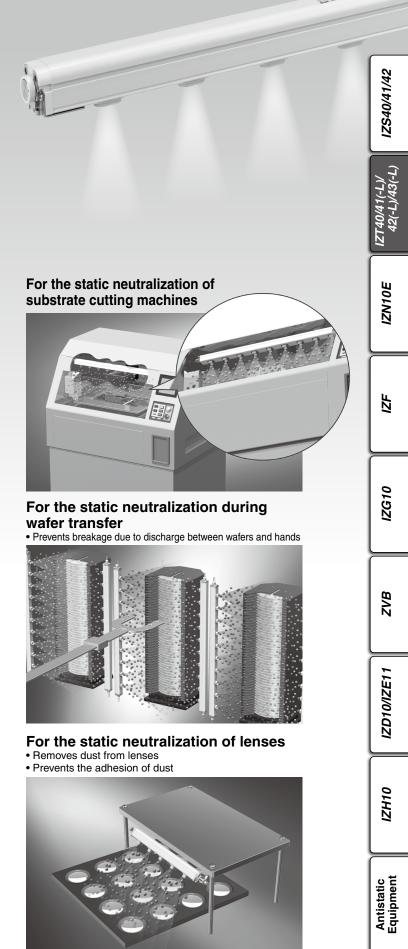


<Application Examples: Nozzle Type>

For the static neutralization of caps • Removes dust from caps and prevents the adhesion of dust

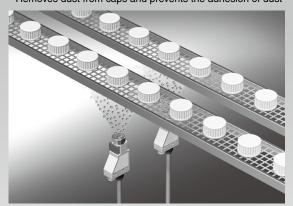


For the static neutralization of films • Prevents the adhesion of dust


• Prevents winding failure due to wrinkles, etc.

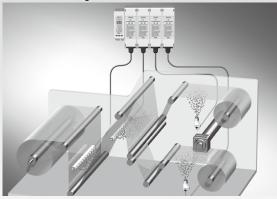

For the static neutralization of parts feeders • Prevents the clogging of parts feeders

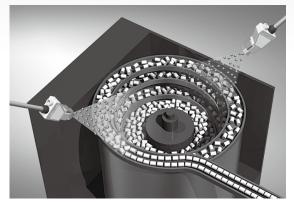


For the removal of dust when detaching from film · Removes dust generated by static electricity when

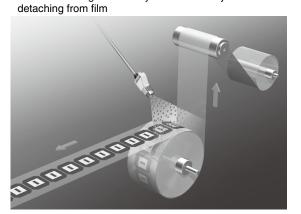




For the spot type static neutralization • Prevents the electrostatic breakdown of electric parts


• Prevents detachment failure

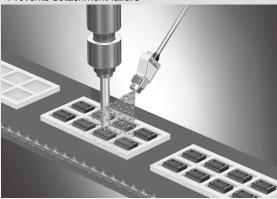

For the static neutralization of electric substrates • Prevents the electrostatic breakdown of electric parts

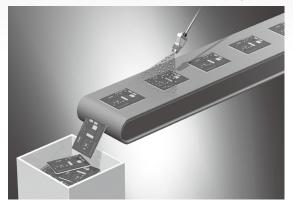

For the prevention of punching press sticking

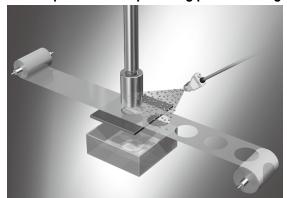

CONTENTS

Separate Controller Bar Type/Nozzle Type Ionizer IZT40/41(-L)/42(-L)/43(-L) Series



IZT43(-L) Series

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series Technical Data: Static Neutralization Characteristics 1) Installation Distance and Discharge Time .p. 63 2 Static Neutralization Range p. 64 ③ Potential Amplitude ..p. 67 How to Order Bar + High Voltage Power Supply Module + Controller-----p. 69 For Individual Parts (Bar/Controller/High Voltage Power Supply Module)p. 71 Made to Order-p. 73 Construction p. 76 Accessories (for Individual Parts)-----p. 77 Accessories Sold Separately p. 78 Wiring Circuit: IZT40 Wiring Circuit: IZT41, 42-----p. 80 Wiring Circuit: IZT41-L, 42-L-----p. 81 Dimensions IZT40, 41(-L)-----p. 82 Controller Cable

Separate Controller

Nozzle Type Ionizer IZT43(-L) Series

Technical Data: Static Neutralization Characteristics				
① Installation Distance and Discharge Timep. 93				
② Static Neutralization Range p. 93				
③ Pressure — Flow Rate Characteristicsp. 94				
How to Order				
Nozzle + High Voltage Power Supply Module + Controller				
For Individual Parts (Nozzle/Controller/High Voltage Power Supply Module)p. 96				
Specifications p. 97				
Construction p. 98				
Accessories (for Individual Parts)p. 99				
Accessories Sold Separatelyp. 100				
Wiring: IZT43(-L)				
Wiring Circuit: IZT43-Lp. 101				
Wiring Circuit: IZT43 p. 102				
Dimensions				
IZT43(-L)p. 103				
Controller p. 105				
High Voltage Power Supply Module p. 107				
Cable p. 108				
Specific Product Precautions p. 111				

IZS40/41/42

ZN10E

Ň

IZG10

ZVB

ZD10/IZE1


IZH10

Antistatic Equipment

IZT40/41(-L)/42(-L) Series **Technical Data**

Static Neutralization Characteristics

Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards

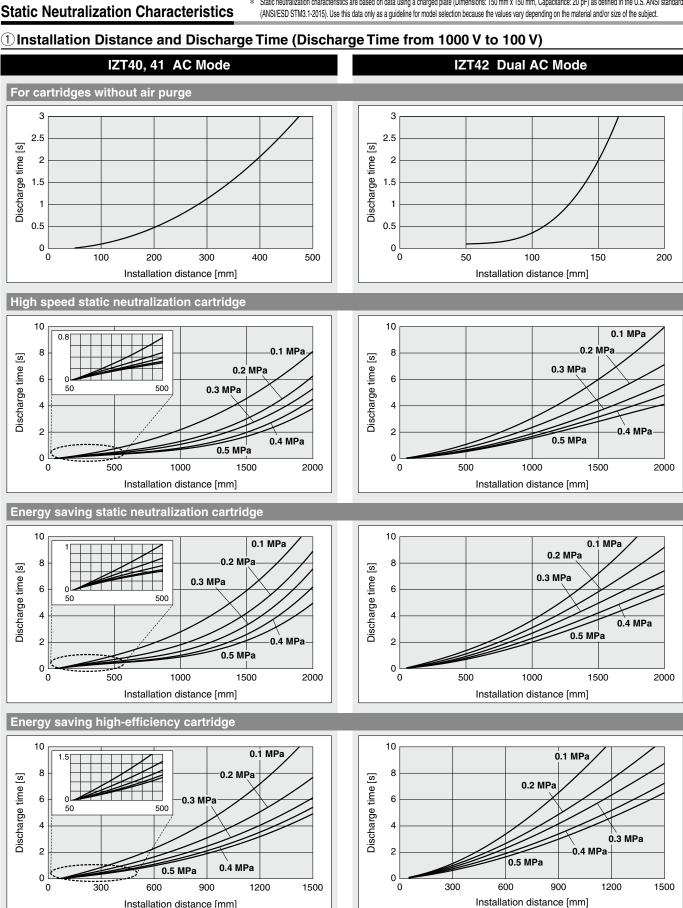

SMC


Installation distance [mm]

Technical Data IZT40/41(-L)/42(-L) Series

Static Neutralization Characteristics

* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

②Static Neutralization Range (Discharge Time from 1000 V to 100 V)

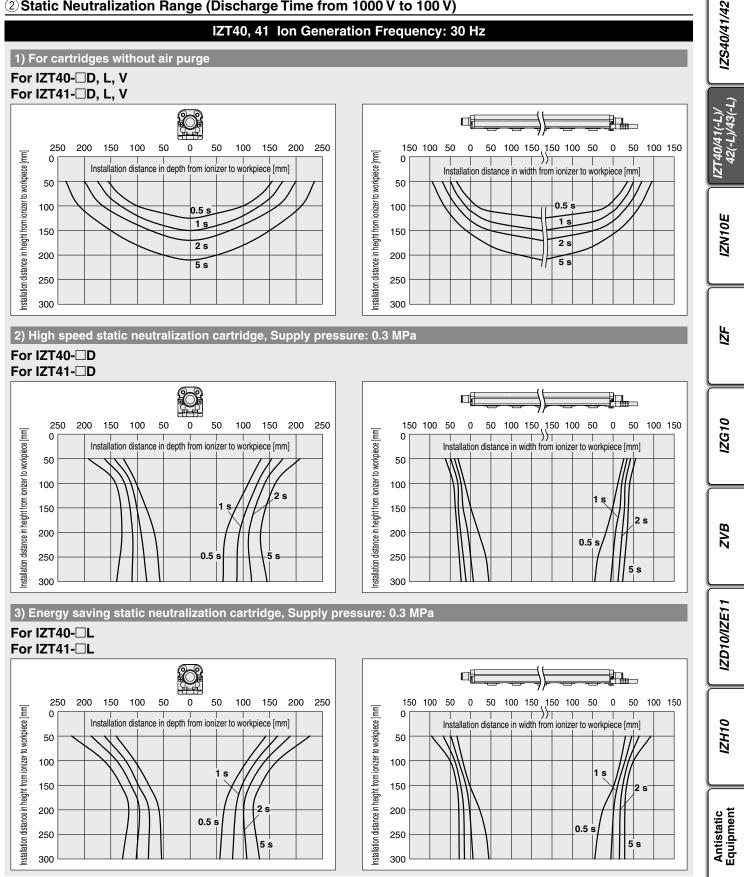

SMC

Static Neutralization Characteristics


* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

2 Static Neutralization Range (Discharge Time from 1000 V to 100 V)




4) Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa

For IZT40-

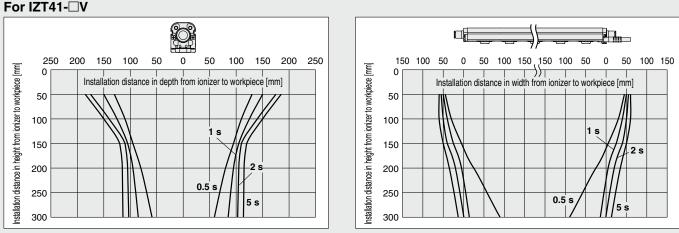

IZT42 Ion Generation Frequency: 30 Hz

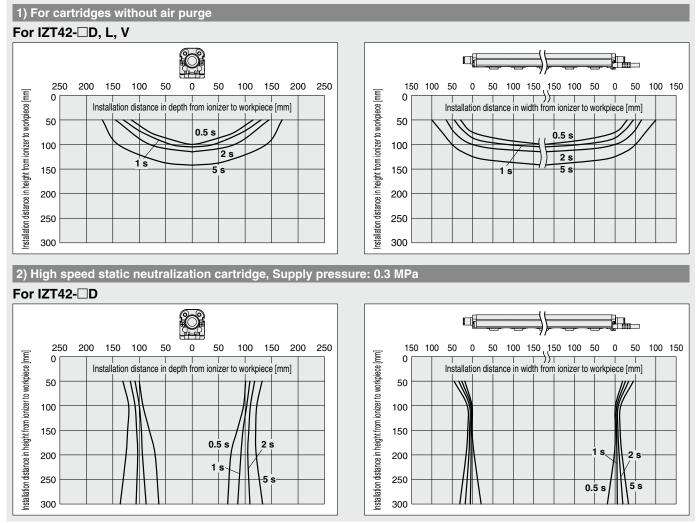

SMC

Technical Data IZT40/41(-L)/42(-L) Series

Static Neutralization Characteristics

* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

Installation distance in width from ionizer to workpiece [mm]

55

0.5

② Static Neutralization Range (Discharge Time from 1000 V to 100 V)



3) Energy saving static neutralization cartridge, Supply pressure: 0.3 MPa

Installation distance in depth from ionizer to workpiece [mm]

0.5 s

1 s

2

5 s

50


100

150

200

250

300

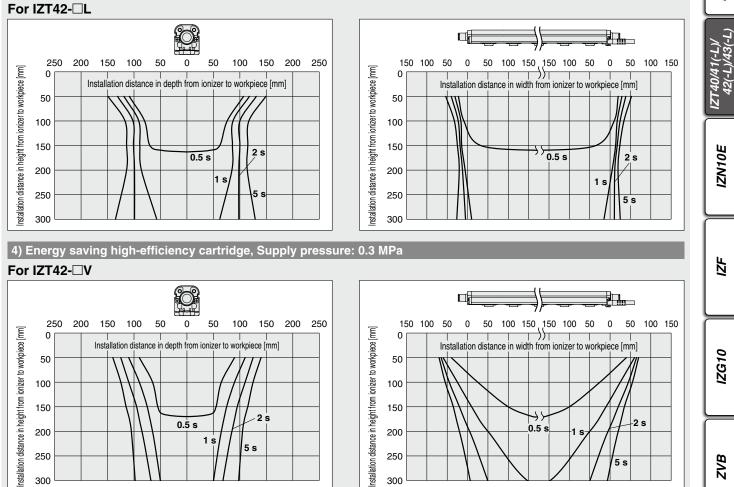

50

100 150

200

250

300



IZS40/41/42

IZN10E


Ľ

IZG10

Static Neutralization Characteristics

* Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

3 Potential Amplitude

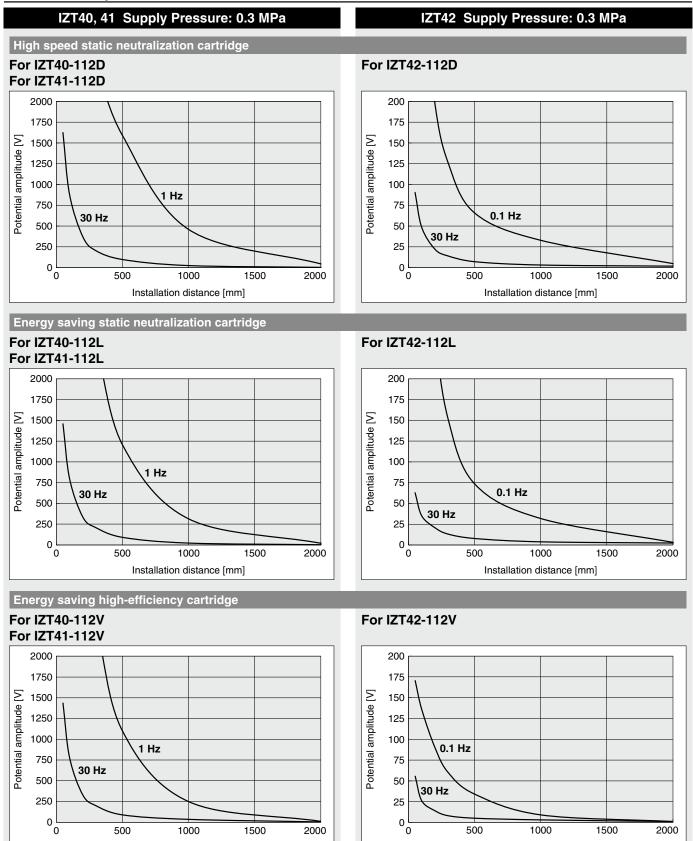

500

1000

Installation distance [mm]

1500

2000

2000

500

1000

Installation distance [mm]


1500

Technical Data IZT40/41(-L)/42(-L) Series


Static Neutralization Characteristics

Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

4 Pressure — Flow Rate Characteristics

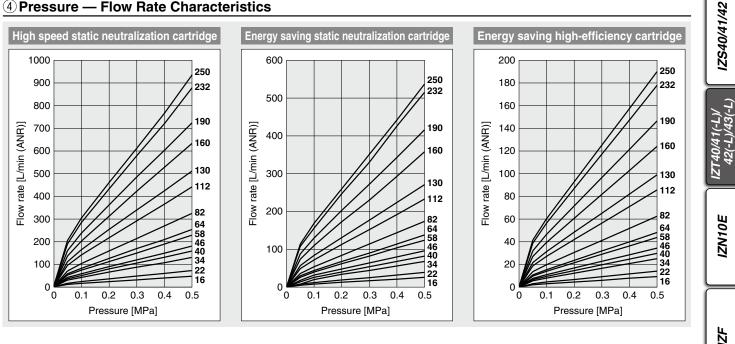


How to measure a) Air supply from one side IZT40 IZT41 -16, 22, 34, 40, 46, 58 Connecting tube: O.D. ø6 x I.D. ø4 IZT42 Pressure measurement

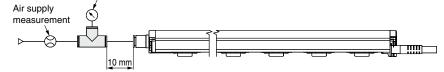

b) Air supply from both sides

IZT40 ⁻ IZT41	-64, 82, 112	Connecting tube: O.D. ø6 x I.D. ø4		
IZT41 IZT42_	, ,	5		
IZT40				
IZT41	-130, 160, 190	Connecting tube: O.D. Ø8 x I.D. Ø5		
IZT42				
IZT40				
IZT41	-232, 250	Connecting tube: O.D. ø10 x I.D. ø6.5		
IZT42		-		
Air supply measurement				

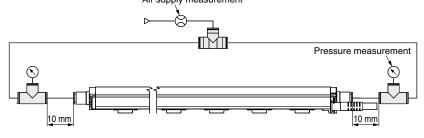




IZG10

ZVB

IZD10/IZE1

IZH10

Antistatic Equipment

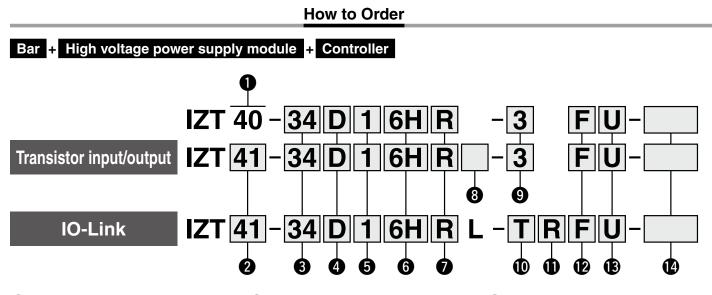

Model

Symbol	Model
40	Standard type

2 Model

Symbol	Model	
41 AC type		
42	Dual AC type	

5 High voltage cable length

Symbol	High voltage cable length [m]	
1	1	
2	2	
3	3	

 The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders ⇒ Refer to page 77.

	Cumbol	IZT	40	IZT41 Straight Elbow		IZT42	
	Зушрог	Straight	Elbow	Straight	Elbow	Straight	Elbow
	1	1	1	1	1	2	2
ſ	2	2	1	2	1	4	2
ſ	3	3	1	3	1	6	2

Bar length

Symbol	Length [mm]	Symbol	Length [mm]
16	160	82	820
22	220	112	1120
34	340	130	1300
40	400	160	1600
46	460	190	1900
58	580	232	2320
64	640	250	2500

6 One-touch fitting

	U	
Symbol	Metric size	
4H	ø4 Straight	
6H	ø6 Straight	
8H	ø8 Straight	
AH	ø10 Straight	
4L	ø4 Elbow	
6L	ø6 Elbow	
8L	ø8 Elbow	
AL	ø10 Elbow	
Symbol	Inch size	
Symbol 5H	Inch size ø3/16" Straight	
5H	ø3/16" Straight	
5H 7H	ø3/16" Straight ø1/4" Straight	
5H 7H 9H	ø3/16" Straight ø1/4" Straight ø5/16" Straight	
5H 7H 9H BH	ø3/16" Straight ø1/4" Straight ø5/16" Straight ø3/8" Straight	
5H 7H 9H BH 5L	03/16" Straight 01/4" Straight 05/16" Straight 03/8" Straight 03/16" Elbow	
5H 7H 9H BH 5L 7L	ø3/16" Straight ø1/4" Straight ø5/16" Straight ø3/8" Straight ø3/16" Elbow ø1/4" Elbow	

* Refer to the recommended piping port size on the next page for selecting a One-touch fitting.

Emitter cartridge type/ Emitter material

Symbol	Туре	Material					
D	High speed static	Tungsten					
E	neutralization cartridge	Silicon					
L	Energy saving static	Tungsten					
М	neutralization cartridge	Silicon					
V	Energy saving	Tungsten					
S	high-efficiency cartridge	Silicon					


Plug position


Symbol	Plug position
Nil	Without plug
Q	High voltage cable side
R	Opposite side of the high voltage cable

8 Input/Output

Symbol	Input/Output
Nil	NPN
Р	PNP

* The input/output function cannot be used when an AC adapter is being used.

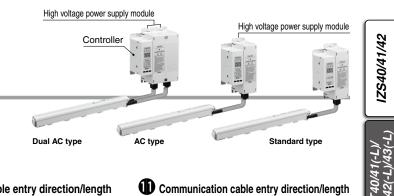

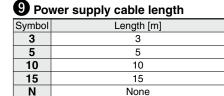

To use an AC adapter, specify "N", and select the AC adapter sold separately.

D Power supply cable entry direction/length

Symbol	Entry direction	Length [m]						
Ν	No	ne						
J		3						
Κ	Straight	5						
М		10						
S		3						
Т	Angled	5						
7		10						

Communication cable entry direction/length

IZT40/4

ZN10E

ž

IZG10

ZVB

IZD10/IZE1

IZH10

Antistatic Equipment

Symbol	Entry direction	Length [m]							
Ν	None								
E		0.5							
G		1							
Н	Straight	2							
J	Straight	3							
Κ		5							
М		10							
Ρ		0.5							
Q		1							
R	Angled	2							
R S T	Angled	3							
Т		5							
Z		10							

Bar bracket ⇒ Refer to page 77.

Symbol	Туре
Nil	Without bracket
В	With bracket 1
F	With bracket 2

* The number of intermediate brackets differs depending on the bar length. (Refer to the table below.)

Number of brackets

Bar length [mm]	End bracket	Intermediate bracket
160 to 760		None
820 to 1600	2	1
1660 to 2380	2	2
2440 to 2500		3

B DIN rail mounting bracket for controller and high voltage power supply module ⇒ Refer to page 77.

Symbol For controller For high voltage power supply module

INII	None	None
U	Included	Included
W	Included	None
Y	None	Included

Made to order ⇒ Refer to page 73.

Symbol	Description
-X10	Non-standard bar length
-X14	Model with drop prevention cover

Recommended piping port size for the IZT4

High spee	d static ne	utrali	zatio	n car	tridg	е									
One-touch	Applicable		Bar length [mm]												
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4	0	0		•		—	_	—	—	—	—	—	—	—
6H/6L	ø 6	0	0	0	0	0	0				_	—	—	—	—
8H/8L	ø 8	0	0	0	0	0	0	0	0			۲		—	—
AH/AL	ø10	0	0	0	0	0	0	0	0	0	0	0		۲	
5H/5L	ø 3/16 "	0	0	0	0		٠	٠	—	—	—	—	—	_	—
7H/7L	ø1/4"	0	0	0	0	0	0	0				—	—	_	—
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0			٠		_	—
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0		٠	

 \bigcirc : With piping only on one side \bullet : With piping on both sides -: Unrecommended piping

Energy saving static neutralization cartridge

One-touch	Applicable						Ba	ır lenç	gth [m	m]					
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4	0	0	0	0	0	٠	•	٠	—	—	_	—	—	—
6H/6L	ø 6	0	0	0	0	0	0	0	0	0					—
8H/8L	ø 8	0	0	0	0	0	0	0	0	0	0	0	0		
AH/AL	ø10	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	ø 3/16 "	0	0	0	0	0	0	0	٠			_	—	—	—
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	0	0	0				
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	0	0	0	0		
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0


○: With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving high-efficiency cartridge

Ellergy sav	ving mgn-e	IIICIE	ncy	carti	luye										
One-touch	Applicable		Bar length [mm]												
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4	0	0	0	0	0	0	0	0	0	0	0	•	•	٠
6H/6L	ø 6	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8H/8L	ø 8	0	0	0	0	0	0	0	0	0	0	0	0	0	0
AH/AL	ø10	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	ø 3/16 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0

○: With piping only on one side ●: With piping on both sides



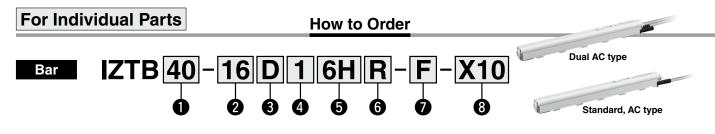

U M	odel
Symbol	Model
40	Standard type (For IZT40), AC type (For IZT41)
42	Dual AC type (For IZT42)

2 Bar length

6 Plug position

Symbol

Nil

Q

R

Symbol

Nil

В F

Number of brackets

Bar length 160 to 760

820 to 1600

1660 to 2380

2440 to 2500

Symbol

-X10

-X14

Symbol	Length [mm]	Symbol	Length [mm]
16	160	82	820
22	220	112	1120
34	340	130	1300
40	400	160	1600
46	460	190	1900
58	580	232	2320
64	640	250	2500

Position

Without plug

High voltage cable side

Opposite side of the high voltage cable

Туре

Without bracket With bracket 1

With bracket 2 The number of intermediate brackets differs depending

End bracket Intermediate bracket

None

1

2

3

7 Bar bracket ⇒ Refer to page 77.

on the bar length. (Refer to the table below.)

2

Description

Non-standard bar length

Model with drop prevention cover

8 Made to order ⇒ Refer to page 73.

B Emitter cartridge type

Symbol	Туре	Material
D	High speed static	Tungsten
E	neutralization cartridge	Silicon
L	Energy saving static	Tungsten
M	neutralization cartridge	Silicon
V	Energy saving	Tungsten
S	high-efficiency cartridge	Silicon

4 High voltage cable length

	<u> </u>
Symbol	High voltage cable length [m]
1	1
2	2
3	3

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders \Rightarrow Refer to page 77.

Symbol	IZT	40	IZT	41	IZT42			
Symbol	Straight	Elbow	Straight	Elbow	Straight	Elbow		
1	1 1		1	1	2	2		
2	2	1	2	1	4	2		
3	3 1		3	1	6 2			

Recommended piping port size for the IZT4 High speed static neutralization cartridge

5 One-touch fitting

Metric size
ø4 Straight
ø6 Straight
ø8 Straight
ø10 Straight
ø4 Elbow
ø6 Elbow
ø8 Elbow
ø10 Elbow
Inch size
ø3/16" Straight
ø1/4" Straight
2 I/ Poliaigin
ø5/16" Straight
°
ø5/16" Straight
ø5/16" Straight ø3/8" Straight
ø5/16" Straight ø3/8" Straight ø3/16" Elbow

* Refer to the table below for selecting a One-touch fitting.

The position of the One-touch fitting and the plug cannot be changed after the delivery of the product.

One-touch	Applicable		Bar length [mm]												
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4 mm	0	0				—	—	—	—	—	—	—	—	—
6H/6L	ø6 mm	0	0	0	0	0	0	•	•	•	_	—	—	—	—
8H/8L	ø 8 mm	0	0	0	0	0	0	0	0					—	_
AH/AL	ø 10 mm	0	0	0	0	0	0	0	0	0	0	0			٠
5H/5L	ø 3/16 "	0	0	0	0		٠	٠	—	—	_	—	—	—	—
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	•	٠	•	—	—	—	_
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0					—	—
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0			٠

○: With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving static neutralization cartridge

One-touch	Applicable						Ba	ır leng	gth [m	m]					
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4 mm	0	0	0	0	0		٠	•	_	_	—	—	—	—
6H/6L	ø6 mm	0	0	0	0	0	0	0	0	0	•		۲		—
8H/8L	ø 8 mm	0	0	0	0	0	0	0	0	0	0	0	0		•
AH/AL	ø 10 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	ø 3/16 "	0	0	0	0	0	0	0				-	—	—	—
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	0	0	0				
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	0	0	0	0		
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0

○: With piping only on one side ●: With piping on both sides —: Unrecommended piping


Energy saving high-efficiency cartridge

SMC


One-touch	Applicable		Bar length [mm]												
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø 4 mm	0	0	0	0	0	0	0	0	0	0	0	٠		
6H/6L	ø6 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8H/8L	ø 8 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
AH/AL	ø 10 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	ø 3/16 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7H/7L	ø 1/4 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9H/9L	ø 5/16 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0
BH/BL	ø 3/8 "	0	0	0	0	0	0	0	0	0	0	0	0	0	0

 \bigcirc : With piping only on one side \bullet : With piping on both sides



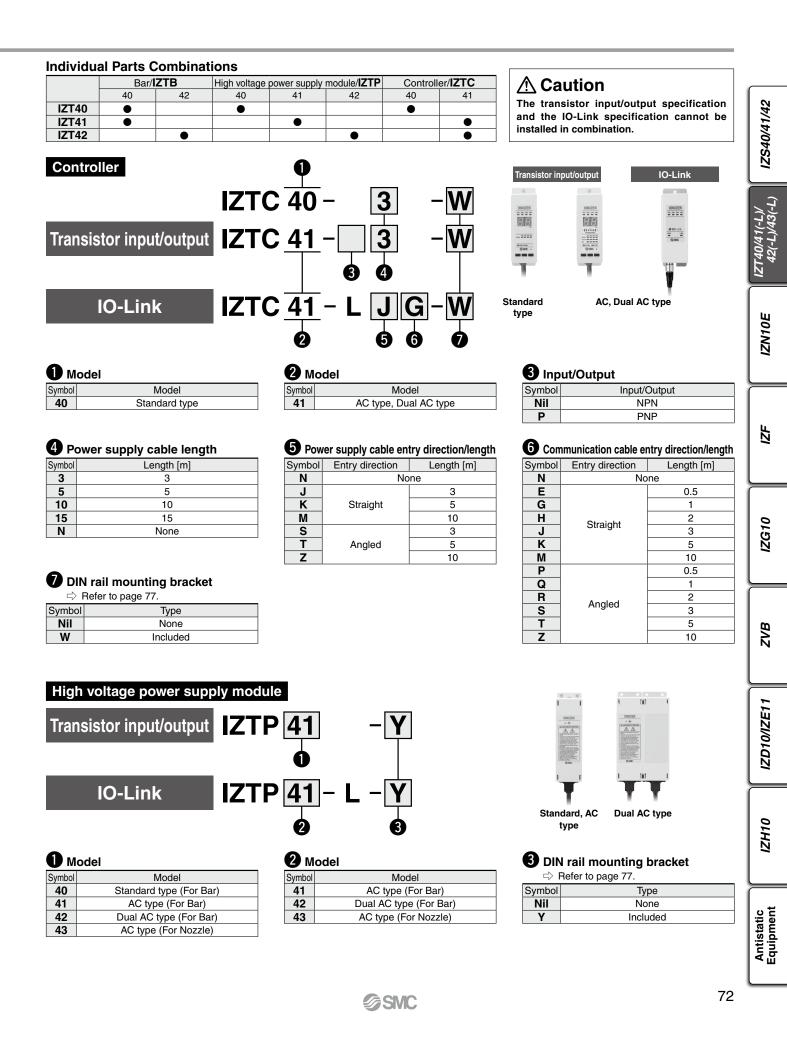

Made to Order

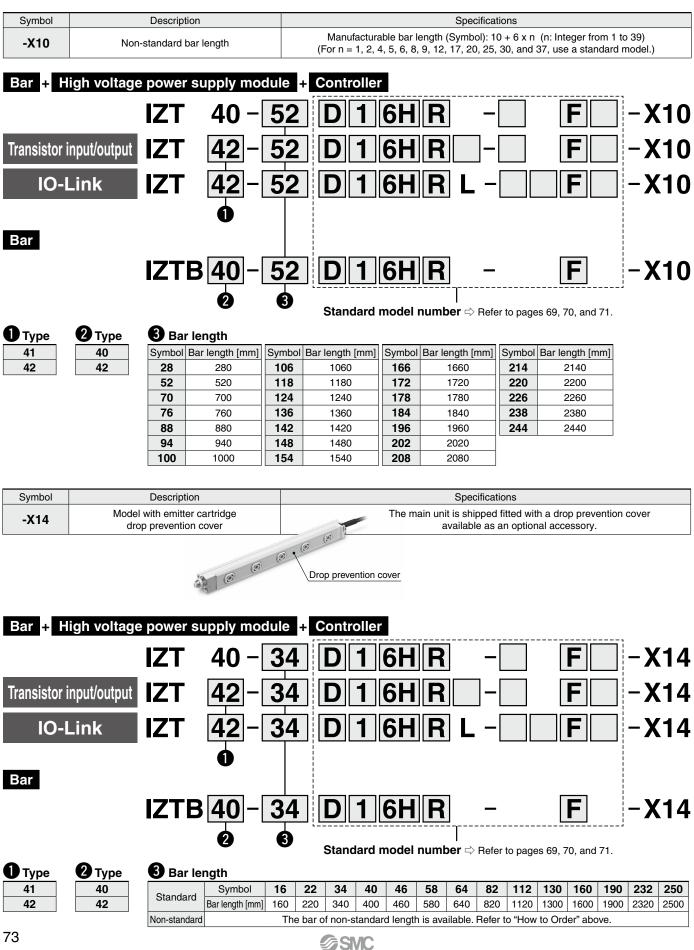

Specifications

	lonizer model	IZT40	IZT41(-L)	IZT42(-L)					
lon genera	tion method		Corona discharge type						
Method of	applying voltage	AC,	DC*1	Dual AC					
Applied vo	Itage	±70	00 V	±6000 V					
Offset volta	age*2		Within ±30 V						
	Fluid		Air (Clean, dry air)						
	Operating pressure		0.5 MPa or less						
Air purge	Proof pressure		0.7 MPa						
	Connecting tube size (One side can be plugged.)		Metric size: ø4, ø6, ø8, ø10 Inch size: ø3/16", ø1/4", ø5/16", ø3/	8"					
Current co	nsumption	0.7 A or less (+0.6 A or less per ionizer when connected)	0.8 A or less (+0.7 A or less per ionizer when connected	1.4 A or less d) (+1.3 A or less per ionizer when connected)					
Power sup	ply voltage		24 VDC ±10%						
Input	NPN specification	_	Voltage rang	ed to DC (–) e: 5 VDC or less nption: 5 mA or less					
signal*3	PNP specification		Connected to DC (+) Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less						
Output signal* ³	NPN specification	_	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC						
J	PNP specification		Residual vol	,					
O-Link dev	vice ^{*4}	_	Current consum	e: 18 to 30 VDC otion: 100 mA or less mmunication Specifications" table below.					
Function		High voltage abnormality detection (lon generation stops when an abnormality is detected.)		n, High voltage abnormality detection (Ion is detected.), and Ion generation stop input					
Effective st	tatic neutralization distance		50 to 2000 mm						
Ambient and Iuid	Controller, High voltage power supply module		0 to 40°C						
temperatures	Dai		0 to 50°C						
Ambient hu	umidity		35 to 80%RH (No condensation)						
	Controller	Cover	r: ABS, Aluminum, Switch: Silicone r	ubber*3					
Material	High voltage power supply module		ABS, Aluminum						
	Bar		cartridge: PBT, Emitter: Tungsten ol ligh voltage cable: Silicone rubber, P						
Standards/	Directive	CE	E (EMC directive, RoHS directive), U	KCA					
2 When air 3 For trans	thode or anode to DC. r purge is performed between a istor input/output specification ink compatible products	a charged object and an ionizer at a di products	stance of 300 mm						

IO-Link Communication Specifications

IO-Link type	Device	
IO-Link version	V1.1	110
Configuration file format	IODD file*1	IZH
Communication speed	COM2 (38.4 kbps)	-
Min. cycle time	8.0 ms	
Process data length	Input data: 13 bytes, Output data: 9 bytes	
On request data communication	Yes	
Data storage function	Yes	atic le
Event function	Yes	pm
Vendor ID	131 (0 x 0083)	Anti
Device ID	581 (0 x 000245)	₹¤

*1 The configuration file can be downloaded from the SMC website: https://www.smcworld.com

Specifications

Weiaht

Weight		[g]
	Controller	High voltage power supply module
IZT40	210 (230)	680 (690)
IZT41(-L)	210 (230)	680 (690)
IZT42(-L)	210 (230)	1350 (1360)

 $\ast\,$ The values in () are for IO-Link compatible products.


Number of Emitter Cartridges/Bar Weight

Number o	Number of Emitter Cartridges/Bar Weight [g]														
Bar I	ength symbol	16	22	34	40	46	58	64	82	112	130	160	190	232	250
Number of er	2	3	5	6	7	9	10	13	18	21	26	31	38	41	
IZT40	High voltage cable (1 m)	360	420	530	590	650	760	820	990	1270	1440	1720	2010	2410	2580
IZT41	High voltage cable (2 m)		550	660	720	780	890	950	1120	1400	1570	1850	2140	2540	2710
(Common for bars)	High voltage cable (3 m)	610	670	780	840	900	1010	1070	1240	1520	1690	1970	2260	2660	2830
	High voltage cable (1 m)	520	580	690	750	810	920	980	1150	1430	1600	1880	2170	2570	2740
IZT42	High voltage cable (2 m)	770	830	940	1000	1060	1170	1230	1400	1680	1850	2130	2420	2820	2990
	High voltage cable (3 m)	1010	1070	1180	1240	1300	1410	1470	1640	1920	2090	2370	2660	3060	3230

AC Adapter (Sold Separately) Refer to page 78.

Model	IZT40-CG1, IZT40-CG2		
Input voltage	100 to 240 VAC, 50/60 Hz		
Output current	1.9 A		
Ambient temperature	0 to 40°C		
Ambient humidity	35 to 65%RH (No condensation)		
Weight	375 g		
Safety standards	IEC 62368-1		

Construction

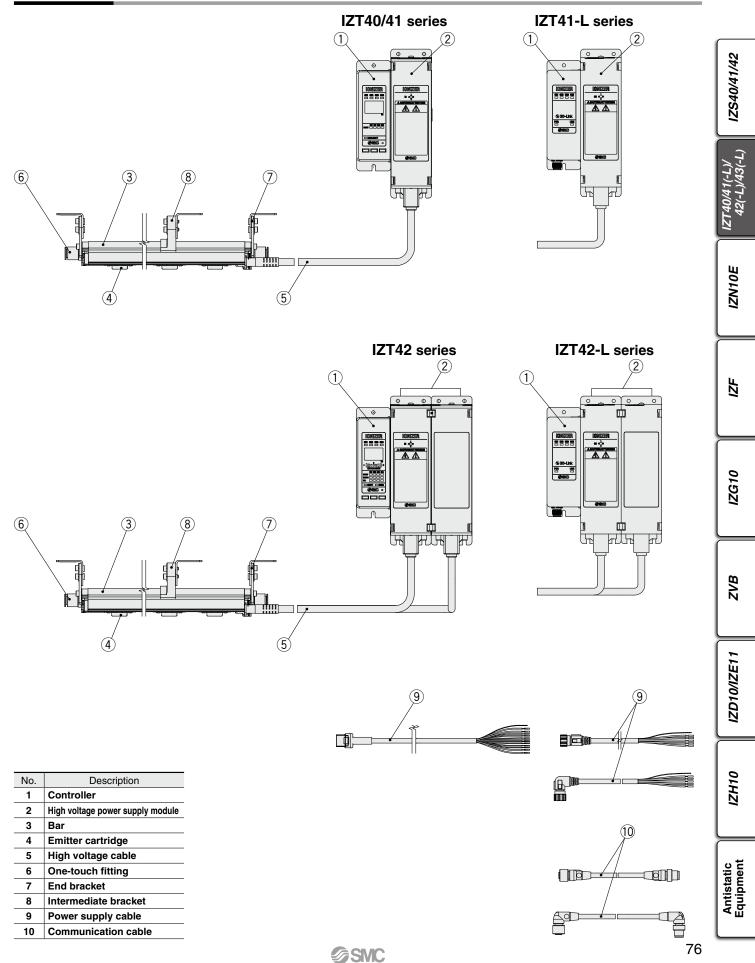


Accessories (for Individual Parts) Emitter cartridge (For IZT40, 41(-L), 42(-L)) IO-Link power supply cable (IZT41-L, 42-L) IZT41-CPJ IZT40-ND High speed static Emitter cartridge type/Emitter material Power supply cable entry direction/length neutralization Symbol Entry direction Length [m] Symbol Material Туре High speed static D Tungsten з 0 κ F neutralization cartridge Straight 5 Silicon Energy saving static Tungsten Μ 10 **Energy saving** М neutralization cartridge Silicon S 3 static neutralization Т Angled 5 Cartridge color Emitter material Ζ 10 White Tungsten 0 Silicon Grav IO-Link communication cable (IZT41-L, 42-L) IZT41-CEG IZS40-NV Energy saving high-efficiency Communication cable entry direction/length Emitter cartridge type/Emitter material Symbol Entry direction Length [m] Symbol Material Туре Е 0.5 v Tungsten Energy saving 01 G 1 high-efficiency cartridge S Silicon н 2 Straight Cartridge color Emitter material J 3 White Tungsten κ 5 Grav Silicon М 10 Ρ 0.5 Bar bracket (For IZT40, 41(-L), 42(-L)) Q 1 R 2 IZT40-BE1 Angled S 3 т 5 Bar bracket z 10 Symbol Туре DIN rail mounting bracket for controller and E1 End bracket 1 F2 End bracket 2 high voltage power supply module M1 Intermediate bracket 1 IZT40-B1 M2 Intermediate bracket 2 * Refer to the table below for selecting a bracket. DIN rail mounting bracket **Bracket combinations** Symbol Туре Intermediate bracket 1 Intermediate bracket 2 1 End bracket 1 For Controller (Adjustment angle ±90°) 2 For High voltage power supply module End bracket 2 X \bigcirc (Adjustment angle ±15°) For High voltage power supply module for IZT42 3 O: Available X: Not available For Controller For High voltage power supply module * The number of intermediate brackets required, as listed below, depends on the bar length. 2 end brackets are always required regardless of the bar length. For IZTP42 Number of brackets Bar length End bracket Intermediate bracket 160 to 760 None 820 to 1600 1 2 2 1660 to 2380 IZT40-B1 IZT40-B2 IZT40-B3 2440 to 2500 З IZT40-BM1 IZT40-BE1 High voltage cable holder Intermediate bracket 1 End bracket 1 **IZT40-BM2** IZT40-E Intermediate bracket 2 High voltage cable holder Symbol Туре IZT40-BE2 Straight 1 End bracket 2 2 Elbow Power supply cable (IZT40, 41, 42) Straight Elbow IZT40-CP3 Cable specifications Power supply cable length Refer to page 89. Length [m] IZT40-E1 IZT40-E2 Symbol 3 З 5 5 10 10 15 15

SMC

77

Accessories Sold Separately

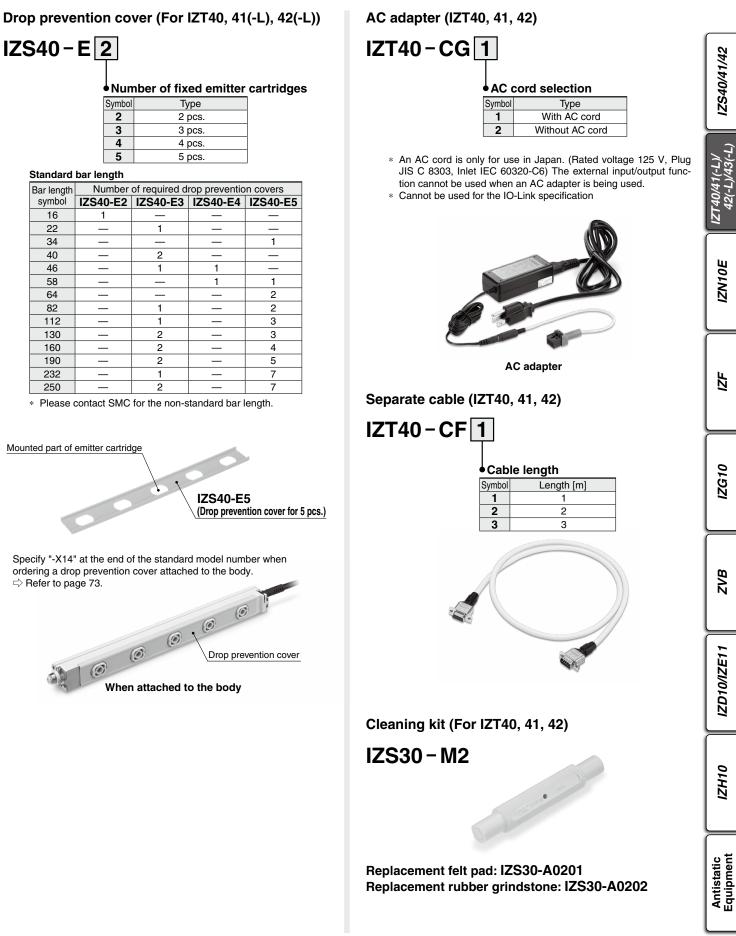

Wiring: IZT40, 41(-L), 42(-L)

17740

IZT40				
Cable color	Signal name	Signal direction	Description	
Brown	DC (+)	IN	Connects to the power supply to operate the product	
Blue	DC (-)	IN	Connects to the power supply to operate the product	
Green	F.G.	_	Frame ground of the product. Make sure to ground with a resistance value of 100Ω or less to use it as a reference electric potential for the offset voltage. If not grounded, sufficient performance cannot be obtained and equipment failure may result.	
Pink	Ion generation stop signal CH1	—	—	
Gray	Ion generation stop signal CH2	—	—	
Yellow	Ion generation stop signal CH3	_	—	
Purple	Ion generation stop signal CH4	—	—	
White	Maintenance detection signal	—	—	
Black	Error signal	—	—	
Orange	Unused	_	—	

IZT41, 42

2141,42			
Cable color	Signal name	Signal direction	Description
Brown	DC (+)	IN	Connects to the power supply to operate the product
Blue	DC (-)	IN	
Green	F.G.	_	Frame ground of the product. Make sure to ground with a resistance value of 100Ω or less to use it as a reference electric potential for the offset voltage. If not grounded, sufficient performance cannot be obtained and equipment failure may result.
Pink	Ion generation stop signal CH1	IN	Signal input to turn ion generation of each bar (CH1 to 4) ON/OFF
Gray	Ion generation stop signal CH2	IN	NPN specification: Stops generating ions by connecting to 0 V (Starts generating ions when disconnected)
Yellow	Ion generation stop signal CH3	IN	PNP specification: Stops generating ions by connecting to +24 VDC (Starts generating ions when
Purple	Ion generation stop signal CH4	IN	disconnected)
White	Maintenance detection signal	OUT (A contact)	Turns ON when emitters need cleaning
Black	Error signal	OUT (B contact)	Turns OFF in case of power supply failure, high voltage failure, CPU failure, communication failure, cooling fan motor failure, output signal overcurrent, or inconsistent or CH setting duplication or non-connection of high voltage power supply module (ON when there is no problem)
Orange	_	_	—

IZT41-L, 42-L: IO-Link Power Supply Cable

No.	Cable color	Signal name	Description		
1	Brown	DC (+)			
2		Connects to the power supply to operate the ionizer			
3	Plue	Blue DC (-)	Connects to the power supply to operate the forlizer		
4 Blue		DC (-)			
5	5 Green F.G.		Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential for ionizer.		

IZT41-L, 42-L: IO-Link Communication Cable


No.	Signal name	Description
1	L+	Power supply for IO-Link
2	—	—
3	L-	Power supply for IO-Link
4	C/Q	—
5	—	—

* Refer to the power supply cable dimensions on page 89 for the cable specifications.


Frequencies

Series	IZT40	IZT41(-L)	IZT42(-L)
Controller	IZTC40	IZTC	41(-L)
	1	1	0.1
	3	3	0.5
	5	5	1
	8	8	3
Frequency	10	10	5
[Hz]	15	15	8
	20	20	10
	30	30	15
	DC+	DC+	20
	DC-	DC-	30

Wiring Circuit: IZT40

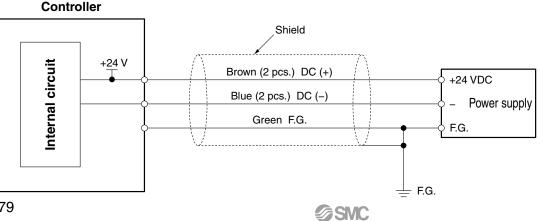


Wiring Circuit: IZT41, 42

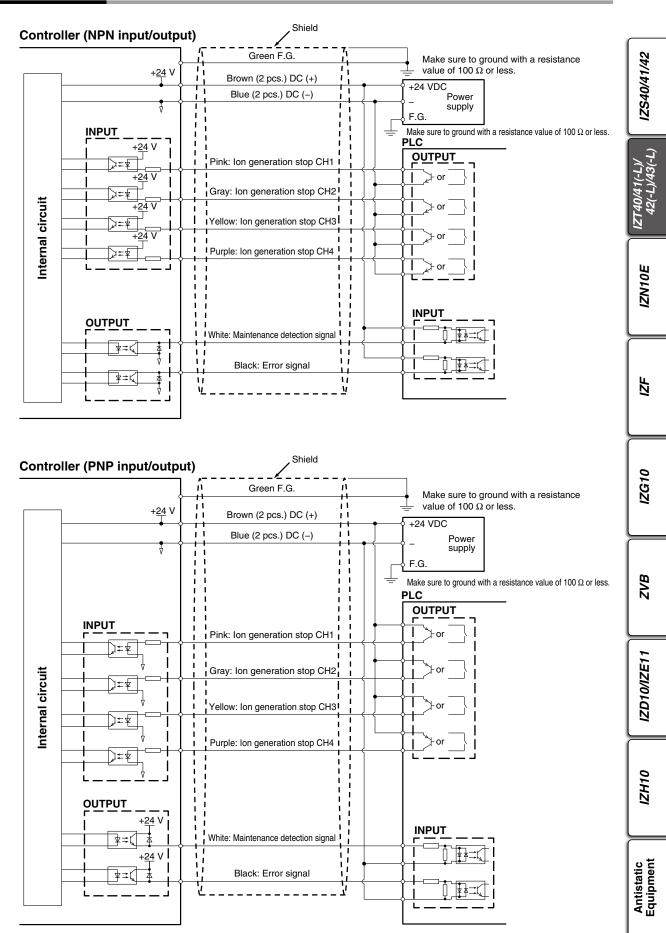


Wiring Circuit: IZT41-L, 42-L

Controller (IO-Link)

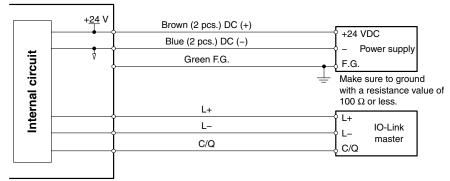

Dimensions

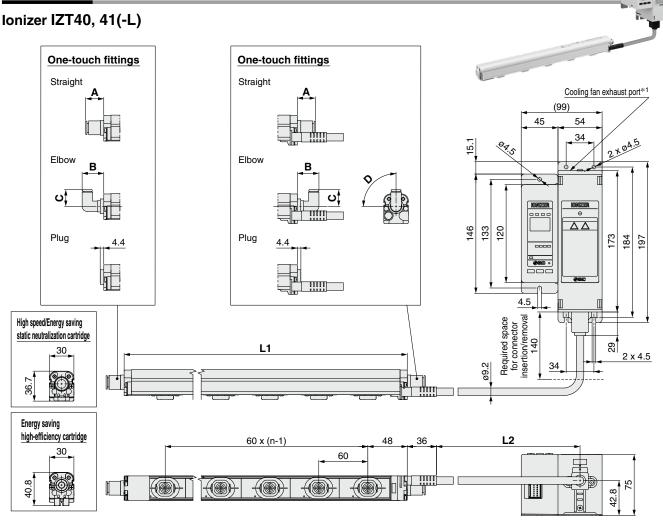

No. of Emitter Cartridges n, Bar Length L1

Part no.	n [pcs.]	L1 [mm]
IZT□-16	2	160
IZT□-22	3	220
IZT□-34	5	340
IZT□-40	6	400
IZT□-46	7	460
IZT□-58	9	580
IZT□-64	10	640
IZT□-82	13	820
IZT□-112	18	1120
IZT□-130	21	1300
IZT□-160	26	1600
IZT□-190	31	1900
IZT□-232	38	2320
IZT□-250	41	2500

High Voltage Cable Length L2

Symbol	L2 [mm]	
1	1000	
2	2000	
3	3000	

One-touch Fittings

Straight	[mm]	
	Applicable tubing O.D.	Α
	ø4	13
Metric	ø6	13
weinc	ø8	15
	ø10	22
	ø3/16"	15
Inch	ø1/4"	14
inch	ø5/16"	15
	ø3/8"	23

*1 Refer to Mounting (12) in the Specific Product Precautions (page 113).

Elbow				[mm]	
	Applicable tubing O.D.	В	С	D	
	ø4	25	19	90°	
Metric	ø6	27	21	75°	
Metric	ø8	29	24	73°	
	ø10	37	27	71°	
	ø3/16"	26	20	90°	
Inch	ø1/4"	27	21	75°	
inch	ø5/16"	29	24	73°	
	ø3/8"	36	27	71°	

IZH10

IZS40/41/42

IZT40/41(-L)/ 42(-L)/43(-L)

IZN10E

ĽΓ


IZG10

ZVB

IZD10/IZE1

Antistatic Equipment


Dimensions

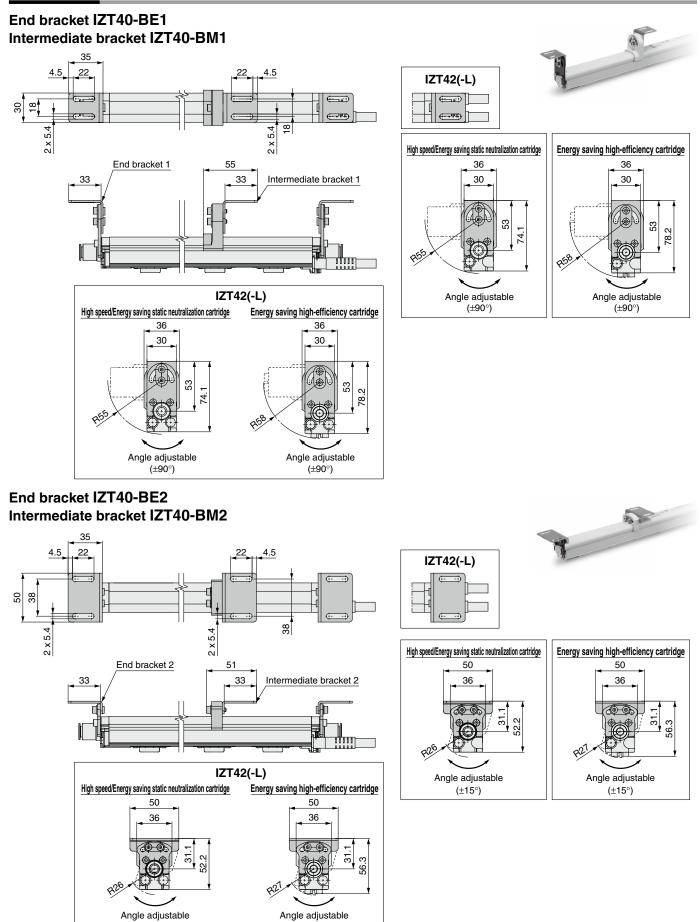

(±15°)

(±15°)

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

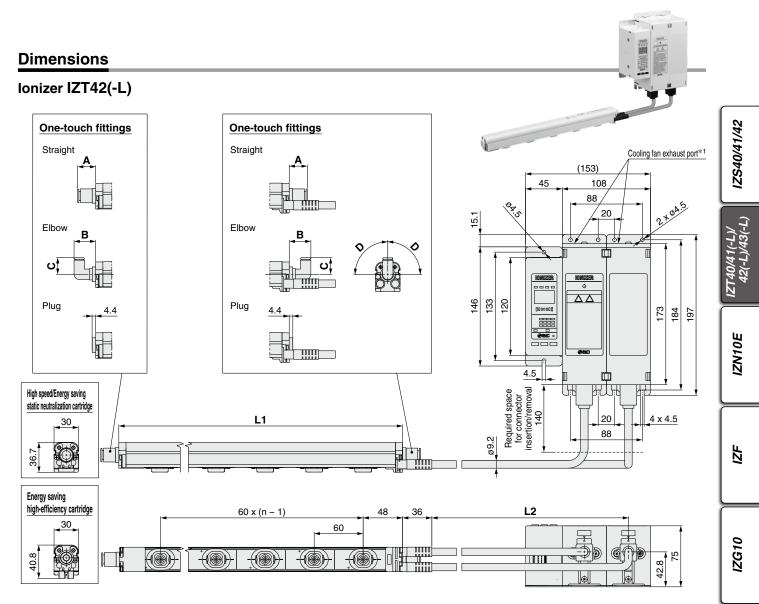

No. of Emitter Cartridges n, Bar Length L1

Part no.	n [pcs.]	L1 [mm]
IZT□-16	2	160
IZT□-22	3	220
IZT□-34	5	340
IZT□-40	6	400
IZT□-46	7	460
IZT□-58	9	580
IZT□-64	10	640
IZT□-82	13	820
IZT□-112	18	1120
IZT□-130	21	1300
IZT□-160	26	1600
IZT□-190	31	1900
IZT□-232	38	2320
IZT□-250	41	2500

High Voltage Cable Length L2

Symbol	L2 [mm]
1	1000
2	2000
3	3000

One-touch Fittings

Straight	J	[mm]
	Applicable tubing O.D.	Α
	ø4	13
Metric	ø6	13
weinc	ø8	15
	ø10	22
Inch	ø3/16"	15
	ø1/4"	14
	ø5/16"	15
	ø3/8"	23

*1 Refer to Mounting (12) in the Specific Product Precautions (page 113).

Elbow

Elbow				[mm]
	Applicable tubing O.D.	В	С	D
	ø4	25	19	90°
Motrio	ø6	27	21	75°
Metric	ø8	29	24	73°
	ø10	37	27	71°
Inch	ø3/16"	26	20	90°
	ø1/4"	27	21	75°
	ø5/16"	29	24	73°
	ø3/8"	36	27	71°

ZVB

IZD10/IZE1


IZH10


Antistatic Equipment


IZT40/41(-L)/42(-L) Series

Dimensions


Controller IZT40, 41, 42

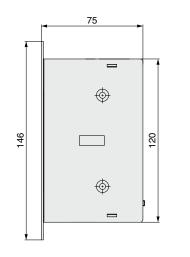


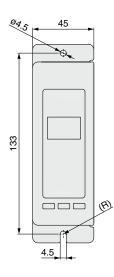

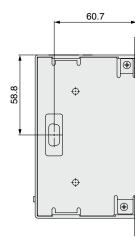



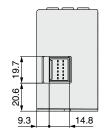


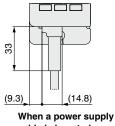

cable is inserted




When a DIN rail mounting bracket (IZT40-B1) is used

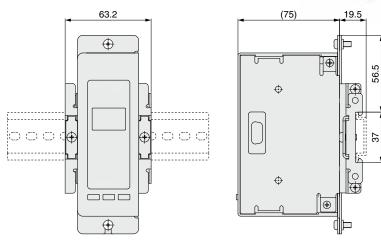

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series


Dimensions

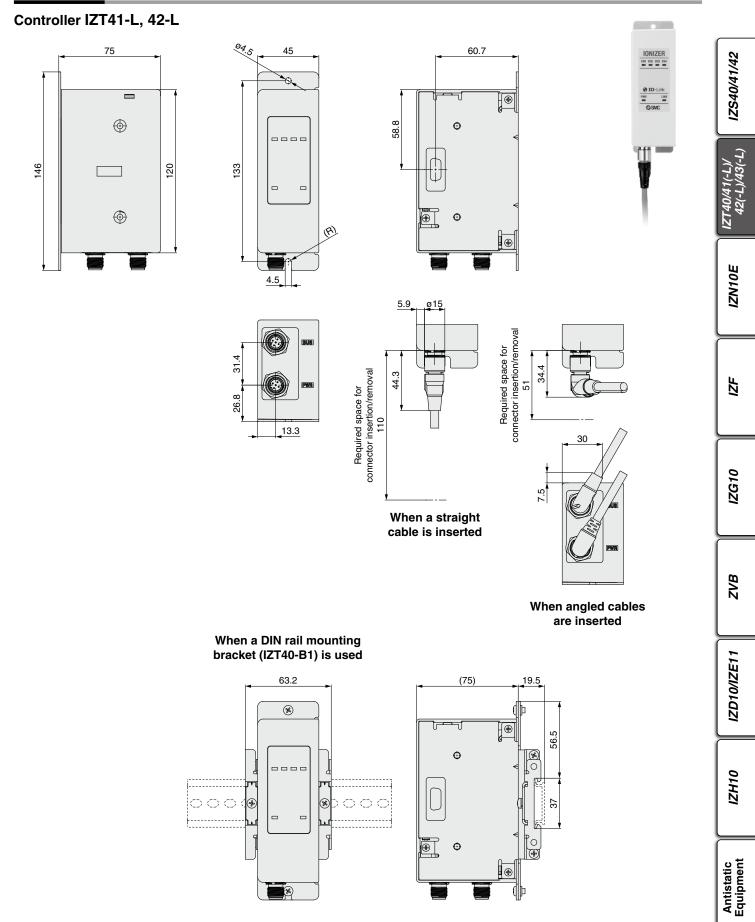



IZT40/41(-L)/42(-L) Series

Dimensions

High voltage power supply module for IZT40, 41(-L)

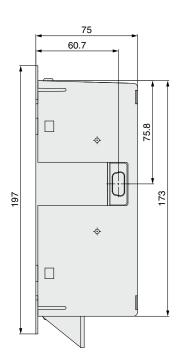


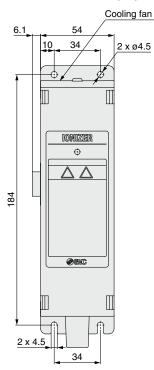

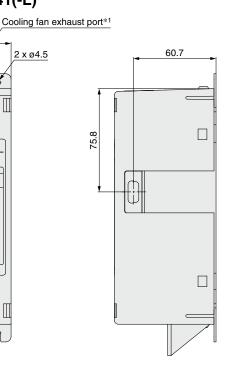




*1 Refer to Mounting (12) in the Specific Product Precautions (page 113).

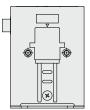



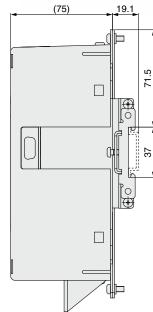


When a DIN rail mounting bracket (IZT40-B2) is used

72.2 \oplus \oplus Π IONIZER Φ Δ Т Δ Ð $\langle \Box \rangle$ øanc Ш \bigoplus \bigoplus




Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

Dimensions

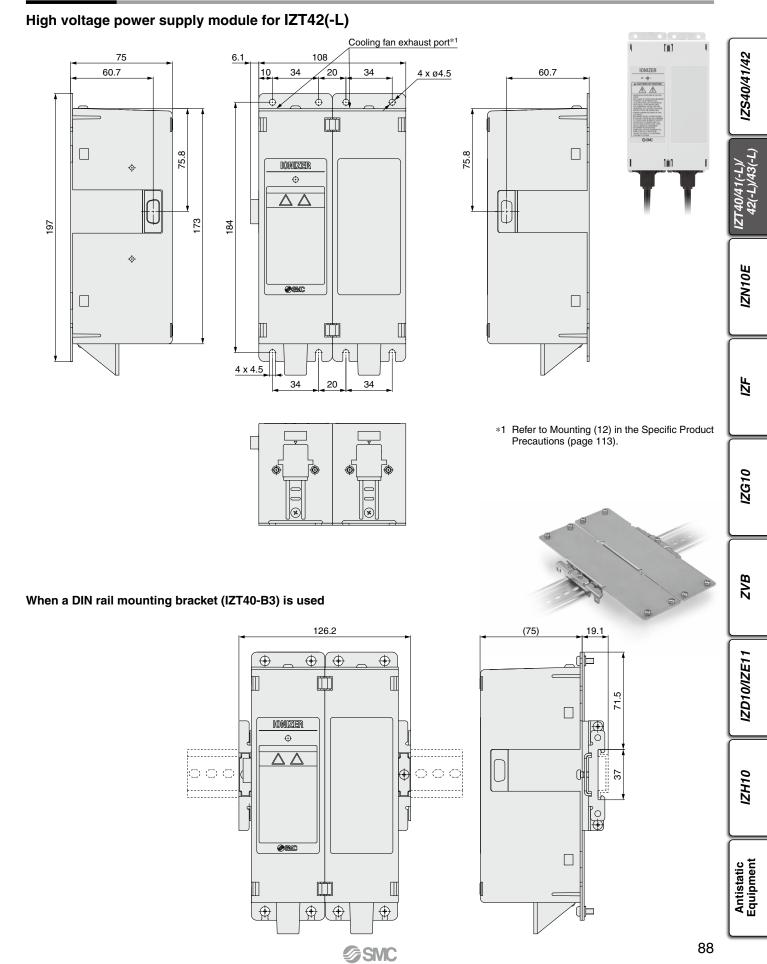

IZT40/41(-L)/42(-L) Series

Dimensions

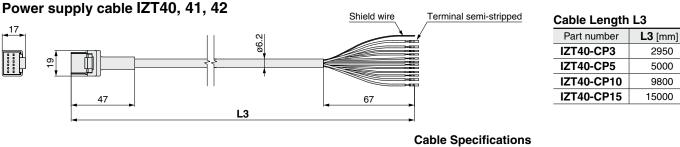

Cable Specifications				
No. of cable wires/Size		12 cores/AWG20 (4 cores), AWG28 (8 cores)		
Conductor	Nominal cross section	0.54 mm ² (4 cores), 0.09 mm ² (8 cores)		
Conductor	O.D.	0.96 mm (4 cores), 0.38 mm (8 cores)		
Insulator	O.D.	1.4 mm Brown, Blue		
		0.7 mm White, Green, Pink, Purple, Gray, Yellow, Orange, Black		
Sheath	Material	Lead-free PVC		
Sneath	O.D.	6.2 mm		

Power Supply Cable Length L


Symbol


IZT41-CPJ

IZT41-CPK

IZT41-CPM

IO-Link power supply cable IZT41-L, 42-L

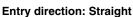

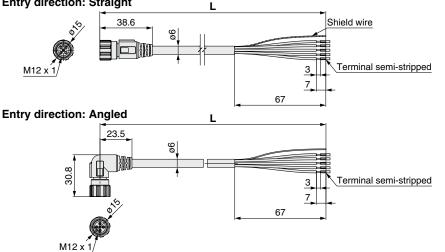

IZT41-CPS		3		
IZT41-CPT	Angled	5		
IZT41-CPZ		10		
Power Supply Cable Specifications				

Entry direction

Straight

Length [m]


3

5

10

No. of cable wires/Size		5 cores/AWG22		
Conductor	Nominal cross section	0.3 mm ²		
	O.D.	0.76 mm		
Insulator O.D.		1.3 mm		
Sheath	Material	PVC (Lead-free)		
	0.D.	6.0 mm		

IO-Link communication cable IZT41-L, 42-L Entry direction: Straight

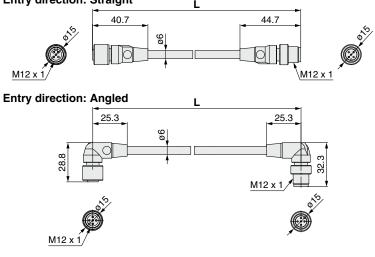

Communication Cable Length L

Symbol	Entry direction	Length [m]
IZT41-CEE		0.5
IZT41-CEG		1
IZT41-CEH	Straight	2
IZT41-CEJ	Straight	3
IZT41-CEK		5
IZT41-CEM		10
IZT41-CEP		0.5
IZT41-CEQ		1
IZT41-CER	Angled	2
IZT41-CES	Angled	3
IZT41-CET		5
IZT41-CEZ		10


Communication Cable Specifications

No. of cable wires/Size		5 cores/AWG22		
Conductor	Nominal cross section	0.3 mm ²		
	O.D.	0.76 mm		
Insulator	0.D.	1.5 mm		
Sheath	Material	PVC (Lead-free)		
	0.D.	6.0 mm		



Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

Dimensions

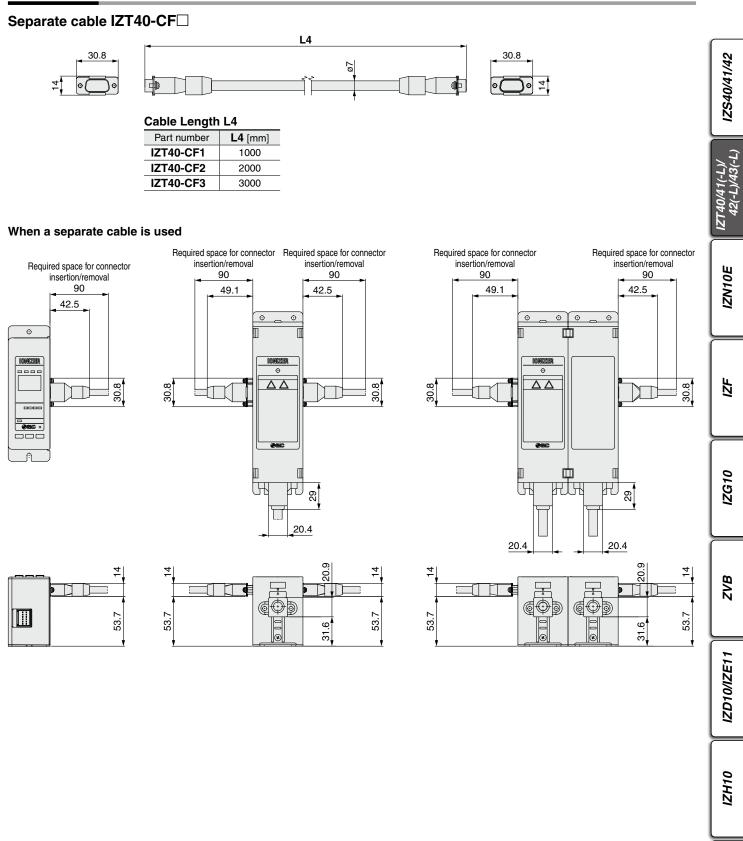

SMC


Antistatic Equipment

IZT40/41(-L)/42(-L) Series

Dimensions

High voltage cable holder

Straight IZT40-E1

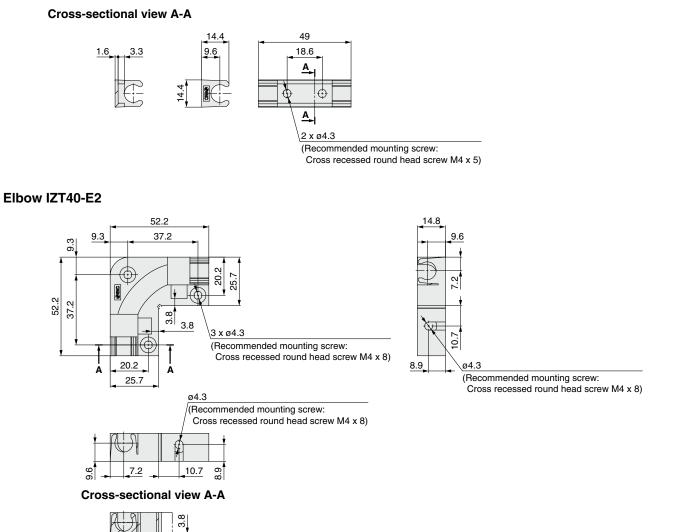




92

IZT43(-L) Series Technical Data


Static Neutralization Characteristics

Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.



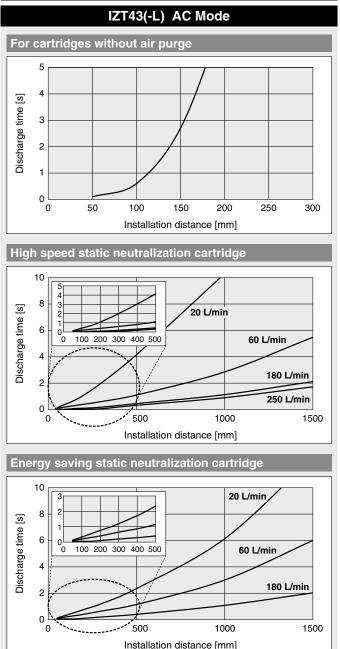

2 Static Neutralization Range (Discharge Time from 1000 V to 100 V)

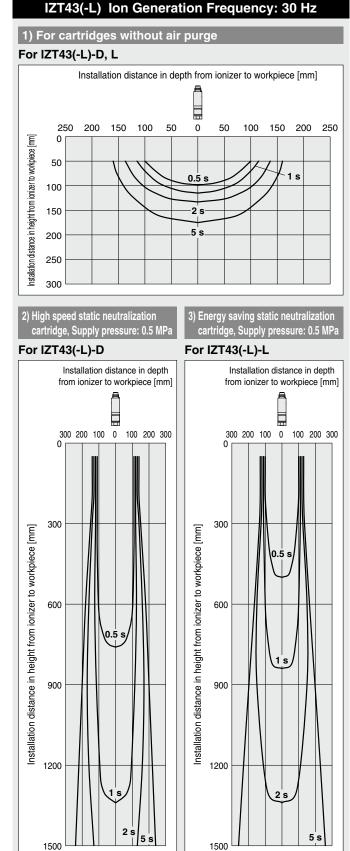


Technical Data IZT43(-L) Series

Static Neutralization Characteristics


Static neutralization characteristics are based on data using a charged plate (Dimensions: 150 mm x 150 mm, Capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

③ Pressure — Flow Rate Characteristics

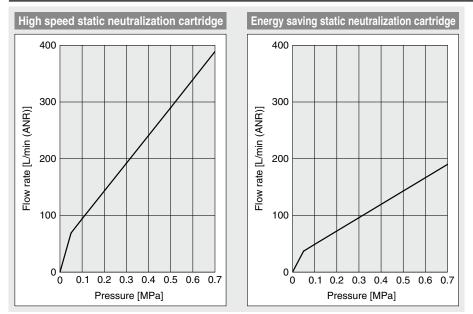

SMC

How to measure a) Air supply IZT43(-L)-D, L Connecting tube: O.D. Ø6 x I.D. Ø4

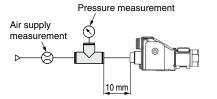

IZD10/IZE11

IZS40/41/42

IZT40/41(-L)/ 42(-L)/43(-L)


IZN10E

ĽΓ

IZG10

ZVB

IZH10

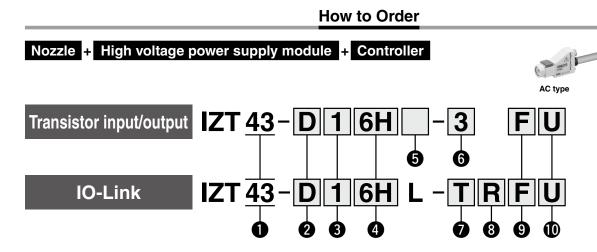

Model

Symbol	Model
43	AC type

2 Emitter cartridge type

<u> </u>
Туре
High speed static neutralization cartridge
Energy saving static neutralization cartridge

6	Po	wer	supply	cal	ble	le	ength	1
~								

Symbol	Length [m]	
3	3	
5	5	
10	10	
15	15	
Ν	None	

* To use an AC adapter, specify "N", and select the AC adapter sold separately.

3	High	voltage	cable	length
---	------	---------	-------	--------

-	<u> </u>		
Symbol	Length [m]		
1	1		
2	2		
3	3		

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders ⇒ Befer to page 99.

Symbol	Straight Elbow				
1	1	1			
2	2	1			
3	3	1			

Power supply cable entry direction/length

Symbol	Entry direction	Length [m]		
Ν	No	None		
J		3		
К	Straight	5		
М		10		
S		3		
Т	Angled	5		
Z		10		

4 One-touch fitting

-	U	
Symbol	Metric size	
6H	ø6 Straight	
6L	ø6 Elbow	
Symbol	Inch size	
7H	ø1/4" Straight	
7L	ø1/4" Elbow	

RoHS

High voltage power supply module

5 Input/Output

<u> </u>			
Symbol	Input/Output		
Nil	NII NPN		
P PNP			

8 Communication cable entry direction/length

Communication capie entry direction/iengti				
Symbol	Entry direction	Length [m]		
Ν	No	ne		
E		0.5		
G		1		
Н	Straight	2		
J	Straight	3		
К		5		
М		10		
Ρ		0.5		
Q		1		
R	Angled	2		
S	Angled	3		
Т		5		
Z		10		

9	Nozzle	bracket ⊲> Refer to page 99.	


Symbol	Туре	
Nil	Without bracket	
В	L-bracket	
F Angle adjustment bracket		

DIN rail mounting bracket for controller and high voltage power supply module

\Rightarrow	F	Refer	to pa	age	99.	
		_	-			

Symbol	For Controller	For High voltage power supply module	
Nil	None	None	
U	Included	Included	
W	Included	None	
Y	None	Included	

SMC

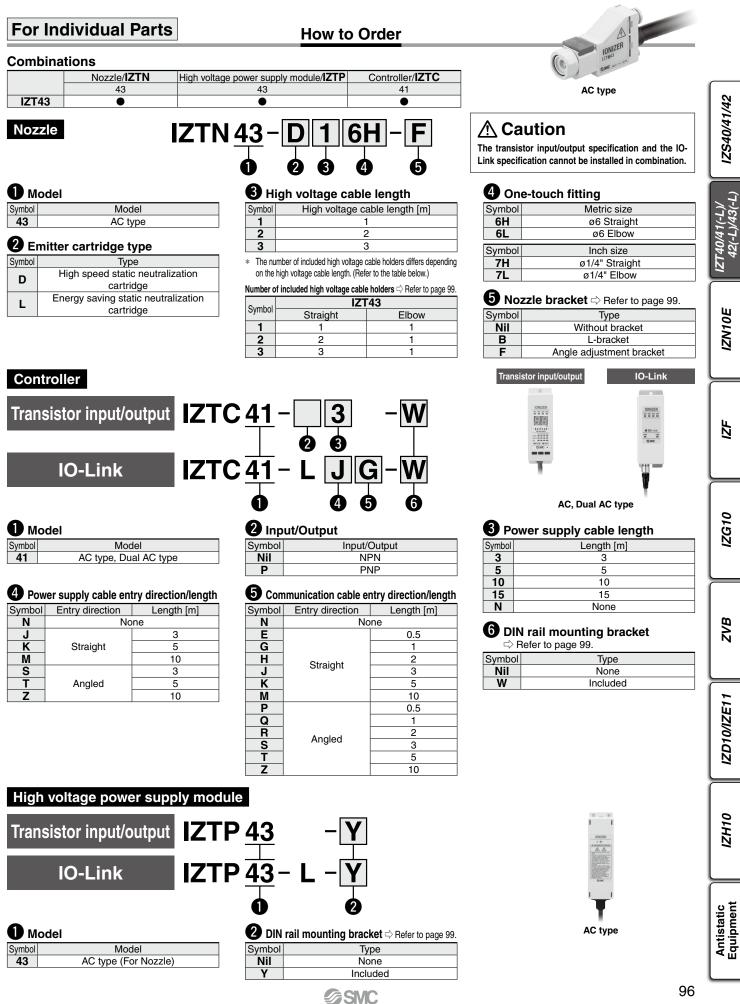

Specifications

	pecifications		
Ion generation method		Corona discharge type	
Method of applying voltage		AC, DC*1	
Applied voltage		±6000 V	
Offset voltage*2		±30 V or less	
	Fluid	Air (Clean, dry air)	
Air purge	Operating pressure	0.7 MPa or less	
7 p g e	Connecting tube size	Metric size: ø6 Inch size: ø1/4"	
Current co	nsumption	0.4 A or less (+0.4 A or less per ionizer when connected)	
Power sup	ply voltage	24 VDC ±10%	
NPN specification		Connected to DC (–) Voltage range: 5 VDC or less Current consumption: 5 mA or less	
signal*3	PNP specification	Connected to DC (+) Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less	
Output signal ^{*3}	NPN specification	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC	
	PNP specification	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA)	
IO-Link device*4		Voltage range: 18 to 30 VDC Current consumption: 100 mA or less * For details, refer to the "IO-Link Communication Specifications" table below.	
Function		Auto balance, Maintenance detection, High voltage abnormality detection (Ion generation stops when an abnormality is detected.), and Ion generation stop input	
Effective static neutralization distance		50 to 2000 mm	
Ambient and fluid Controller High voltage power supply module temperatures Nozzle		0 to 40°C	
Ambient humidity		35 to 65%RH (No condensation)	
	Controller	Cover: ABS, Aluminum, Switch: Silicone rubber*3	
Motorial	High voltage power supply module	ABS, Aluminum	
Material	Nozzle	Housing: PBT, Stainless steel, Emitter cartridge: PBT, Emitter: Tungsten, High voltage cable: Silicone rubber, PVC, Stainless steel	
Standards/Directive		CE (EMC directive, RoHS directive), UKCA	

*1 Apply cathode or anode to DC.

*2 When air purge is performed between a charged object and an ionizer at a distance of 300 mm

*3 Only applicable to transistor input/output specification products

*4 Only applicable to IO-Link compatible products

IO-Link Communication Specifications

IO-Link type	Device	
IO-Link version	V1.1	
Configuration file format	IODD file*1	
Communication speed	COM2 (38.4 kbps)	
Min. cycle time	8.0 ms	
Process data length	Input data: 13 bytes, Output data: 9 bytes	
On request data communication	Yes	
Data storage function	Yes	
Event function	Yes	
Vendor ID	131 (0 x 0083)	
Device ID	581 (0 x 000245)	

*1 The configuration file can be downloaded from the SMC website: https://www.smcworld.com



Specifications

Weiaht

odule

* The values in () are for IO-Link compatible products.

Nozzle Weight


Nozzle Weight					
Nozzle					
	High voltage cable (1 m)	200			
IZT43	High voltage cable (2 m)	310			
	High voltage cable (3 m)	440			


AC Adapter (Sold Separately) ⇒ Refer to page 100.


Model	IZT40-CG1, IZT40-CG2
Input voltage	100 to 240 VAC, 50/60 Hz
Output current	1.9 A
Ambient temperature	0 to 40°C
Ambient humidity	35 to 65%RH (No condensation)
Weight	375 g
Safety standards	IEC 62368-1

Construction

IZT43(-L) series

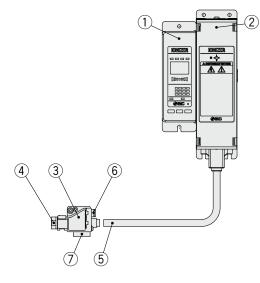


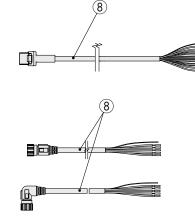

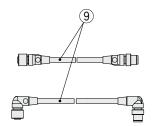

No.	Description
1	Controller
2	High voltage power supply module
3	Nozzle
4	Emitter cartridge
5	High voltage cable
6	One-touch fitting
7	Bracket
8	Power supply cable
9	Communication cable

Accessories (for Individual Parts)

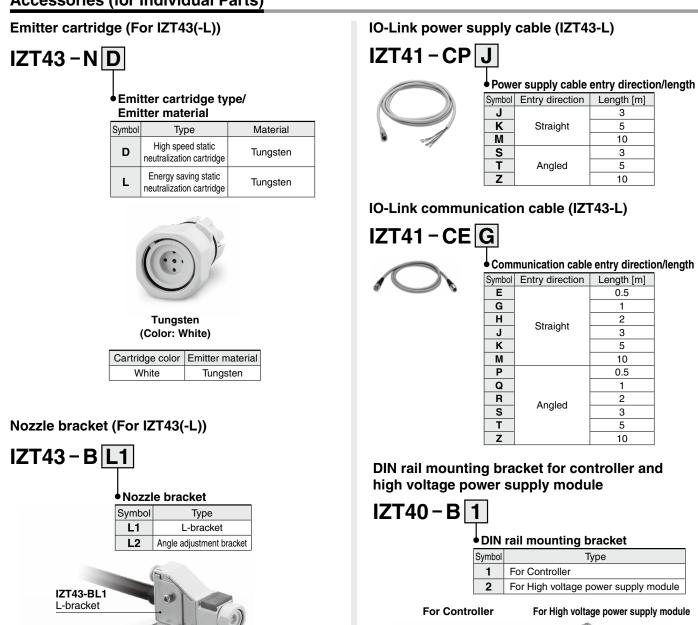

SMC

IZT40-B1

High voltage cable holder

IZT40-E1

1

Symbol

1

2

High voltage cable holder

Туре Straight

Elbow

Elbow

IZT40-E


Straight

IZT40-B2

IZT40-E2

Power supply cable (IZT43)

Angle adjustment bracket

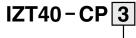

IZT43-BL2

Cable specifications ⇒ Refer to page 108.

• Power supply cable length					
Symbol	Length [m]				
3	3				
5	5				
10	10				
15	15				

99

Accessories Sold Separately



Wiring: IZT43(-L)

177/3

Cable color	Signal name	Signal direction	Description	
Brown	DC (+)	IN	Connects to the power supply to operate the product	
Blue	DC (-)	IN		
Green	F.G.	_	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential for the offset voltage. If not grounded, sufficient performance cannot be obtained and equipment failure may result.	
Pink	Ion generation stop signal CH1	IN		
Gray	Ion generation stop signal CH2	IN	Signal input to turn ion generation of each bar (CH1 to 4) ON/OFF NPN specification: Stops generating ions by connecting to 0 V (Starts generating ions when disconnected) PNP specification: Stops generating ions by connecting to 24 VDC (Starts generating ions when disconnected)	
Yellow	Ion generation stop signal CH3	IN		
Purple	Ion generation stop signal CH4	IN		
White	Maintenance detection signal	OUT (A contact)	Turns ON when emitters need cleaning	
Black	Error signal	OUT (B contact)	Turns OFF in case of power supply failure, high voltage failure, CPU failure, communication failure, cooling fan motor failure, output signal overcurrent, or inconsistent or CH setting duplication or non-connection of high voltage power supply module (ON when there is no problem)	
Orange	_	_	_	

IZT43-L: IO-Link Power Supply Cable

No.	Cable color	Signal name	Description	
1	1 Brown DC (+)			
2	BIOWII	DC (+)	Connects to the power supply to operate the product	
3	Blue	DC (-)	Connects to the power supply to operate the product	
4	Diue	DC (-)		
5	Green	F.G.	Frame ground of the product. Make sure to ground with a resistance value of 100Ω or less to use it as a reference electric potential for the offset voltage. If not grounded, sufficient performance cannot be obtained and equipment failure may result.	

IZT43-L: IO-Link Communication Cable

	No.	Signal name	Description	
	1	L+	Power supply for IO-Link	
ſ	2	—	—	
	3	L–	Power supply for IO-Link	
Ī	4	C/Q	—	
	5	—	—	

* Refer to the power supply cable dimensions on page 108 for the cable specifications.

Frequencies

Series	IZT43(-L)
Controller	IZTC41(-L)
	1
	3
	5
	8
Frequency	10
[Hz]	15
	20
	30
	DC+
	DC-


Wiring Circuit: IZT43-L

Contro	ller (IO-Lin	k)	
nal circuit	+ <u>24</u> V	Brown (2 pcs.) DC (+) Blue (2 pcs.) DC (-) Green F.G.	+24 VDC – Power supply F.G. — Make sure to ground with a resistance value of 100 Ω or less.
Internal		L- C/Q	L+ IO-Link L- master C/Q

aller (IO Link)




Wiring Circuit: IZT43

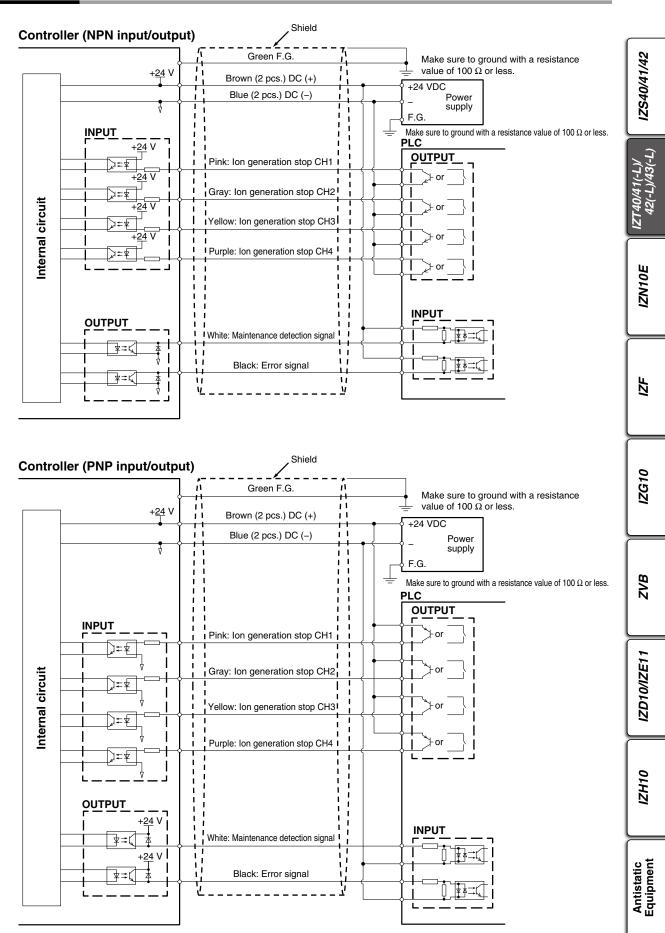



Dimensions



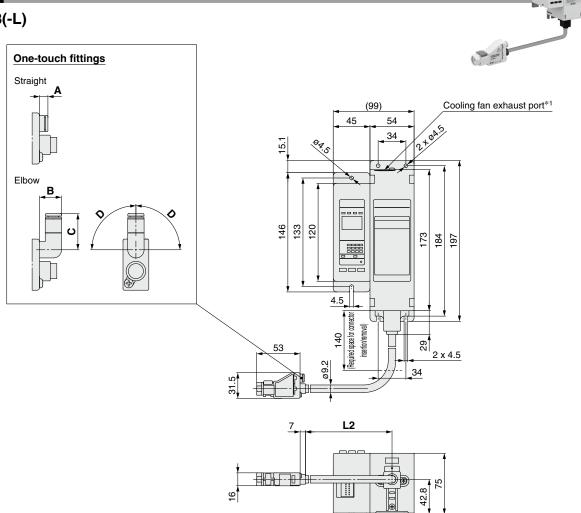

*1 Refer to Mounting (12) in the Specific Product Precautions (page 113).


High Voltage Cable Length L2

Symbol	L2 [mm]		
1	1000		
2	2000		
3	3000		

One-touch Fittings


Straight	-	1]	mm]				
	Applicable tubing O.D.	Α					
Metric	ø6	7					
Inch	ø1/4"	10					
Elbow [mm							
	Applicable tubing O.D.	В	С	D			
Metric	ø6	14	23	105°			
Inch	ø1/4"	14	26	105°			


Dimensions

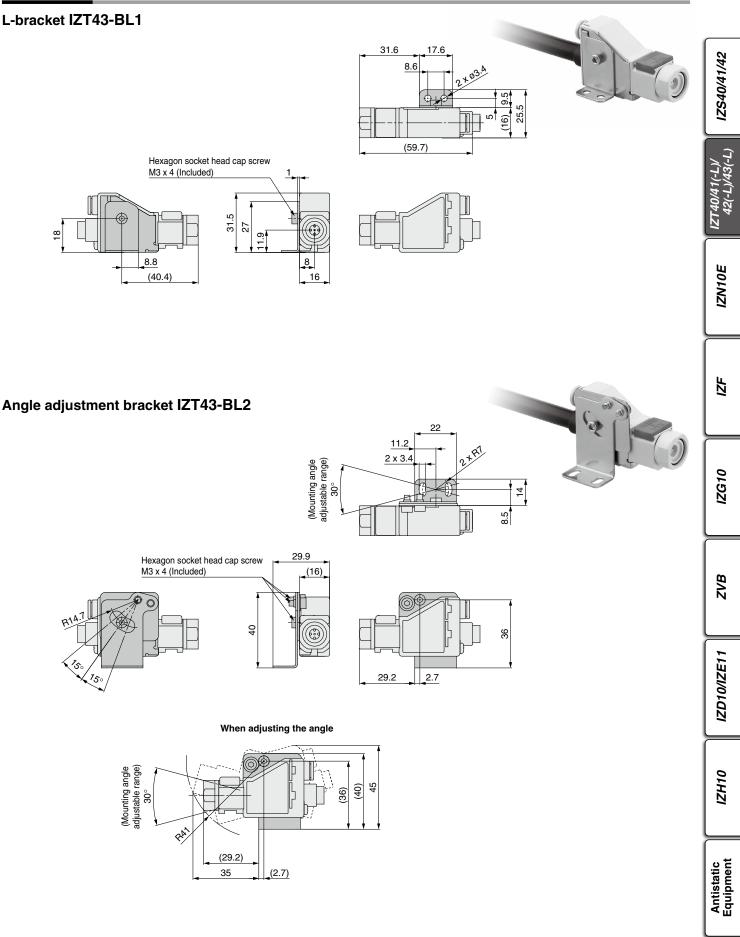


Dimensions


Controller IZT43

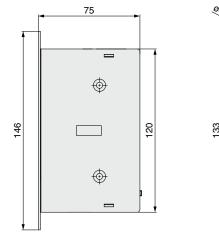


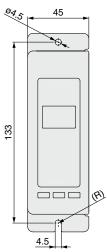

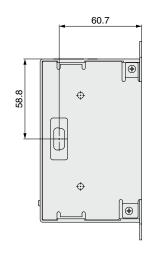



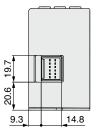


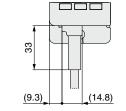

When a power supply cable is inserted





When a DIN rail mounting bracket (IZT40-B1) is used

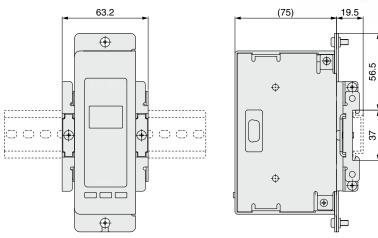

Dimensions


Controller IZT43-L

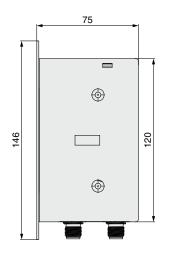


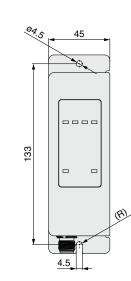

31.4

26.8

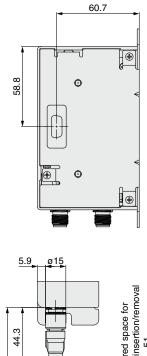

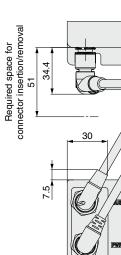

IONIZER CH1 CH2 CH3 CH4

© IO-Lin

LINK

IZS40/41/42

IZT40/41(-L)/ 42(-L)/43(-L)

IZN10E

IZF

IZG10

ZVB

IZD10/IZE11


IZH10

Antistatic Equipment

When angled cables are inserted



13.3

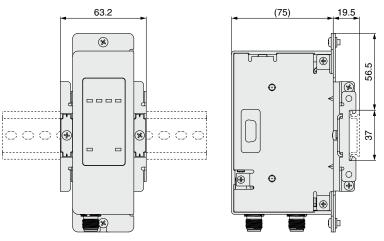

Required space for connector insertion/removal


110


When a straight cable is inserted




Dimensions

High voltage power supply module for IZT43(-L)

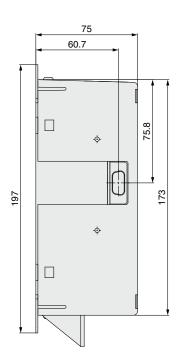


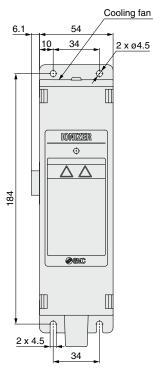

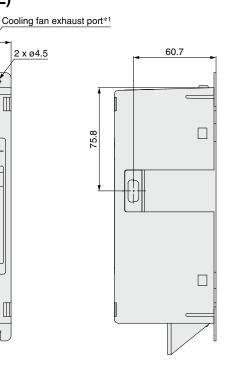







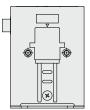



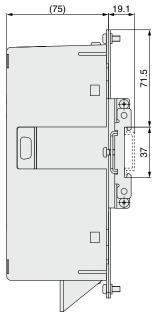


When a DIN rail mounting bracket (IZT40-B2) is used

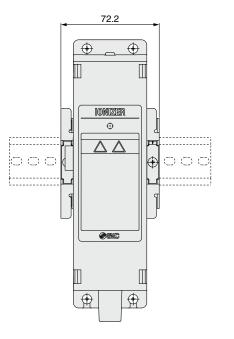



Dimensions

M12 x 1

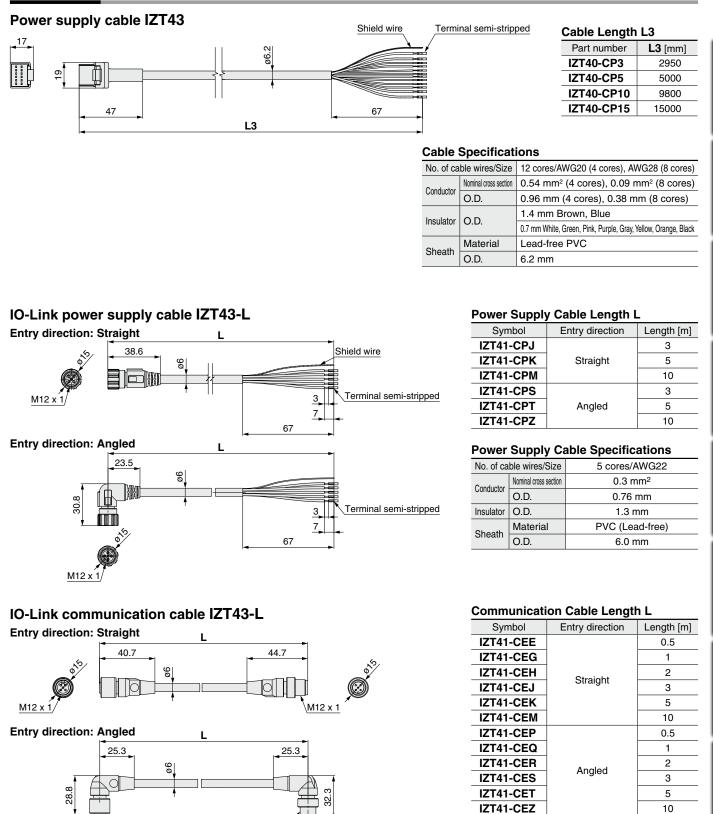

Communication Cable Specifications No. of cable wires/Size 5 cores/AWG22 0.3 mm² Nominal cross section Conductor O.D. 0.76 mm O.D. 1.5 mm Insulator PVC (Lead-free) Material Sheath

6.0 mm

O.D.

SMC

M12 x 1

IZS40/41/42

T40/41(-L)/ 42(-L)/43(-L)

IZT40/4

IZN10E

Ň

IZG10


ZVB


IZD10/IZE1

IZH10


Antistatic Equipment

Dimensions

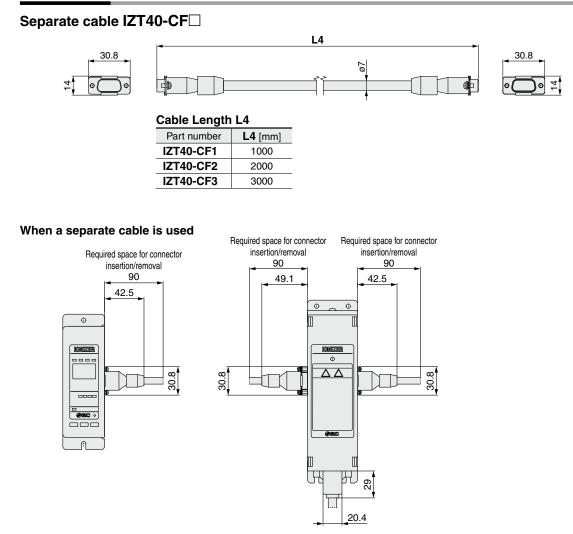

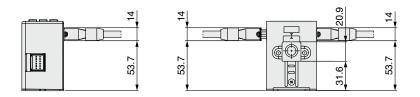

Dimensions

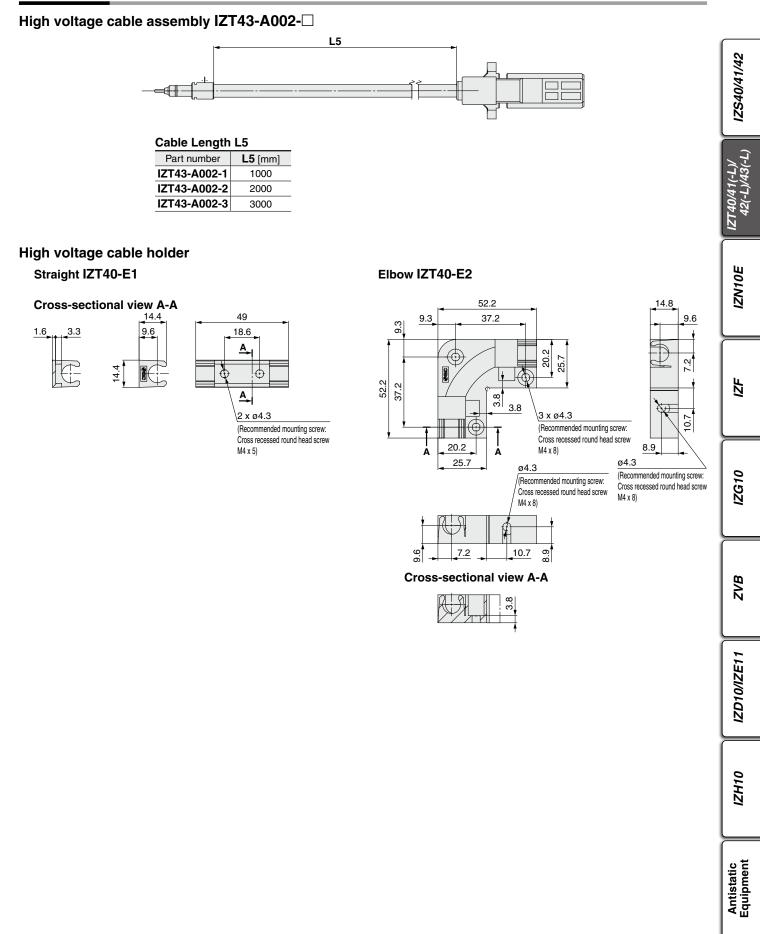

SMC



Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Selection

A Warning

- 1. This product is intended to be used with general factory automation (FA) equipment.
 - If considering using the product for other applications (especially those indicated in Warning (4) in the safety instructions), please consult with SMC beforehand.
- 2. Use within the specified voltage and temperature ranges.
 - Using outside of the specified voltage can cause a malfunction, damage, electric shock, or fire.
- 3. Use clean compressed air as fluid. (A compressed air quality of Class 2.4.3, 2.5.3, 2.6.3, or higher according to ISO 8573-1:2010 (JIS B 8392-1:2012) is recommended for operation.)
 - This product is not explosion proof. Never use flammable gases or explosive gases as a fluid and never use this product in the presence of such gases.
 - Please contact us when fluids other than compressed air are used.
- 4. This product is not explosion-protected.
 - Never use this product in locations where the explosion of dust is likely to occur or flammable or explosive gases are used. This can cause a fire.

▲Caution

- 1. Clean specification is not available with this product.
 - A minute amount of particles are generated due to wearing of the emitters while the product is operating.
 - When bringing into a clean room, confirm the required cleanliness before use.

Mounting

Warning

1. Reserve enough space for maintenance, piping, and wiring.

- Please take into consideration that the connector connecting part, plug connecting part, and One-touch fittings for supplying air need enough space for the cable and air tubing to be easily attached/detached.
- To avoid unreasonable stress applied to the connector mounting part, plug connecting part, and One-touch fitting mounting part, bending of the cable or air tubing should be more than the min. bending radius.
- If the cable is bent in an acute angle or load is applied to the cable repeatedly, it may cause a malfunction, wire breakage, or fire.

[Min. bending radius] Power supply cable: 40 mm Power supply cable: 48 mm

Power supply cable: 48 mm (IO-Link) Communication cable: 40 mm (IO-Link) Separate cable (Option): 40 mm High voltage cable: 30 mm

* Shown above is wiring with the fixed min. allowable bending radius and at a temperature of 20°C. A bend radius should be larger at a temperature lower than 20°C. Regarding the min. bending radius of the air tubing, refer to the operation manual or catalog for air tubing.

2. Installation of the high voltage cable

- Use the specified cable holder (IZT40-E1 or IZT40-E2) for installing high voltage cables.
- Follow the instructions below when installing high voltage cables. If these are not followed, the insulation performance of the high voltage cable will decrease, causing failure of the ionizer, which may lead to an electric shock or fire.
- a. Do not cut the cable.
- b. Keep to the min. bending radius of the cable.
- c. Do not tighten the cable too much with cable ties. Do not deform the cable by placing any object on the cable.
- d. Avoid the problems of cable runaway such as in a cable duct.
- e. Do not twist or damage the cable. If the cable is damaged, it should be replaced.



Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Mounting

▲Warning

- 3. Fix the high voltage cable connector using 2 screws included as an accessory.
 - Fix the connector using 2 cross recessed round head screws (M4 x 10 L) with the specified tightening torque. (Refer to the table below.)
- 4. Be sure to fix the high voltage cable plug with a screw.
- 5. Mount on a flat surface and do not apply impact load or excessive external force.
 - If there are irregularities, cracks or height differences, excessive stress will be applied to the housing or brackets, resulting in damage or other trouble.
 - Do not drop or apply a strong shock. Otherwise, damage or an accident can occur.
- 6. Install the product so that the bar does not have an excessive deflection.
 - For a bar length of 820 mm or more, be sure to support the bar at both ends and in the middle by using brackets (IZT40-BM1 or IZT40-BM2). If the bar is held only at the both ends, self-weight of the bar causes deflection, resulting in damage or deformation of the bar.
- 7. Avoid using in a place where noise (electromagnetic wave surge) is generated.
 - If the product is used in an environment where noise is generated, it may lead to a malfunction and deterioration or damage of the internal elements.
 - If the presence of noise is suspected, take preventative measures against noise and avoid crossing wires such as power line and high voltage line.
- 8. Tighten screws with the specified tightening torque.
 - If the mounting screws are tightened in excess of the specified torgue range, it may damage the screws or mounted areas.
 - If the tightening torque is insufficient, the screws may become loose. (Refer to the table below.)

9. Do not touch the emitter directly with fingers or metallic tools.

IZS40/41/42

12(-L)/43(-L)

ZN10E

N

IZG10


ZVB

IZD10/IZE11

- Do not touch the emitter with your finger. If the needle sticks to your finger, an electric shock can cause an instantaneous rapid body motion to escape from the shock, causing an injury.
- If the emitter or cartridge is damaged with a tool, the specification will not be met and damage and/or an accident may occur.

🗥 Danger: High Voltage

Caution: High voltage is being supplied to the emitters. Please do not touch the emitters as there is an electric shock danger with the insertion of contamination into the cartridge. In addition, one can be injured with evasive actions taken when suddenly removing oneself from the electrical shock danger.

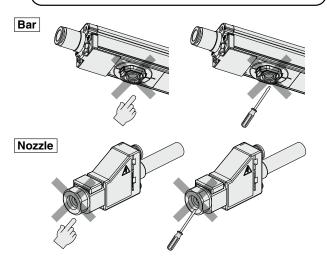

Tightening Torque for Screws

Ingitterining forque for Screws						
Description		Part number	Screw	Tightening torque		
For Bar	Find hypokrat	IZT40-BE□	For fixed angle M4 x 8 L	0.72 to 0.76 N·m	IZD1	
	End bracket	IZ I 40-BE	For fixed bar M4 x 8 L	0.51 to 0.55 N·m		
	Intermediate bracket 1	IZT40-BM1	M4 x 16 L	0.72 to 0.76 N·m		
	Intermediate bracket 2	IZT40-BM2	M4 x 16 L	0.47 to 0.49 N·m		
	High voltage cable connector	IZTB4	M4 x 10 L	0.49 to 0.53 N·m		
For Nozzle	L-bracket	IZT43-B1	M3 x 4 L	0.61 to 0.65 N·m	10	
			For fixed angle M3 x 4 L	0.61 to 0.65 N·m		
	Angle adjustment bracket	IZT43-B2	For fixed nozzle M3 x 4 L	0.61 to 0.65 N·m		
	High voltage cable connector	IZTN43-000-0	M4 x 10 L	0.49 to 0.53 N·m		
	High voltage cable plug	1211N43-LLLL-L	M3 x 5 L	0.11 to 0.15 N·m		
Controller		IZTC40 IZTC41(-L)	M4 x 30 L	0.22 to 0.24 N·m	Antistatic Equipment	
Separate cable				0.40 to 0.60 N·m	pm	
		IZT40-CF□	Set screw	0.25 to 0.35 N·m	di Li	
DIN rail mounting bracket		IZT40-B□	M4 x 6 L	1.30 to 1.50 N·m	А ⊓	
Cable holder		IZT40-E□	M4 x 8 L (Recommended length)	0.19 to 0.21 N·m		






Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Mounting

A Warning


- 10. Do not affix any tape or seals to the controller, high voltage power supply module, bar, and nozzle.
 - If the tape or label contains a conductive adhesive or reflective paint, a dielectric phenomenon may occur due to ions arising from such substances, resulting in electrostatic charging or electric leakage, causing a malfunction, damage, electric shock, or fire.
- 11. Installation should be conducted after turning OFF the power supply and air supply to the controller, high voltage power supply module, bar, and nozzle.
 - If installation or adjustment is performed while the power or air is being supplied to the product, an electric shock, failure, or injury can result.
- 12. The high voltage power supply module uses a fan. A space of 20 mm or more is required from the exhaust port for ventilation. Install the product in a ventilated location so peripheral devices are not affected.

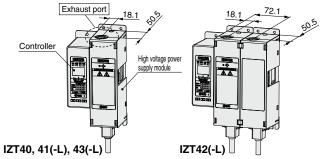

- 13. Do not apply any excessive force to cables, such as repeated bending, tensioning, or placing a heavy object on the cables.
 - It may cause an electric shock, fire, or wire breakage.
- 14. Do not carry the product by holding its cables.It may cause an injury or damage to the product.


A Caution


- 1. To prevent electric leakage, electric shocks, and other issues, be sure to secure a space of 10 mm or more in every direction around the product when installing it.
 - If structures including walls or other ionizers are located between the product and the object to be neutralized, the generated ions will not effectively reach the object, resulting in reduced neutralization speed, erratic offset voltage, etc., which may make it difficult to maintain performance. For maximum neutralization performance, be sure to install the product taking the required installation distance from structures, etc., shown in the figure below into consideration.

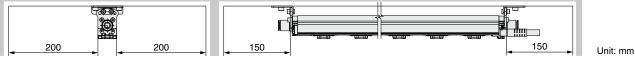

SMC

- 2. Make sure to confirm the effect of static neutralization after installation.
 - The performance of the product varies depending on the surrounding installation and operating conditions. After installation, verify the effects of static neutralization.
- 3. When installing the IZT41, IZT42, or IZT43 in proximity with an ionizer which operates in DC mode (one polarity, positive or negative), they should be positioned at least 2 meters away from each other.
 - When using the AC mode of the IZT41, IZT42, or IZT43 near the ionizer in DC mode, keep clearance of at least the length shown in the figure below between them. The offset voltage (ion balance) may not be adjusted by the built-in sensor due to the ions discharged from the DC mode ionizer.

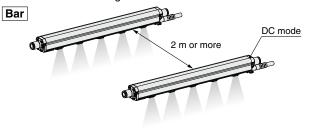

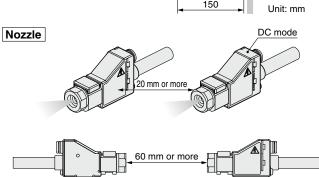

4. Use the specified bracket.



Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Wiring / Piping

\land Warning

- 1. Before wiring, ensure that the power supply capacity is larger than the specification and that the voltage is within the specification. Product damage or malfunction can result.
- 2. To maintain product performance, the power supply shall be UL listed Class 2 certified by National Electric Code (NEC) or evaluated as a limited power source provided by UL60950.
- 3. To maintain the product performance, ground the product with a resistance value of 100 Ω or less. If the product is not grounded, it is not possible to secure the performance and may lead to product failure or malfunction.
- 4. Wiring (including insertion and removal of the connector plug (high voltage cable connector, high voltage cable plug)) should never be carried out while the power is being supplied to the product. Otherwise, an electric shock or accident may occur.
- 5. Use the specified cable for connecting the ionizer controller, high voltage power supply module, bar, and nozzle. Do not disassemble or retrofit. Modifying the product may cause accidents such as electric shock, failure, or fire. The product will not be guaranteed if it is disassembled and/or modified.
- 6. Ensure the safety of wiring and surrounding conditions before supplying power.
- 7. Do not connect or disconnect the connector plug (including power source) while the power is being supplied. Failure to follow this procedure may cause product malfunction.
- 8. If the ionizer wiring and high-power lines are routed together, this product may malfunction due to noise. Therefore, use a separate wiring route for this product.
- 9. Confirm that the wiring is correct before operation. Incorrect wiring will lead to product damage or malfunction.
- 10. Flush the piping before use. Before piping this product, please exercise caution to prevent particles, water drops, or oil contents from entering the piping.

Operating Environment / Storage Environment

\land Warning

- 1. Use within the fluid temperature and ambient temperature ranges.
 - Fluid temperature and ambient temperature ranges are; 0 to 40°C for controller, 0 to 40°C for high voltage power supply module, 0 to 50°C for bar, 0 to 40°C for nozzle, and 0 to 40°C for AC adapter.
 - Do not use the product in locations where the temperature may change suddenly even if the ambient temperature range is within the specified limits, resulting in condensation.

Operating Environment / Storage Environment

\land Warning

2. Do not use this product in an enclosed space.

• This product utilizes a corona discharge phenomenon. Avoid using in an enclosed space as ozone and nitrogen oxides exist in such places, even though in marginal quantities.

3. Environments to avoid

- Avoid using and storing this product in the following environments as they may cause a failure, fire, etc.
 - a. Environments where the ambient temperature is outside of the product specification
 - b. Environments where the ambient humidity is outside of the product specification
 - c. Environments where abrupt temperature changes may cause condensation
 - d. Environments where corrosive gases, flammable gases, or other volatile flammable substances are stored
 - e. Environments where the product may be exposed to conductive powder such as iron powder or dust, oil mist, salt, organic solvent, machining chips, particles, cutting oil (including water and any liquids), etc.
 - f. Environments where ventilated air from an air conditioner is directly applied to the product
 - g. Enclosed or poorly ventilated environments
- h. Environments that are exposed to direct sunlight or heat radiation
- Environments where strong electromagnetic noise is generated, such as strong electrical and magnetic fields or supply voltage spikes
- . Environments where static electricity is generated
- k. Environments where strong, high frequencies are generated
- I. Environments that are subject to potential lightning strikes
- m. Environments where the product may receive direct impact or vibration
- n. Environments where the product may be subjected to forces or weight that could cause physical deformation

4. Do not use air containing mist or dust.

- Air containing mist or dust will cause the performance to decrease and shorten the maintenance cycle.
- Install an air dryer (IDF series), air filter (ÅF/AFF series), and/ or mist separator (AFM/AM series) to obtain clean compressed air (A compressed air quality of Class 2.4.3, 2.5.3, 2.6.3, or higher according to ISO 8573-1:2010 (JIS B 8392-1:2012) is recommended for operation.).

5. The controller, high voltage power supply module, bar, nozzle, and AC adapter do not incorporate protection against lightening surges.

6. Effects on implantable medical devices

- The electromagnetic waves emitted from this product may interfere with implantable medical devices such as cardiac pacemakers and cardioverter defibrillators, resulting in the malfunction of the medical device or other adverse effects.
- Please exercise extreme caution when operating equipment which may have an adverse effect on your implantable medical device. Be sure to thoroughly read the precautions stated in the catalog, operation manual, etc., of your implantable medical device, or contact the manufacturer directly for further details on what types of equipment need to be avoided.

IZH10



Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Maintenance

*∕∂*SMC

\land Warning

- 1. Periodically inspect the ionizer and clean the emitters.
 - Check the product regularly to make sure it is not operating with undetected failures.
 - Maintenance must be performed by an operator who has sufficient knowledge and experience.
 - If the product is used for an extended period with dust present on the emitters, the product performance will be reduced.
 - An emitter dirt detection function is available with the IZT41, IZT42, and IZT43. When emitter contamination is detected, clean the emitter.
 - In cases where the emitter dirt detection function is not used on the IZT41, IZT42, or IZT43, or when the IZT40 is used, perform a neutralizing performance test and set a maintenance cycle for periodic cleaning.
 - The emitter contamination level is different depending on the installation environment and supply pressure.
 - If the performance is not recovered after cleaning, it is possible that emitters are worn. Replace the emitter cartridge.

This product contains a high voltage generation circuit. When performing maintenance or inspection, be sure to confirm that the power supply to the ionizer is turned OFF. Never disassemble or modify the ionizer as this may not only impair the product's functionality but could also cause an electric shock or electric leakage.


2. When cleaning the emitter or replacing the emitter cartridge, be sure to turn OFF the power supply or air supply to the controller, high voltage power supply module, bar, and nozzle.

- Never touch the emitters with the power supplied to the controller, high voltage power supply module, bar, and nozzle. An electric shock may cause an injury.
- If an attempt to replace the emitter cartridges is performed before removing air supply, the emitter cartridges may eject unexpectedly due to presence of the compressed air. Remove supply air before replacing the cartridges.
- If emitter cartridges are not securely mounted to the bar, they may eject or release when air is supplied to the product.
- Securely mount or remove the emitter cartridges referencing the instructions shown to the right.
- Securely mount or remove the emitter cartridges with hands and do not use tools.

Bar type


Emitter cartridge tightening torque: 0.2 to 0.3 N·m Nozzle type

Emitter cartridge tightening torque: 0.1 to 0.2 N·m

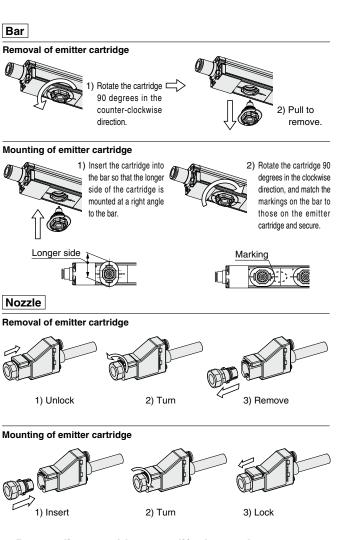

3. Do not disassemble or modify the product.

- Disassembling or modifying the product may cause accidents such as an electric shock, failure, or fire.
- The product will not be guaranteed if it is disassembled and/ or modified.
- 4. Do not operate the product with wet hands.
 - Never operate the product with wet hands. It may cause an electric shock or other accidents.
- 5. When replacing the high voltage cable for the nozzle, be sure to turn OFF the power supply or air supply to the controller, high voltage power supply module, and nozzle.

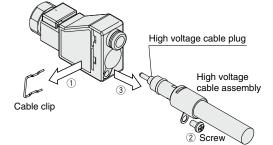




Be sure to read this before handling the products. Refer to page 227 for safety instructions.

Handling

\land Caution

- 1. Do not apply excessive external force or impact (100 m/s² or more).
 - Even though the controller, high voltage power supply module, bar, and nozzle do not appear to be damaged, the internal parts may be damaged and cause a malfunction.
- 2. If the bar length exceeds 820 mm, hold both ends and the middle of the bar to avoid a moment load being applied.
 - Handling the product by holding either end of the bar may cause deformation or damage of the product.
- 3. The power cable must be connected and disconnected by hand.
 - The use of tools can result in damage to the product.
 - Hold the connector by hand and pull it out straight.
 - . If the connector has a lock mechanism, release the lock and then pull out the connector.
- 4. If smoking, fire, or foul smell occurs in the product, immediately shut OFF the power supply.
- 5. Do not touch part A of the high voltage connector and part B of the high voltage cable plug by hand. Be careful that moisture or foreign matter does not adhere to the connector and plug.
 - Do not touch part A of the high voltage connector and part B of the high voltage cable plug while handling.
 - · Keep the high voltage connector and high voltage cable plug free from contamination. Adhesion of moisture, oil, or foreign matter on part A and part B may cause high voltage electric leakage.
 - If moisture, oil, or foreign matter adheres to part A or part B, clean it with ethanol.

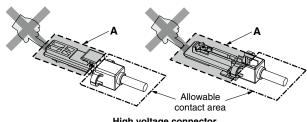

High voltage connector

High voltage cable plug

Handling

\land Caution

6. Tightening of M12 connector screw

- The screws may become loose if they are not tightened sufficiently.
- · Check that they are tightened enough at appropriate intervals during operation.

7. Connection and disconnection of M12 connector

- Do not touch the engagement surface with wet hands.
- Do not pull the cable out by holding the cable.
- Please be careful of the key direction.
- When engaging the connectors, insert the connectors until the entire engagement surface is no longer visible and tighten the screws so as not to damage the thread ridges.

Adjustment / Operation

🗥 Caution

1. For details on programming and address setting, refer to the manual from the PLC manufacturer. The programming content related to the protocol is designed by the manufacturer of the PLC used.

N

IZH10